



ASSEMBLY INSTRUCTIONS

Nightstand

MOD-7385 / V0.20.04.26

modway



Questions? Contact us!

609.256.9000

cs@modway.com

Welcome.

Let's get started.

Before you begin, here are some things to keep in mind:

Assembly will take most people **about 60 minutes**. Consider having a friend help you!

Only use hand tools to assemble this item.

Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Read through all of the instructions before starting. Make sure you have all parts and components before discarding any packing materials.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This will prevent damage and scratches to your floors or the item while you're assembling the product.

Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation




Care instructions are listed in the last step of this manual.

WAIT!



Missing parts or hardware? Need assistance?
Contact us before returning your item.
We're here to help!



HARDWARE INCLUDED IN THE BOX:

A.		Cam Bolt Ø6 x 32 mm	x20
B.		Cam Lock Ø15 x 12 mm	x18
C.		Cam Lock Ø15 x 10 mm	x10
D.		Sticker	x6
E.		Dowel Ø7.8 x 32 mm	x18
F.		Dowel Ø6 x 30 mm	x10
G.		Dowel Ø7.8 x 18 mm	x8
H.		Dowel Ø7.8 x 40 mm	x4
I.		Connecting bolt	x8
J.		Connecting nut	x8
K.		Assembly screw	x12
L.		Screw Ø6 x 19 mm	x4
M.		Wedge	x4
N.		Screw Ø6 x 25 mm	x14
O.		Screw Ø7 x 51 mm	x8
P.		Screw Ø6 x 19 mm	x8
Q.		Felt Ø25 x 2 mm	x16

HARDWARE INCLUDED IN THE BOX:

R.		Bolt M6 x 25 mm	x8
S.		Bolt M6 x 20 mm	x8
T.		Allen key	x1
U.		Screw Ø6 x 12 mm	x20
V.		Drawer runners A (L/R)	x2
W.		Drawer runners B (L/R)	x2
X.		Screw Ø4 x 12 mm	x14

WHAT YOU NEED:



Phillips Head Screwdriver length 20cm




Flat Head Screwdriver length 20cm

FURNITURE COMPONENTS INCLUDED IN THE BOX:

Page 4 of 17

All parts are numbered with a sticker according to this list.

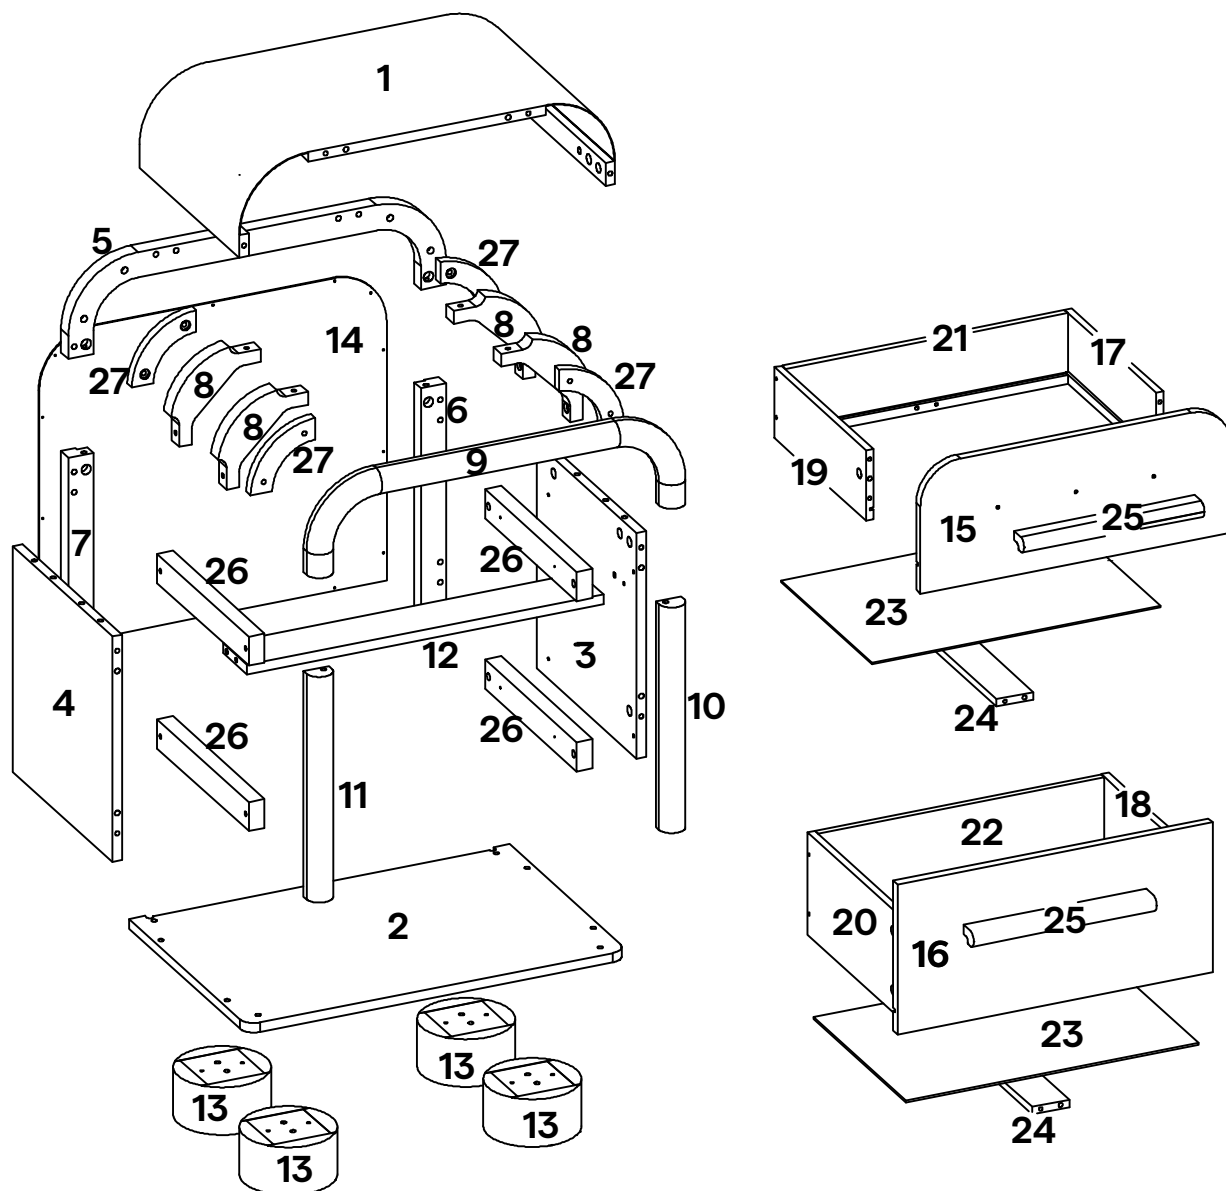

1	Top Panel	x1
2	Bottom Panel	x1
3	Right Side Panel	x1
4	Left Side Panel	x1
5	Back apron	x1
6	Right back apron	x1
7	Left back apron	x1
8	Support side top panel	x4
9	Front apron	x1

10	Right front apron	x1
11	Left front apron	x1
12	Frame	x1
13	Leg	x4
14	Back panel	x1
15	Front top drawer	x1
16	Front bottom drawer	x1
17	Right top side drawer	x1
18	Right bottom side drawer	x1


19	Left top side drawer	x1
20	Left bottom side drawer	x1
21	Top back drawer	x1
22	Bottom back drawer	x2
23	Bottom drawer	x2
24	Support drawer	x2
25	Handle	x2
26	Support rail drawer	x4
27	Side support	x4

HARDWARE

E Dowel Ø7.8 x 32 mm	x4
I Connecting Bolt	x4
J Connecting Nut	x4


COMPONENTS

1 Top panel	x1
--------------------	----

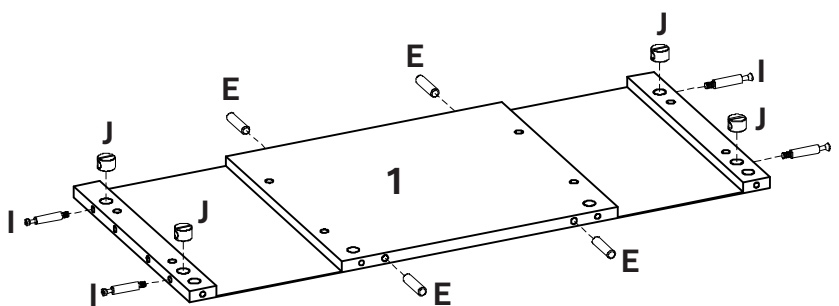

1.1 Insert 4x **Dowels (E)** into the holes of the **Top panel (1)**.

1.2 Insert 4x **Connecting Nuts (J)** into the holes of the **Top Panel (1)**. Insert 4x **Connecting Bolts (I)** into the holes Connecting Nut of the **Top panel (1)**.

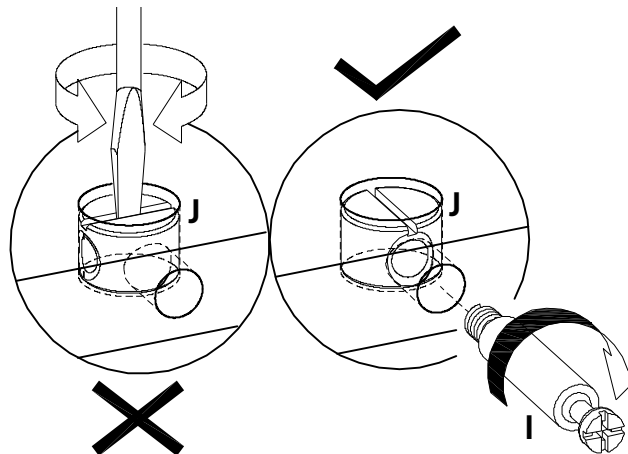


STEP 02

HARDWARE


T Allen key	x1
R Bolt M6 x 25 mm	x8

COMPONENTS

1 Top Panel	x1
8 Support Side Top Panel	x4

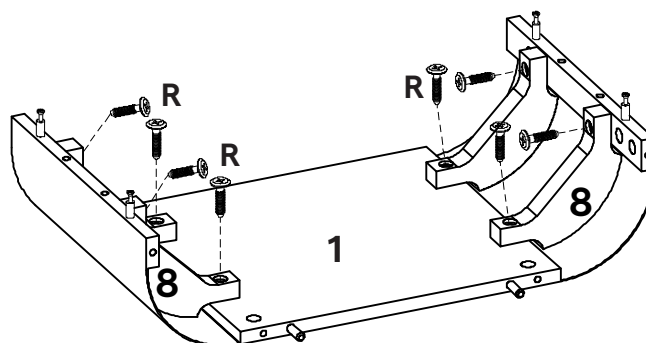

2.1 Connect 4x **Support Side Top Panels (8)** onto the **Top Panel (1)** secure it by tightening 8x **Bolts (R)** with the provided **Allen Key (T)**.

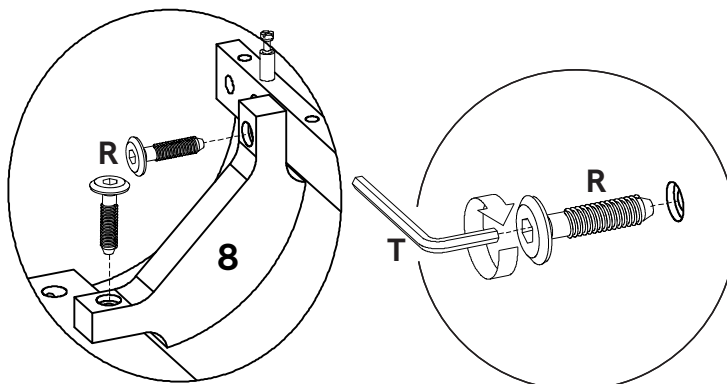


HARDWARE

A Cam Bolt Ø6 x 32mm	x2
E Dowel Ø7.8 x 32 mm	x14
H Dowel Ø7.8 x 40 mm	x4

COMPONENTS

3 Right Side panel	x1
4 Left Side panel	x1
12 Frame	x1

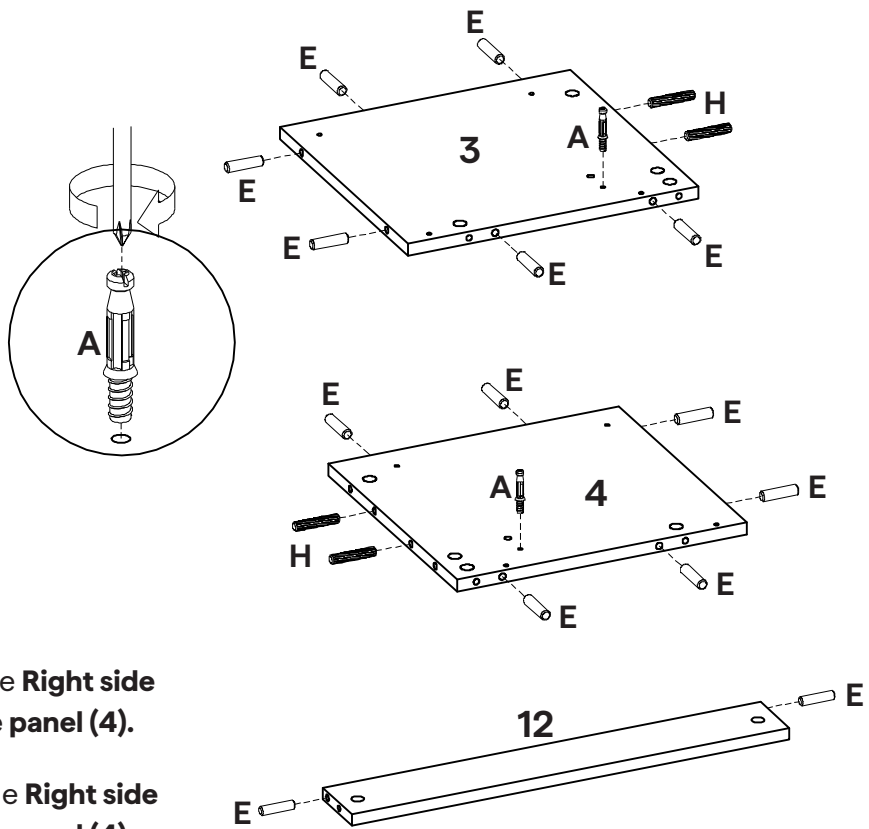

3.1 Insert and screw **Cam Bolts (A)** into the holes of the **Right side panel (3)**. Repeat this step on the **Left side panel (4)**.

3.2 Insert 6x **Dowels (E)** into the holes of the **Right side panel (3)**. Repeat this step on the **Left side panel (4)**.

3.3 Insert 2x **Dowels (H)** into the holes of the **Right side panel (3)**. Repeat this step on the **Left side panel (4)**.

3.4 Insert 2x **Dowels (E)** into the holes of the **Frame (12)**.



STEP 04

HARDWARE

P Screw Ø6 x 19 mm	x8
---------------------------	----

COMPONENTS

3 Right Side Panel	x1
4 Left Side panel	x1
26 Support rail drawer	x4

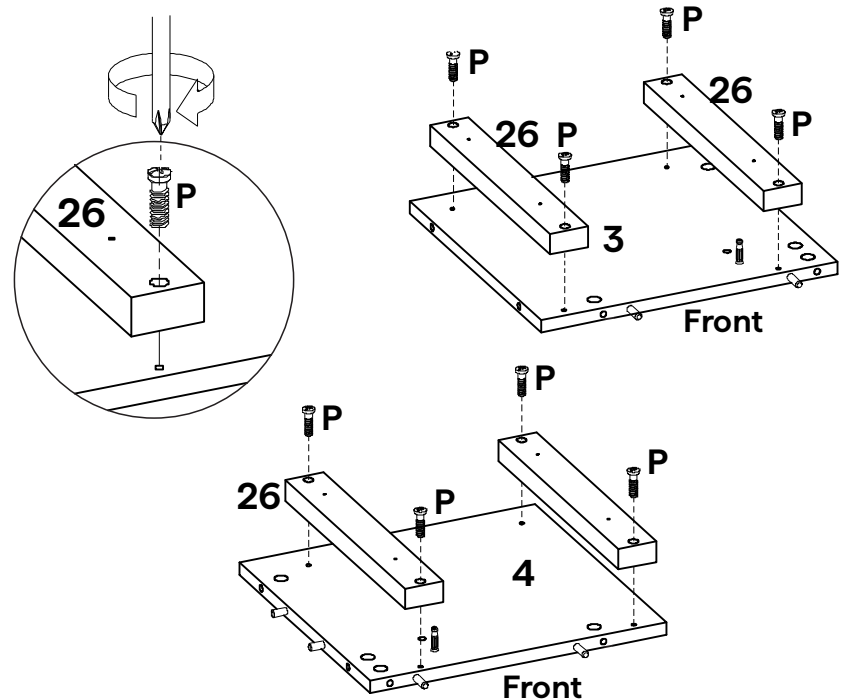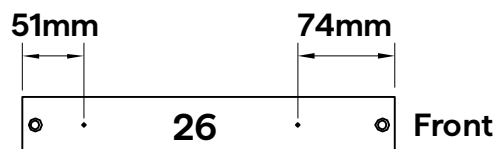

4.1 Fasten 2x **Support rail drawer (26)** onto the **Right side Panel (3)** with 4x **Screws (P)**.

4.2 Fasten 2x **Support rail drawer (26)** onto the **Left side Panel (4)** with 4x **Screws (P)**.

HARDWARE


- U** Screw Ø6 x 12 mm x8
V Drawer runners A (L/R) x2

COMPONENTS

- 3** Right Side Panel x1
4 Left Side panel x1

5.1 Fasten 2x **Drawer Runner A (V)R** onto the **Right side Panel (3)** with 4x **Screws (U)**.

5.2 Fasten 2x **Drawer Runner A (V)L** onto the **Left side Panel (4)** with 4x **Screws (U)**.

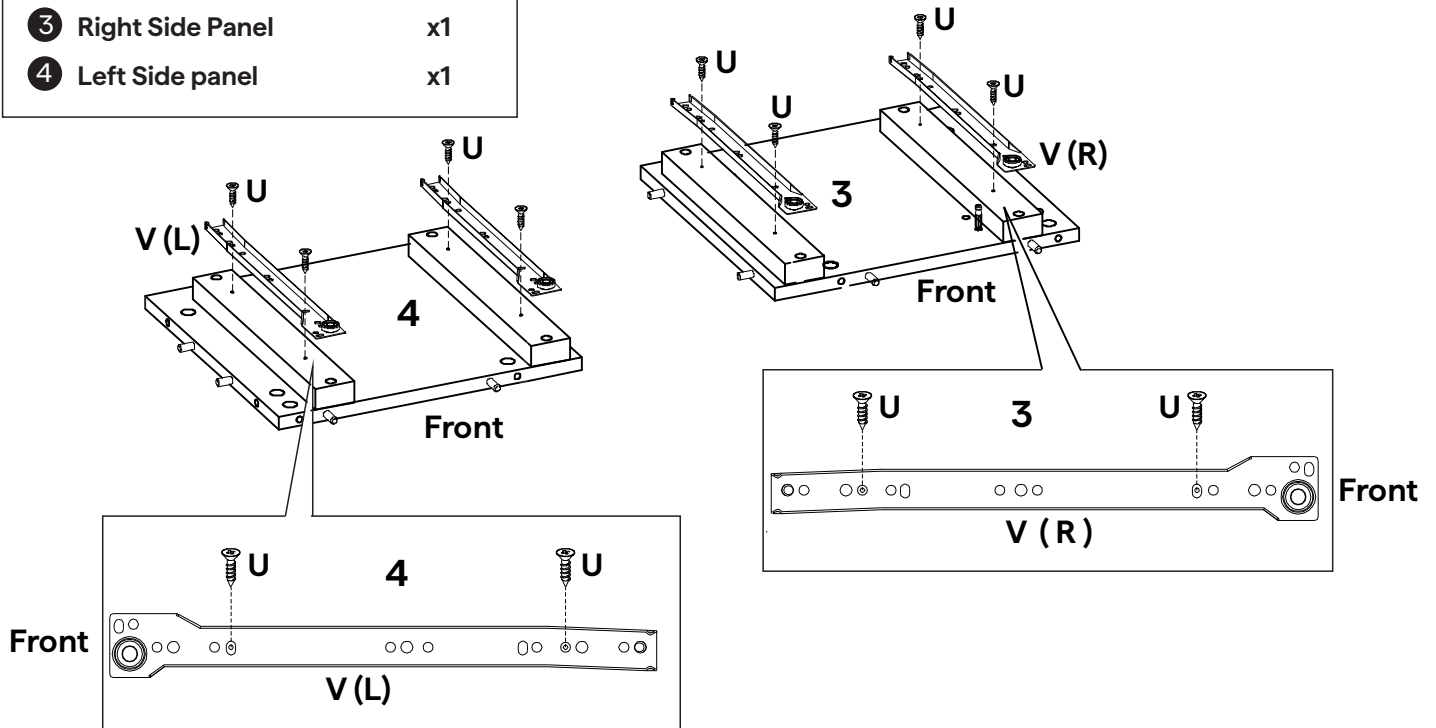

STEP 06


HARDWARE

- B** Cam Lock Ø15 x 12 mm x2

COMPONENTS

- 3** Right Side Panel x1
4 Left Side panel x1
12 Frame x1


6.1 Connect **Right side panel (3)** and **Frame (12)** onto the **Left side panel (4)** by inserting 2x **Cam Locks (B)** to the corresponding holes.

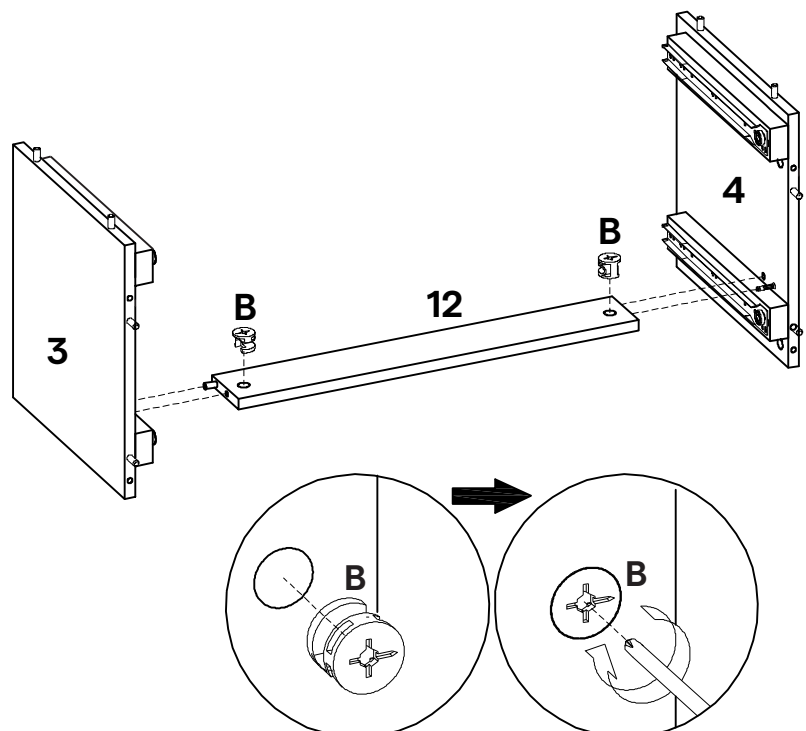

HARDWARE

(B) Cam Lock Ø15 x 12 mm x4

7.1 Connect **Base Assembled** to the **Top assembled** by inserting 4x **Cam Locks (B)** to the corresponding holes.

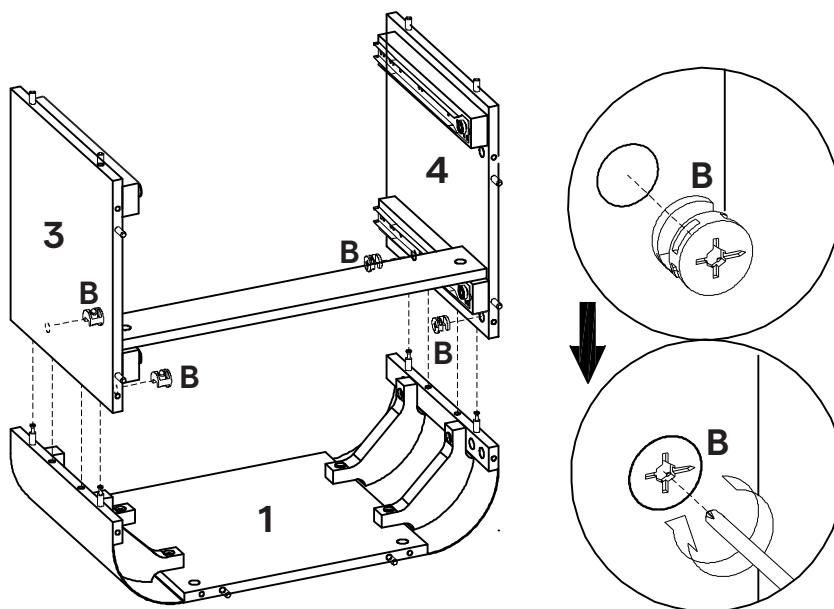

STEP 08

HARDWARE

(A) Cam Bolt Ø6 x 32 mm x8

(I) Connecting Bolt x4

(J) Connecting Nut x4


COMPONENTS

(5) Back apron x1

(9) Front apron x1

(10) Right front apron x1


(11) Left front apron x1

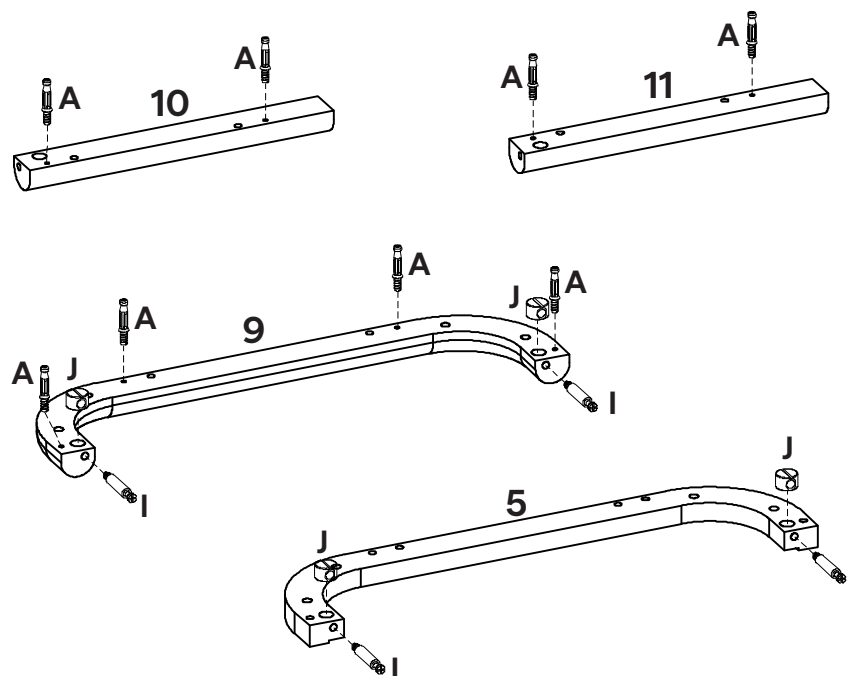

8.1 Insert and screw 2x **Cam Bolts (A)** into the holes of the **Right front apron (10)**. Repeat this step on the **Left front apron (11)**

8.2 Insert and screw 4x **Cam Bolts (A)** into the holes of the **Front apron (9)**.

8.3 Insert 2x **Connecting Nut (J)** into the holes of the **Front apron (9)**. Insert 2x **Connecting Bolts (I)** into the holes Connecting Nut. Repeat this step on the **Back apron (5)**.

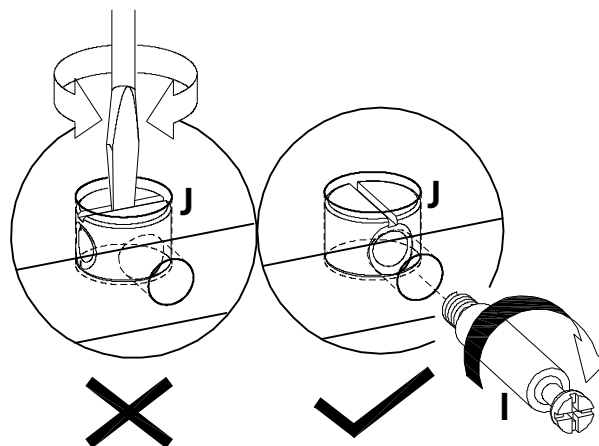

HARDWARE


- (B)** Cam Lock Ø15 x 12 mm x2
(S) Bolt M6 x 20 mm x4

COMPONENTS

- (5)** Back apron x1
(6) Right back apron x1
(7) Left back apron x1
(27) Side support x2

9.1 Connect **Right back apron (6)** and **Left back apron (7)** to the **Front apron (5)** by inserting 2x **Cam Locks (B)** to the corresponding holes.

9.2 Connect 2x **Side support (27)** onto the **Assembled unit** secure it by tightening 4x **Bolts(S)**.

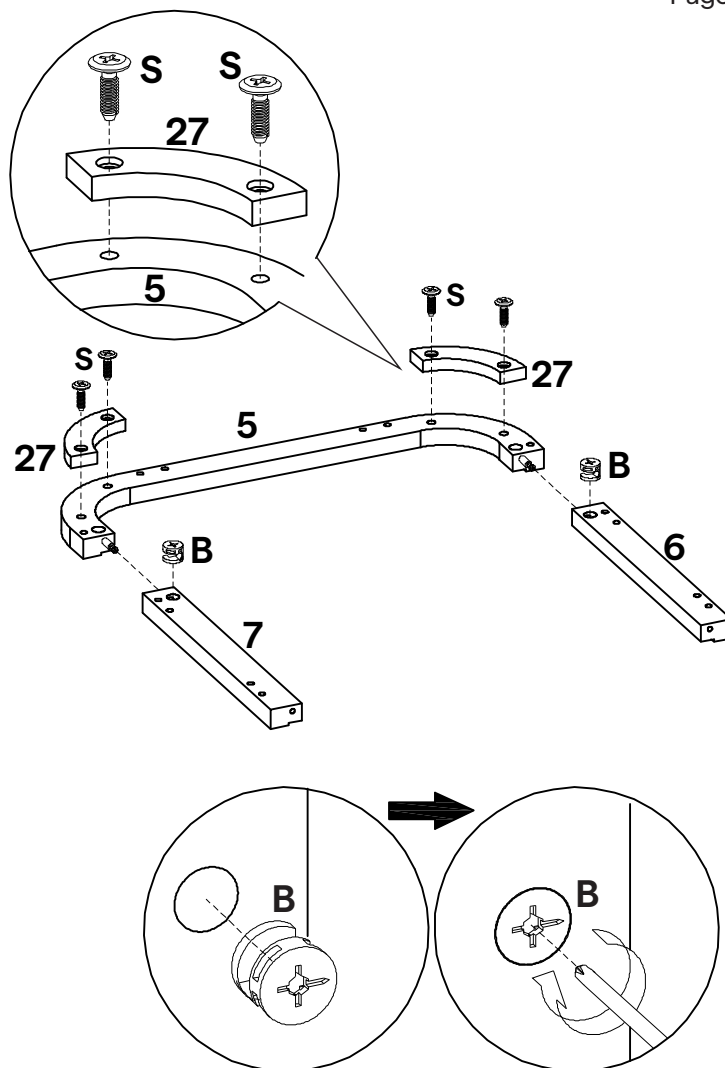


STEP 10

HARDWARE

- (K)** Assembly screw x8

10.1 Connect the **Back apron unit** onto the **Assembled unit**, and secure it by tightening 8x **Assembly Screws (K)**.

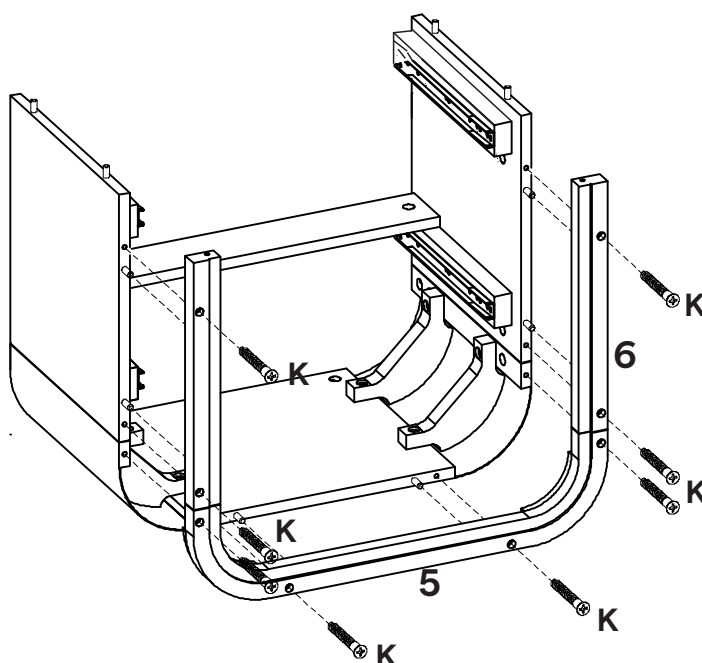

HARDWARE



- B** Cam Lock Ø15 x 12 mm x2
S Bolt M6 x 20 mm x4

COMPONENTS

- 9** Front apron x1
10 Right front apron x1
11 Left front apron x1
27 Side support x2

11.1 Connect **Right front apron (10)** and **Left front apron (11)** to the **Front apron (9)** by inserting 2x **Cam Locks (B)** to the corresponding holes.

11.2 Connect 2x **Side Support (27)** onto the **Assembled unit** secure it by tightening 4x **Bolts(S)**.

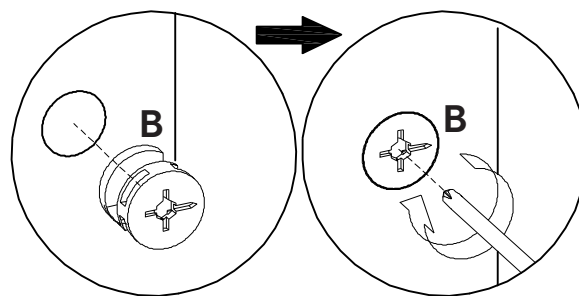
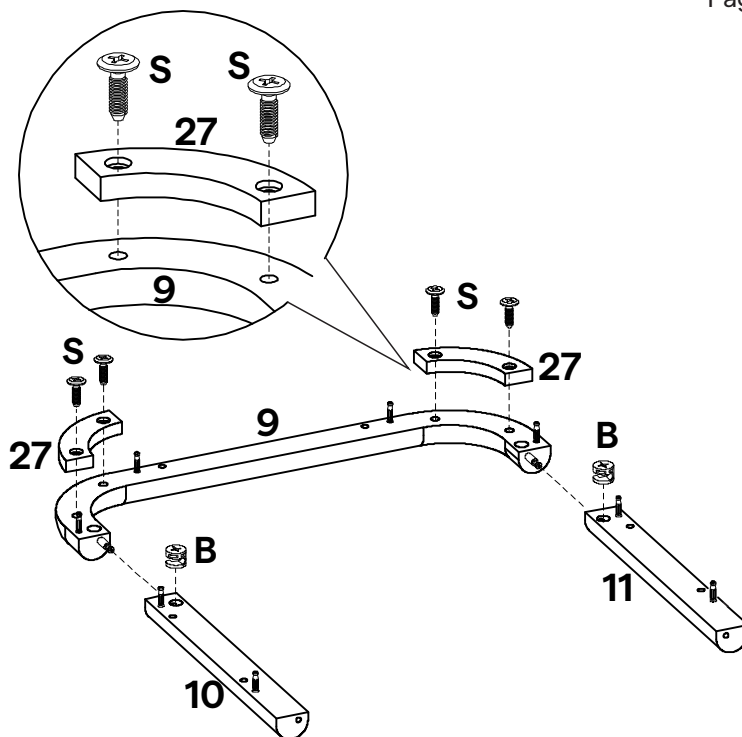


STEP 12

12.1 Connect **Front apron Unit** onto **Assembled unit** by inserting 8x **Cam Locks (B)** to the corresponding holes.

HARDWARE

- B** Cam Lock Ø15 x 12 mm x8

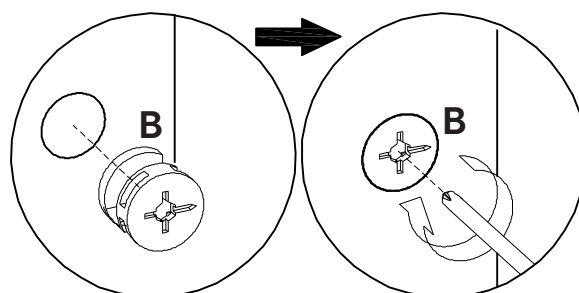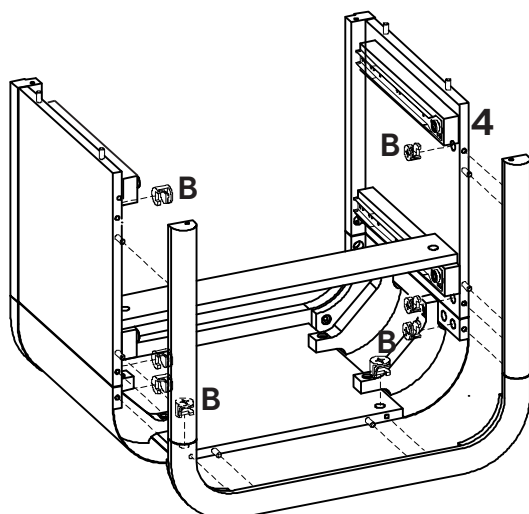

HARDWARE

G Dowel Ø7.8 x 18 mm	x8
N Screw Ø8 x 25 mm	x8
Q Felt Ø25 x 2 mm	x16


COMPONENTS

2 Bottom panel	x1
13 Leg	x4

13.1 Place 4x **Felts (Z)** onto the **Leg (13)** of the bottom side. Repeat this step on the same components.

13.2 Insert 2x **Dowels (E)** into the holes of the **Leg (13)**. Repeat this step on the same components.

13.3 Fasten 4x **Legs (13)** onto the **Bottom Panel (2)** and secure it by tightening 8x **Screws (N)**.

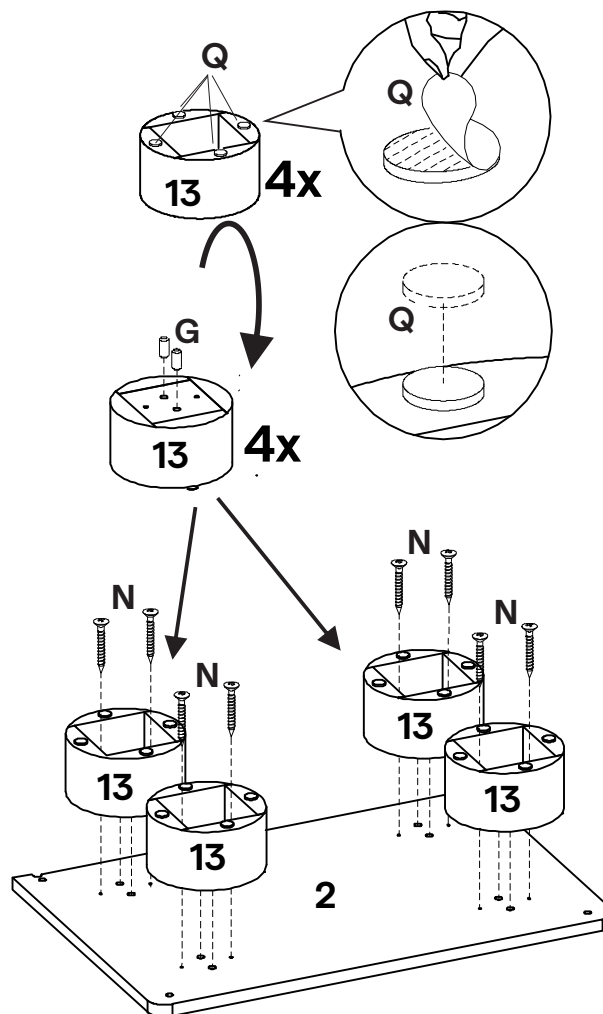


STEP 14

HARDWARE

K Assembly Screw	x4
-------------------------	----


14.1 Align the Bottom Panel (2) onto the assembled, and secure it by tightening 4x **Assembly Screws (K)**.

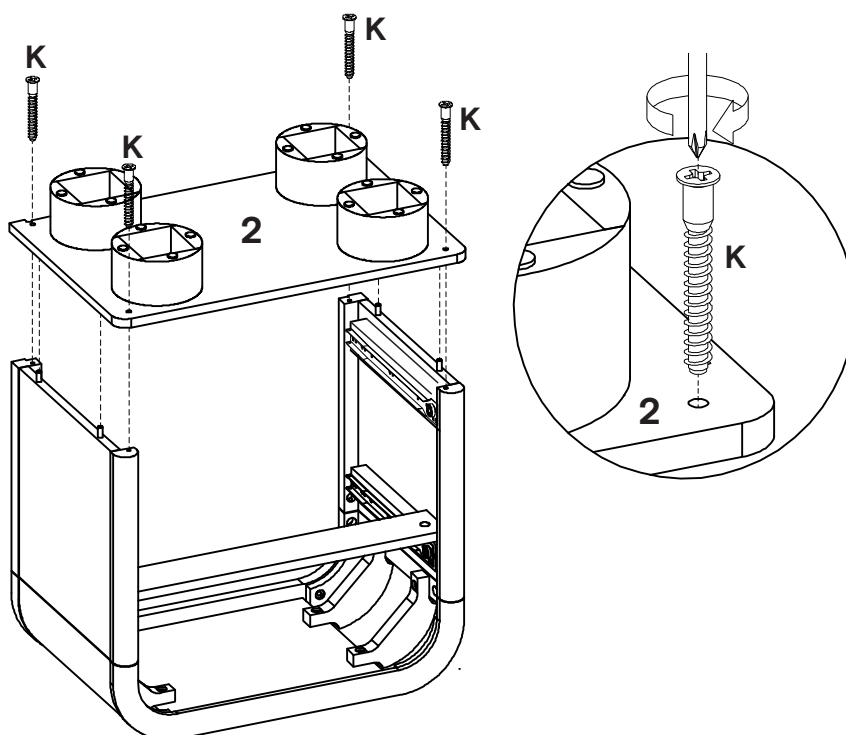

HARDWARE

X Screw Ø4 x 12 mm x14

15.1 Connect **Back Panel (14)** onto the Assembled Unit, and secure it by tightening 14x **Screws (X)**.

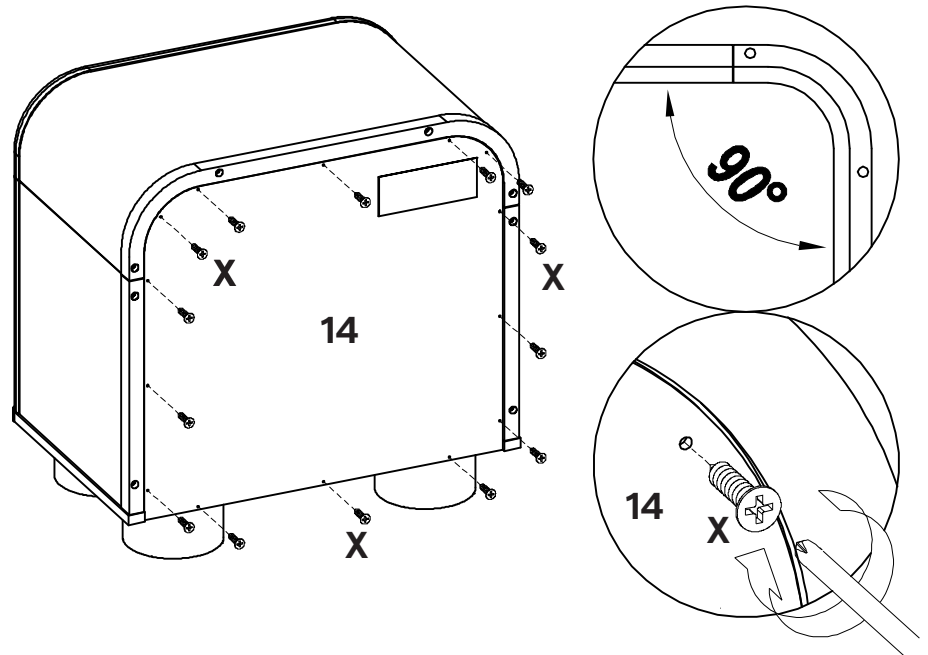

STEP 16

HARDWARE

A Cam Bolt Ø6 x 32 mm x4

F Dowel Ø6 x 30 mm x6

COMPONENTS


15 Front top drawer panel x1

17 Right top side drawer panel x1

19 Left top side drawer panel x1

21 Back top drawer panel x1

24 Support drawer panel x2

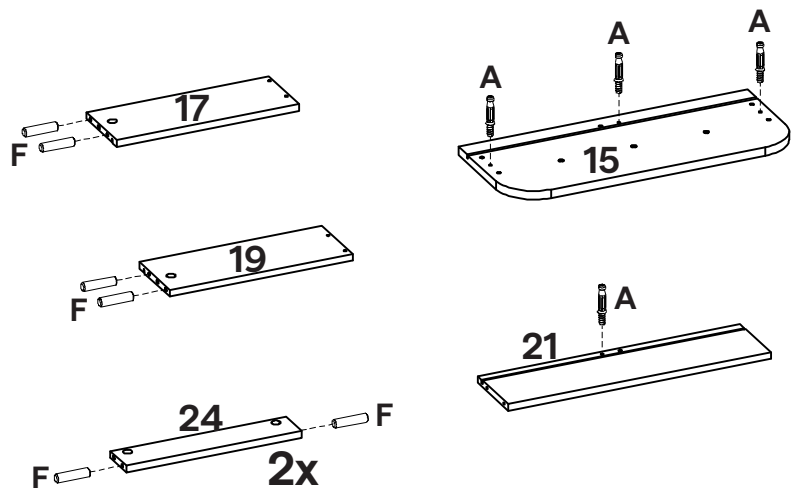

16.1 Insert and screw 3x **Cam Bolts (A)** into the bottom hole of the **Front top drawer panel (15)**.

16.2 Insert and screw **Cam Bolts (A)** into the bottom hole of the **Back top drawer panel (19)**.


16.3 Insert 2x **Dowels (F)** into the holes of the **Right top side drawer panel (17)**. Repeat this step on the same **Left top side drawer (19)** & 2x **Support drawer panel (24)**.

HARDWARE

- (C)** Cam Lock Ø15 x 10 mm x4
- (O)** Screw Ø7 x 51 mm x4

COMPONENTS

- (15)** Front top drawer panel x1
- (17)** Right top side drawer panel x1
- (19)** Left top side drawer panel x1
- (21)** Back top drawer panel x1
- (23)** Bottom drawer panel x1
- (24)** Support drawer panel x1

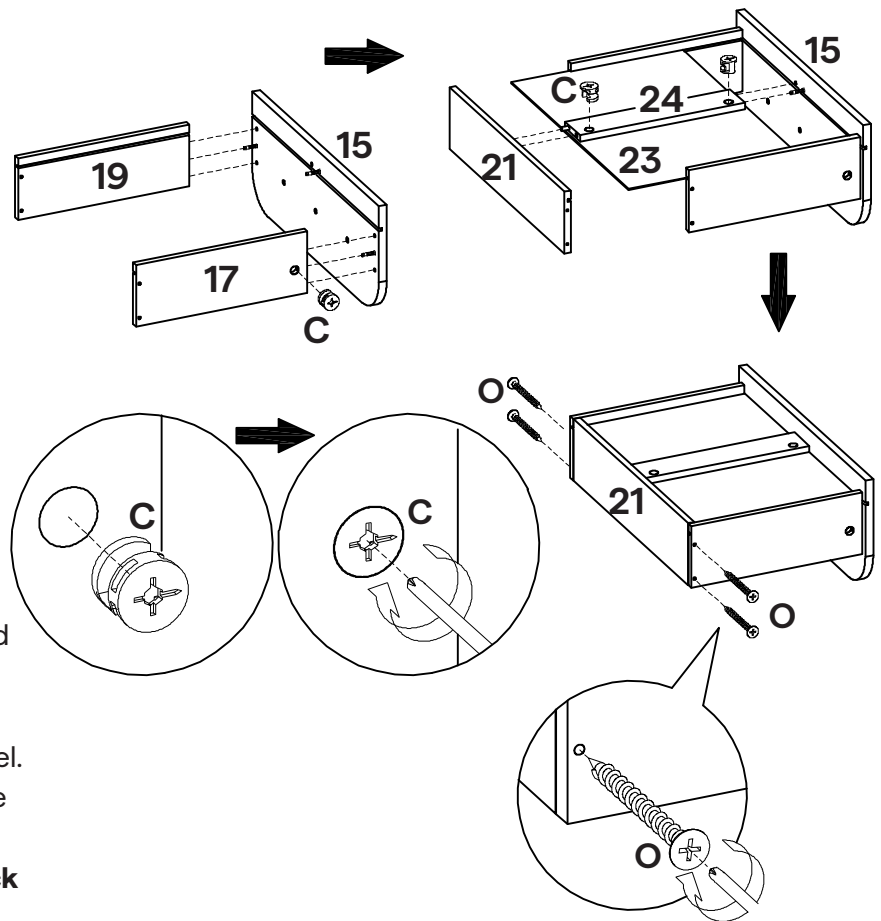

17.1 Position **Right top side drawer (17)** and **Left top side drawer (19)** onto each **Front top drawer panel (15)** and fit **Support drawer panel (24)** onto Drawer Front Panel by inserting 4x **Cam Locks (C)** to lock. Slide **Bottom drawer panel (23)** into grooves of Drawer Side Panels as shown. Position **Back top drawer panel (21)** between Drawer Sides and fasten using 4x **Screws (O)**.


STEP 18

HARDWARE

- (A)** Cam Bolt Ø6 x 32 mm x6
- (F)** Dowel Ø6 x 30 mm x2

COMPONENTS

- (16)** Front bottom drawer panel x1
- (18)** Right bottom side drawer panel x1
- (20)** Left bottom side drawer panel x1
- (22)** Bottom back drawer panel x1

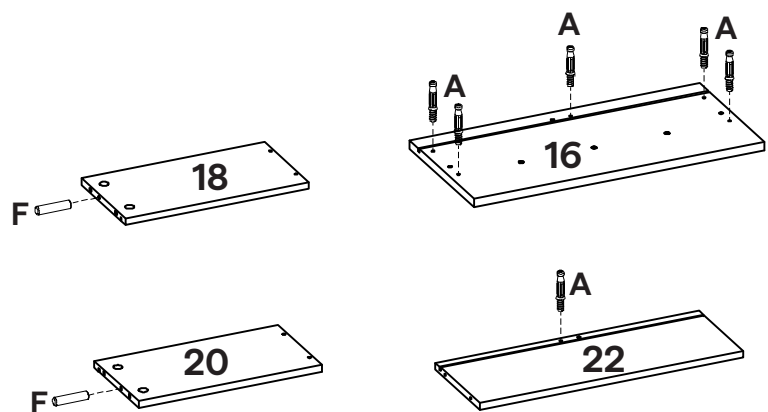

18.1 Insert and screw 5x **Cam Bolts (A)** into the bottom hole of the **Front bottom drawer panel (16)**.

18.2 Insert and screw **Cam Bolts (A)** into the bottom hole of the **Bottom back drawer panel (22)**.


18.3 Insert 2x **Dowels (F)** into the holes of the **Right side drawer panel (17)**. Repeat this step on the same **Left side drawer (19)**.

HARDWARE

- C** Cam Lock Ø15 x 10 mm x6
O Screw Ø7 x 51 mm x4

COMPONENTS

- 16** Front bottom drawer panel x1
18 Right bottom side drawer panel x1
20 Left bottom side drawer panel x1
22 Bottom back drawer panel x1
23 Bottom drawer panel x1
24 Support drawer panel x1

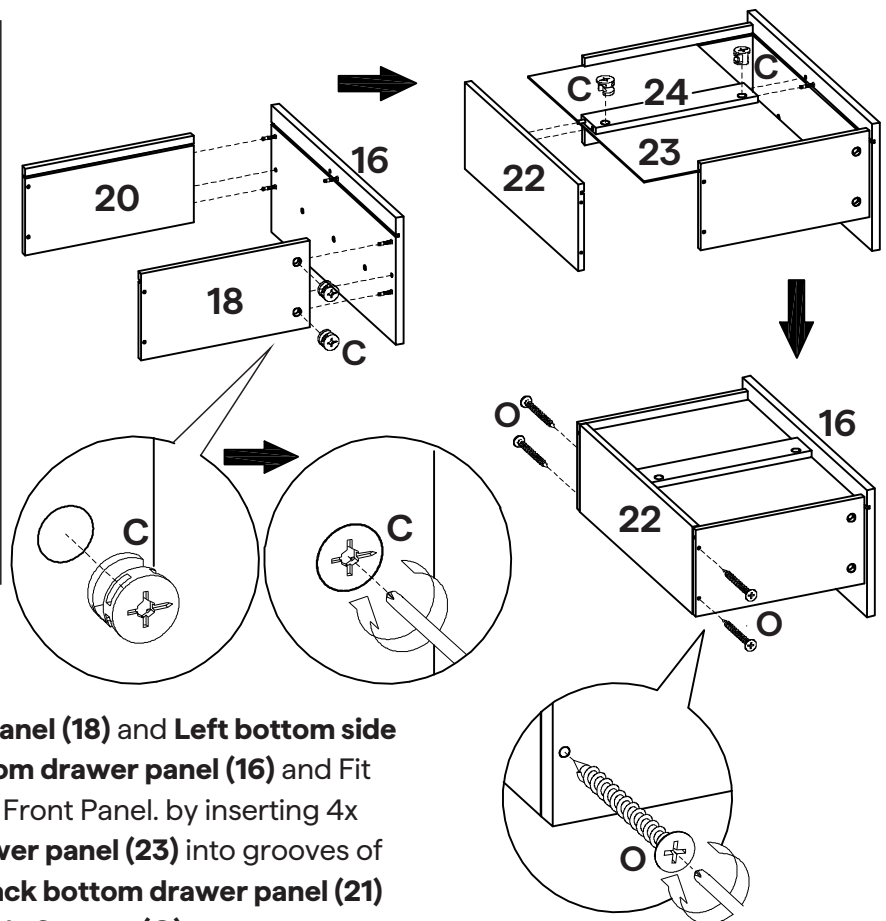

19.1 Position **Right bottom side drawer panel (18)** and **Left bottom side drawer panel (20)** onto each **Front bottom drawer panel (16)** and Fit **Support drawer panel (24)** onto Drawer Front Panel. by inserting 4x **Cam Locks (C)** to lock. Slide **Bottom drawer panel (23)** into grooves of Drawer Side Panels as shown. Position **Back bottom drawer panel (21)** between Drawer Sides and fasten using 4x **Screws (O)**.


STEP 20

HARDWARE

- D** Sticker x6
L Screw Ø6 x 19 mm x4
M Wedge x4

20.1 Adjust the drawer assembly so that the diagonal measurements of the drawer are equal. Insert 2x **Wedge (M)** between the drawer panels as shown and fasten them with 2x **Screws (L)**.

20.2 Place 6x **Sticker (D)** on Cam Lock.

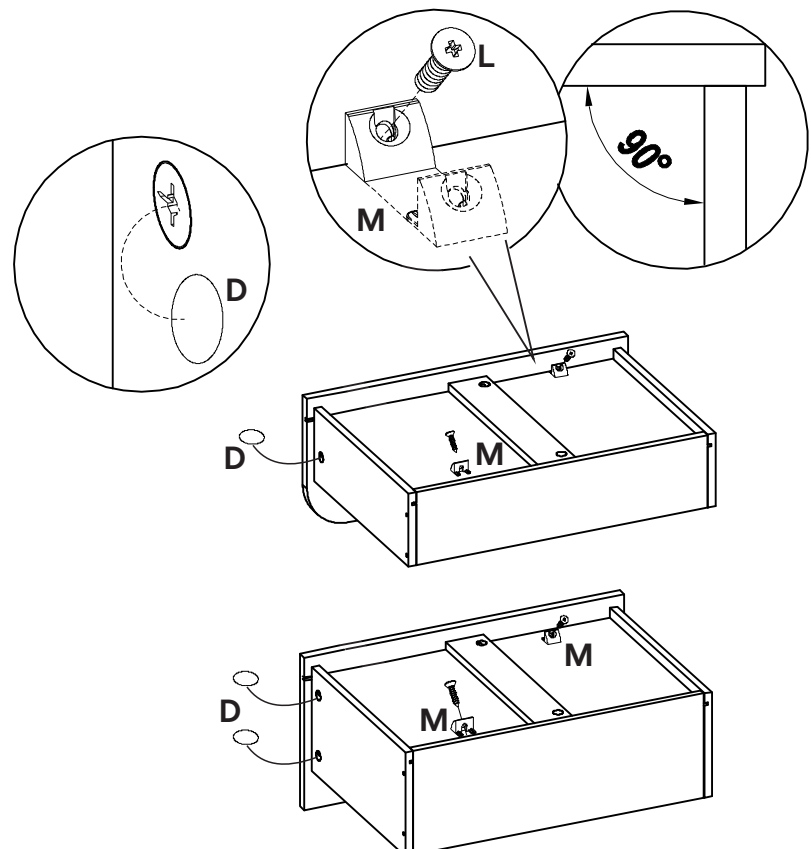


HARDWARE

U Screw Ø6 x 12 mm x8

W Drawer Runner B (L/R) x2

21. Fasten 1 set **Drawer Runners B (W)** onto drawer with 4x **Screws (U)**. Repeat the drawer.

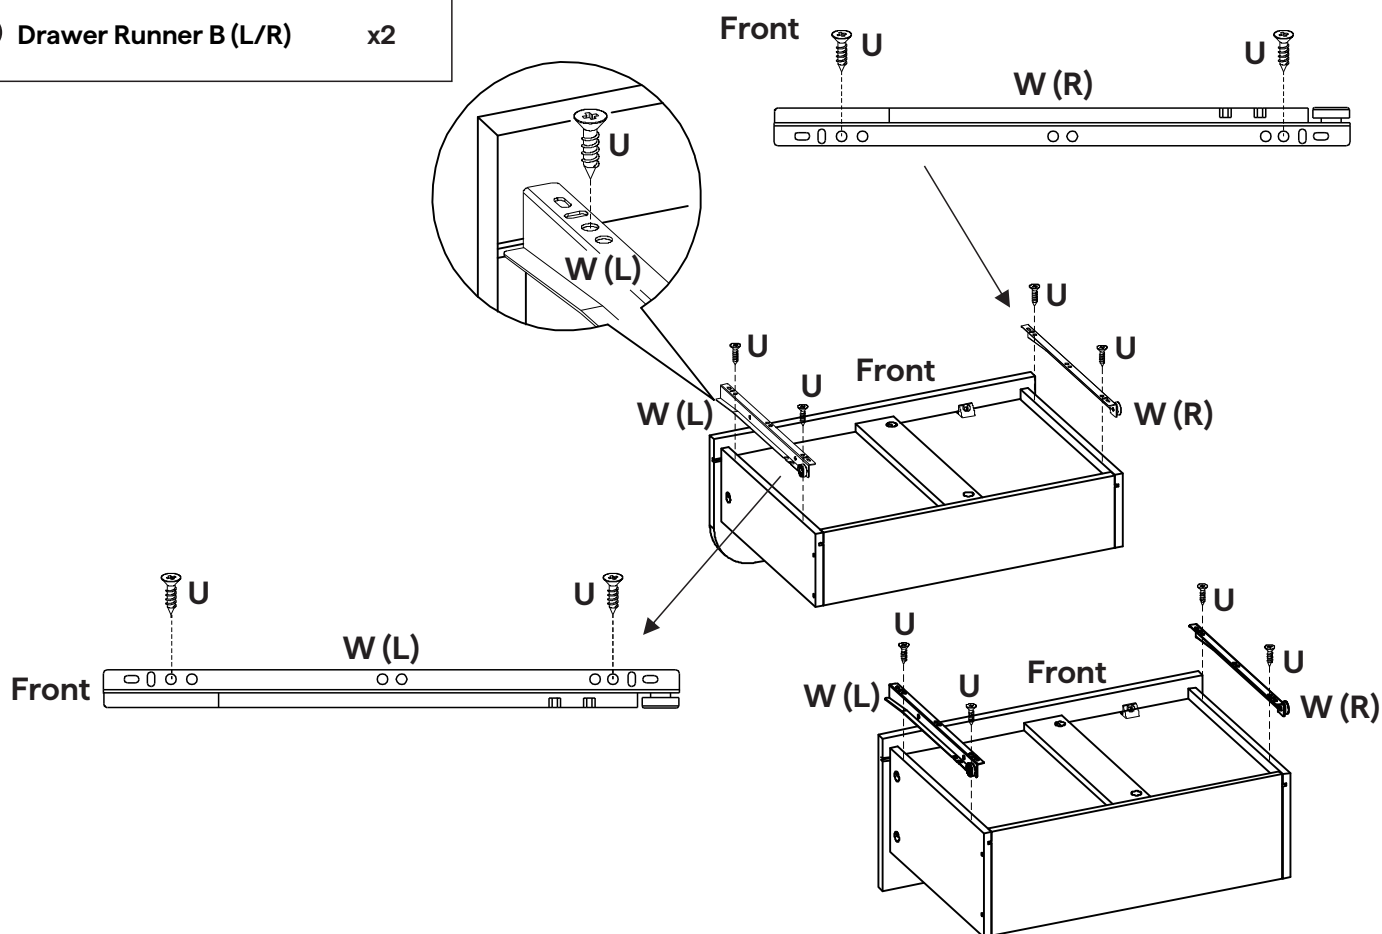

STEP 22


HARDWARE

N Screw Ø6 x 25 mm x6

COMPONENTS

25 Handle x2

22.1 Connect **Handle (25)** onto the Drawer's assembled, tightening with **3x Screws (N)**. Repeat with the remaining drawer panels.


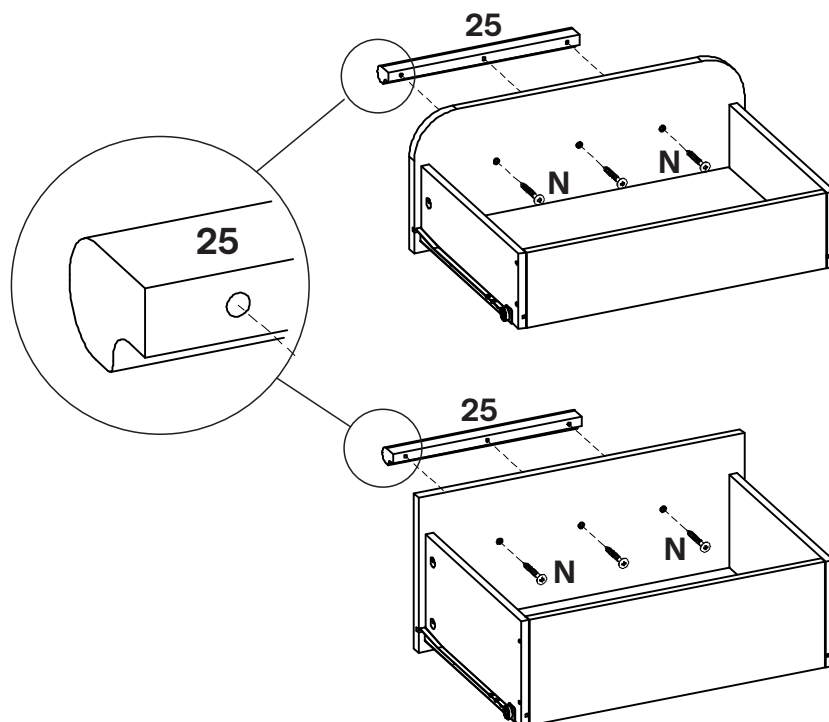


HARDWARE**U** Screw Ø6 x 12 mm x4

23.1 Insert drawers into the Cabinet as shown.

23.2 In the event of misaligned Drawer or Drawer hit the bottom panel. To adjust gaps around the Drawer, first remove the Drawer. Loosen screws on the runners and adjust Drawer Runners to the up or down direction.

23.3 When the drawer front (15) are correctly aligned, re-tighten screws on the runners. Lock the runners in place by fastening additional **Screw (U)** to each runner as shown.

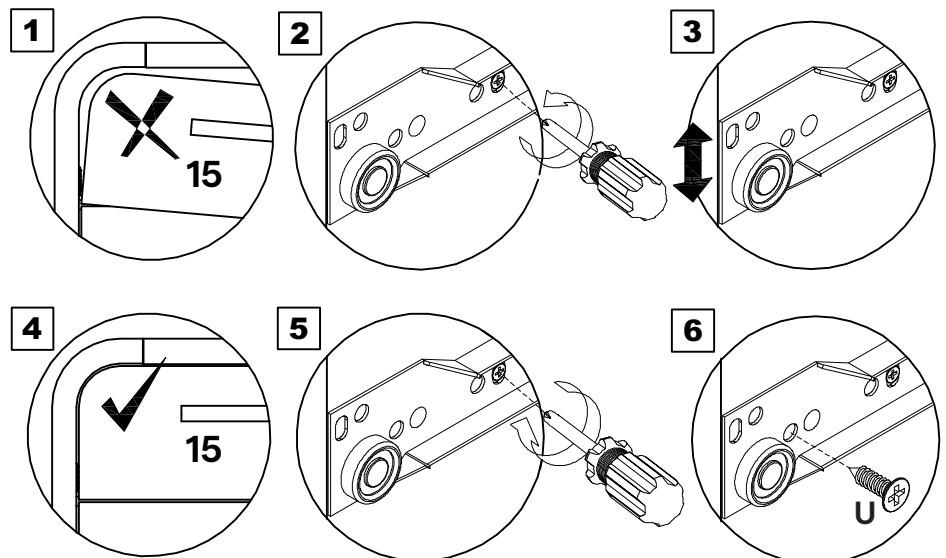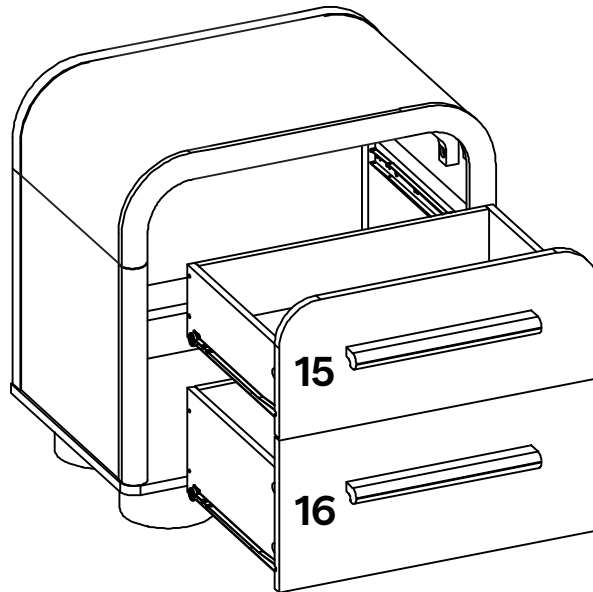


Great job!

Nightstand assembly is complete.

CARING FOR YOUR ITEM

- Indoor use only.
- Not contract grade.
- Clean using a non-abrasive cloth and a mild cleaner.
- Never use harsh chemicals, as they could damage the finish or integrity of the item.

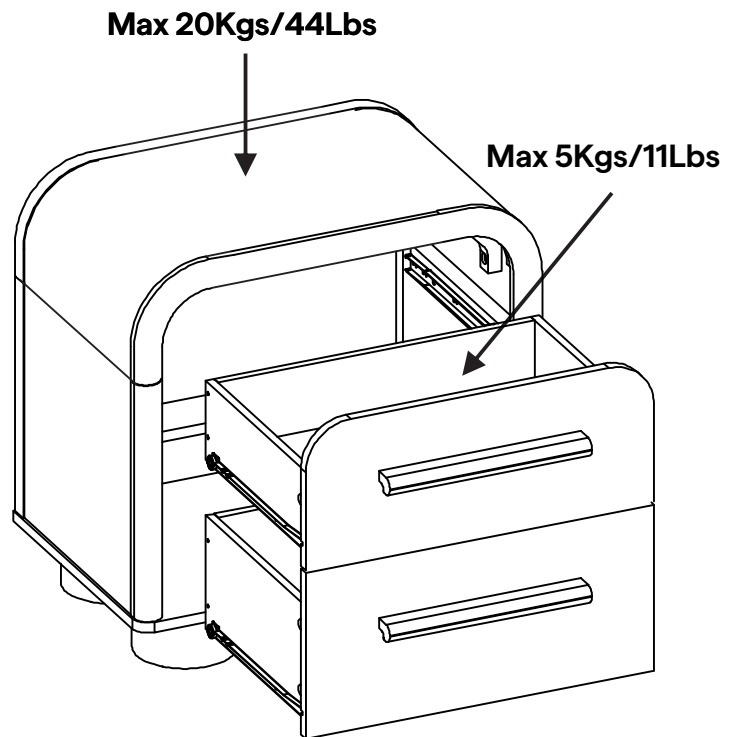

CONNECT WITH US!

Tag us **@modway_furniture** and **#modway** for a chance to be featured.

modway



Questions? Contact us!

609.256.9000

cs@modway.com