

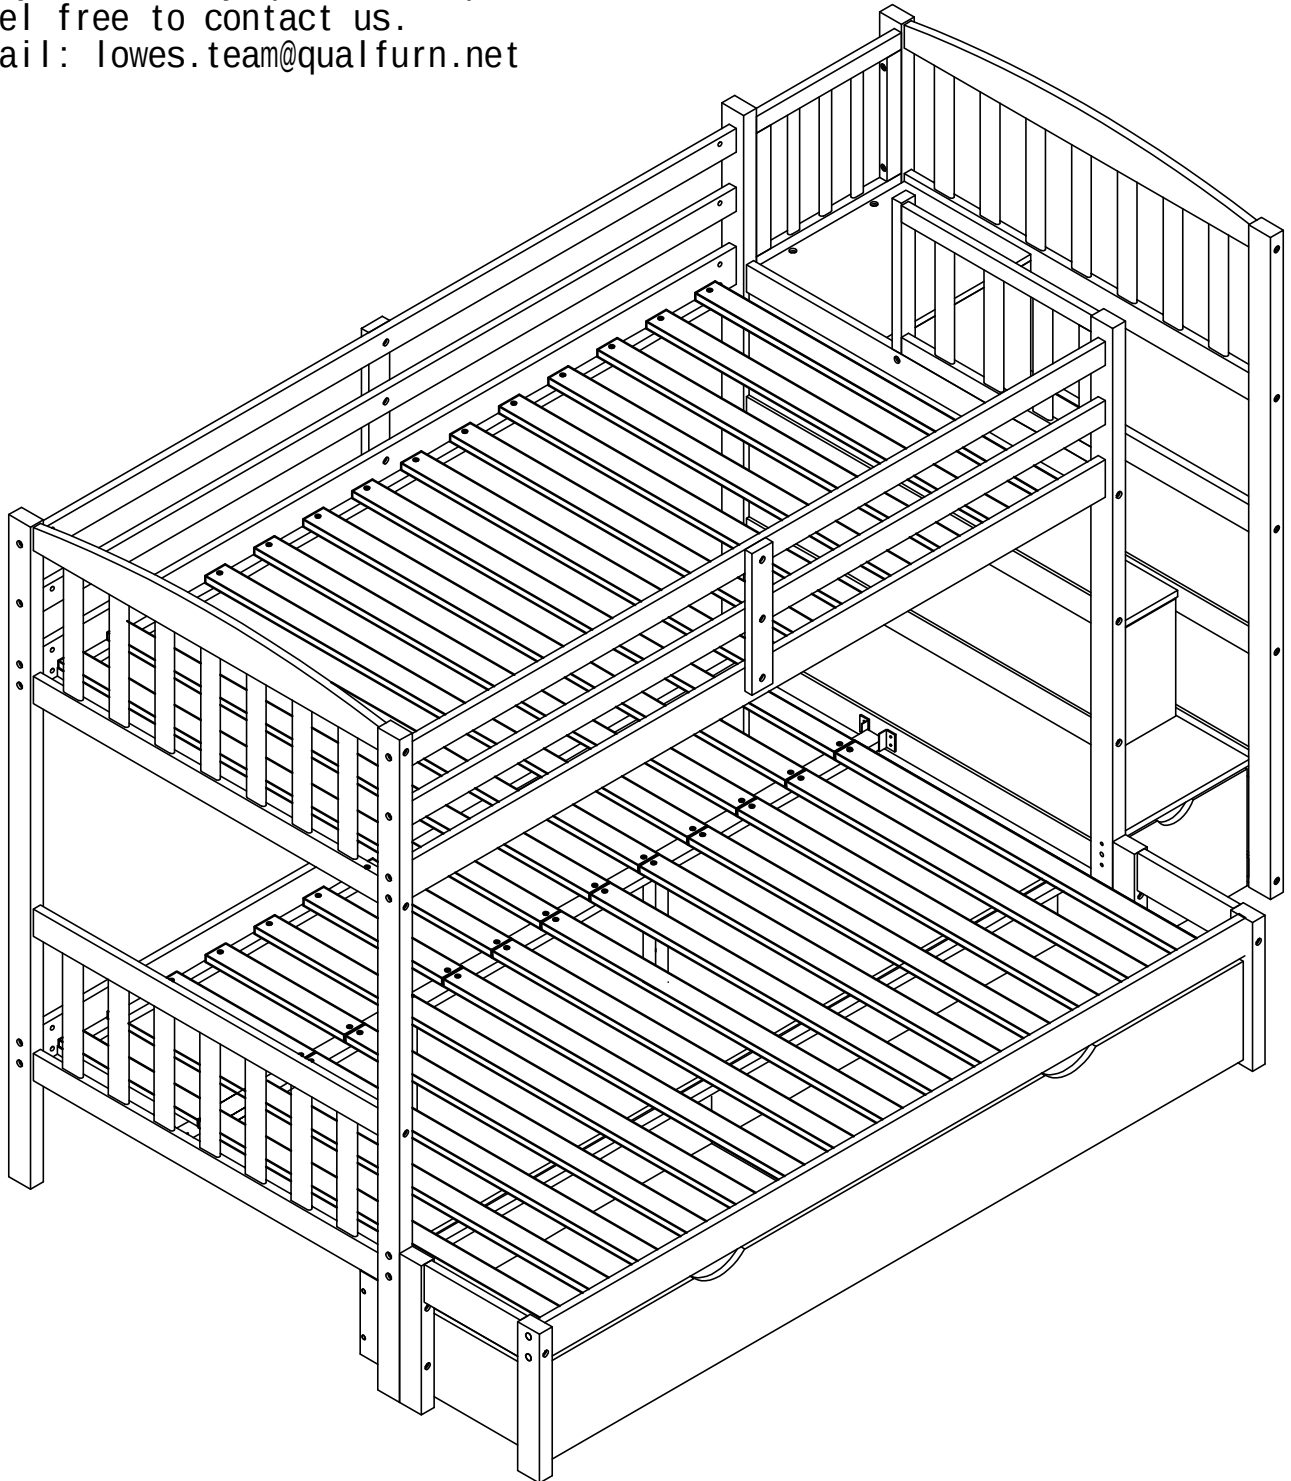
ASSEMBLY INSTRUCTION

SKU CODE: (WF286542/WF286543/WF286544)

This set is included 3 boxes if don't receive full 3 boxes please contact our customer service team

If you have any questions, please
feel free to contact us.

Email: lowes.team@qualfurn.net



! SAFETY WARNINGS !

1. This bed is designed for use only mattress(es) meeting the following specifications on the upper bunk, and lower bunk:

Bed Type	Length	Width	Thickness
<i>Twin Standard</i>	<i>74" - 75"</i>	<i>38 1/2"</i>	<i>8" max</i>
<i>Full Standard</i>	<i>74" - 75"</i>	<i>53 1/2 "</i>	<i>8" max</i>


2. Replacement parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY(USA) INC) dealers
3. Follow the information on the warnings appearing on the upper bunk bed end structure and on the carton. Do not remove warning label from bed.
4. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
5. Surface of the mattress must be at least 5" (127 mm) below the upper edge of guardrails.
6. Do not allow children under 6 years of age to use the upper bunk.
7. Periodically check and ensure that the guardrail, ladder, and other components are in their proper position, free from damage, and that all connectors are tight.
8. Do not allow horseplay on or under the bed and prohibit jumping on the bed
9. Always use the ladder for entering and leaving the upper bunk.
10. Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.
11. Use of a night light may provided added safety precaution for a child using the upper bunk.
12. Always use guardrails on both long sides of the upper bunk. If the bunk bed will be placed next to the wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and wall.
13. The use of water or sleep flotation mattresses is prohibited.
14. STRANGULATION HAZARD – Never attach or hang items to any part of the bunk bed that are not designed for use with the bed; for example, but not limited to, hook, belts and jump ropes.
15. Keep these instructions for future reference

ASSEMBLY INSTRUCTION

This Bed could be used as Twin Over Full (Option1) or Twin Over Twin (Option 2) as your decide. If you want to use Twin Over Twin bed please follow from Step 23

OPTION 1

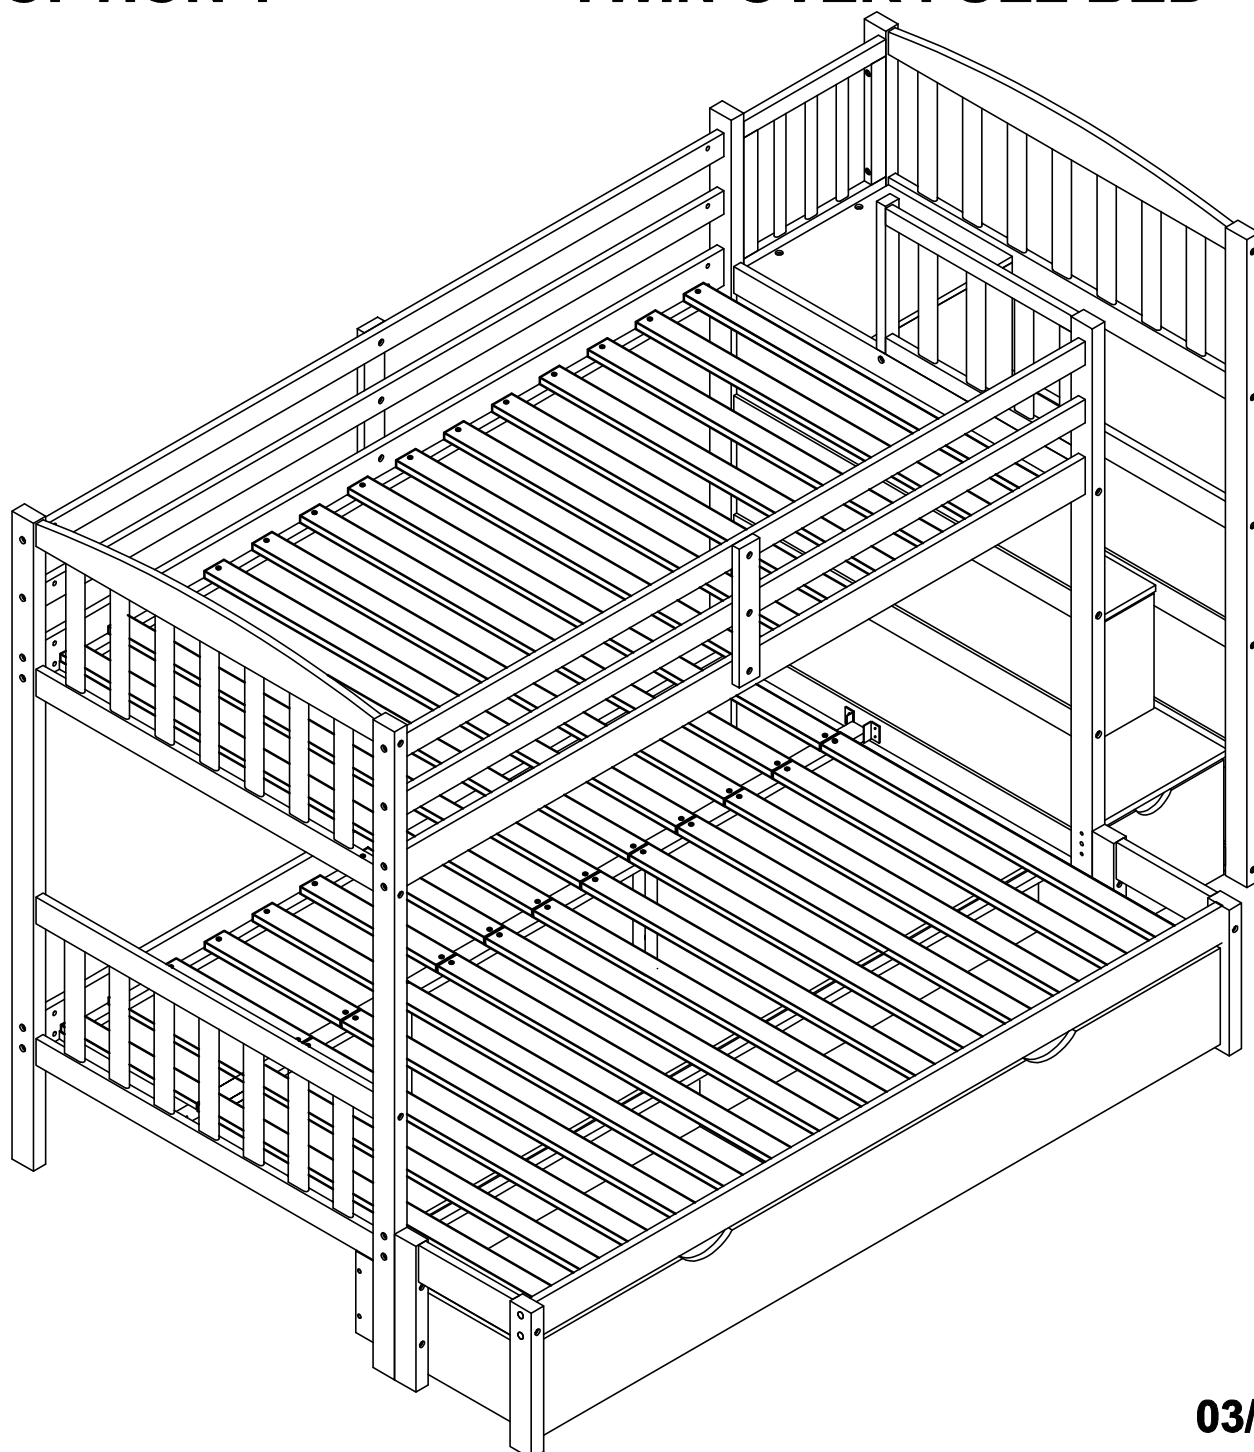TWIN OVER FULL BED




ASSEMBLY INSTRUCTION

















OPTION 2

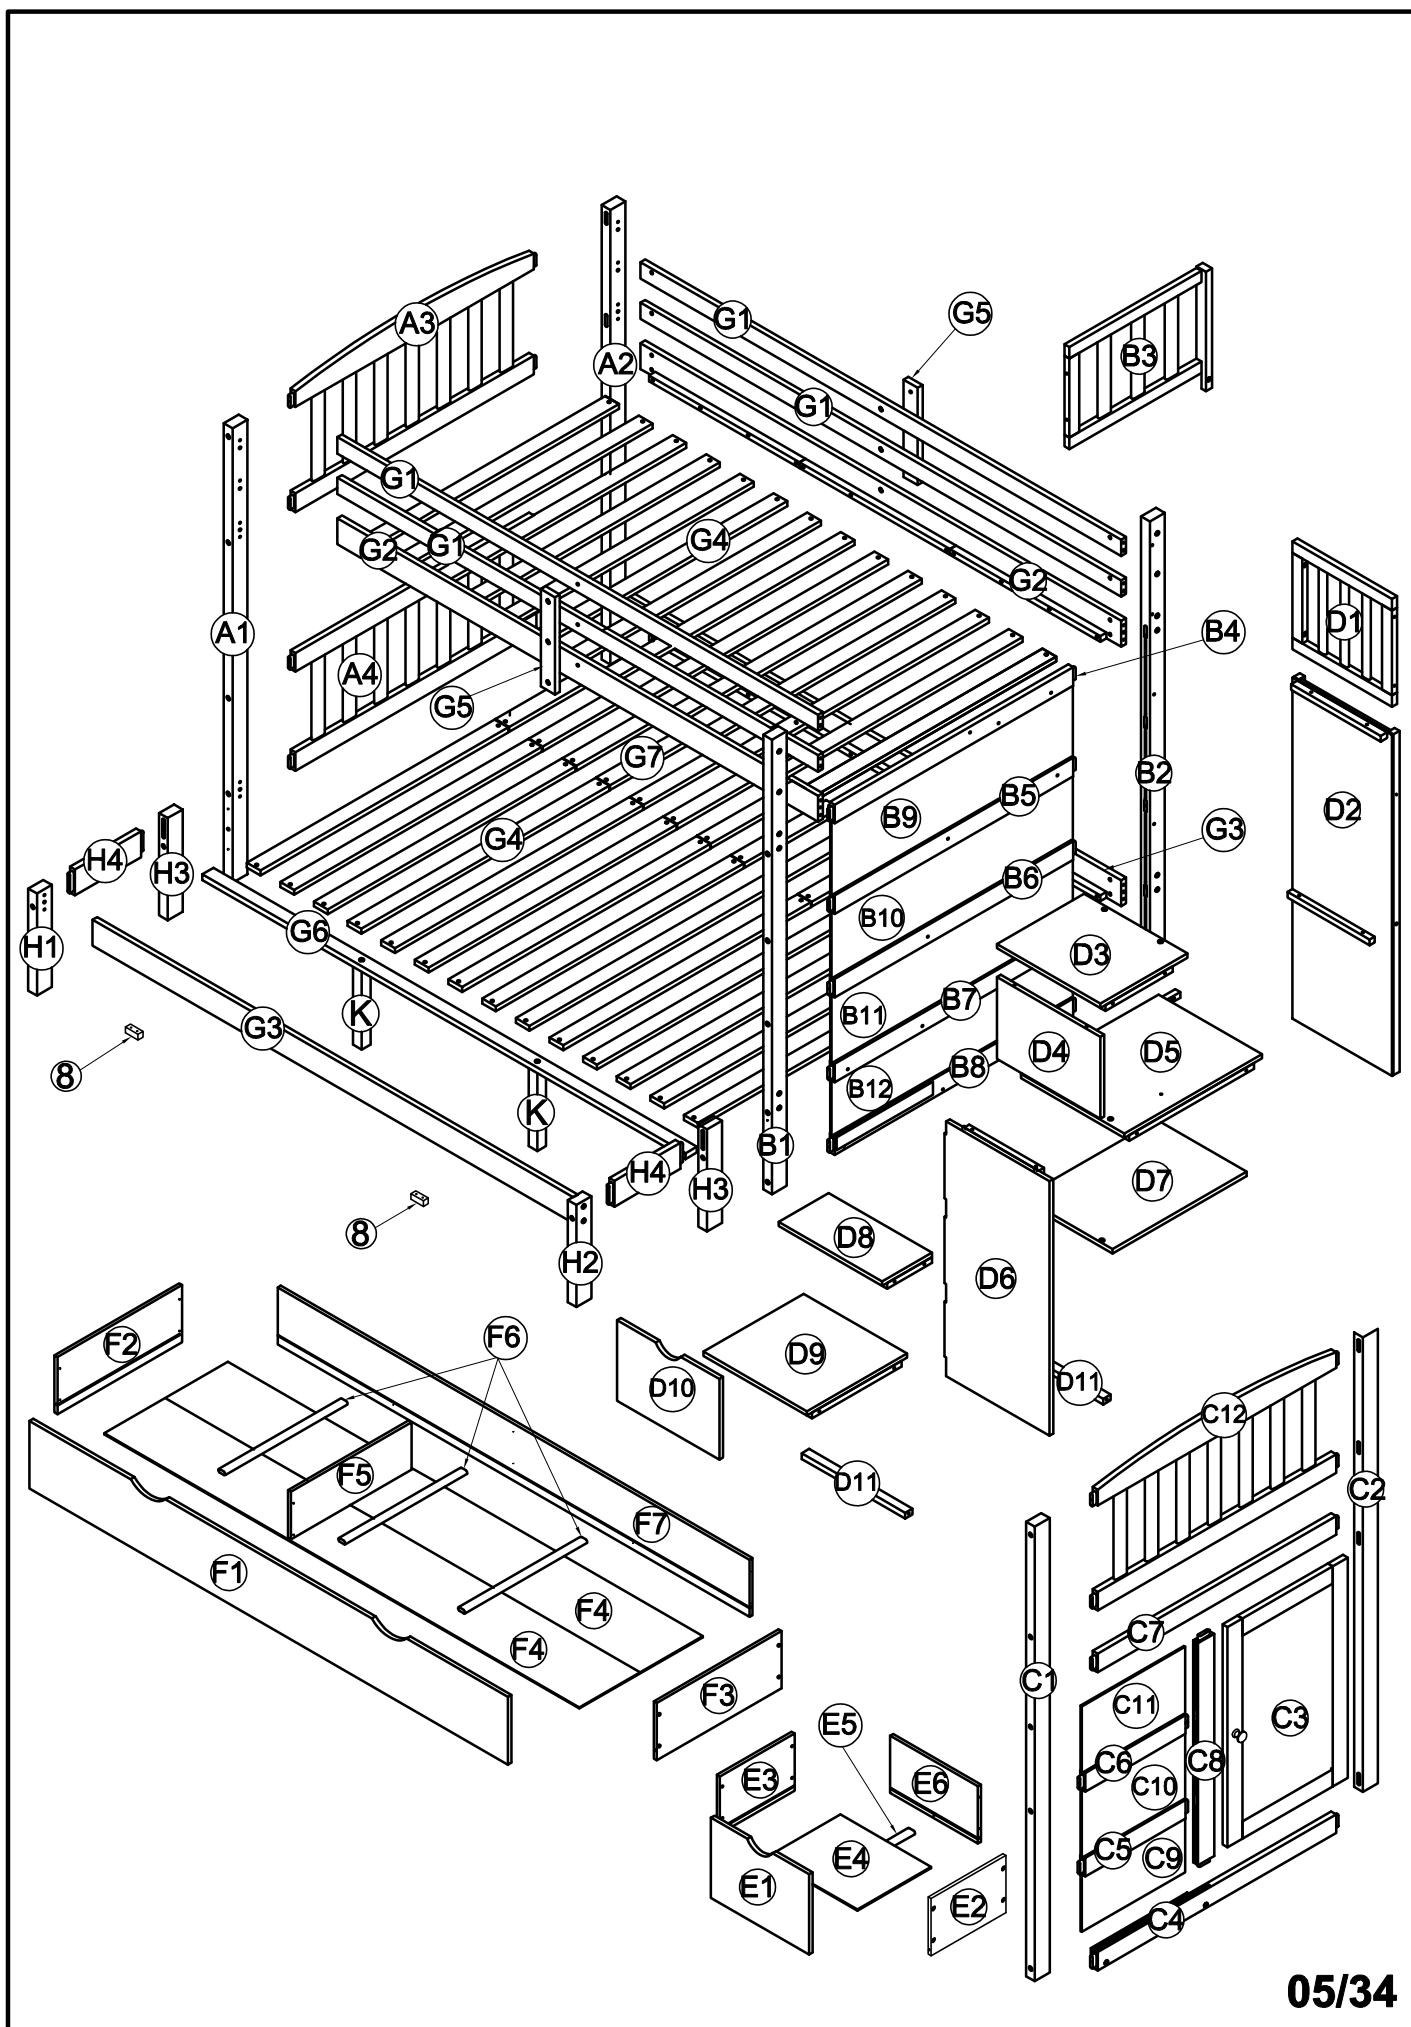TWIN OVER TWIN BED






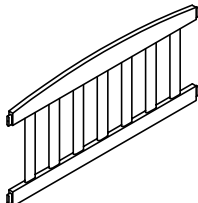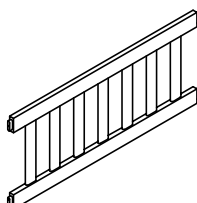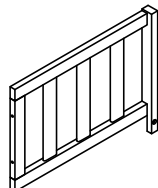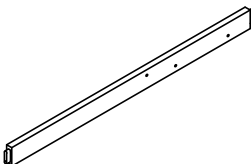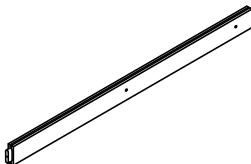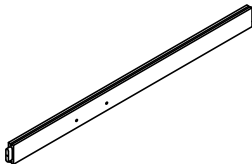
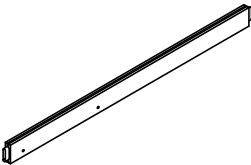
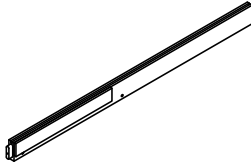

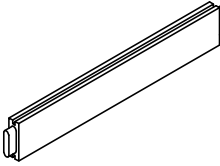
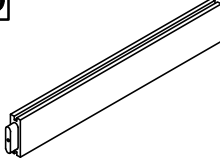
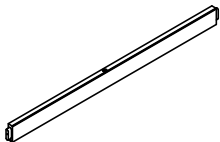
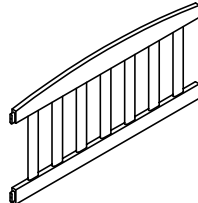
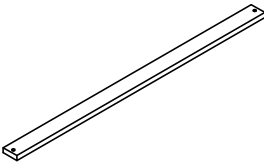
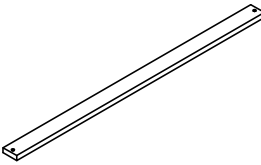

Part List & Hardware List (Box 1-WF286542)

A3  Side Frame - 1pcs	A4  Side Frame - 1pcs	B3  Side Frame (Center) - 1pcs
B4  Wood Bar (Middle Frame)- 1pcs	B5  Wood Bar (Middle Frame)- 1pcs	B6  Wood Bar (Middle Frame)- 1pcs
B7  Wood Bar (Middle Frame)- 1pcs	B8  Wood Bar (Middle Frame)- 1pcs	C3  Door-1pcs
C4  Wood Bar(Right) - 1pcs	C5  Wood Bar (Right) - 1pcs	C6  Wood Bar (Right) - 1pcs
C7  Wood Bar (Right) - 1pcs	C8  Wood Bar (Right) - 1pcs	C12  SideFrame (Right) - 1pcs
D1  Back Frame- 1pcs	G4  Slats - 28pcs	G7  Short Slats -14pcs
H1  Front Leg(left)-1pcs	H2  Front Leg(Right)-1pcs	H3  Back Leg-2pcs





















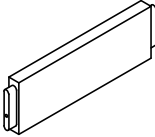
Part List & Hardware List (Box 1-WF286542)

H4  Side Rail-2pcs	K  Support Legs-2pcs	G5  Rail - 2pcs
--	--	---

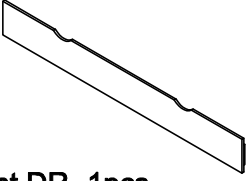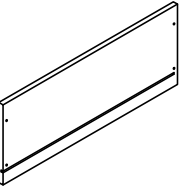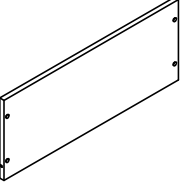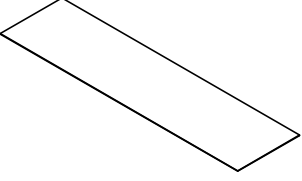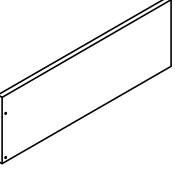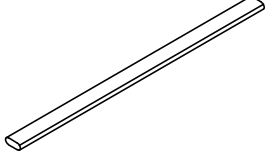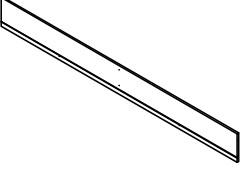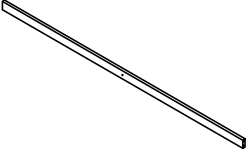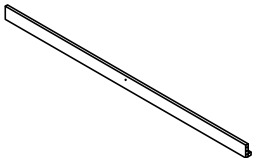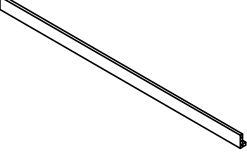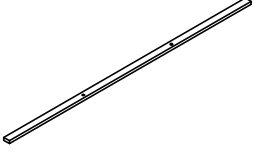Part List(WF286543)


A1  Front Leg (Left) - 1pcs	A2  Black Leg (Left) - 1pcs	B1  Front Leg (Center) - 1pcs
B2  Back Leg (Center) - 1pcs	C1  Front Leg (Right) - 1pcs	C2  Front Leg (Right) - 1pcs
F1  Front DR -1pcs	F2  Side DR -1pcs	F3  Side DR -1pcs
F4  Bottom DR -2pcs	F5  Center DR -1pcs	F6  Bottom DR -3pcs
F7  Back DR -1pcs	G1  Guardrail -4pcs	G2  Rail - 2pcs
G3  Rail - 2pcs	G6  Bottom Support Salats - 1pcs	

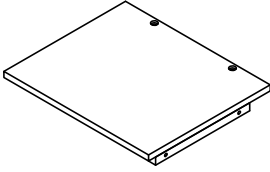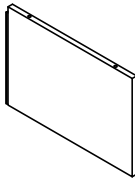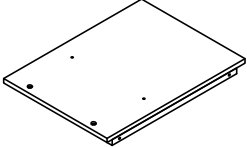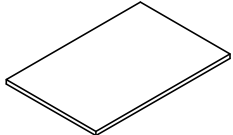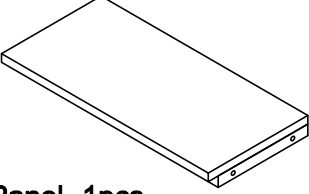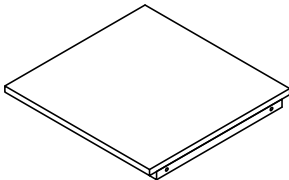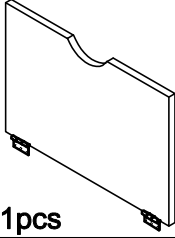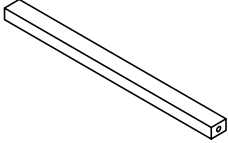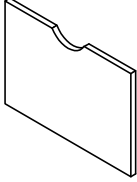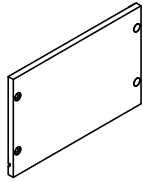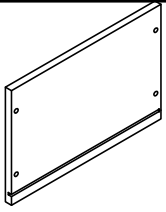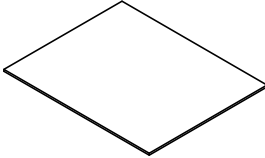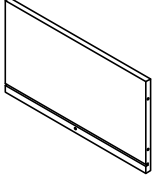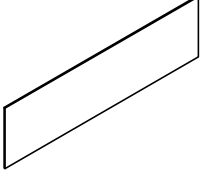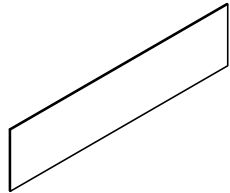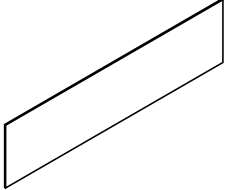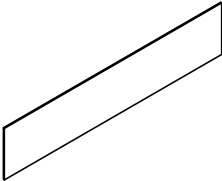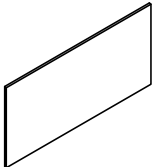Part List(WF286544)

D2  Back Frame- 1pcs	D3  Panel- 1pcs	D4  Panel- 1pcs
D5  Panel- 1pcs	D6  Panel- 1pcs	D7  Panel- 1pcs
D8  Panel- 1pcs	D9  Panel- 1pcs	D10  Panel- 1pcs
D11  Front Rail -2pcs	E1  Front DR -1pcs	E2  Side DR -1pcs
E3  Side DR -1pcs	E4  Bottom DR -1pcs	E5  Bottom DR -1pcs
E6  Back DR -1pcs	B9  Side Panel (Middle Frame) - 1pcs	B10  Side Panel (Middle Frame) - 1pcs
B11  Side Panel (Middle Frame) - 1pcs	B12  Side Panel (Middle Frame) - 1pcs	C9  Side Panel (Right) - 1pcs


Part List(WF286544)

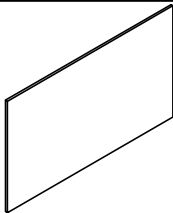C10











Side Panel (Right) - 1pcs

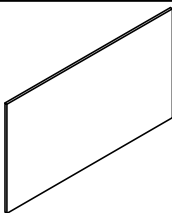
C11



Side Panel (Right) - 1pcs

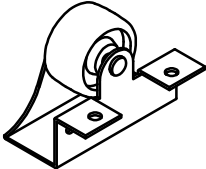
Hardware List

1  Screws 1/4" x80 (34pcs)	1.1  Screws 1/4" x100 (4pcs)	2  Ø1/4" x 25 mm Hex-Head bolts 7pcs
2.1  Ø1/4" x 50 mm Hex-Head bolts 6pcs	3  Ø1/4" x 15 mm Canopy head though - 7pcs	4  Ø10 x 40 mm Wood dowel 18pcs
5  Ø1/4" x 80 mm Hex-Head bolts 24pcs	6  Ø1/4" x 13 mm Horizontal-Hole bolts 24pcs	7  M4 x 30 mm Wood Screws 112pcs
8  Drawer Stopper- 2pcs	9  Ø1/4" x 30 mm Hex-Head bolts 32pcs	10  Ø8 x 30 mm Wood dowel 6pcs
11  Ø1/6" x 25 mm Hex-Head bolts 1pcs	12  Handle Wood 1pcs	13  M3 x 12 mm Wood Screws 24pcs
14  Wheels 4pcs	15  Allen Key 1pc	16  M4 x 20 mm Wood Screws 8pcs
17  Bracket Steel 2pcs	18  Ø1/4" x 35 mm Hex-Head bolts 2pcs	




Assembly Tools Required (Not Included)

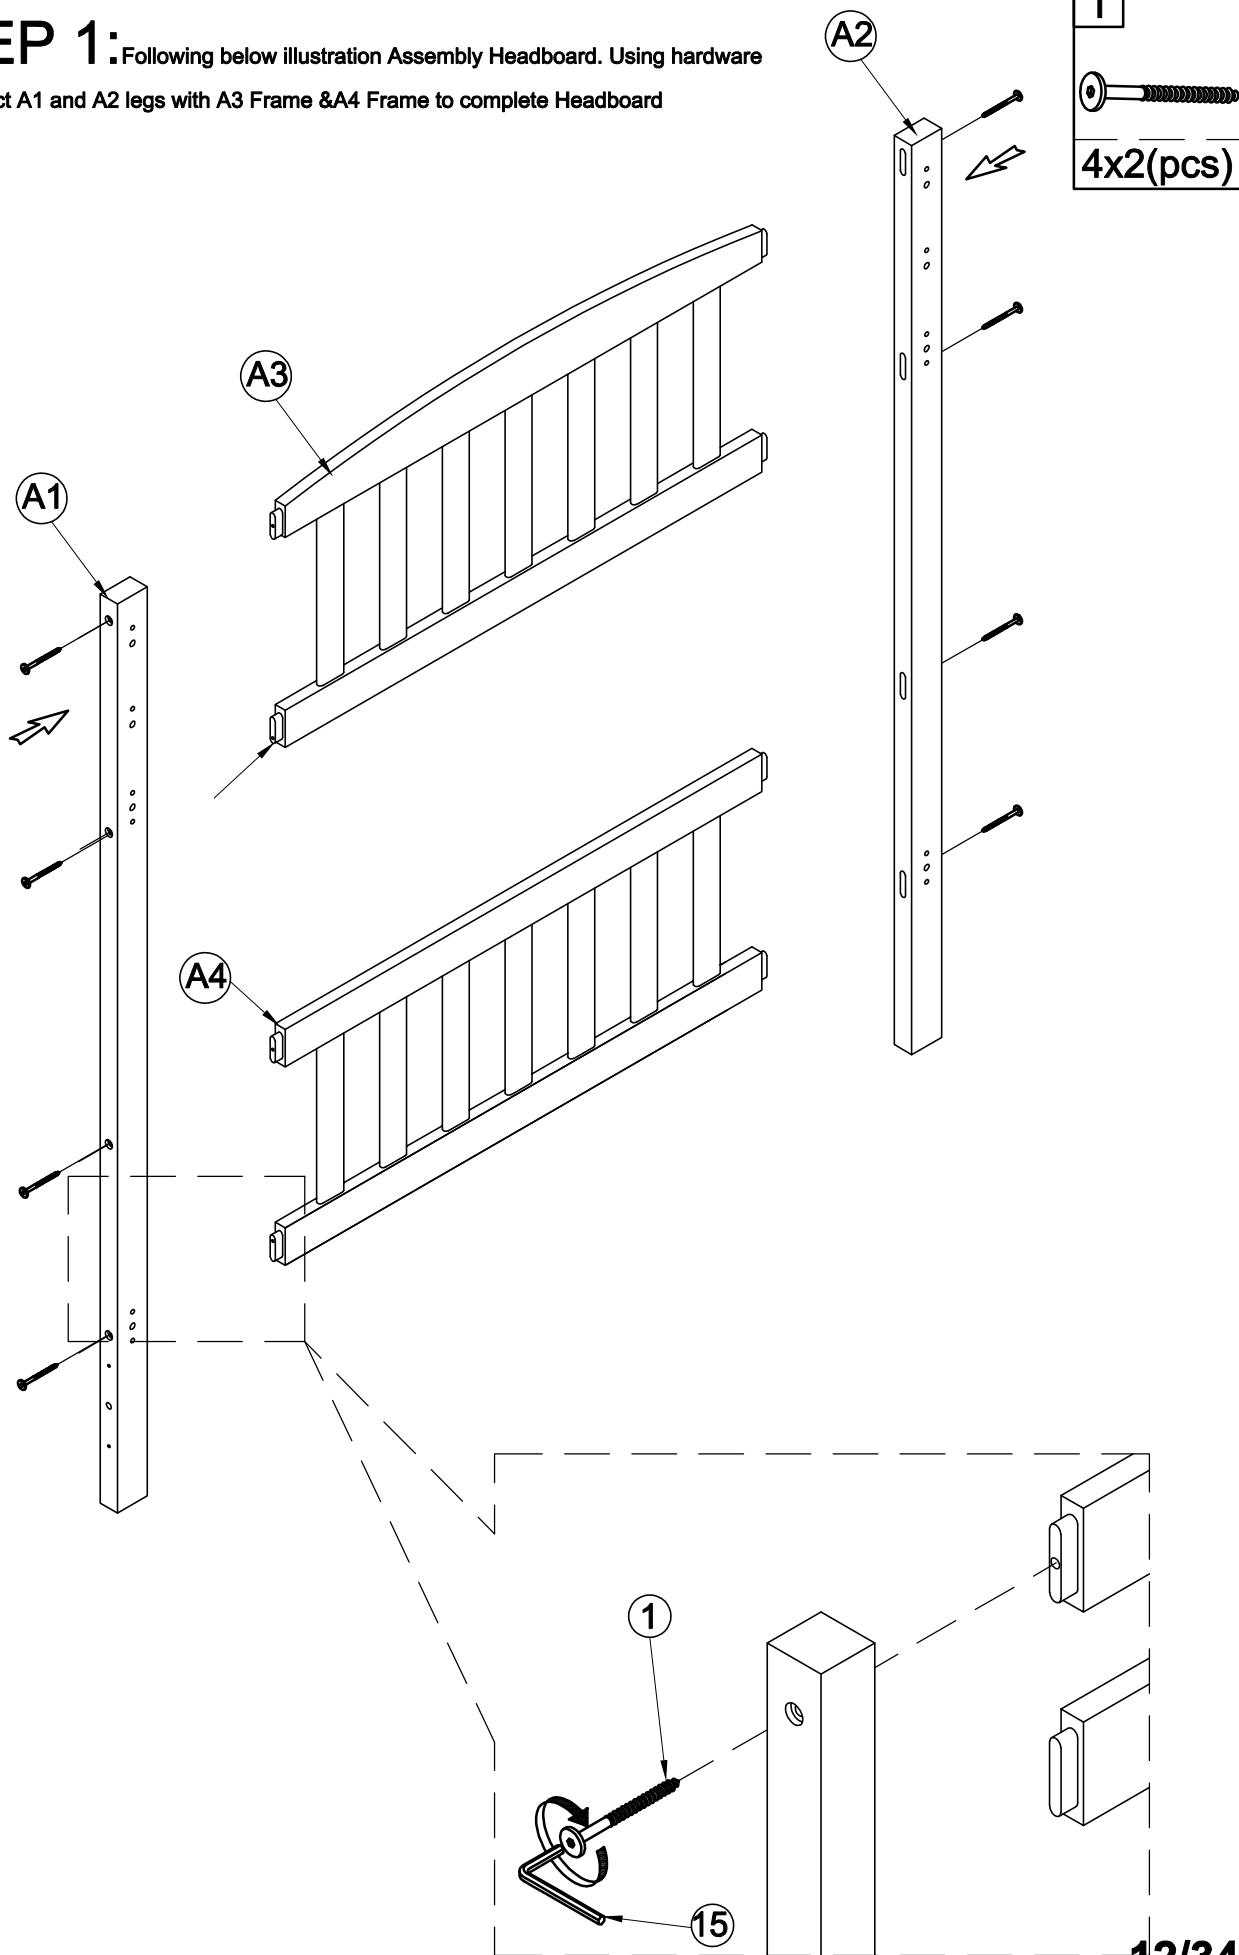
STEP 1: Following below illustration Assembly Headboard. Using hardware
#1 connect A1 and A2 legs with A3 Frame & A4 Frame to complete Headboard



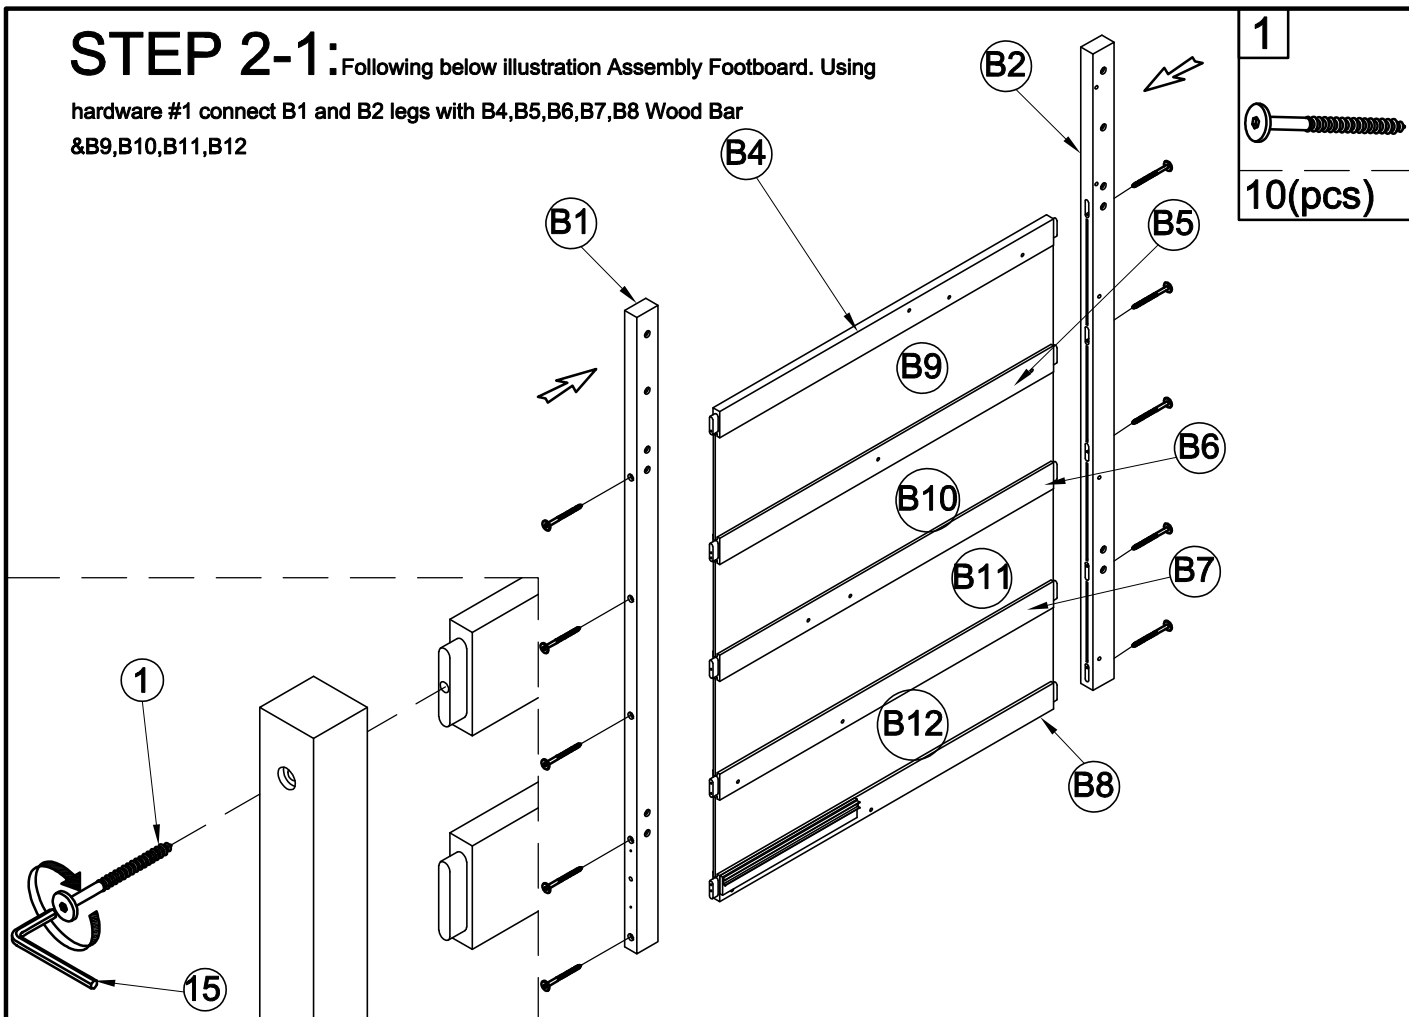STEP 2-1: Following below illustration Assembly Footboard. Using hardware #1 connect B1 and B2 legs with B4,B5,B6,B7,B8 Wood Bar &B9,B10,B11,B12




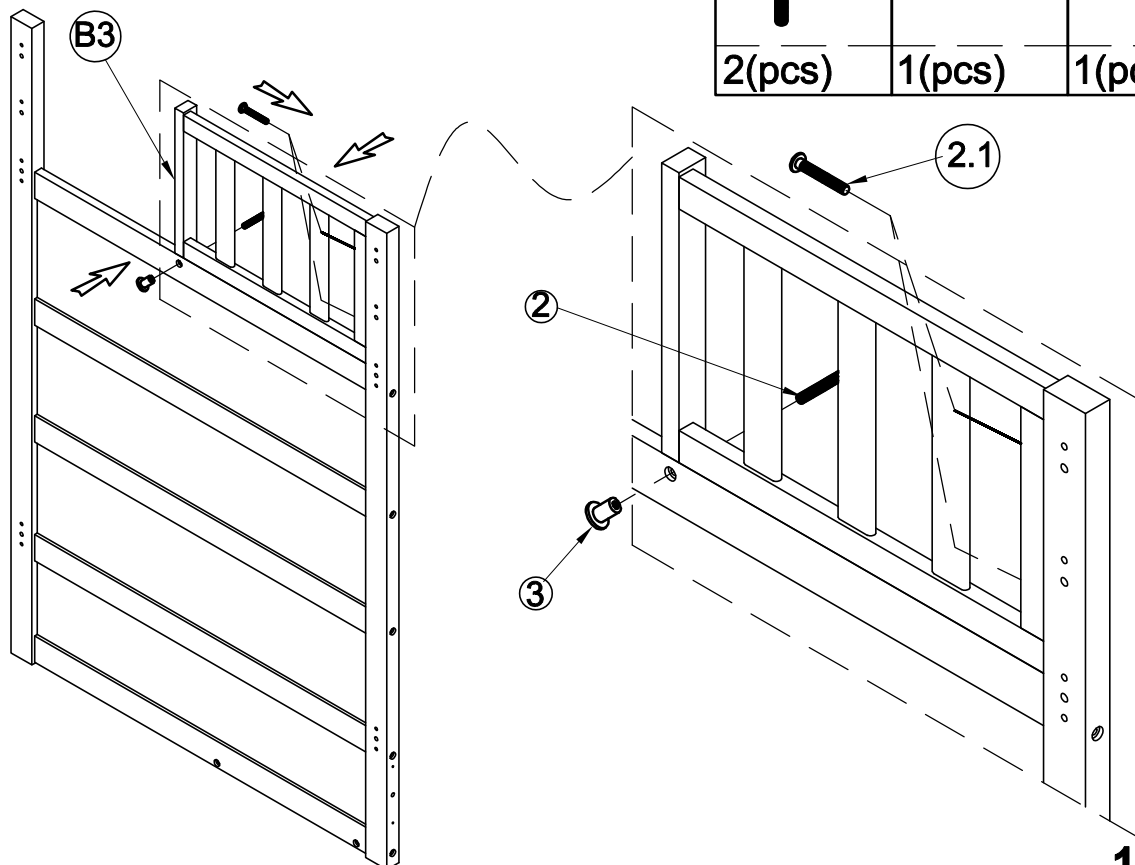STEP 2-2: Following below illustration Assembly Footboard. Using hardware #2,#2.1,#3 connect Frame(completed on Step 2-1) with B3 Frame to complete Footboard




STEP 3:

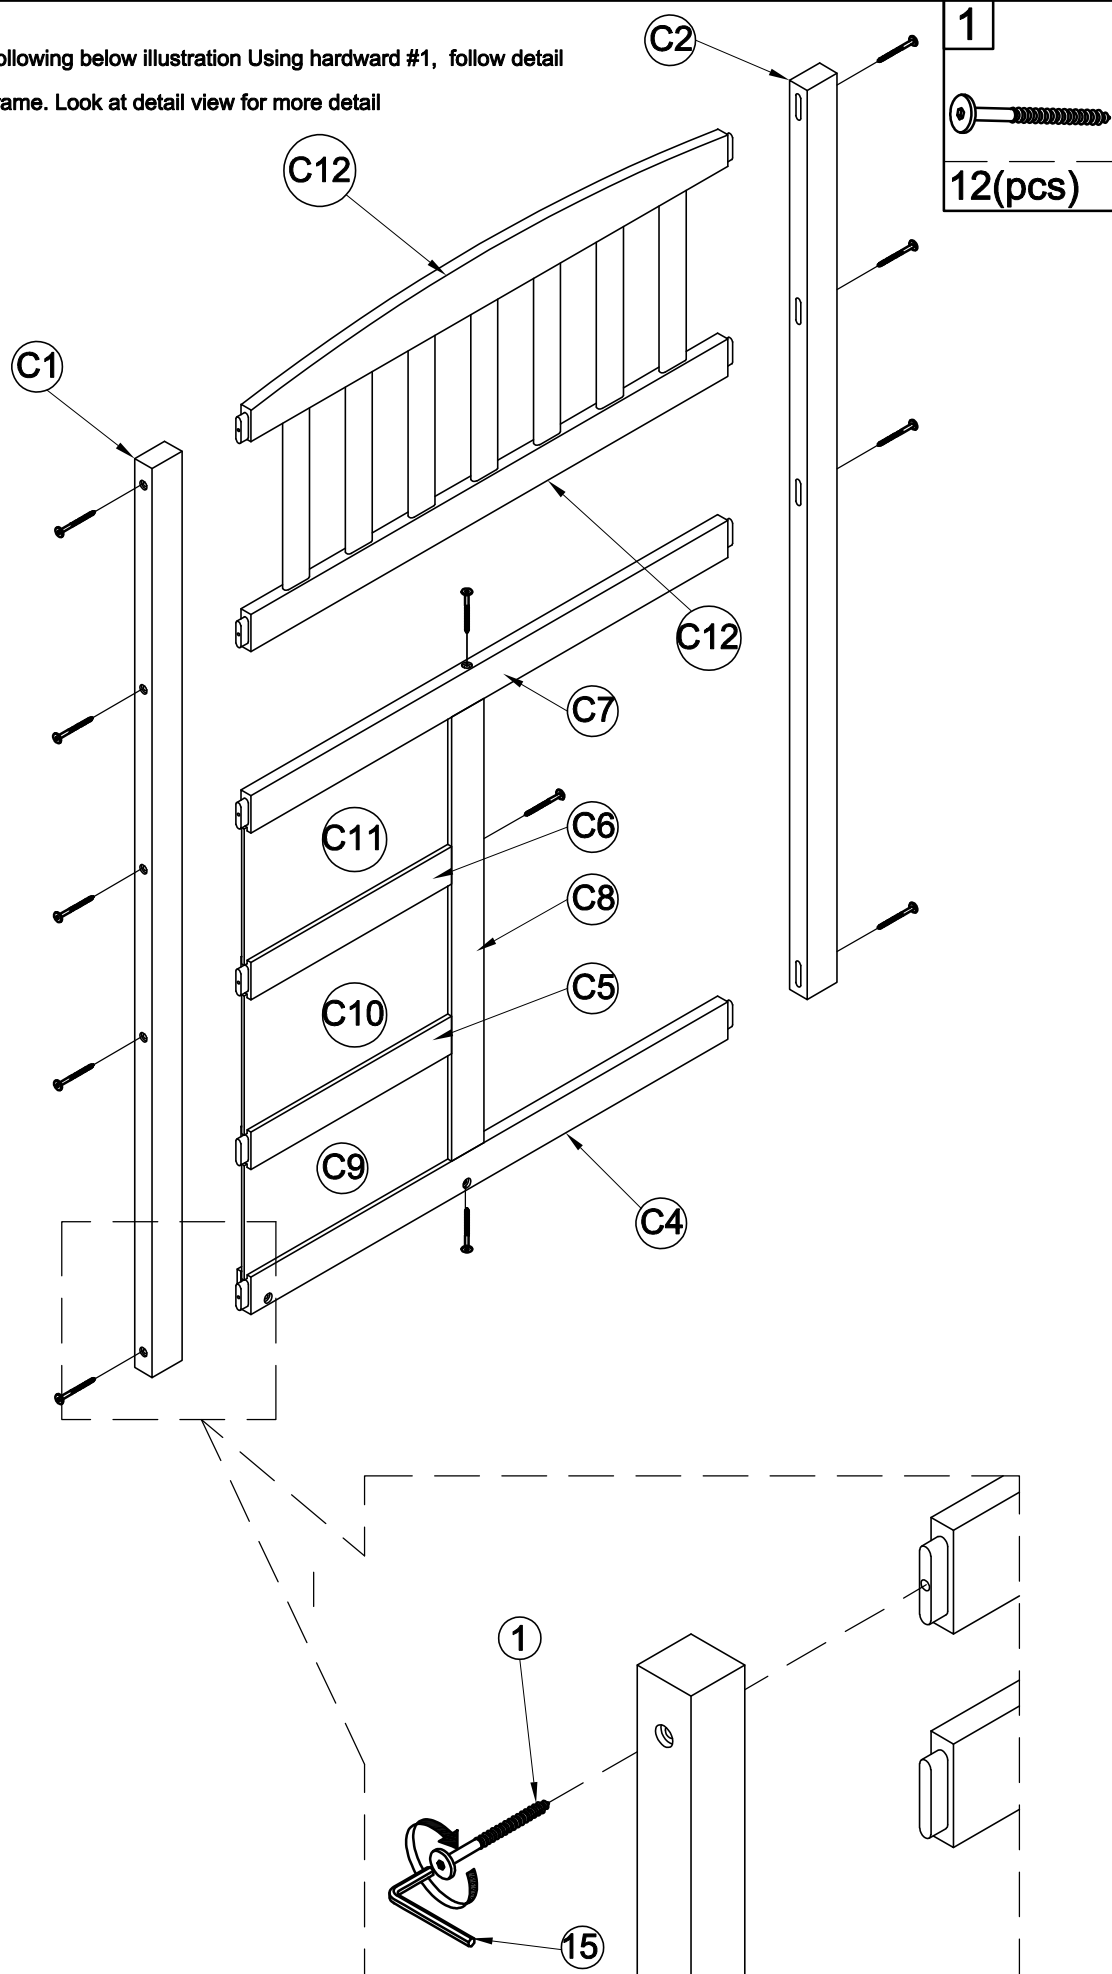Following below illustration Using hardward #1, follow detail view to Assembly Right Frame. Look at detail view for more detail



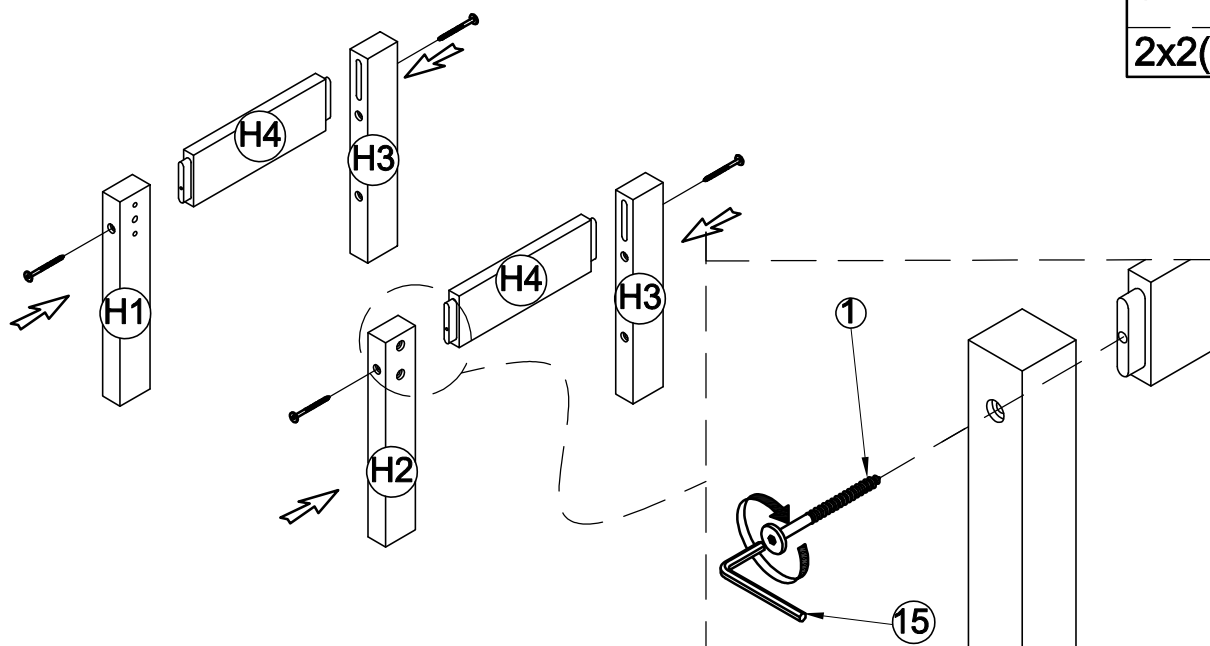STEP 4: Assembly Extension Kit. Follow the illustration



1




2x2(pcs)

STEP 5: Following the illustration

.Connect Extension With Frame.
Look at detail view for more detail

4




2(pcs)



1.1




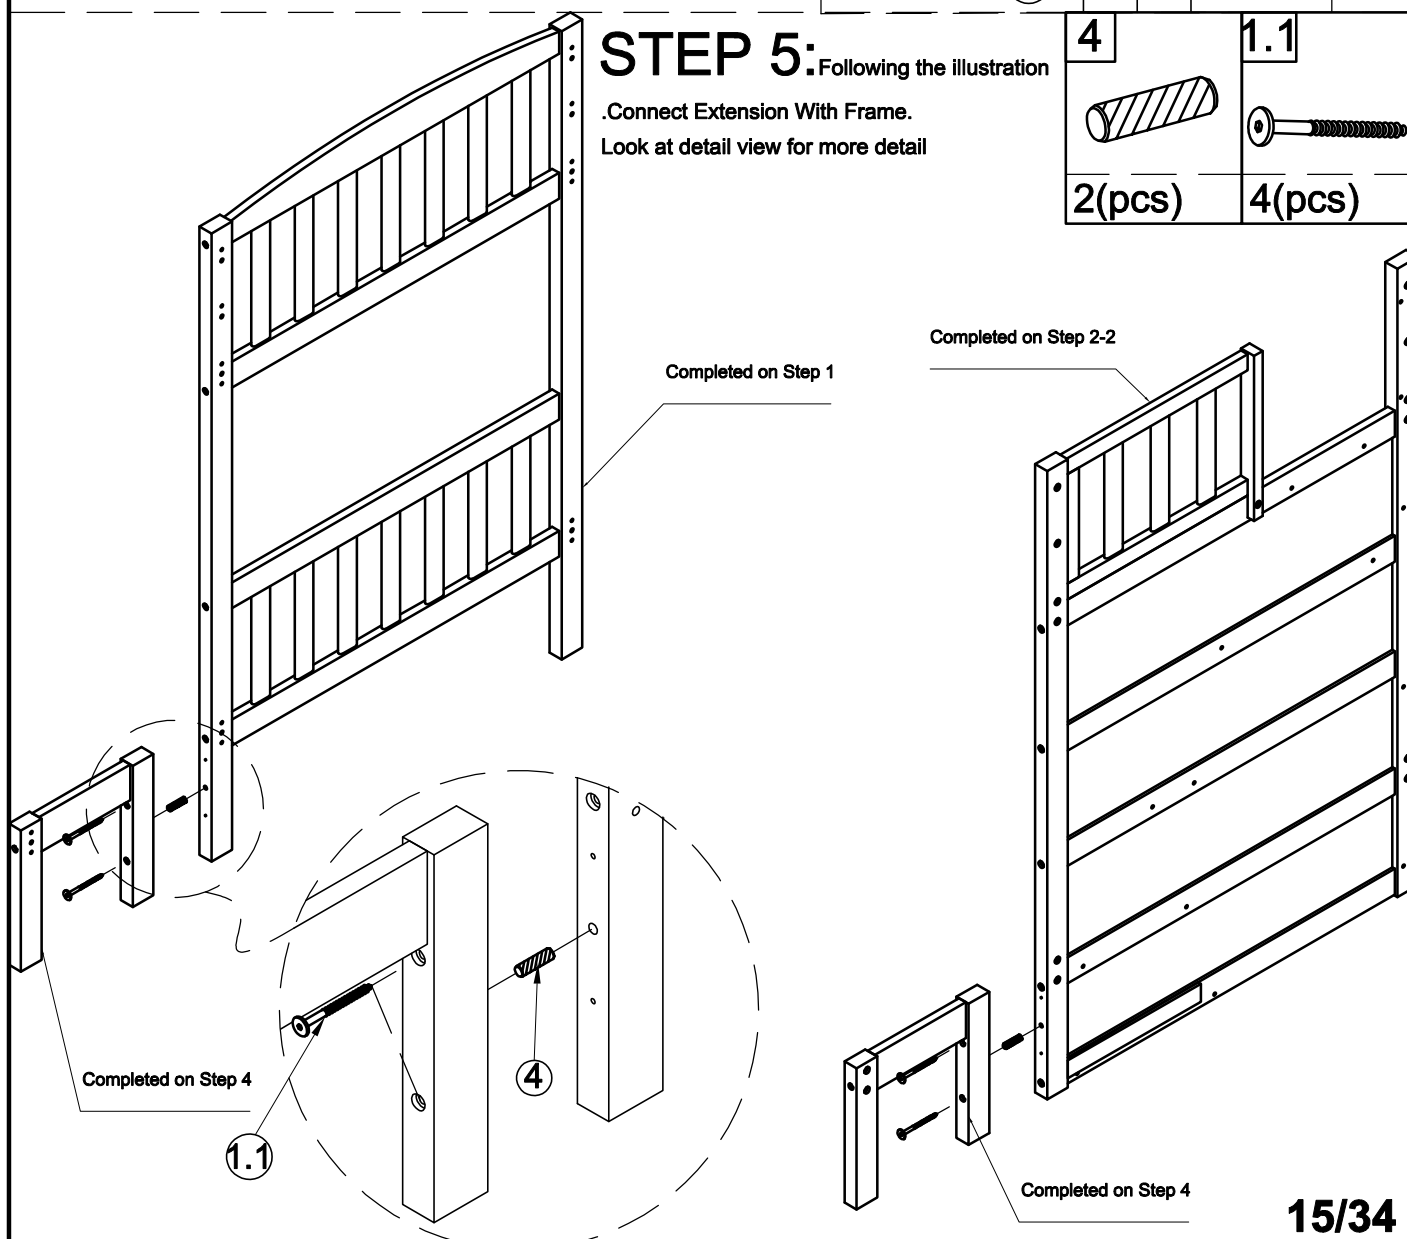4(pcs)



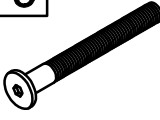STEP 6: Following below illustration Using hardware #5, #6 and dowel #4 follow detail view to Assembly Headboard and Footboard and Extension Kit with siderail G2(2),siderail G3(2) & Guardrail G1(4). Look at detail view for more detail


6	5	4
		
24(pcs)	24(pcs)	16(pcs)

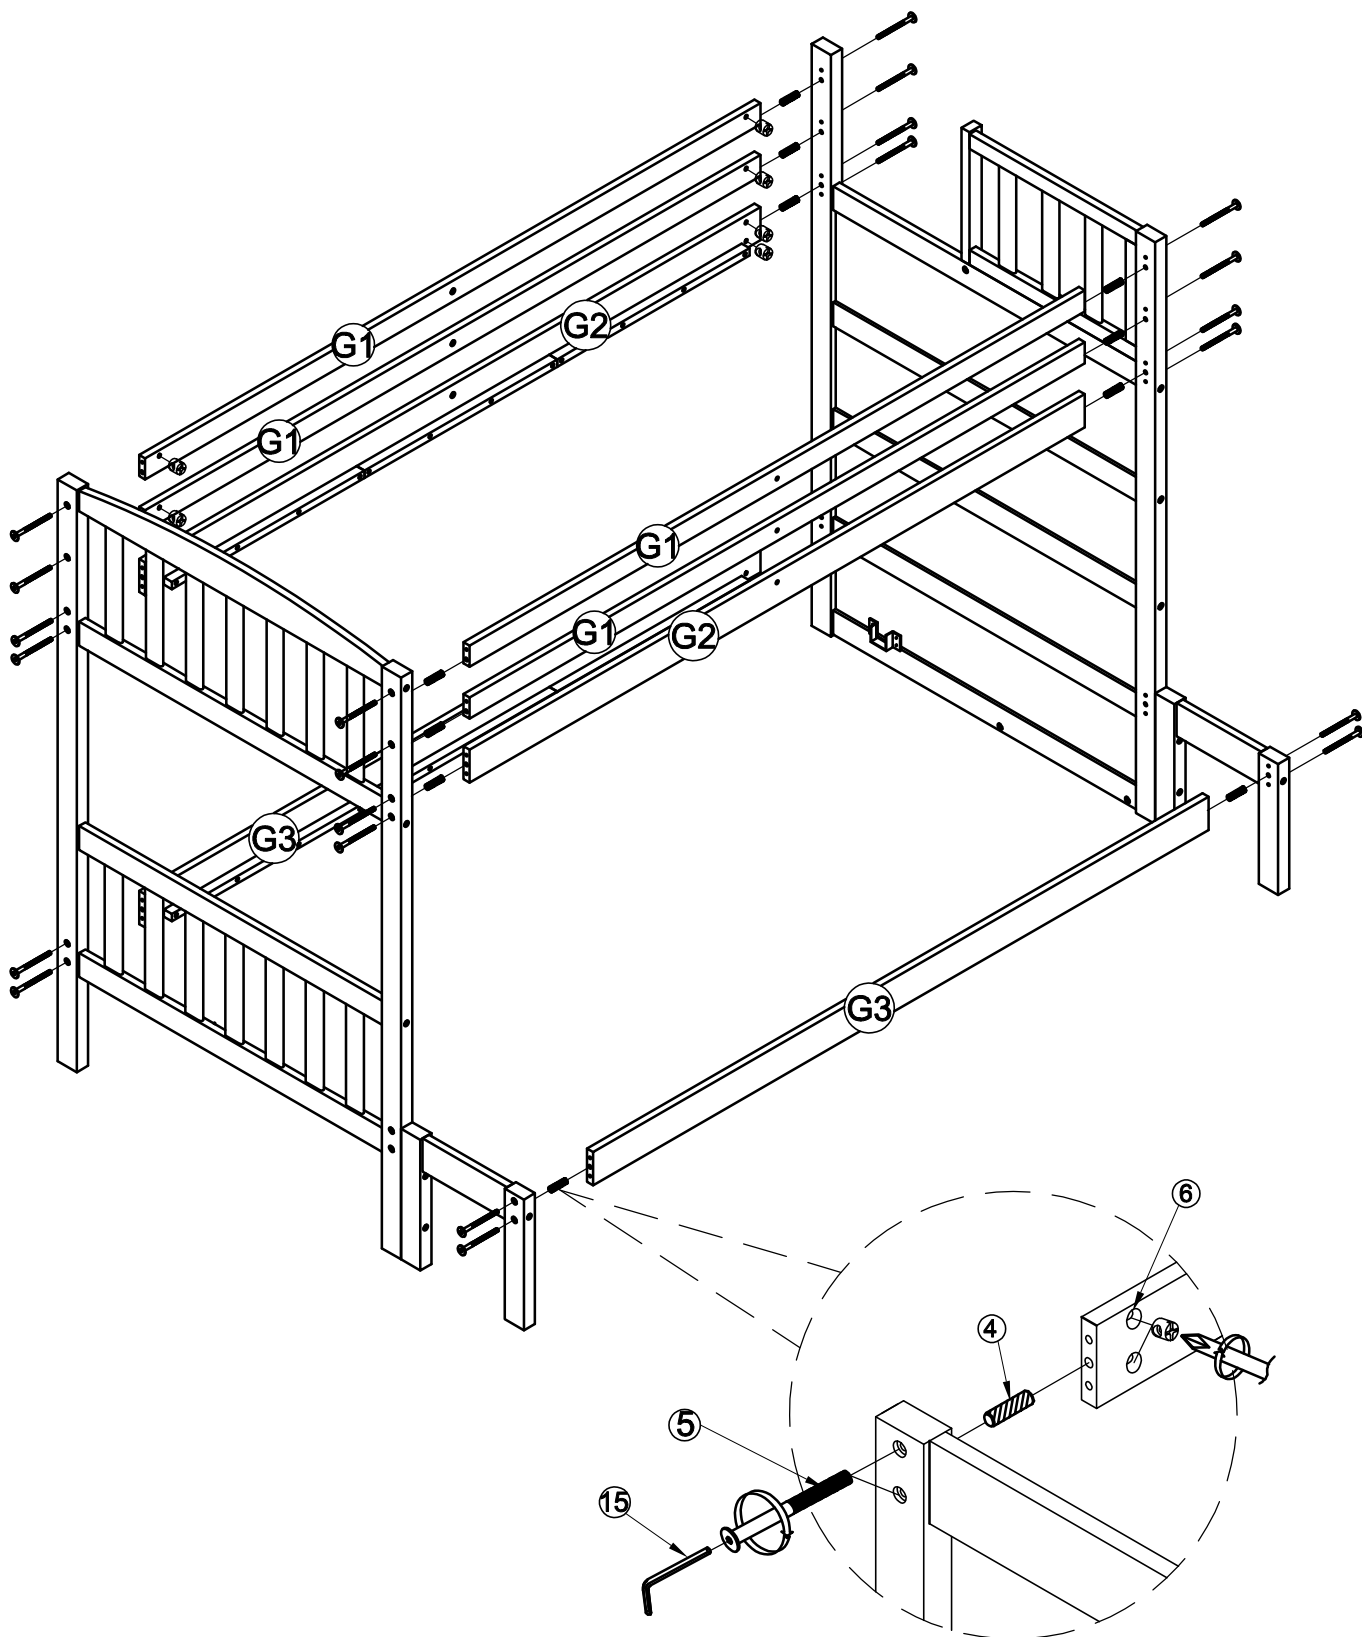


Inside siderail

STEP 7: Following below illustration Using hardware #2,#3 connect Frame(completed on Step 6) with Rail G5(2).Look at detail view for more detail



3	2
6(pcs)	6(pcs)

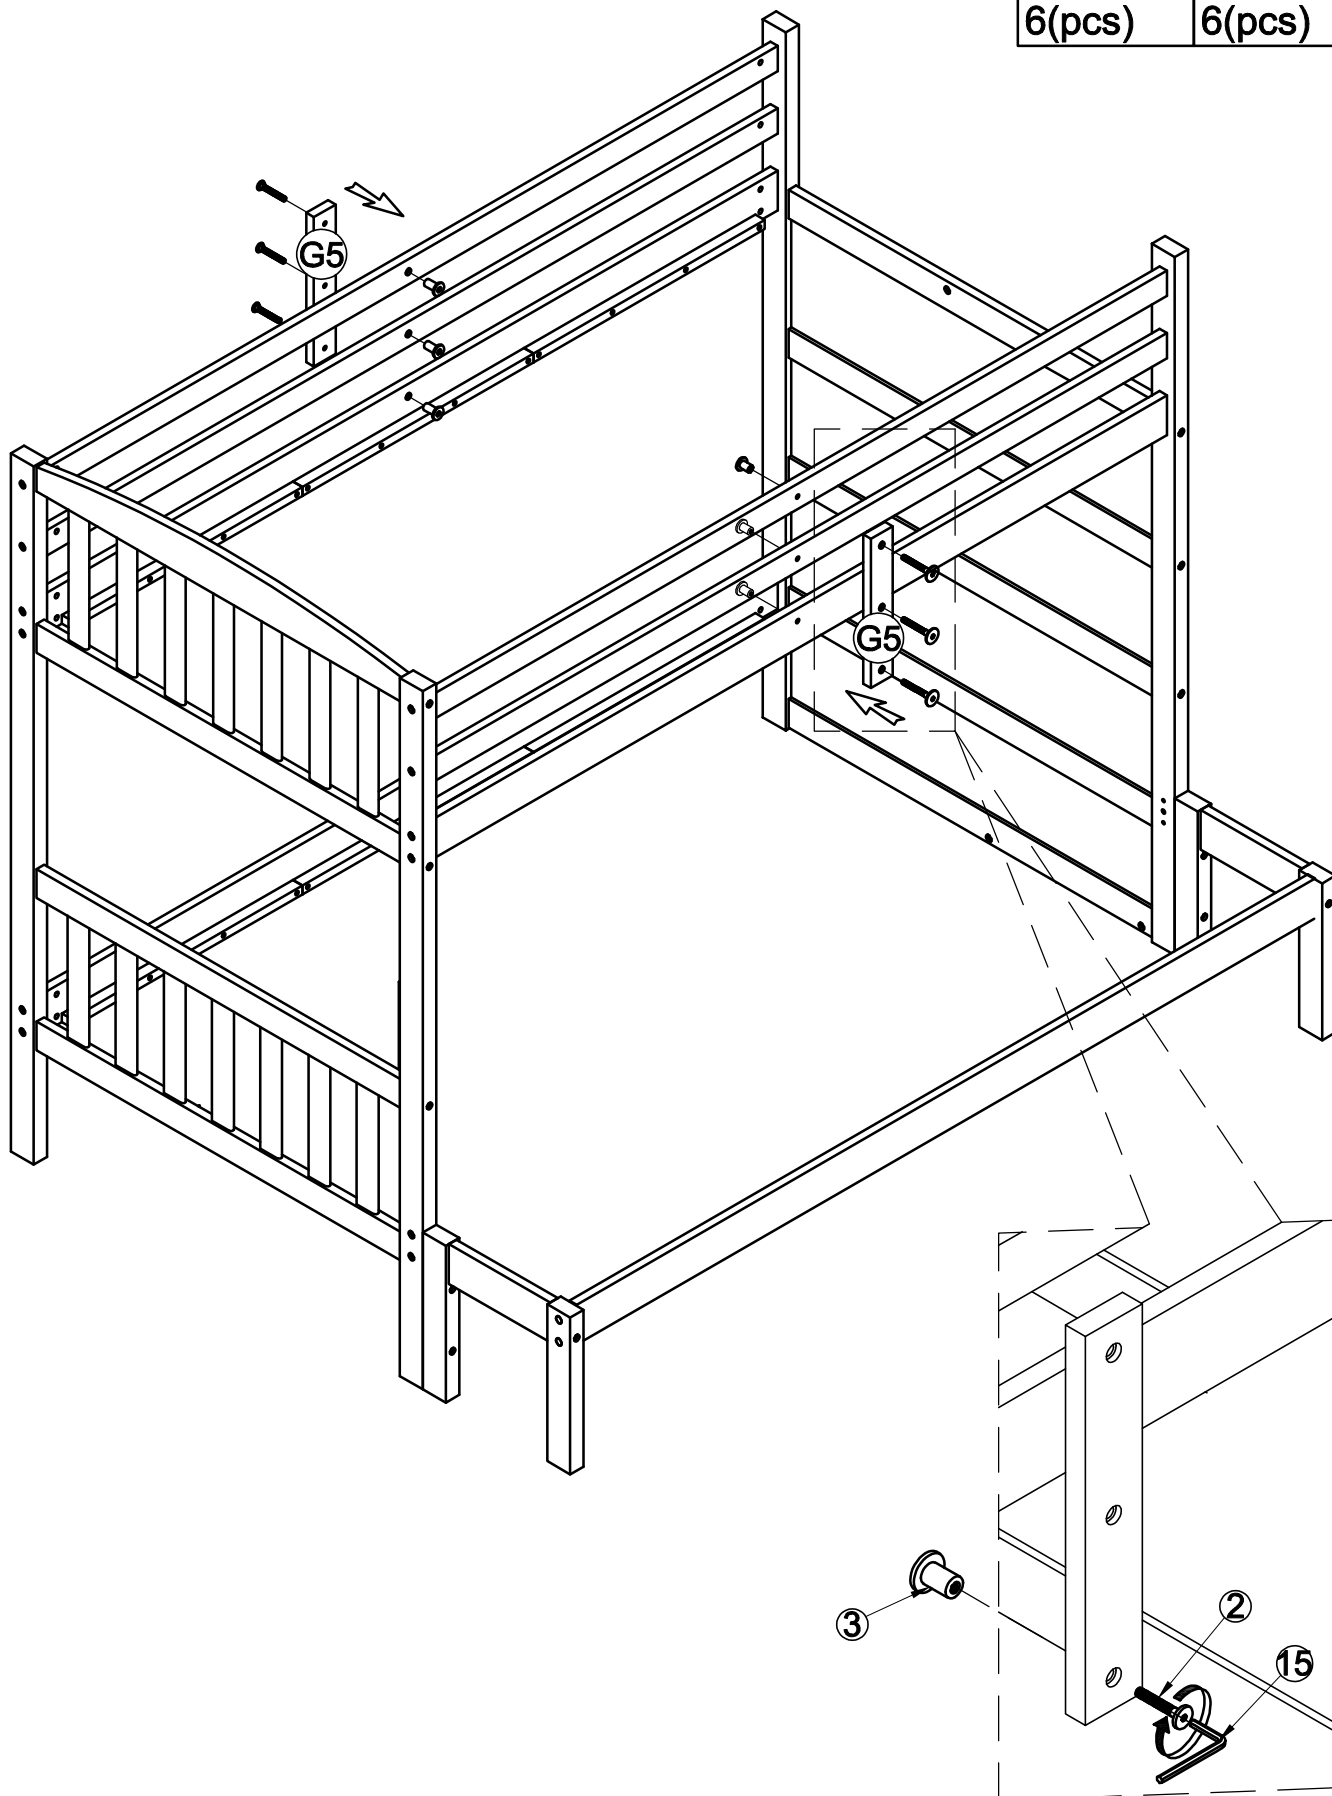

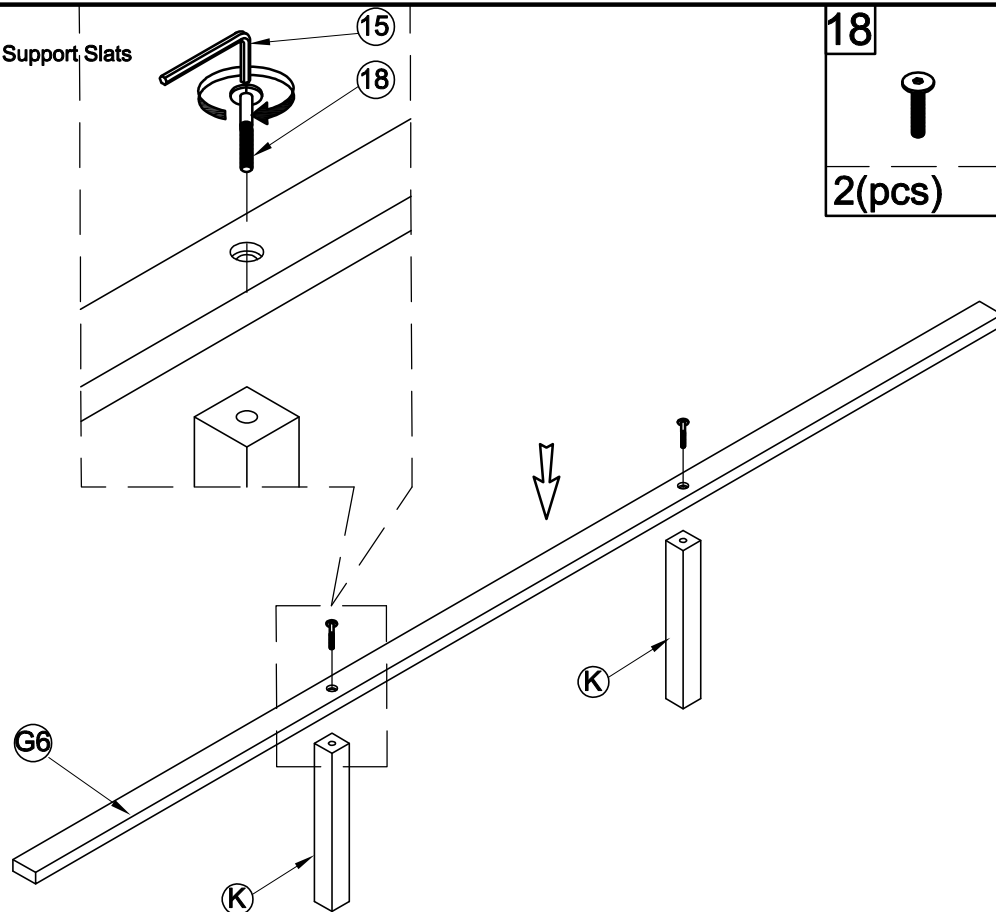
STEP 8: Assembly Middle Support Slats



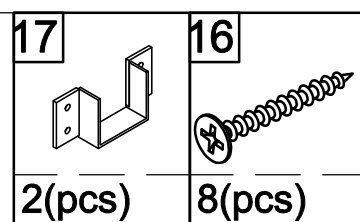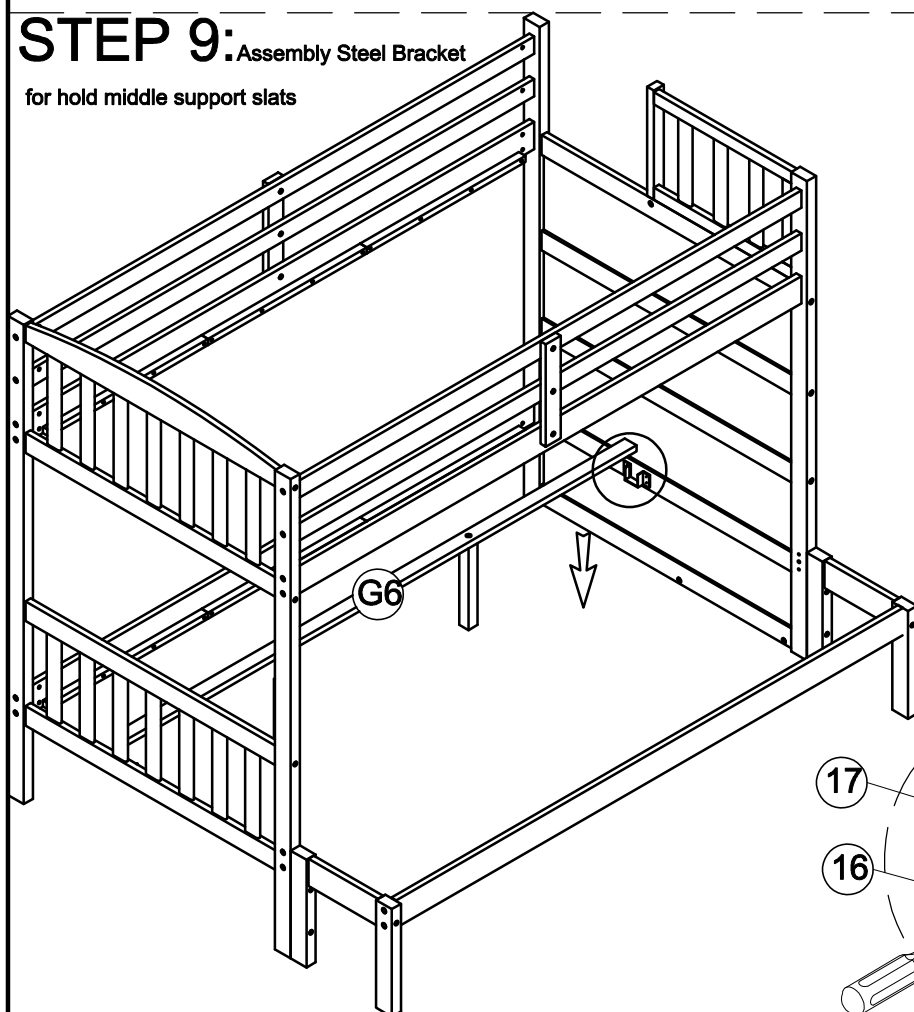STEP 9: Assembly Steel Bracket for hold middle support slats



Back

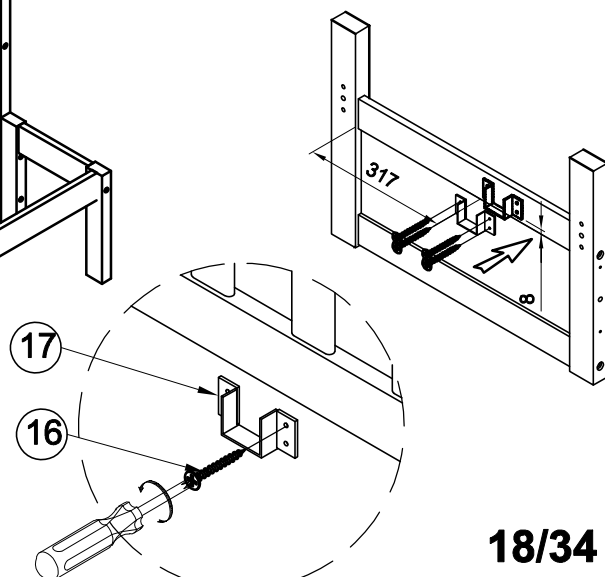

STEP 10: Following below illustration:

-Assembly 14 short slats G7 and 28 Twin Slats G4 by using hardware #7.

-Using hardware #7 to screw wood block #8 underneath of front siderail

Look at detail view

ATTENTION: REMEMBER
TO COMPLETE SCREW
ALL SLATS WITH SIDERAIL
BEFORE USING.

7

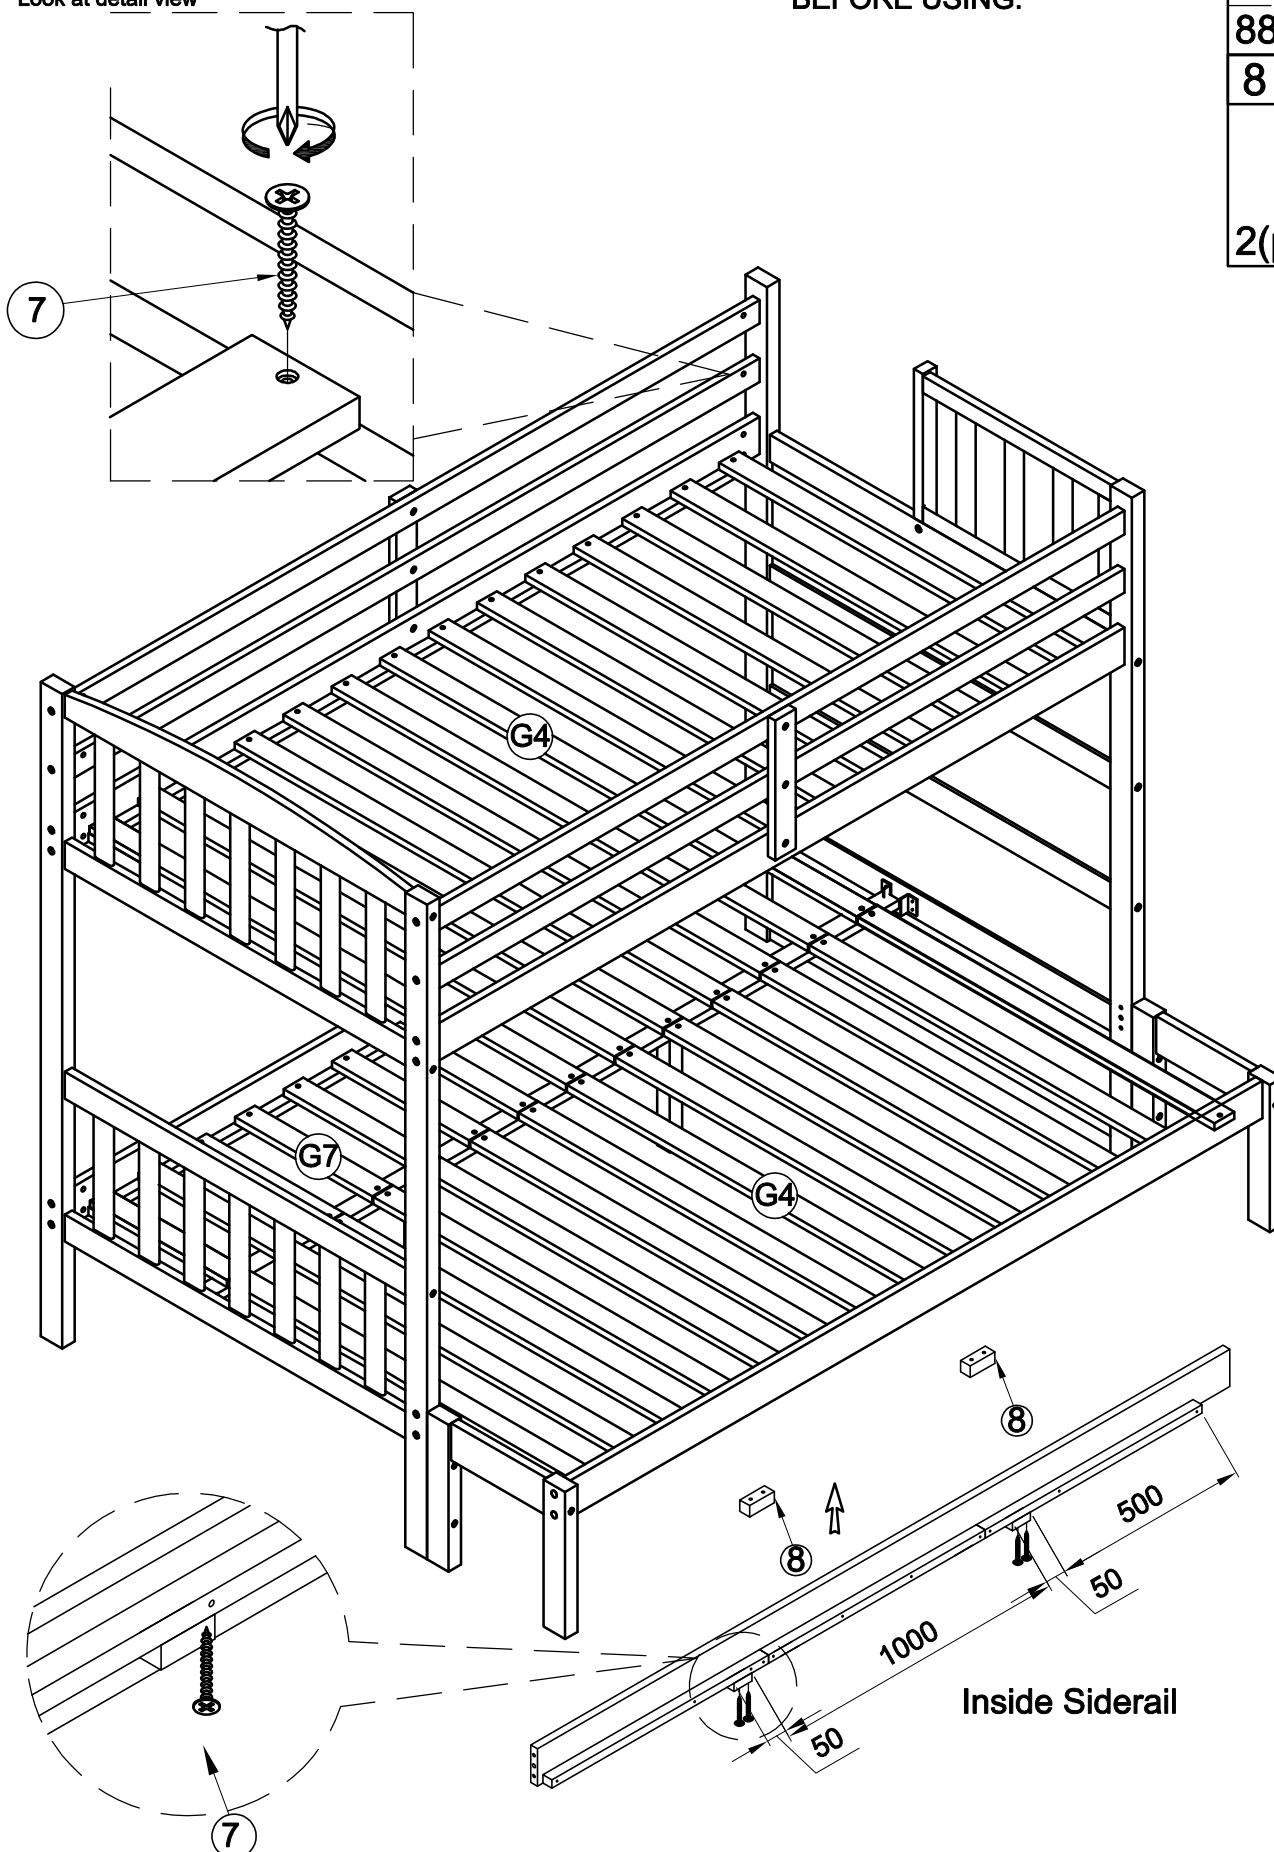



88(pcs)

8




2(pcs)





10	9
	
2(pcs)	4(pcs)

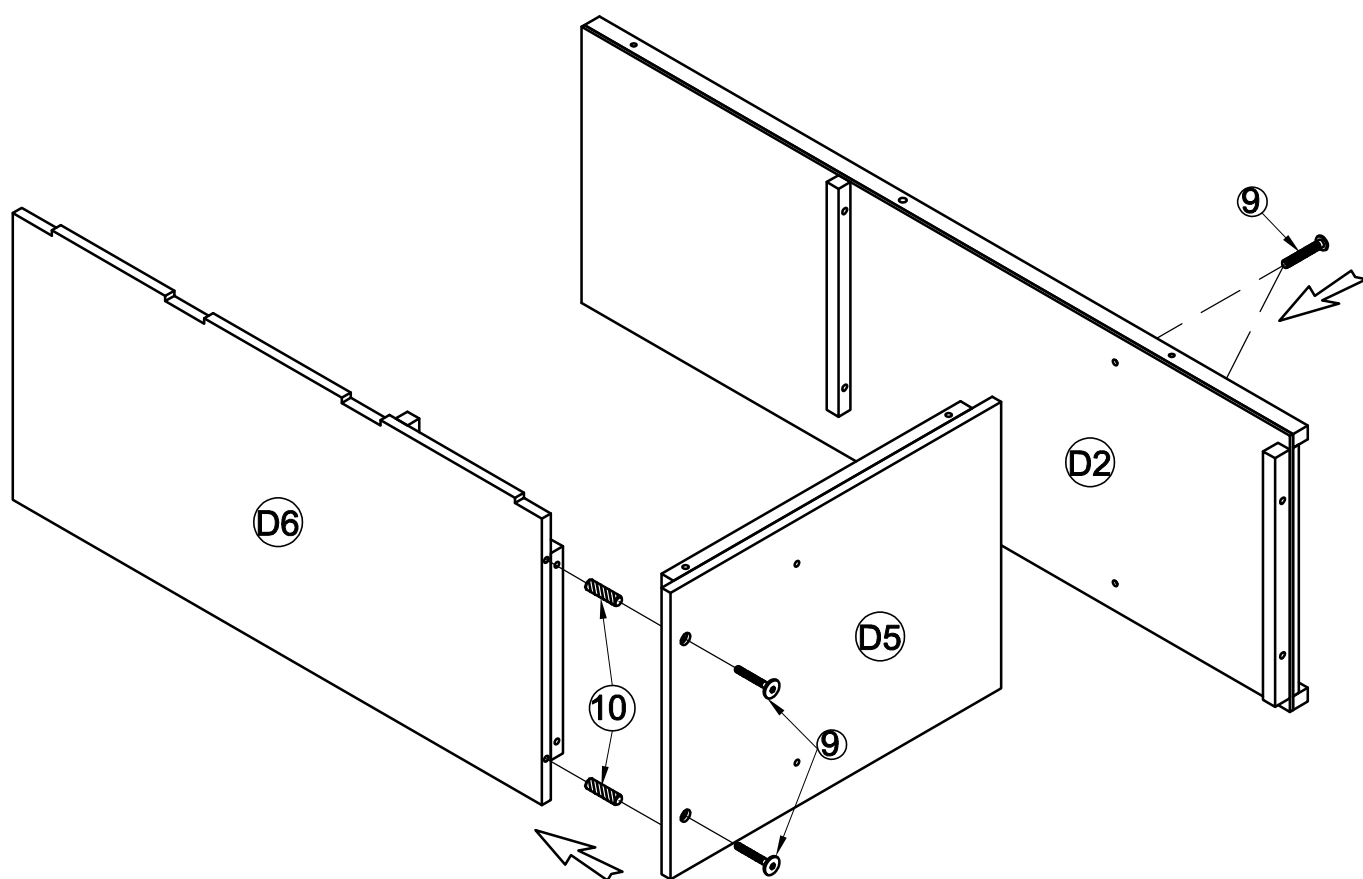STEP 11: Following below illustration. Use hardware #9 and dowel #10 to connect D6&D5 Panel With D2 Frame. Look at detail view for more detail



STEP 13: Following below illustration. Use hardware #9 and dowel #10 to connect
D3&D4 Panel With Frame (completed on Step 12). Look at detail view for more detail

10	9
	
4(pcs)	4(pcs)

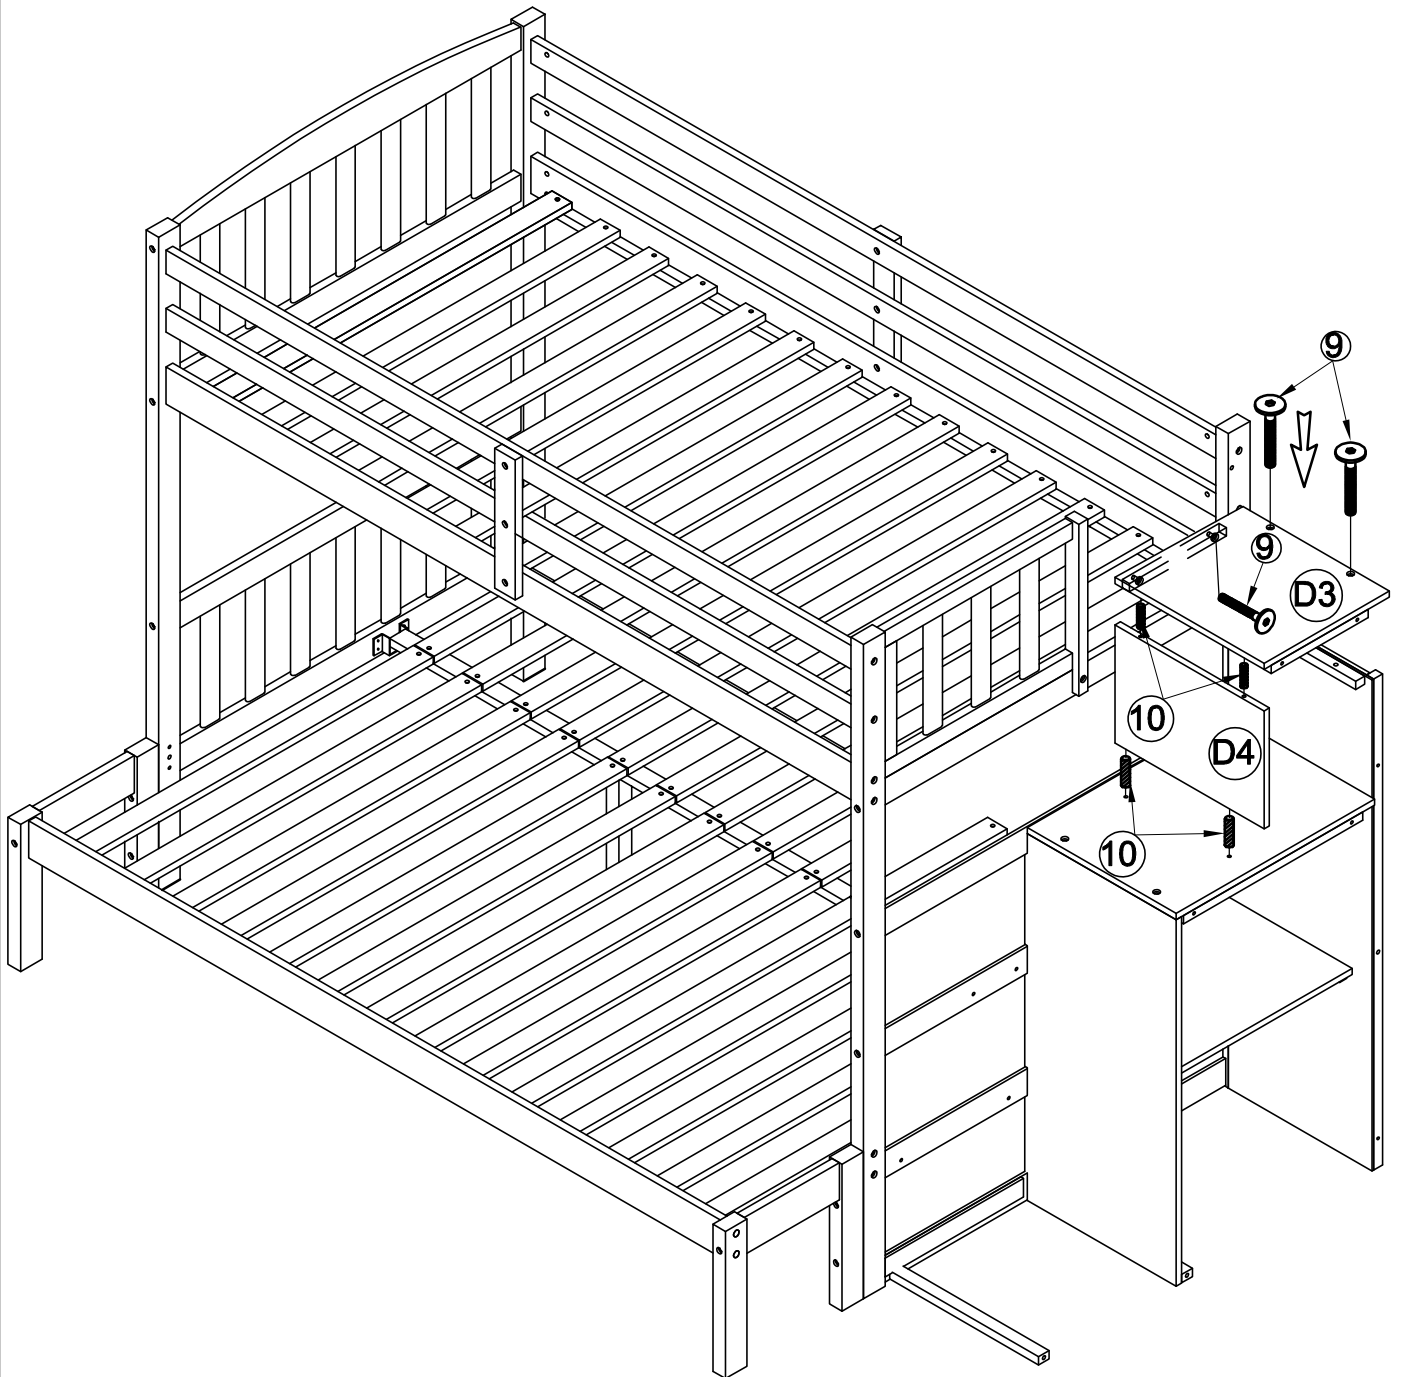

STEP 14:

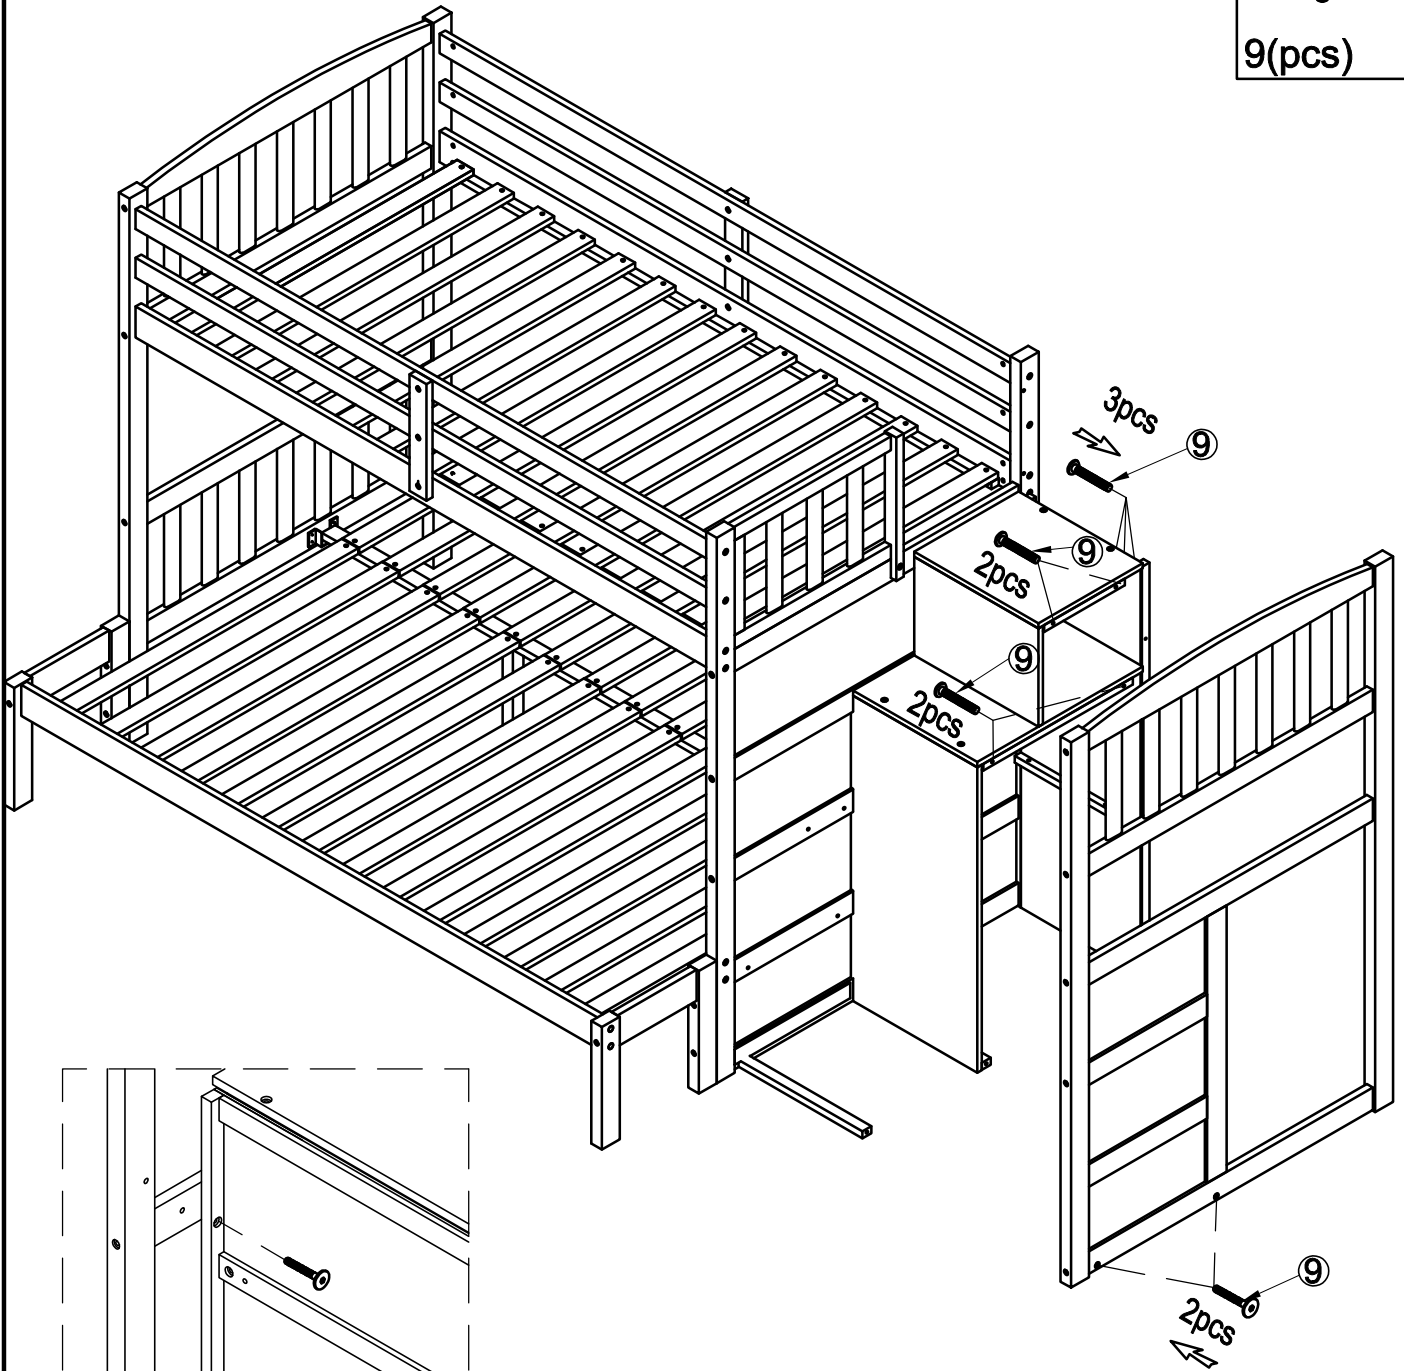
Following below illustration. Use hardware #9 to connect Frame(completed on Step 13)

With Frame (completed on Step 3).Look at detail view for more detail

9





9(pcs)



BACK VIEW

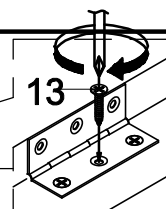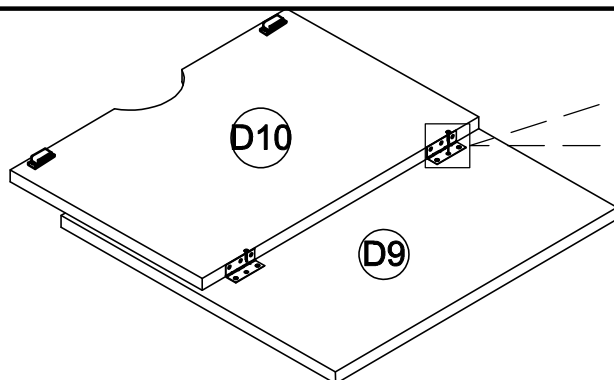
STEP 15



13

6(pcs)

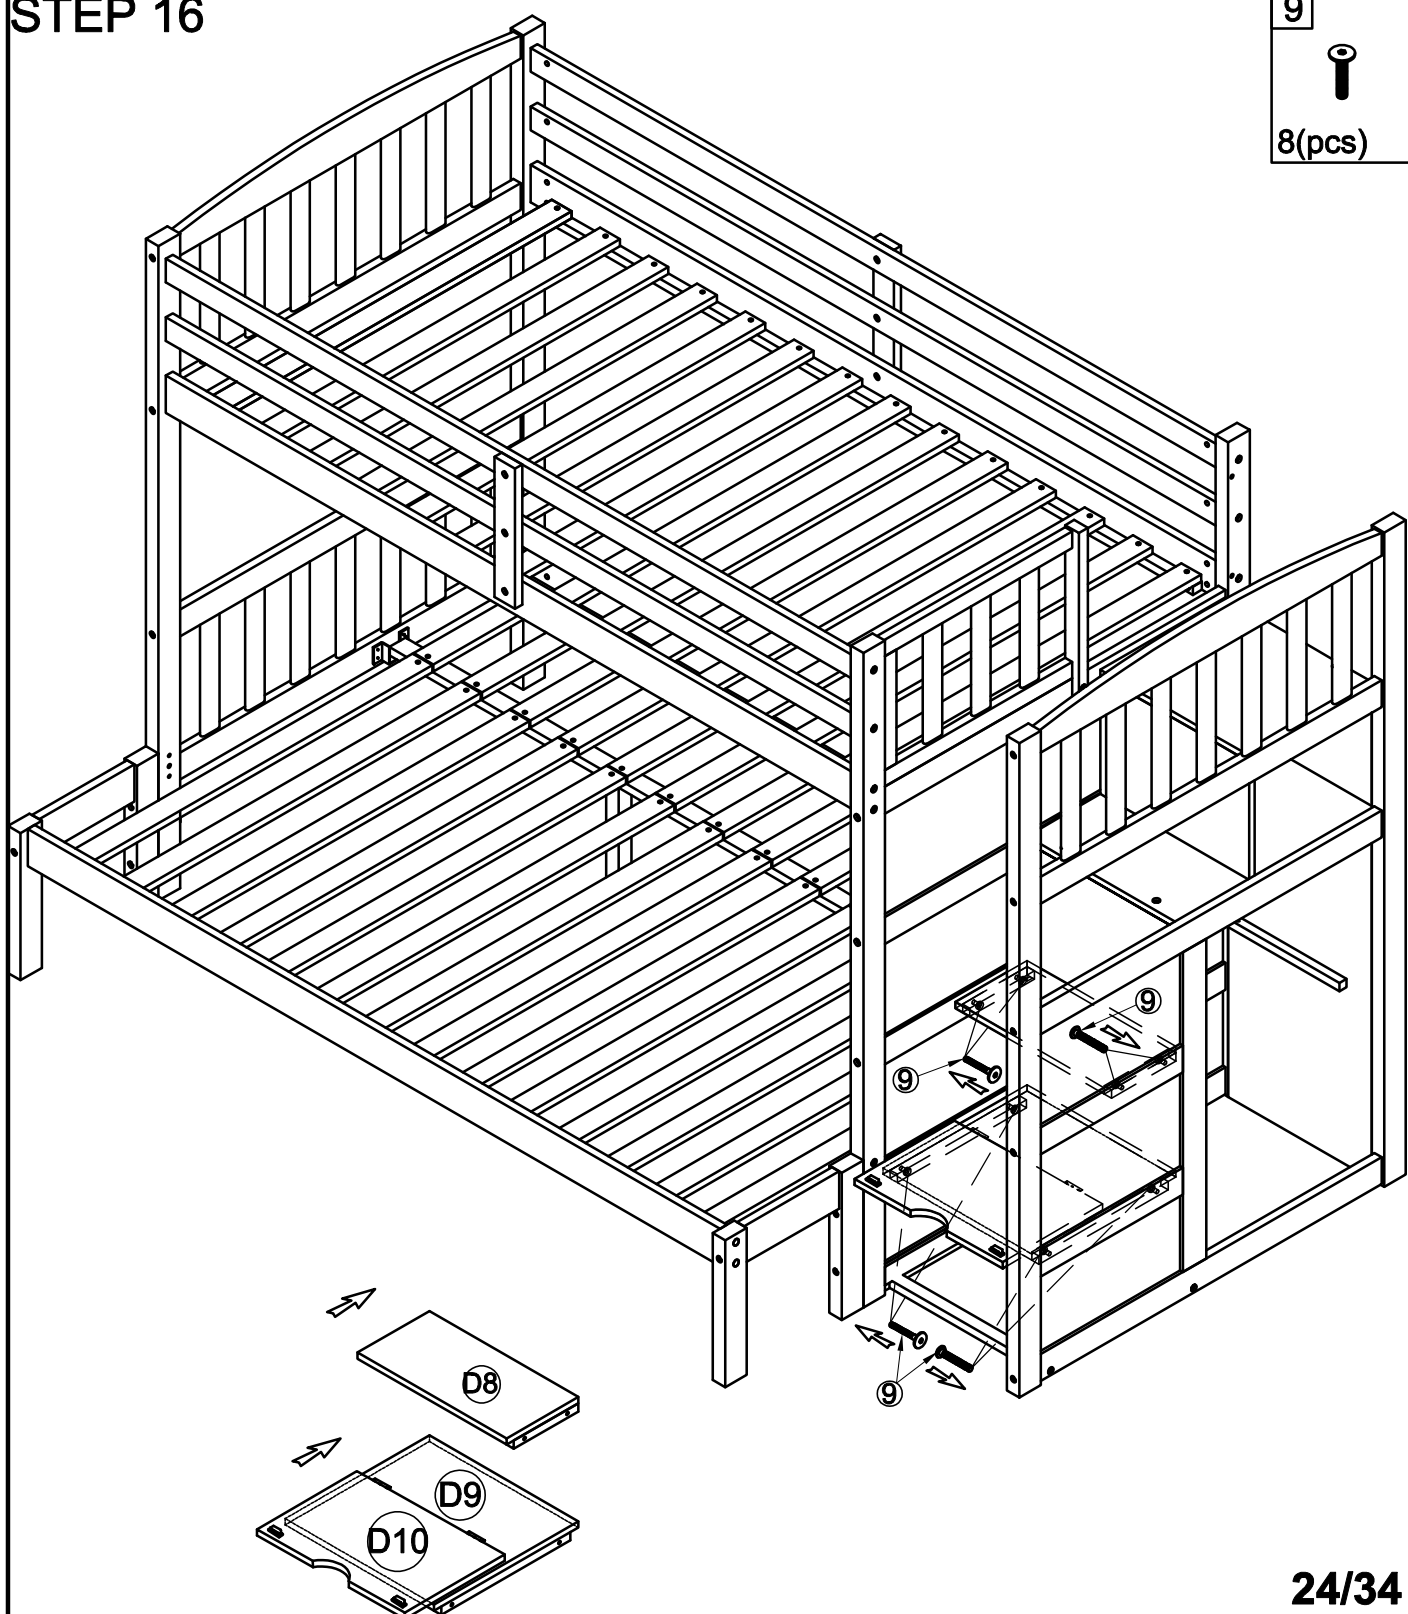STEP 16




9


8(pcs)

STEP 17


2.1



4(pcs)

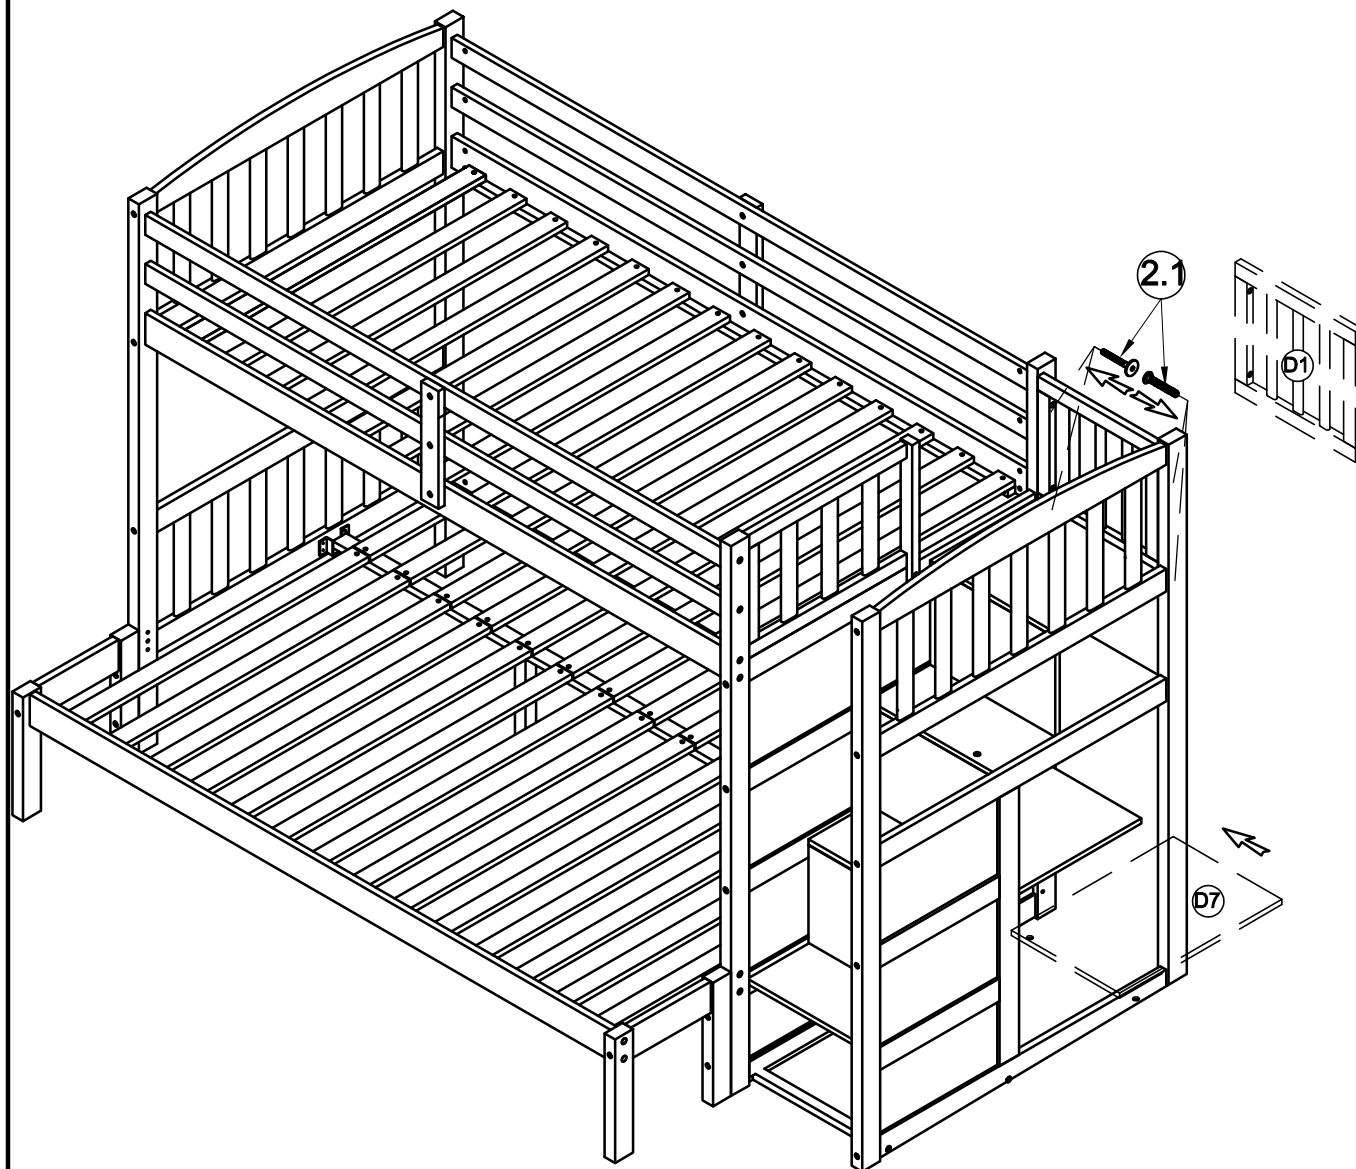

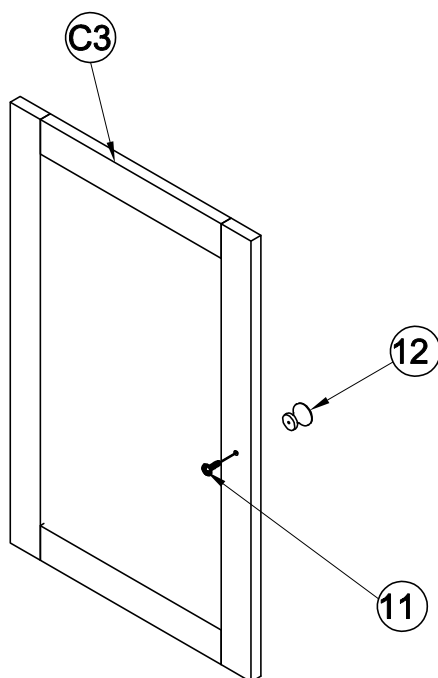STEP 18



12



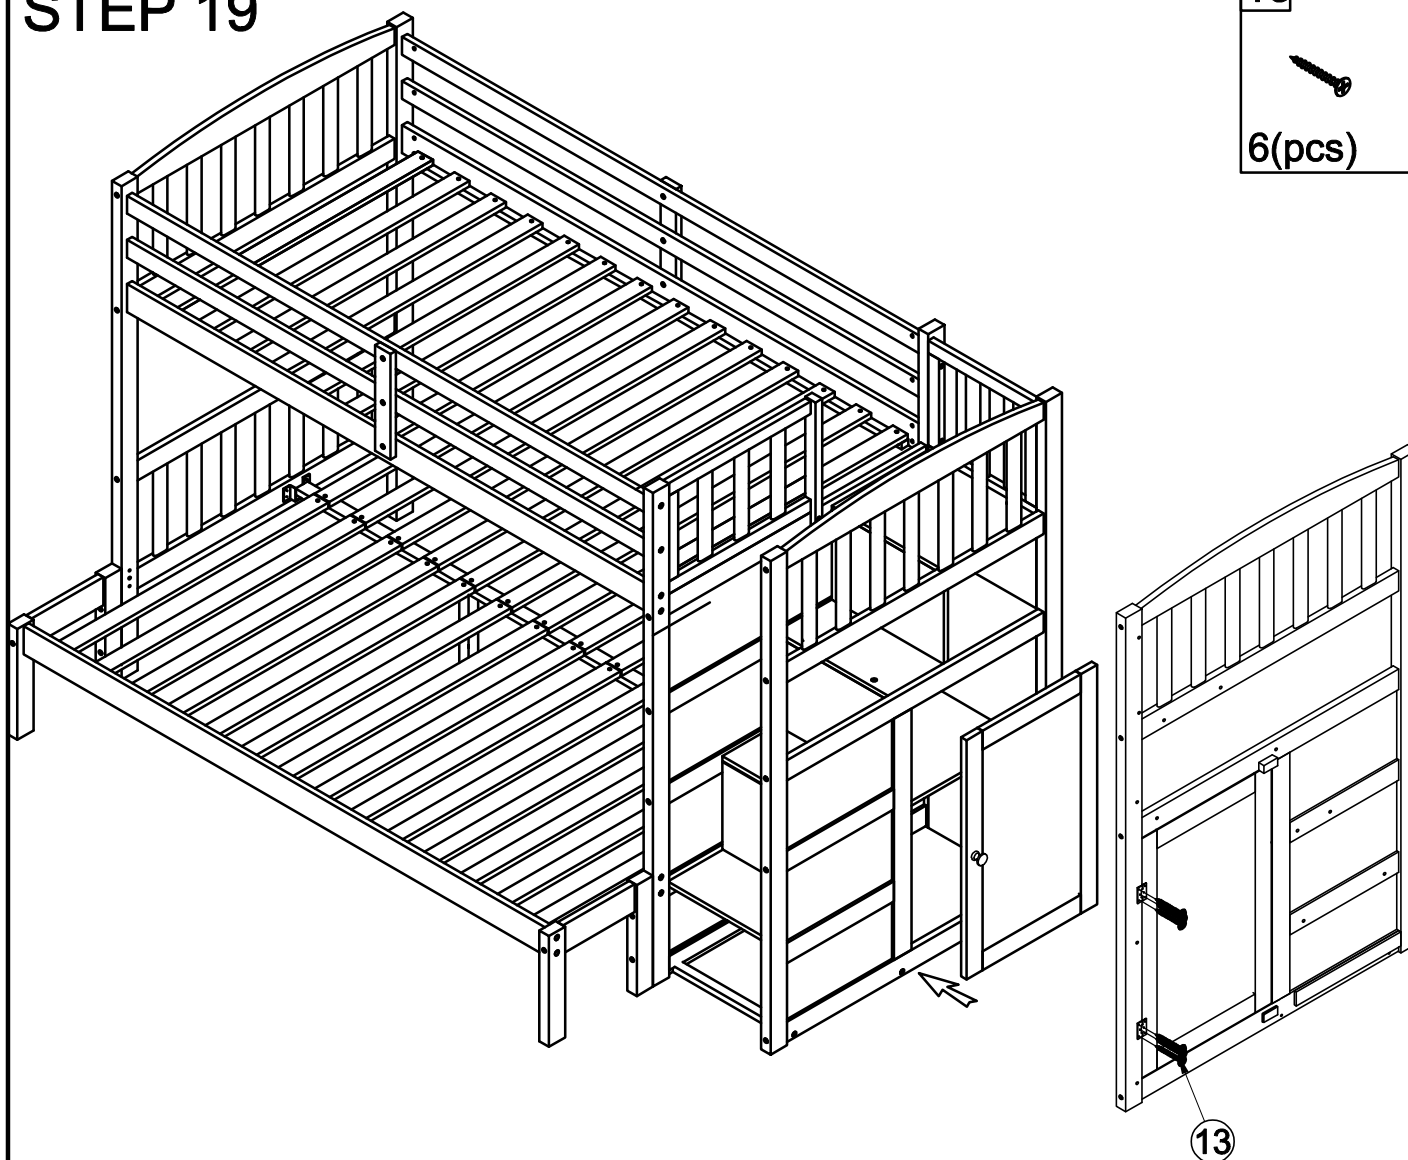
1(pcs)

11



1(pcs)

STEP 19



13

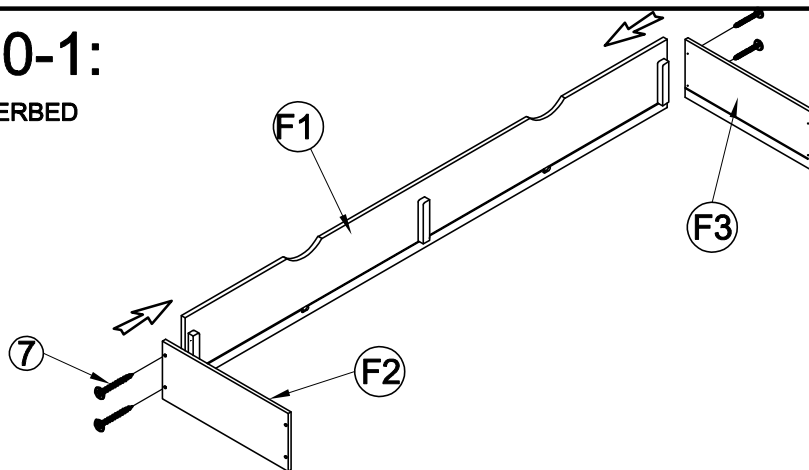


6(pcs)

Inside View 26/34

STEP 20-1:

ASSEMBLY UNDERBED
DRAWER




7



4(pcs)

STEP 20-2:

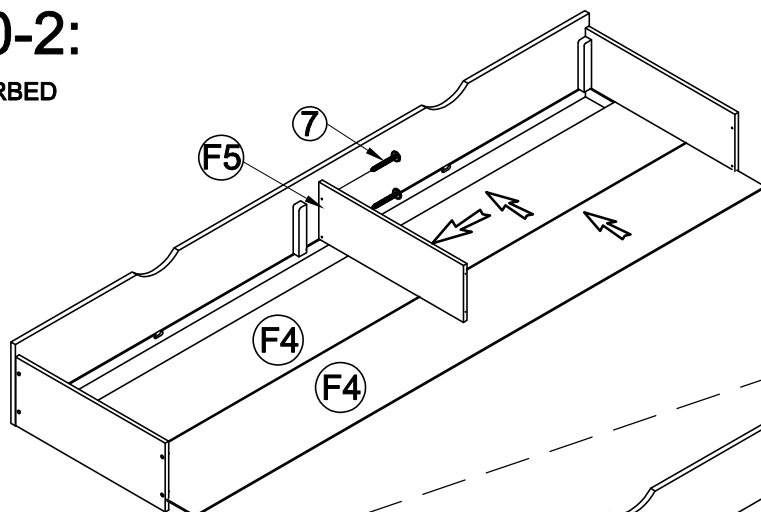ASSEMBLY UNDERBED
DRAWER




7



2(pcs)

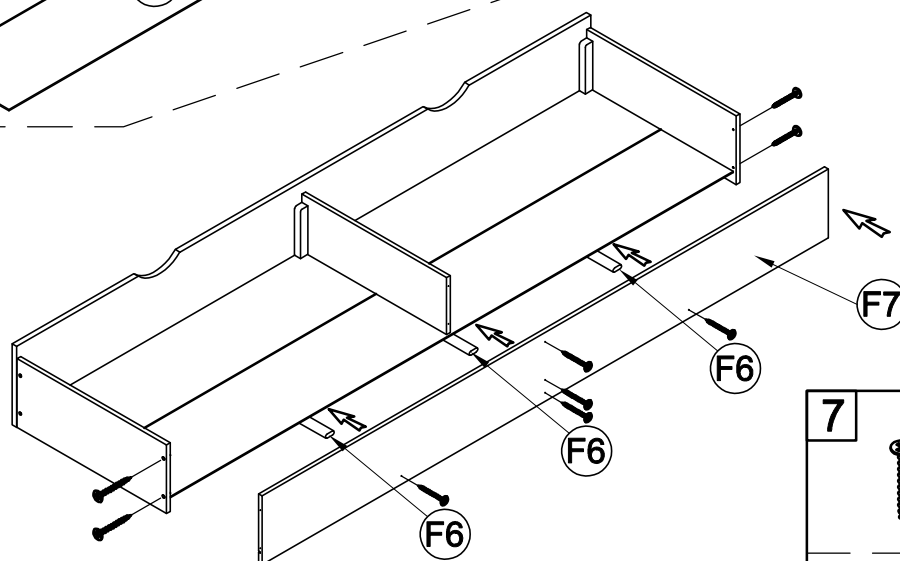STEP 20-3




7



9(pcs)

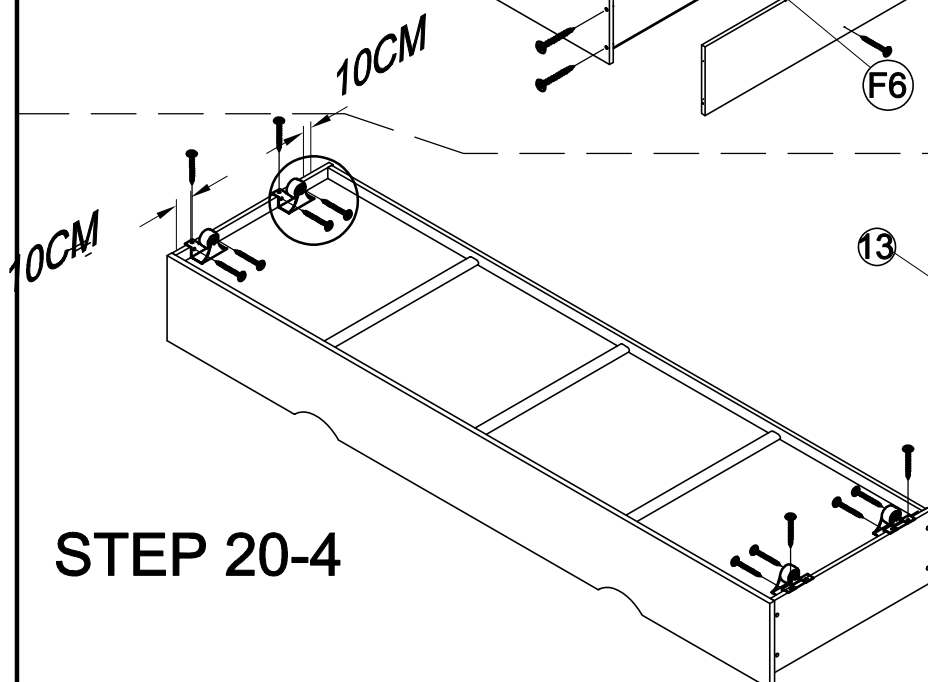STEP 20-4



13



14

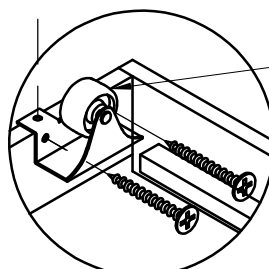


4(pcs)

13




12(pcs)



14

STEP 21-1:

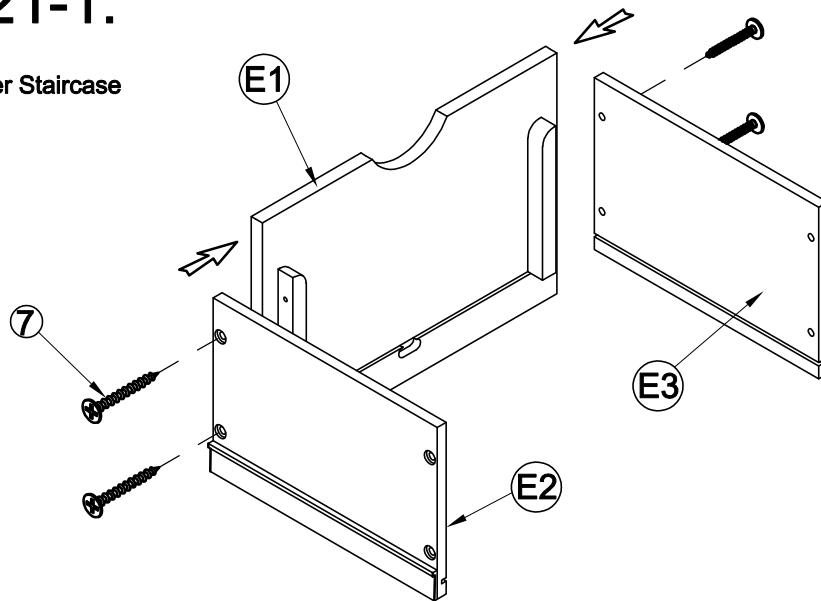Assembly Under Staircase
Drawer




7




4(pcs)

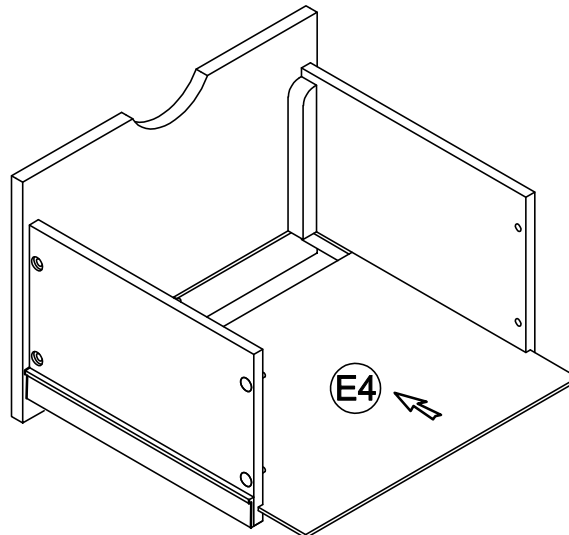STEP 21-2



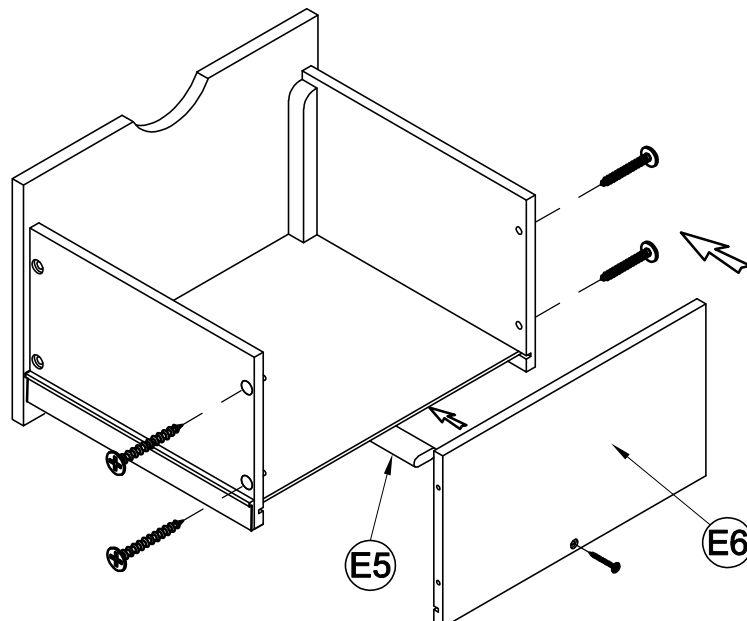STEP 21-3




7





5(pcs)

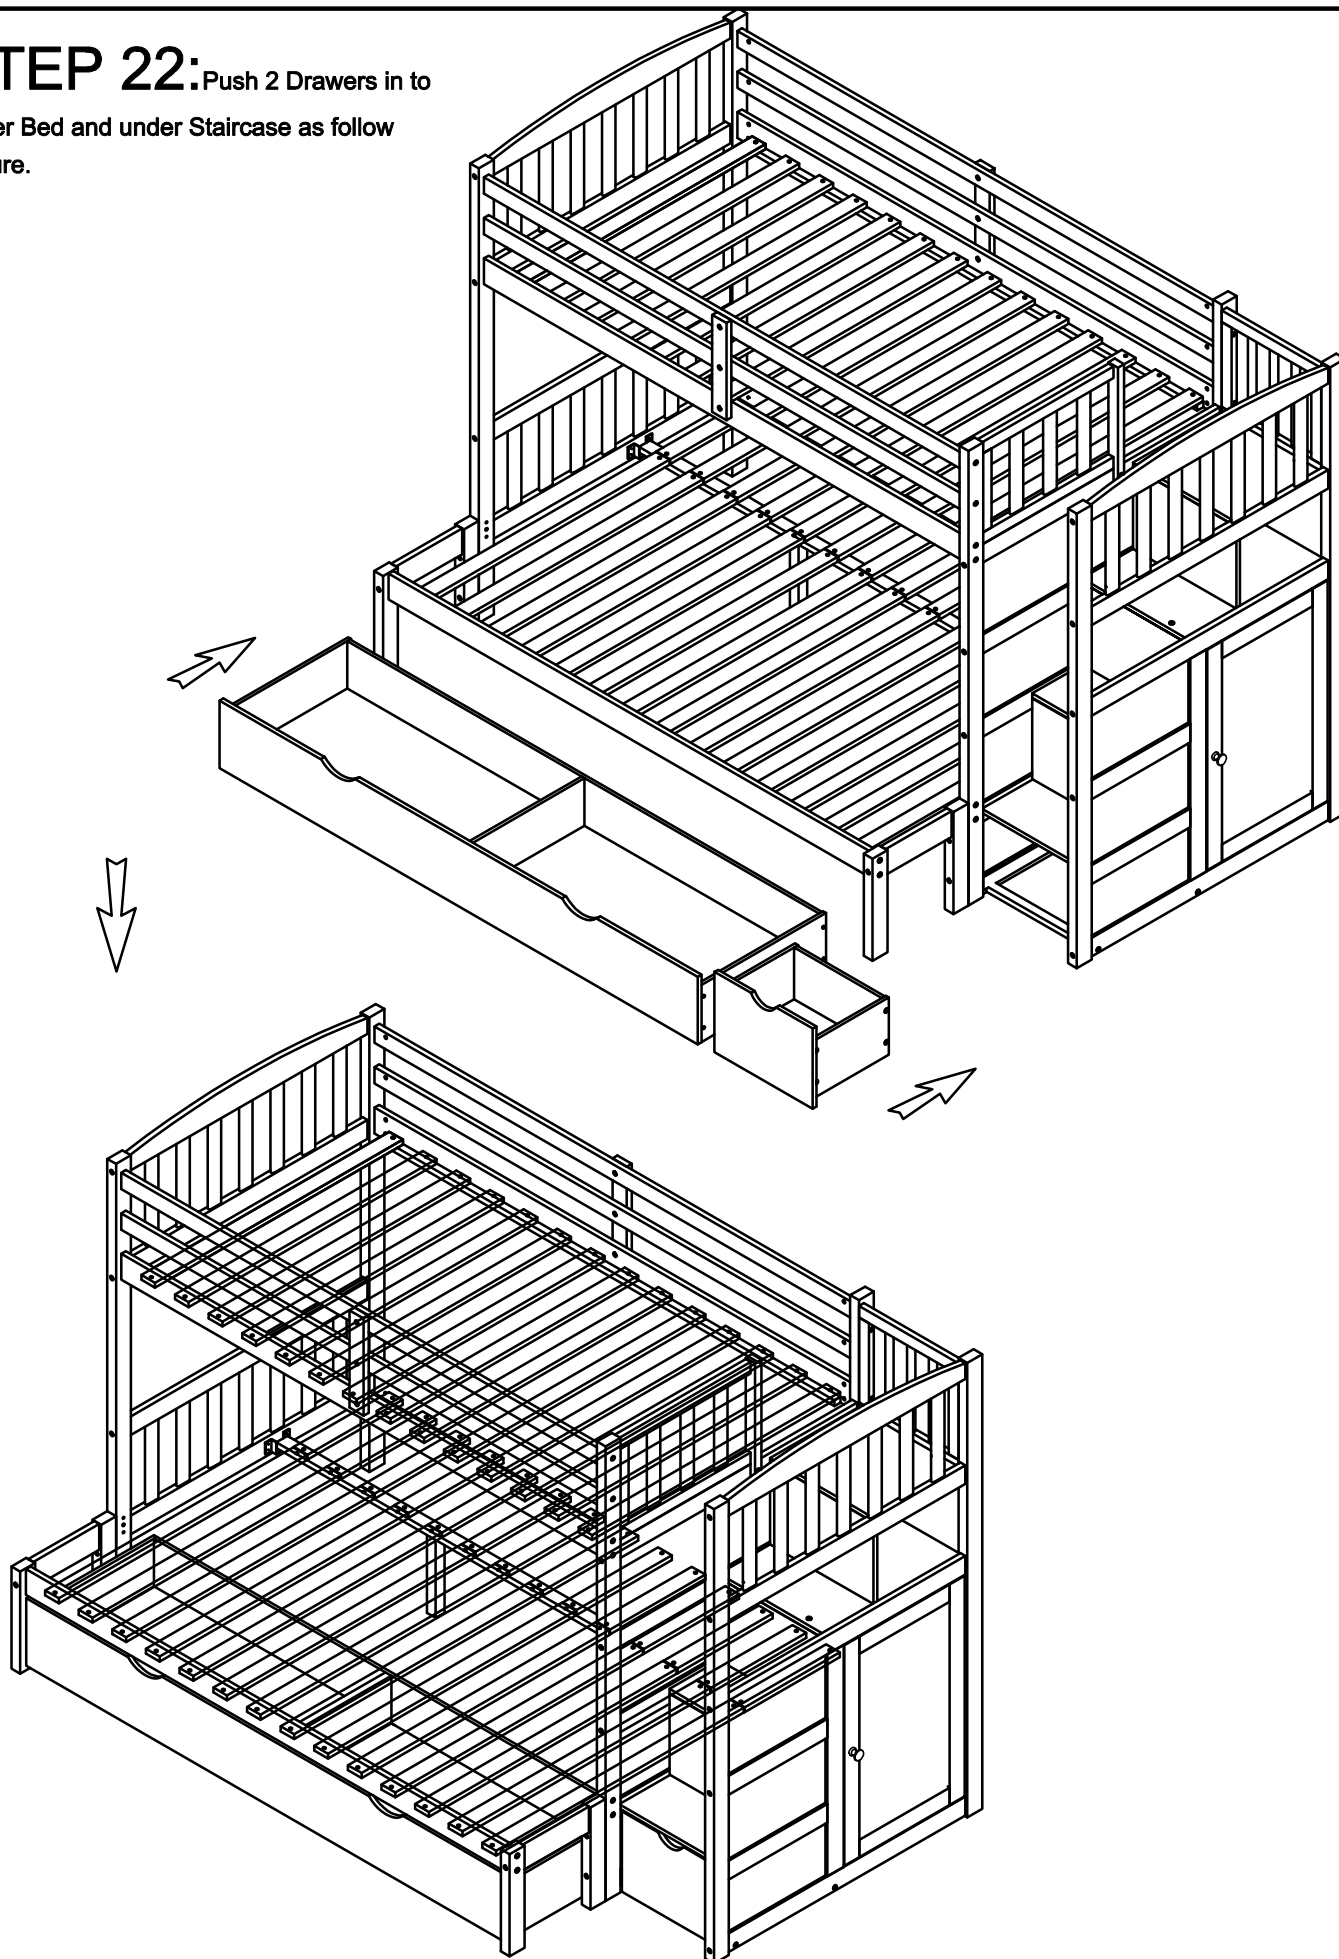STEP 22: Push 2 Drawers in to
under Bed and under Staircase as follow
picture.




STEP 23: Remove the Under Bed

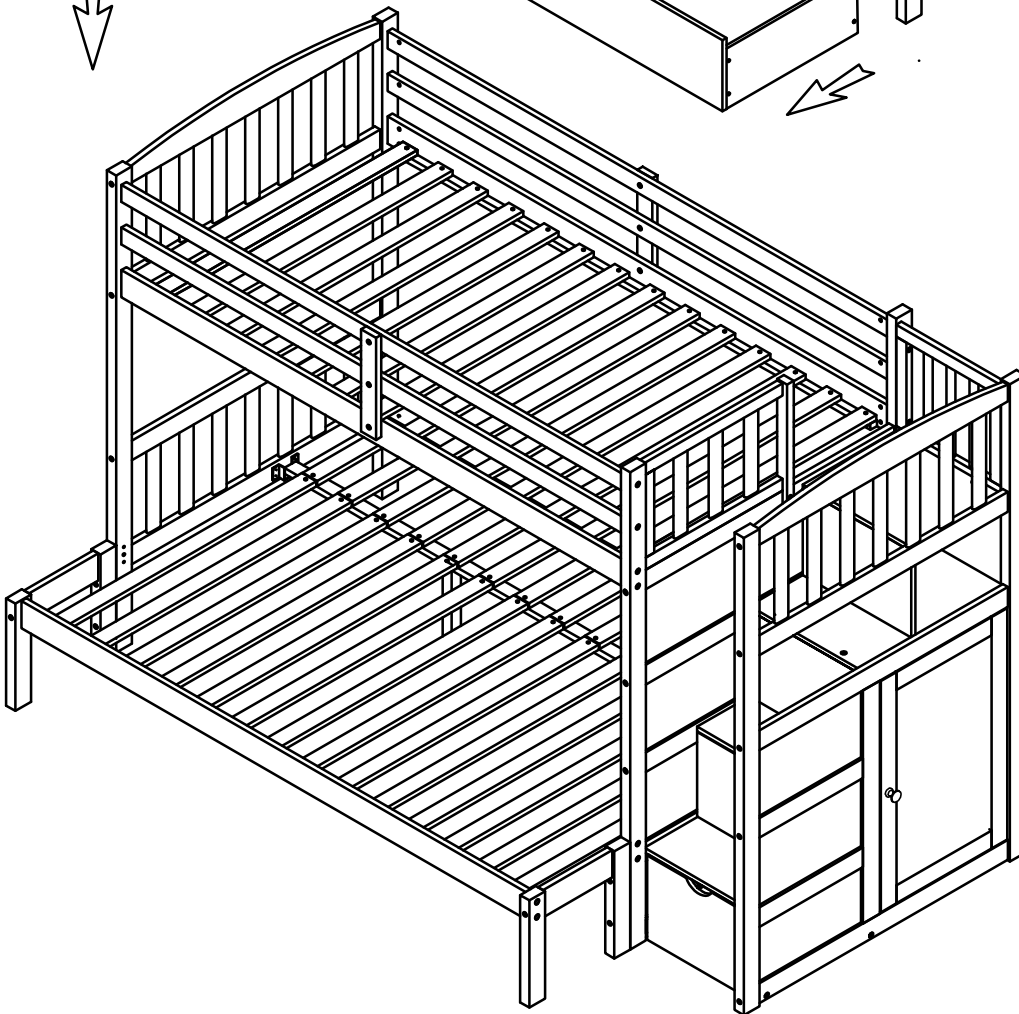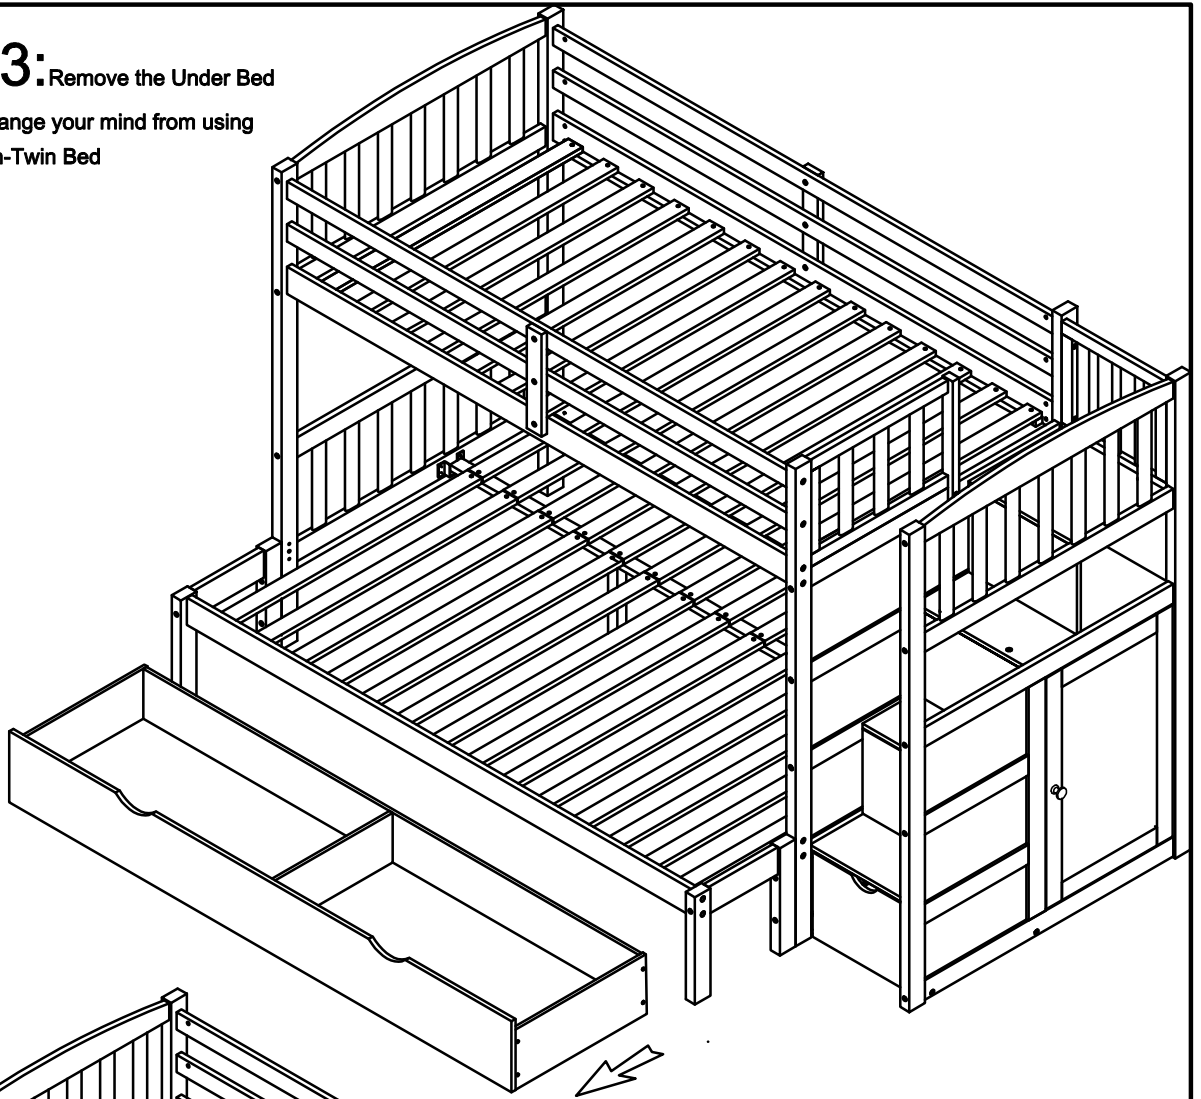
drawer when you change your mind from using
Twin-Full bed to Twin-Twin Bed



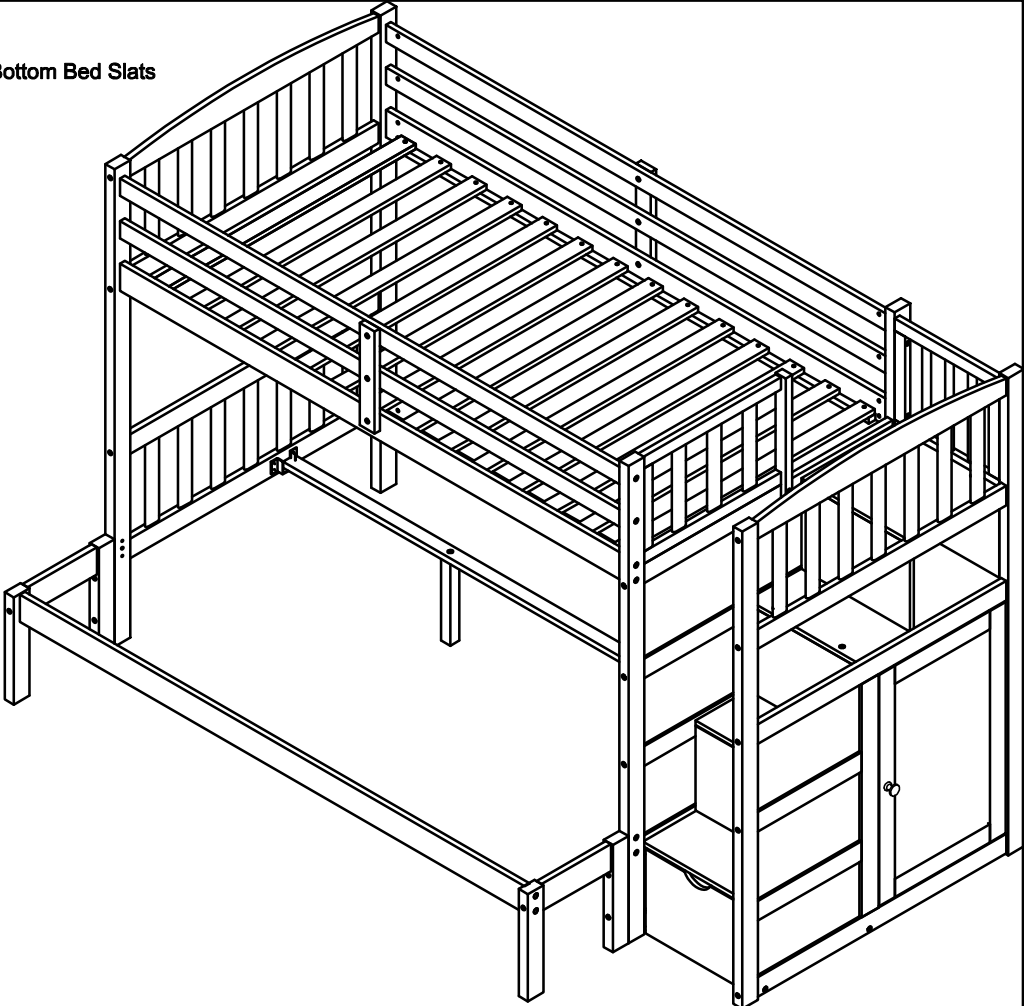
STEP 24: Disassembly Bottom Bed Slats




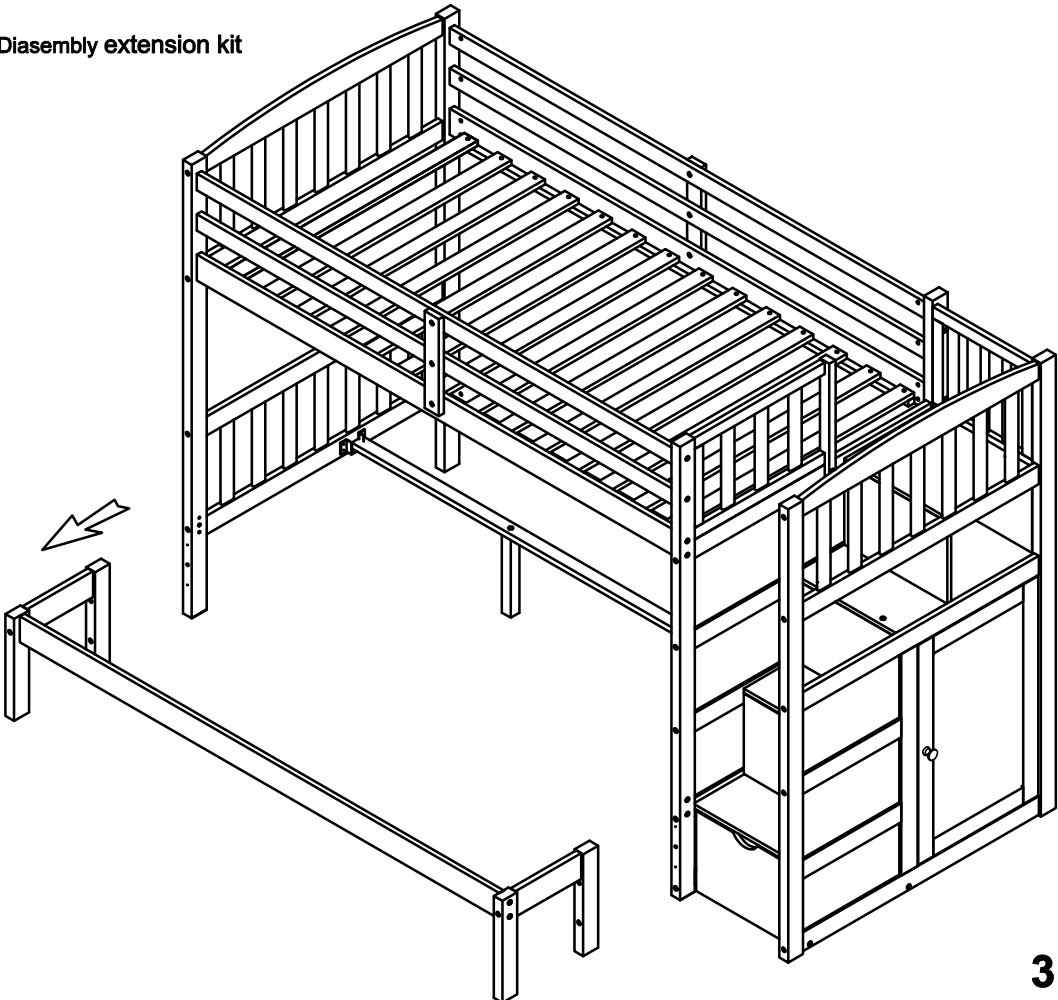
STEP 25: Disassembly extension kit




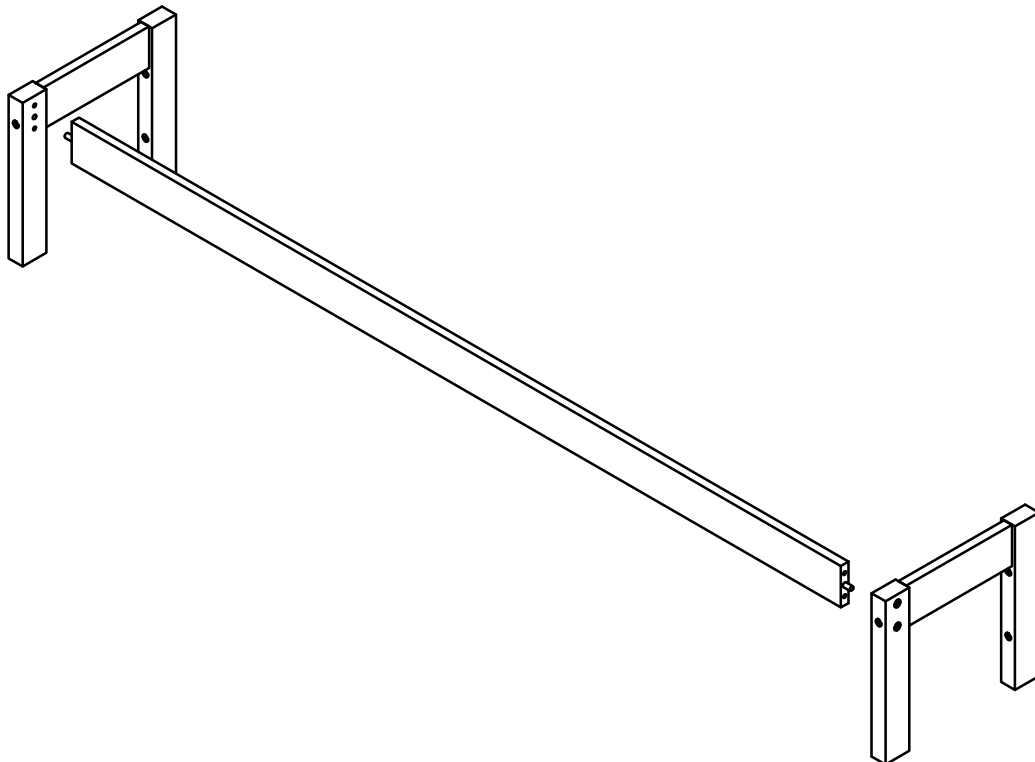STEP 26: Disassembly Side Rail(front)



STEP 27: Following the illustration. Use the Siderail G which was disassembled from Step 26 to assembly with Legs

6	5.1	4
		
4(pcs)	4(pcs)	2(pcs)

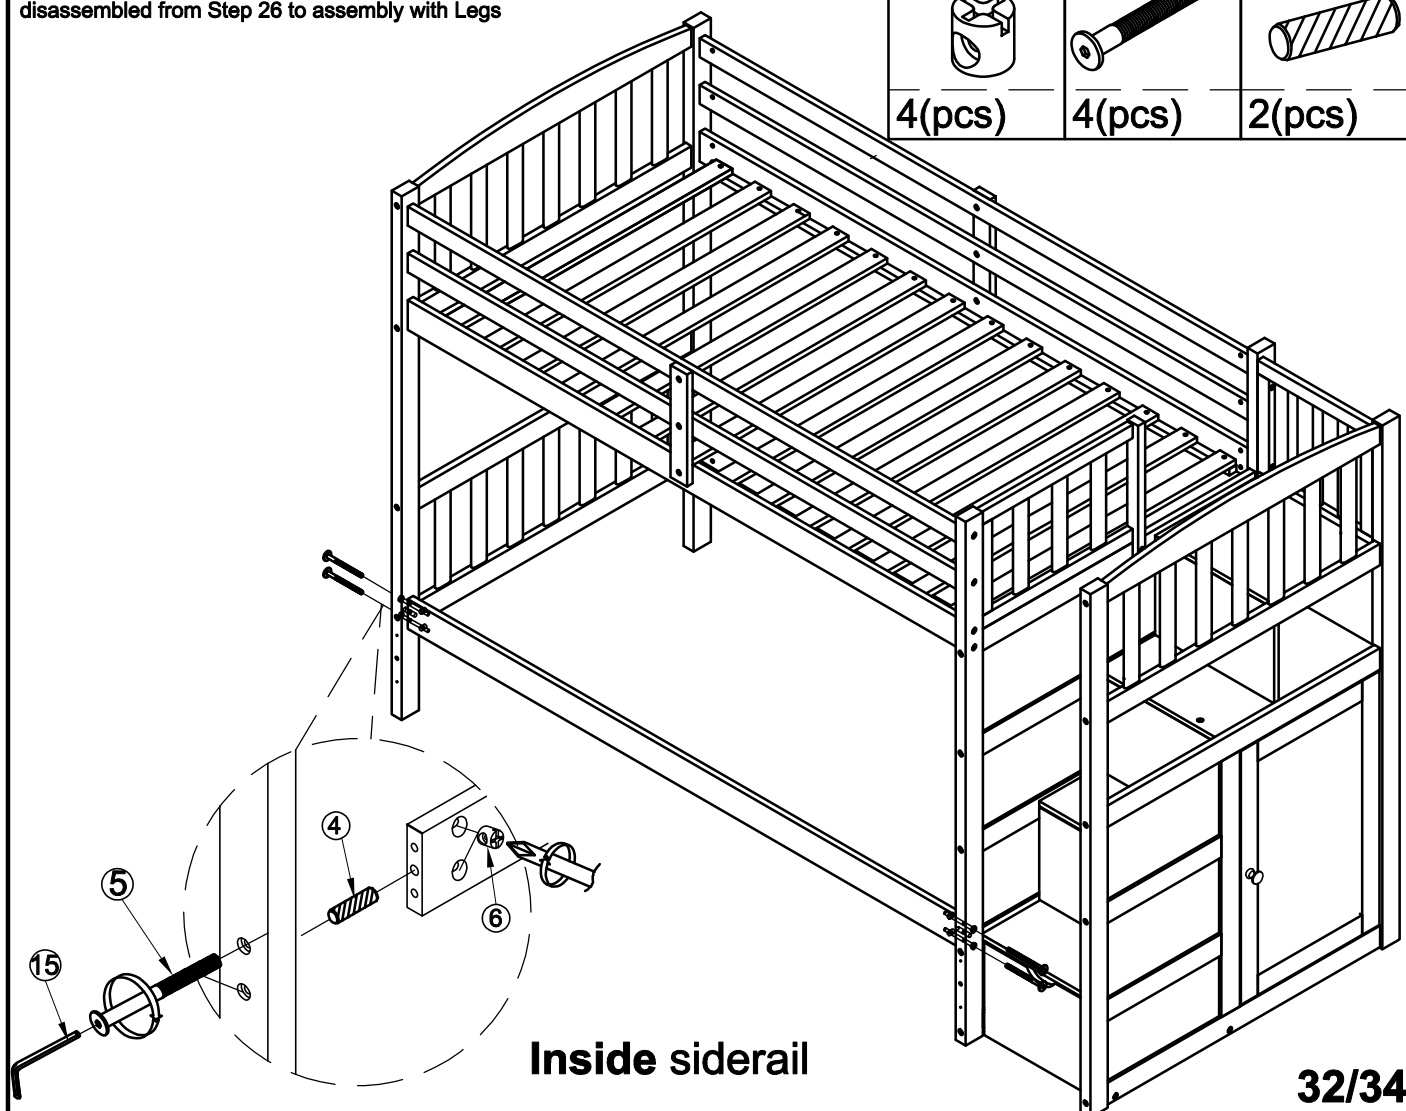



STEP 28: Follow the illustration . Assembly 14 Twin Slats G4 on bottom

Bed siderail

7



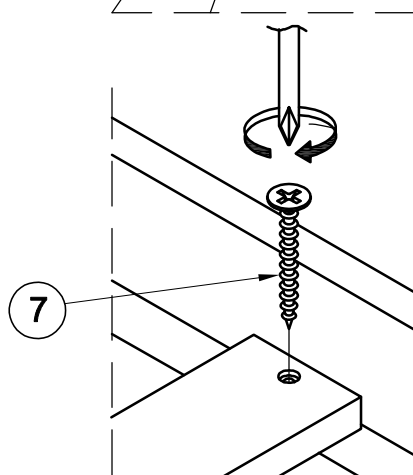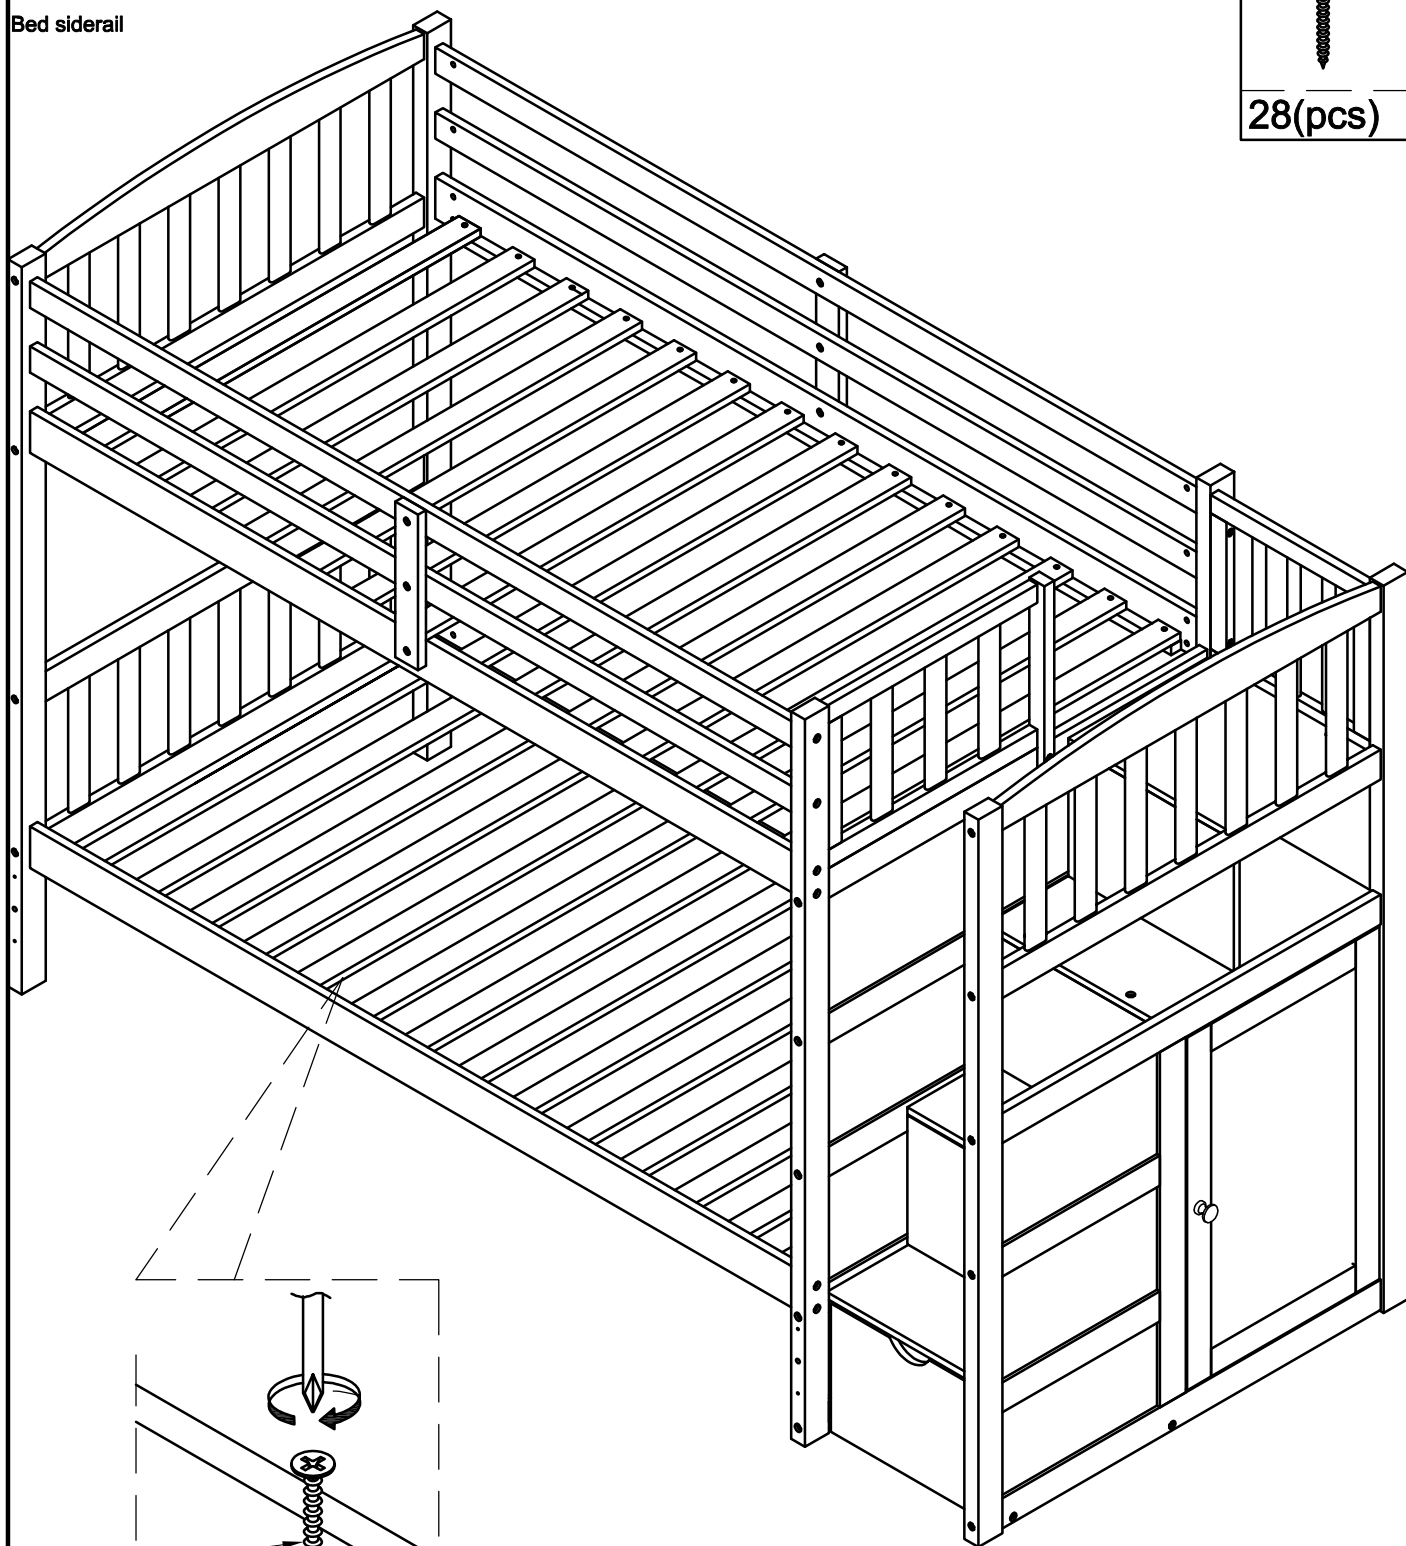28(pcs)



**ATTENTION: REMEMBER TO
COMPLETE SCREW ALL SLATS
WITH SIDERAIL BEFORE USING.**

STEP 29: CONGRARULATION. YOU HAVE COMPLETED THE BED.

Just one more step to push the Under Bed Drawer into it position

