


WARNING:
IF THIS RULER DOES NOT MEASURE
EXACTLY, DO NOT USE THIS TEMPLATE.

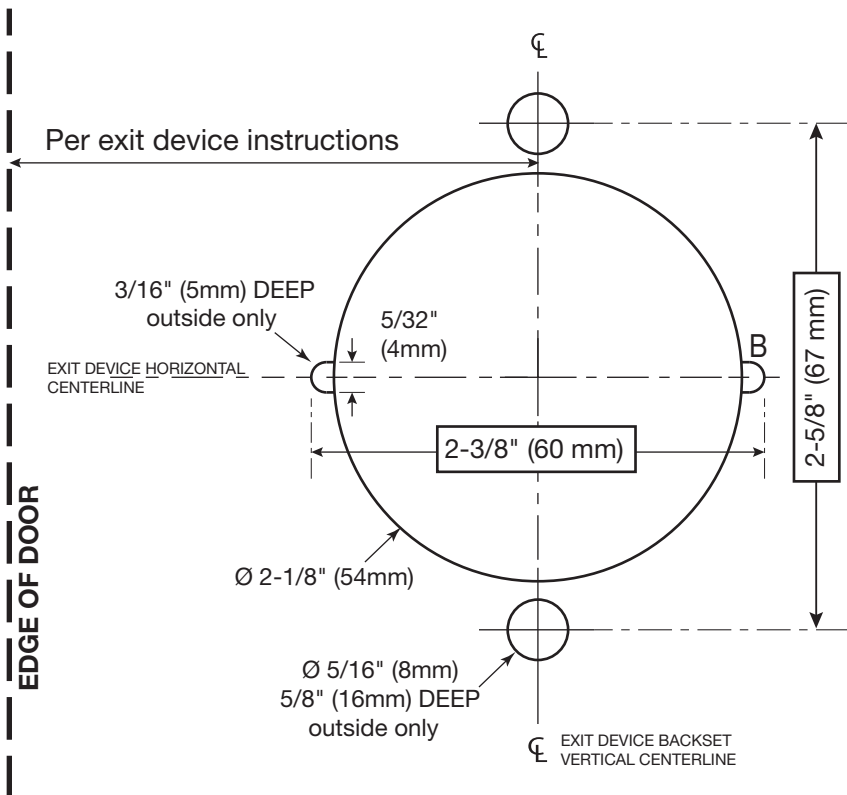

1. Follow the drilling instructions on template. Drill 2-1/8" (54 mm) holes on inside and outside door faces.
2. Follow the drilling instructions on template. Drill (2) 5/16" (8 mm) holes on outside door face for lever only.
3. Insert lever tail piece through 2-1/8" (54 mm) hole on outside door face.
4. Place inside mounting plate on inside door face and tighten 2 installation screws securely.
5. Install push bar.

NOTICE: DO NOT remove the stud of the lever when connected with Exit Panic Device.

