UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER

ALL NEW MATERIAL CONSISTING OF

93% POLYURETHANE FOAM PAD 7% RESIN TREATED POLYESTER FIBER BATTING

REGISTRY NO: UT 7062(IN)

CERTIFICATION IS MADE BY THE MANUFACTURER THAT MATERIALS IN THE ARTICLE ARE DESCRIBED IN ACCORDANCE WITH LAW

MADE FOR

GIGACLOUD TECHNOLOGY(USA)INC 4388 SHIRLEY AVENUE EL MONTE, CA 91731

MADE IN VIET NAM

NOTICE

THIS ARTICLE MEETS THE
FLAMMABILITY REQUIREMENTS OF CALIFORNIA
BUREAU OF
HOUSEHOLD GOODS AND SERVICES TECHNICAL
BULLETIN 117-2013. CARE SHOULD BE
EXERCISED NEAR OPEN FLAME OR WITH
BURNING CIGARETTES


THE UPHOLSTERY MATERIALS IN THIS PRODUCT:
___CONTAIN ADDED FLAME RETARDANT
CHEMICALS
___CONTAIN NO ADDED FLAME RETARDANT
CHEMICALS
THE STATE OF CALIFORNIA HAS

UPDATE THE FLAMMABILITY STANDARD AND
DETERMINED THAT THE FIRE SAFETY
REQUIREMENTS FOR THIS
PRODUCT CAN BE MET WITHOUT ADDING FLAME
RETARDANT CHEMICALS. THE STATE HAS
IDENTIFIED MANY FLAME RETARDANT
CHEMICALS AS BEING KNOWN TO, OR STRONGLY
SUSPECTED OF, ADVERSELY IMPACTING HUMAN
HEALTH OR DEVELOPMENT.

Complies with U.S. CPSC requirements for upholstered furniture flammability

ASSEMBLY INSTRUCTIONS


DINING TABLE

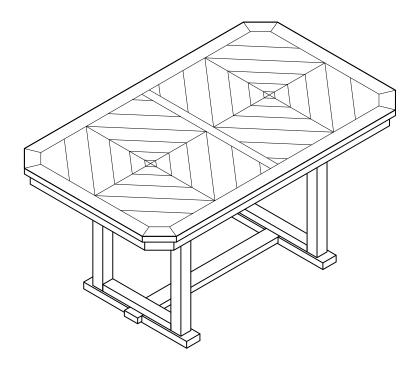

WF298394


IMPORTANT NOTE:


- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- (2) BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- (3) DO NOT TIGHTEN ALL SCREWS AND BOLTS UNITIL THE TABLE IS FULLY SET-UP.

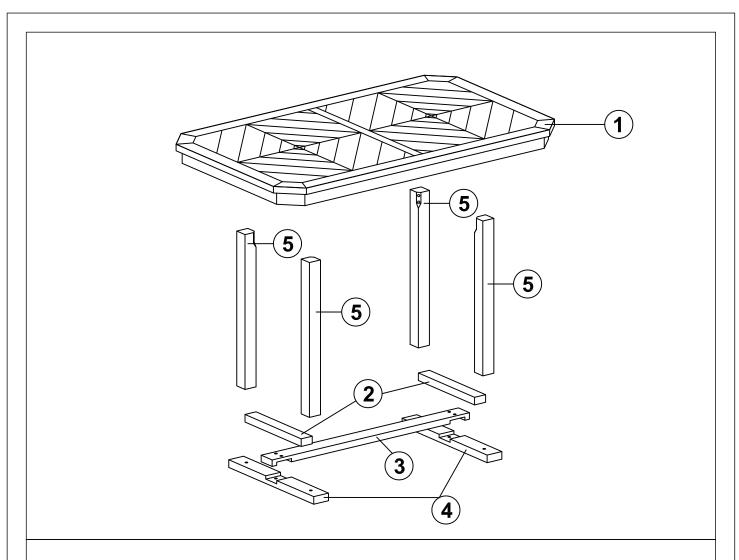


Hardware List For One Table

A		D
	Ø5/16"x 60mm	Ø5/16"x 19mm
	BOLT (8pcs)	FLAT WASHER (16pcs)
B		E
	Ø5/16"x 50mm	4mm
	BOLT (8pcs)	ALLEN KEY (1pc)
(C)		
	Ø5/16"x 13mm	
	LOCK WASHER (16pcs)	

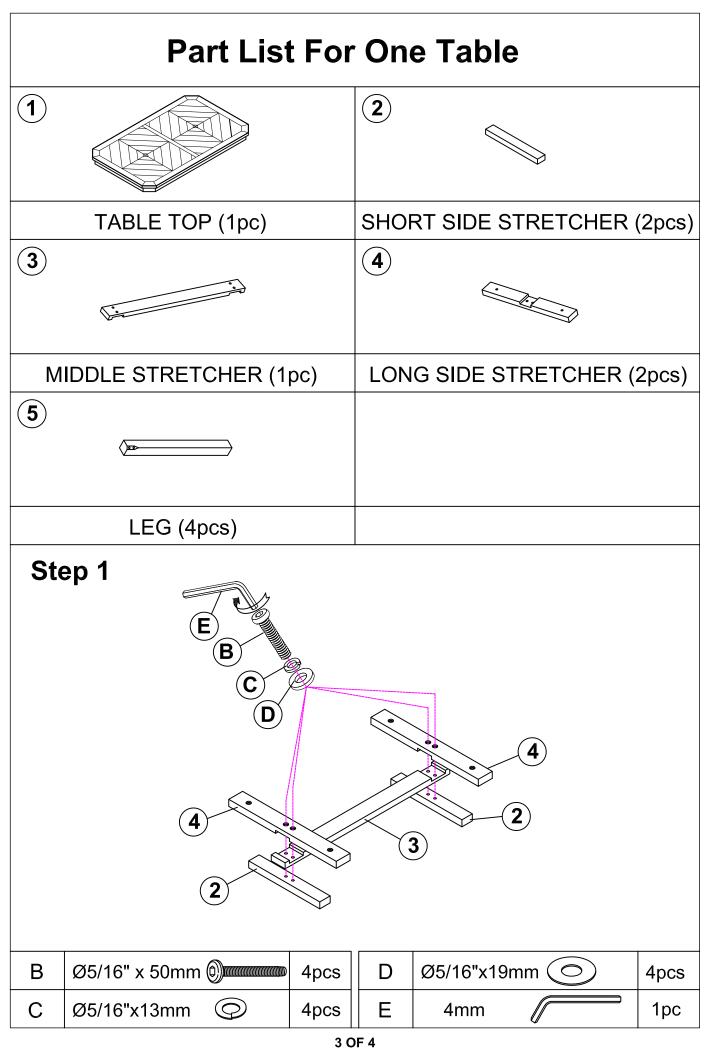

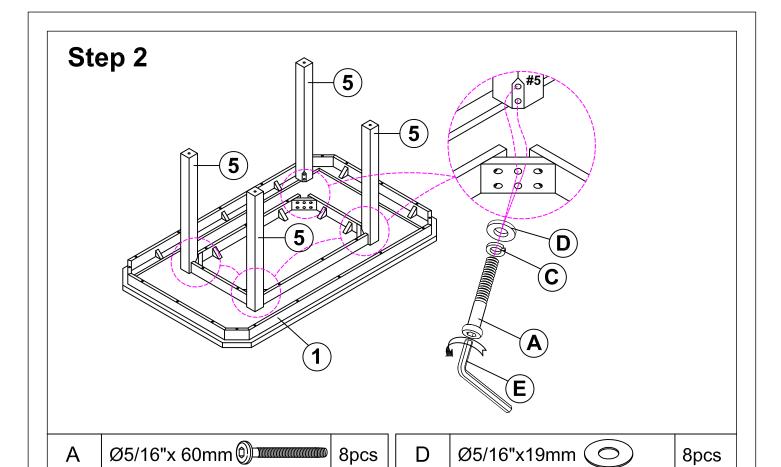

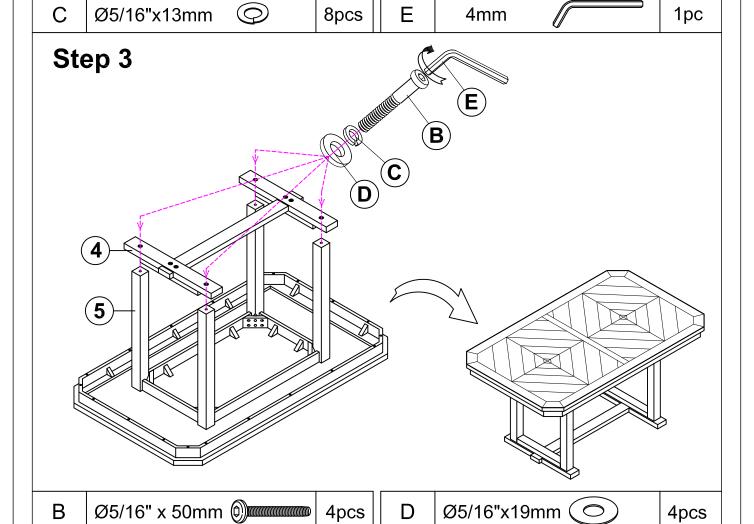

Ε

4mm

1pc

4pcs


9

C

Ø5/16"x13mm


ASSEMBLY INSTRUCTIONS

DINING CHAIR

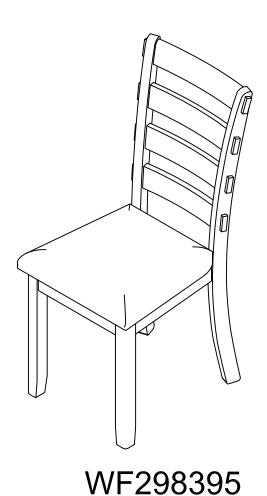

IMPORTANT NOTE:


- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- (2) BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNITIL THE CHAIR IS FULLY SET-UP.

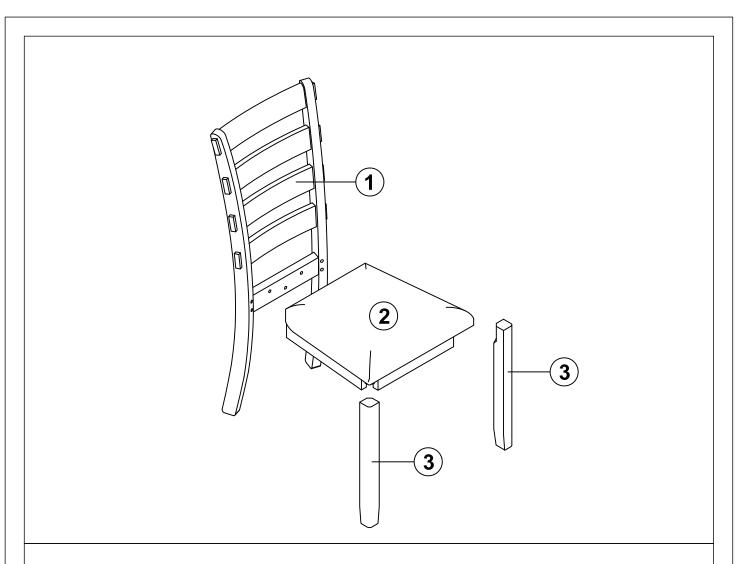



Hardware List For One Chair

A		D
	Ø1/4"x 85mm	Ø1/4"x 11mm
	BOLT (4pcs)	LOCK WASHER (11pcs)
B		E O
	Ø1/4"x 60mm	Ø1/4"x 19mm
	BOLT (4pcs)	FLAT WASHER (11pcs)
©		F
	Ø1/4"x 40mm	4mm
	BOLT (3pcs)	ALLEN KEY (1pc)
	0.0	



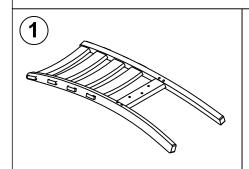






BACK FRAME (1pc)


SEAT FRAME (1pc)

FRONT LEG (2pcs)

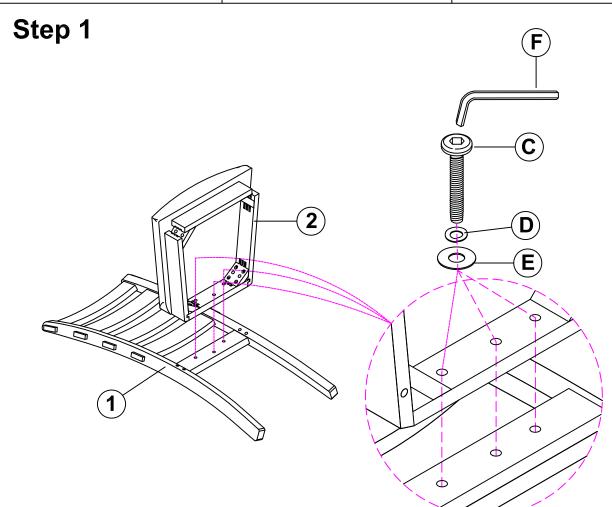


С	Ø1/4"x 40mm		3pcs
D	Ø1/4"x11mm	0	3pcs

Ε	Ø1/4"x19mm	3pcs
F	4mm	1pc

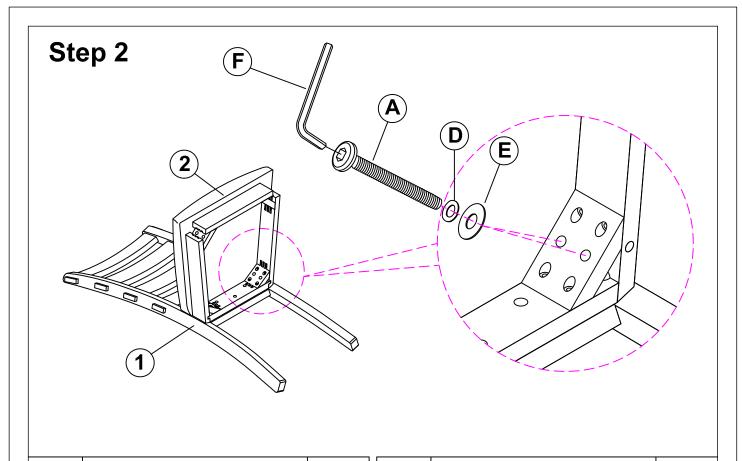

Α	Ø1/4"x 85mm		4pcs	
D	Ø1/4"x11mm	0	4pcs	

Ε	Ø1/4"x19mm	4pcs
F	4mm	1pc

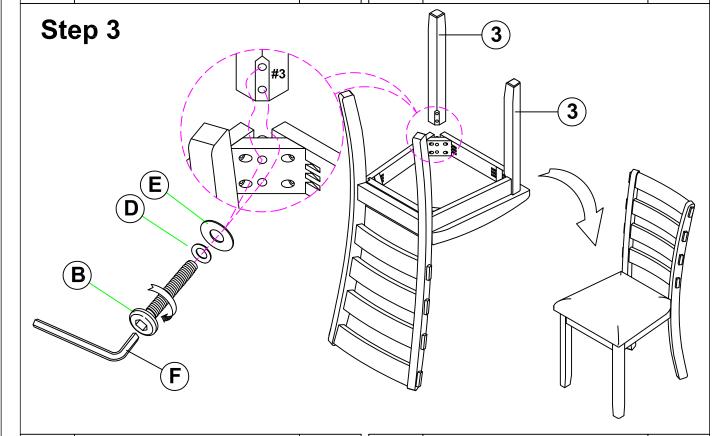


В	Ø1/4"x 60mm		4pcs
D	Ø1/4"x11mm	0	4pcs

Ε	Ø1/4"x19mm	4pcs
F	4mm	1pc

ASSEMBLY INSTRUCTIONS


BENCH

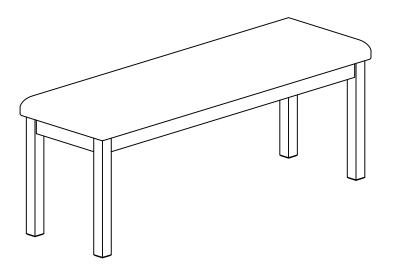


WF298396


IMPORTANT NOTE:

- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- (2) BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNITIL THE BENCH IS FULLY SET-UP.

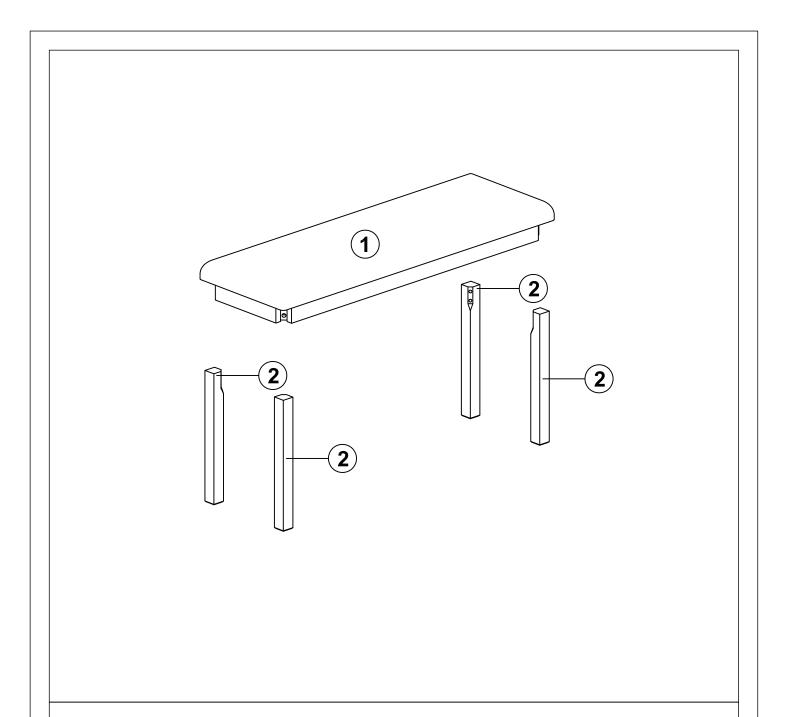

Hardware List For One Bench

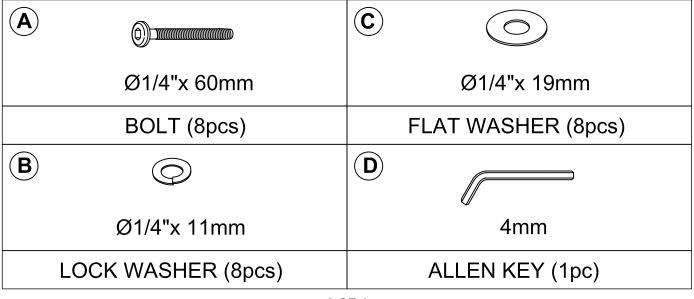

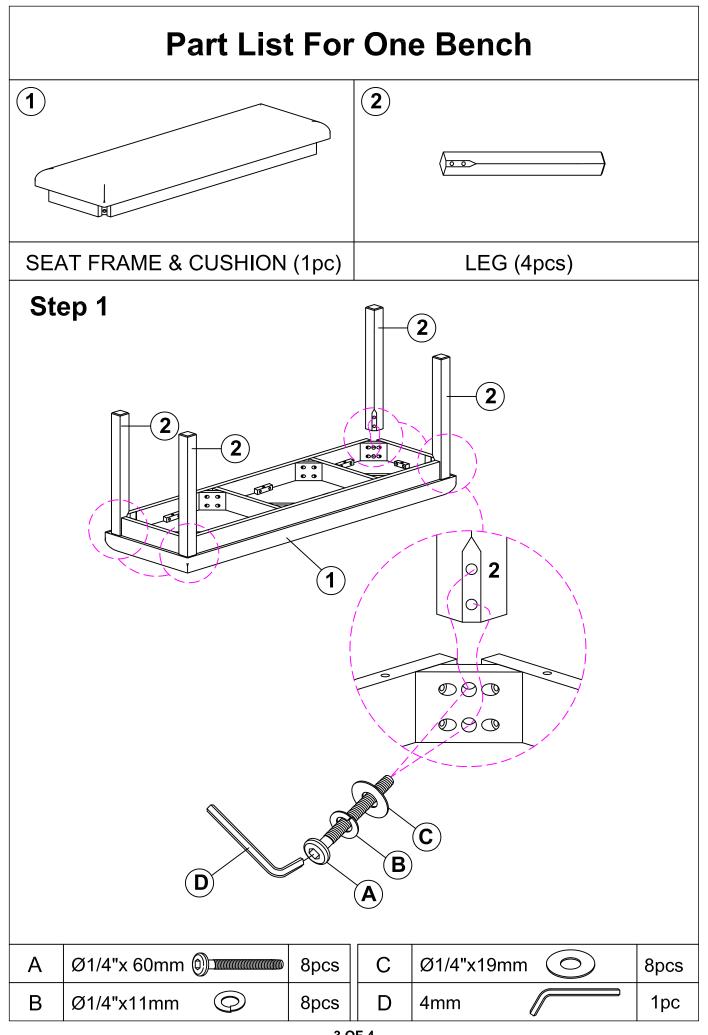

Step 2 4 OF 4