


ASSEMBLY INSTRUCTIONS

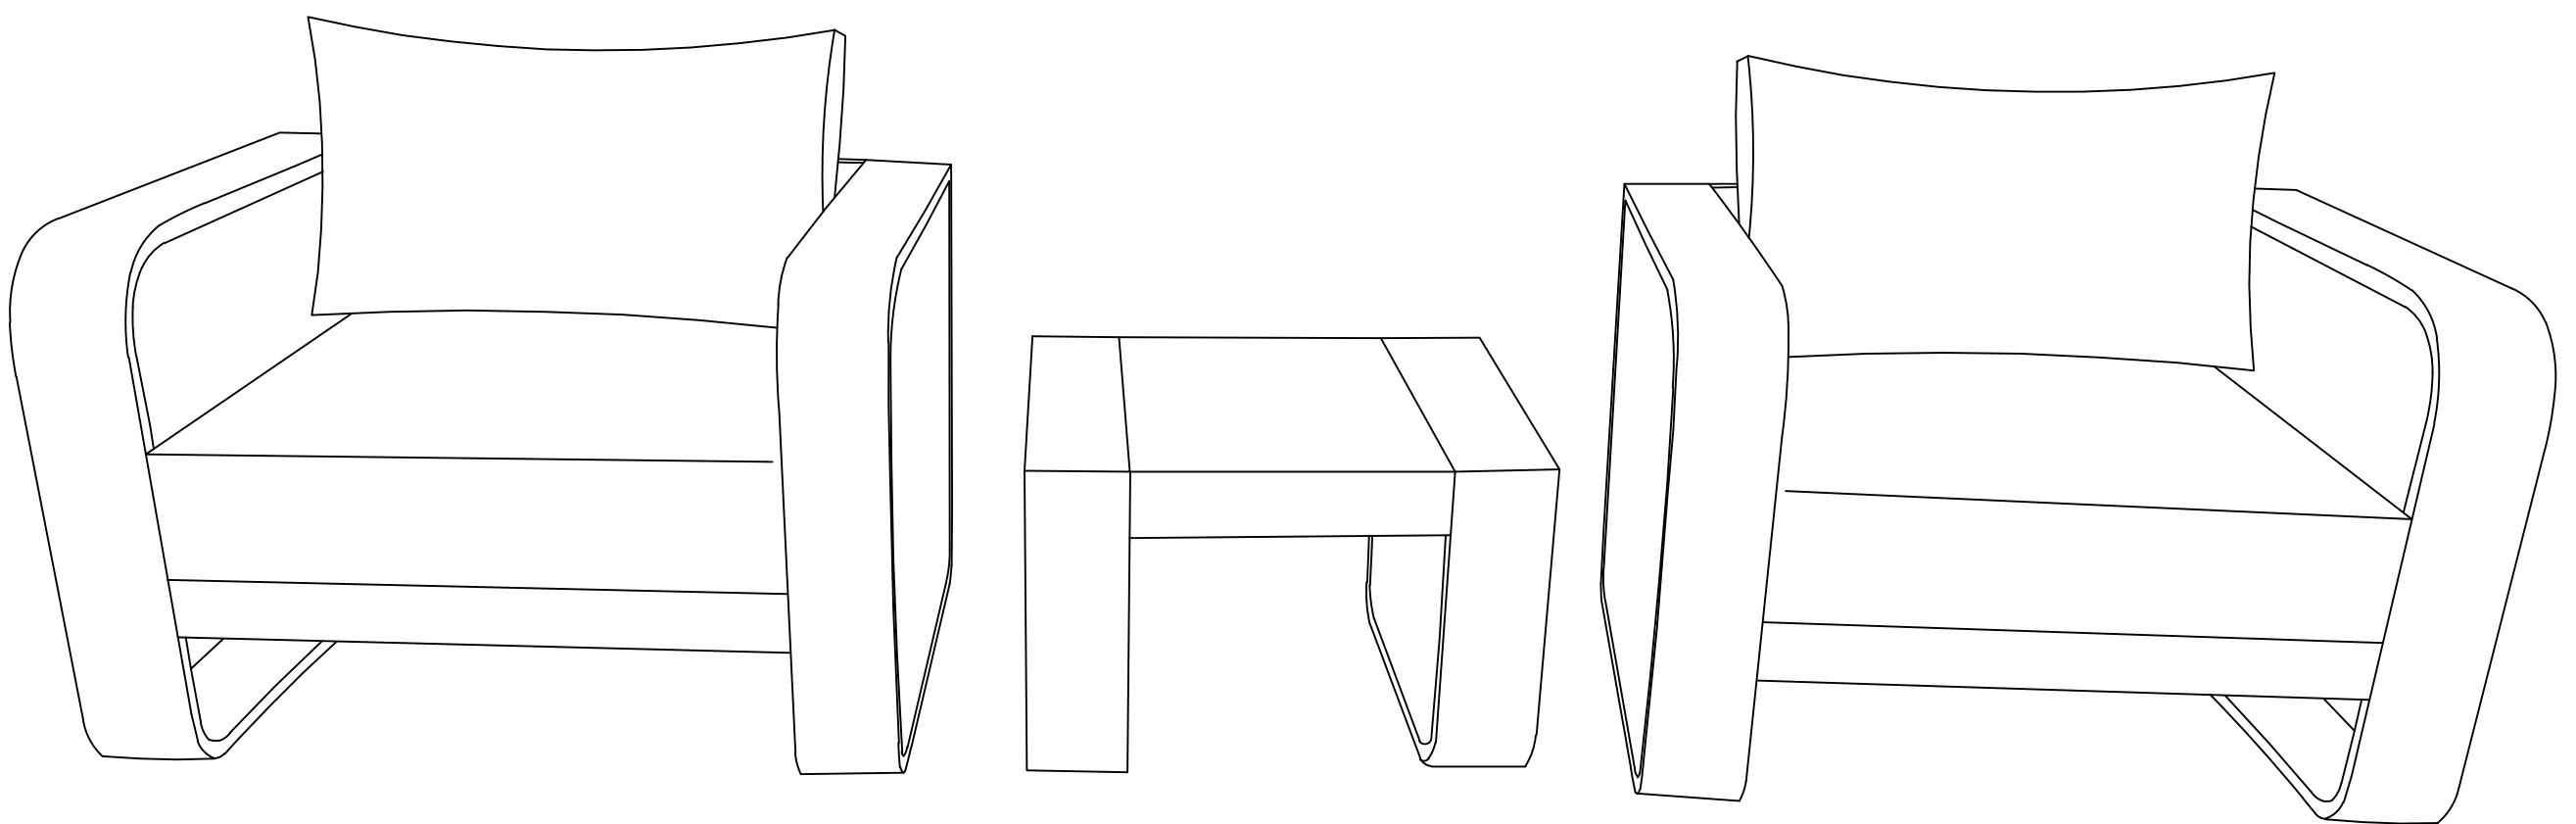


If you have any questions, please feel free to contact us.
Email: lowesteam@aminalife.com

NOTE: 50% TIGHTEN BEFORE FIXING ALL BOLTS


WF316951

WF316952

(1×Table)

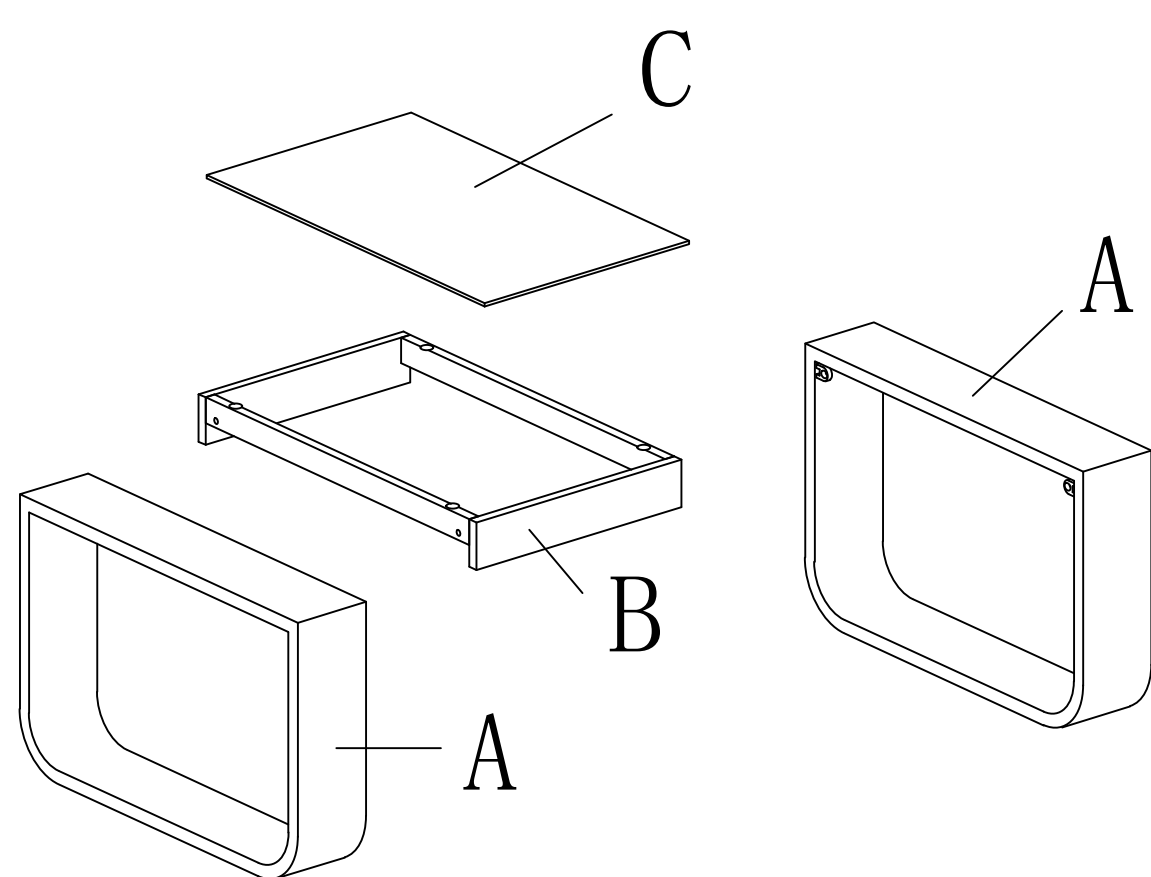










(2×Chair)

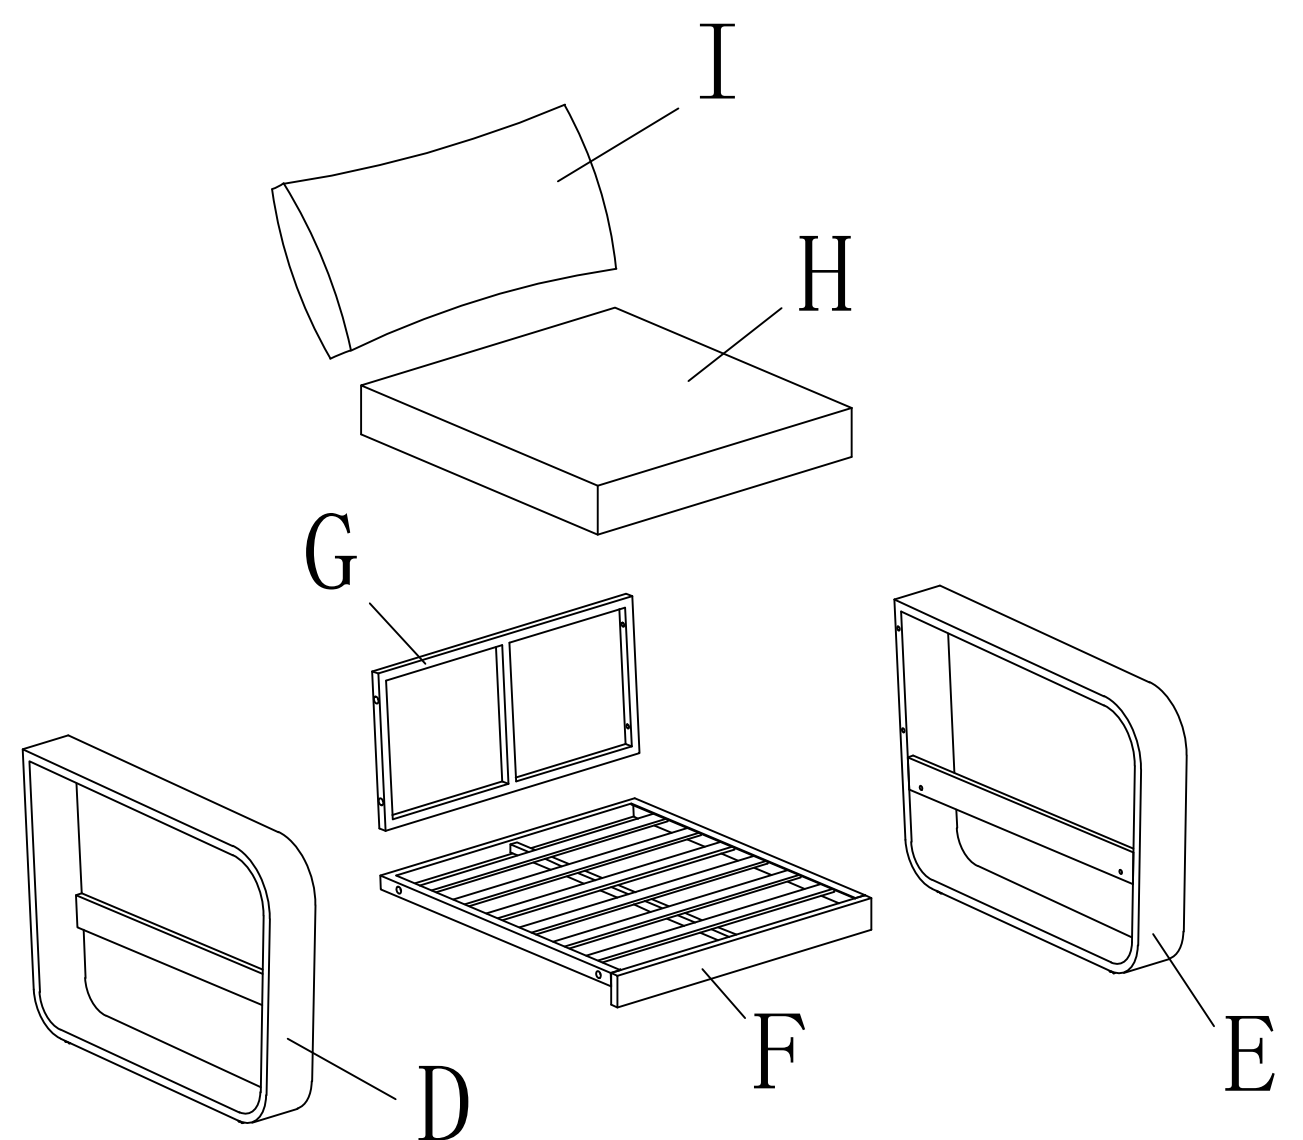

Notice:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

Part List
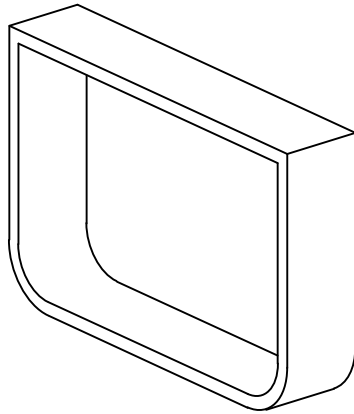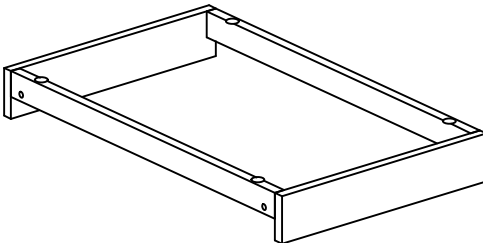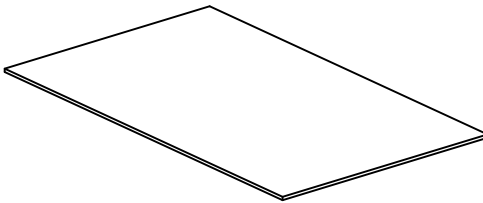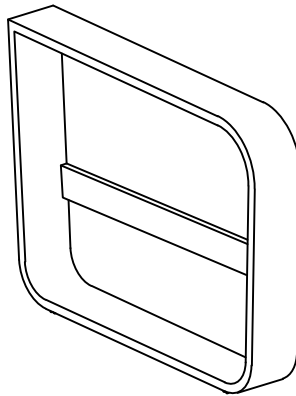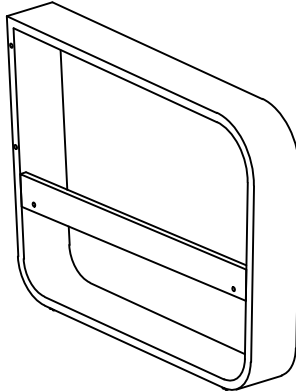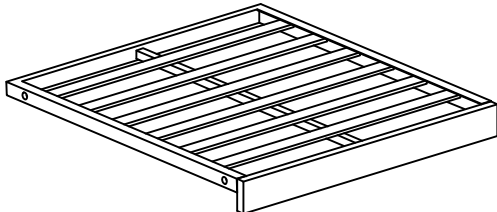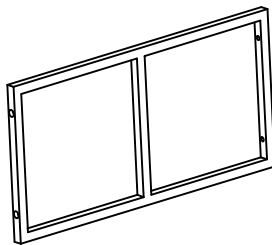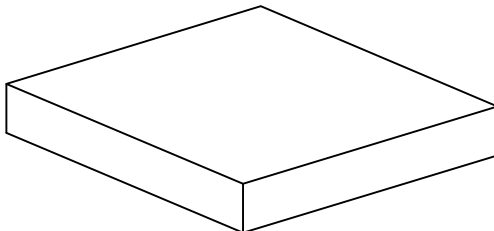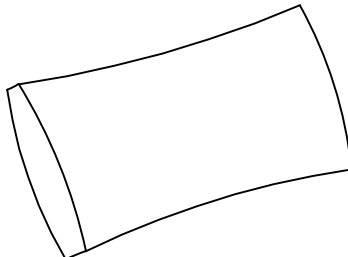
<div data-bbox="149 305 195 371">A</div> <div data-bbox="306 460 539 733"></div> <div data-bbox="249 836 615 887">Table Leg (2pcs)</div>	<div data-bbox="766 305 800 371">B</div> <div data-bbox="915 516 1234 676"></div> <div data-bbox="882 836 1220 887">Table Top (1pc)</div>	<div data-bbox="1388 305 1421 371">C</div> <div data-bbox="1541 522 1860 655"></div> <div data-bbox="1545 836 1793 887">Glass (1pc)</div>
<div data-bbox="149 926 195 991">D</div> <div data-bbox="327 1098 522 1359"></div> <div data-bbox="203 1463 661 1513">Right Armrest (2pcs)</div>	<div data-bbox="766 926 800 991">E</div> <div data-bbox="974 1104 1169 1362"></div> <div data-bbox="833 1463 1266 1513">Left Armrest (2pcs)</div>	<div data-bbox="1388 926 1421 991">F</div> <div data-bbox="1522 1163 1850 1302"></div> <div data-bbox="1545 1463 1793 1513">Seat (2pcs)</div>
<div data-bbox="149 1546 195 1611">G</div> <div data-bbox="331 1771 510 1932"></div> <div data-bbox="260 2083 602 2133">Backrest (2pcs)</div>	<div data-bbox="766 1546 800 1611">H</div> <div data-bbox="894 1771 1220 1923"></div> <div data-bbox="833 2083 1266 2133">Seat Cushion (2pcs)</div>	<div data-bbox="1388 1546 1421 1611">I</div> <div data-bbox="1570 1748 1799 1917"></div> <div data-bbox="1453 2083 1885 2133">Back Cushion (2pcs)</div>


Hardware List

①

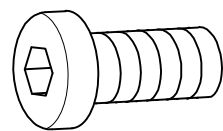


Extra (1pc)
Bolt 1/4 "×20mm(4pcs)

②

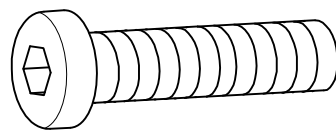


Extra (1pc)
Bolt 1/4 "×35mm(16pcs)

③



Extra (2pcs)
Flat Washer 1/4 " (20pcs)


④

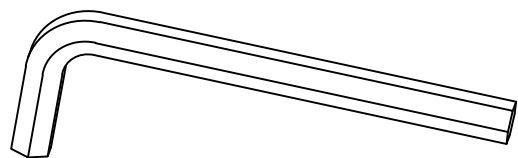


Allen Key 4mm (1pc)

CARTON CONTEAT:


WF316951

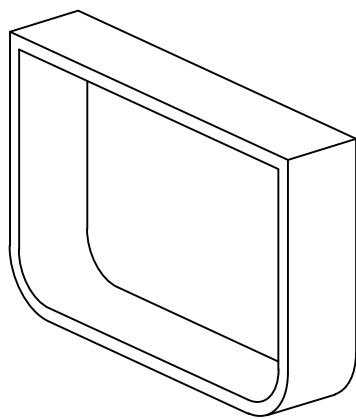


A × 2

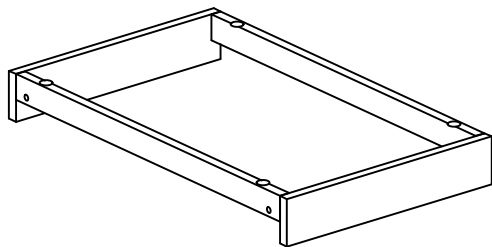


B × 1

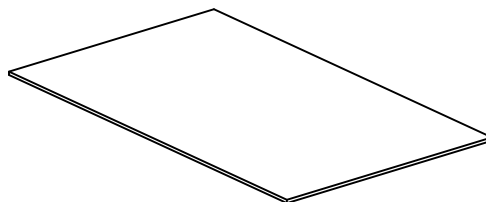


C × 1

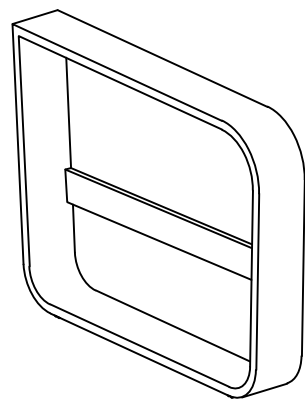


D × 2

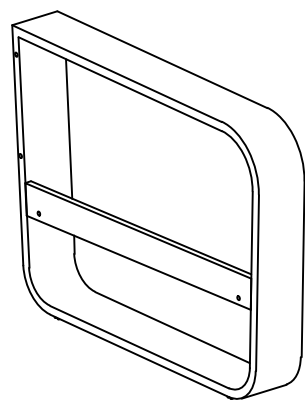


E × 2

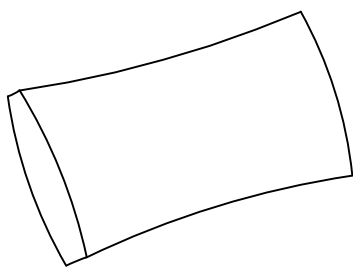


I × 2

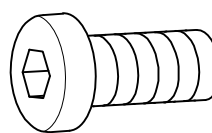


① × 5

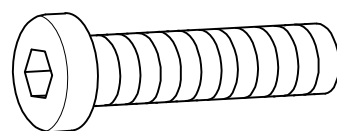

② × 17




③ × 22

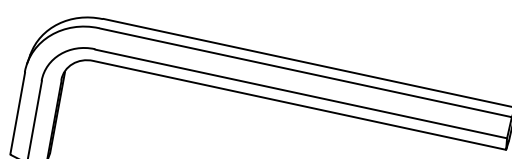


④ × 1

CARTON CONTEAT:


WF316952

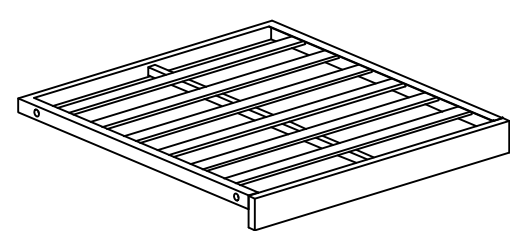

F × 2

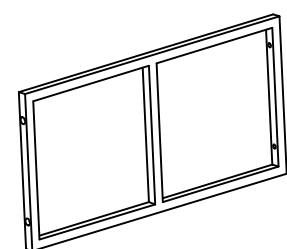


G × 2

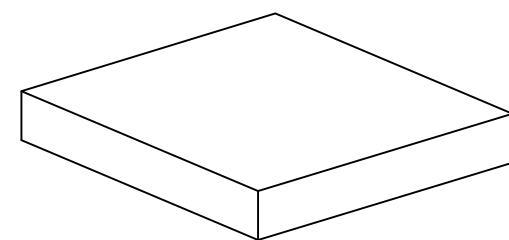

H × 2

STEP 1

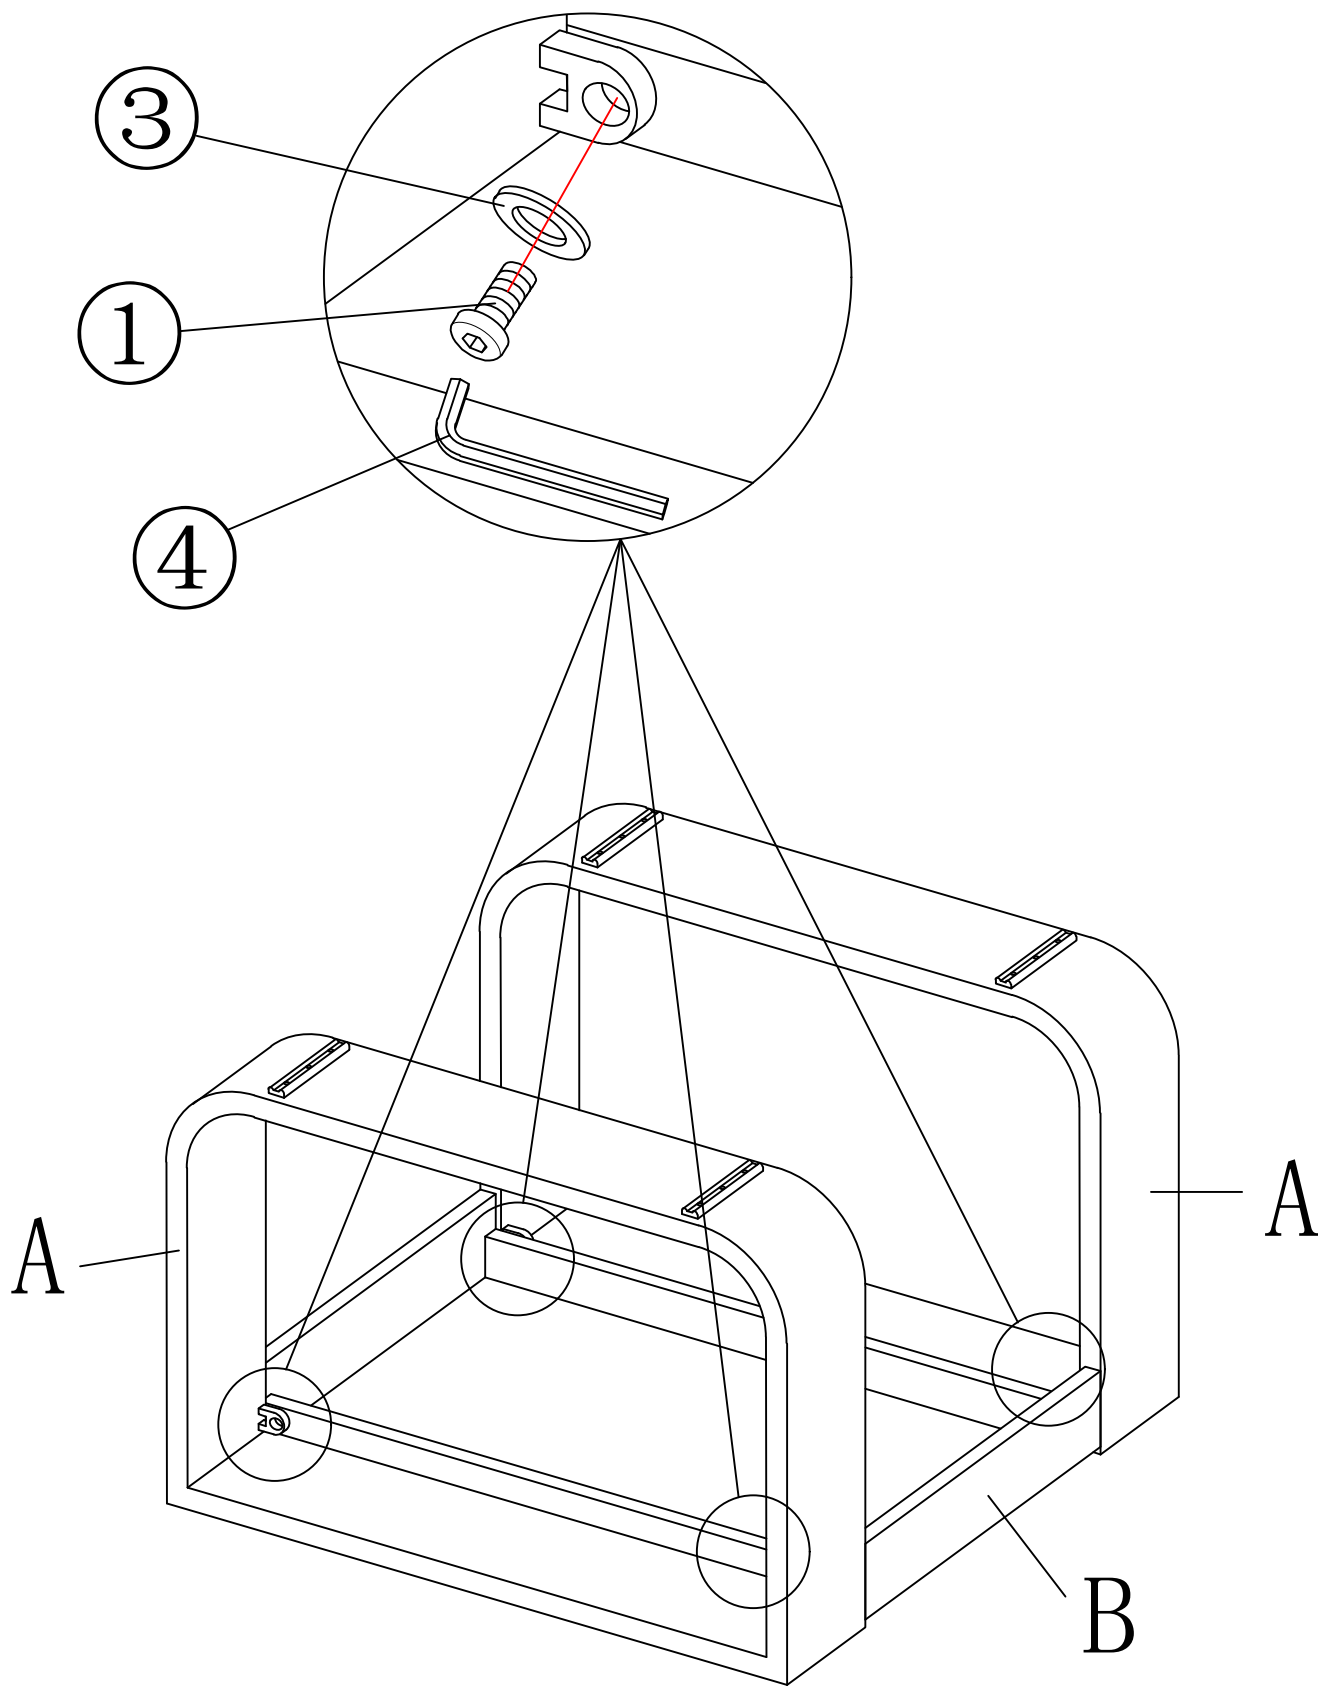


①*4

③*4

A*2


B*1

STEP 2

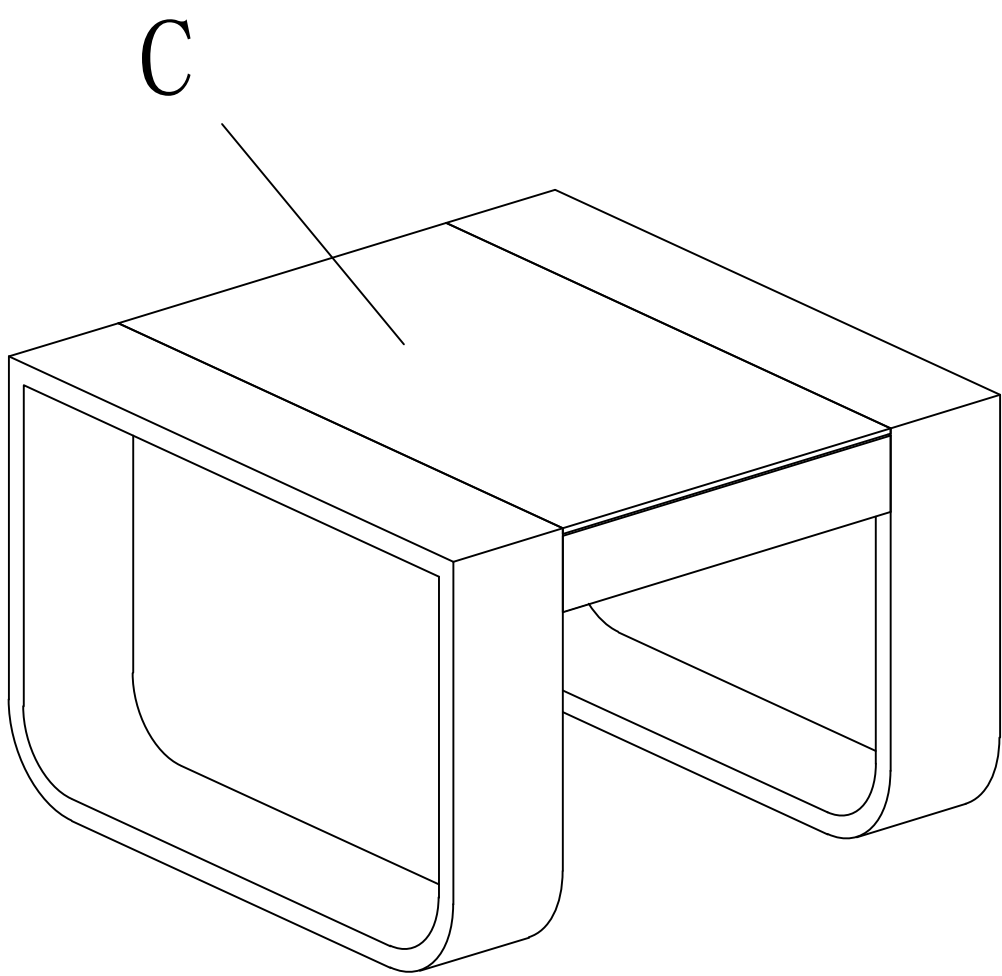

C*1

STEP 3

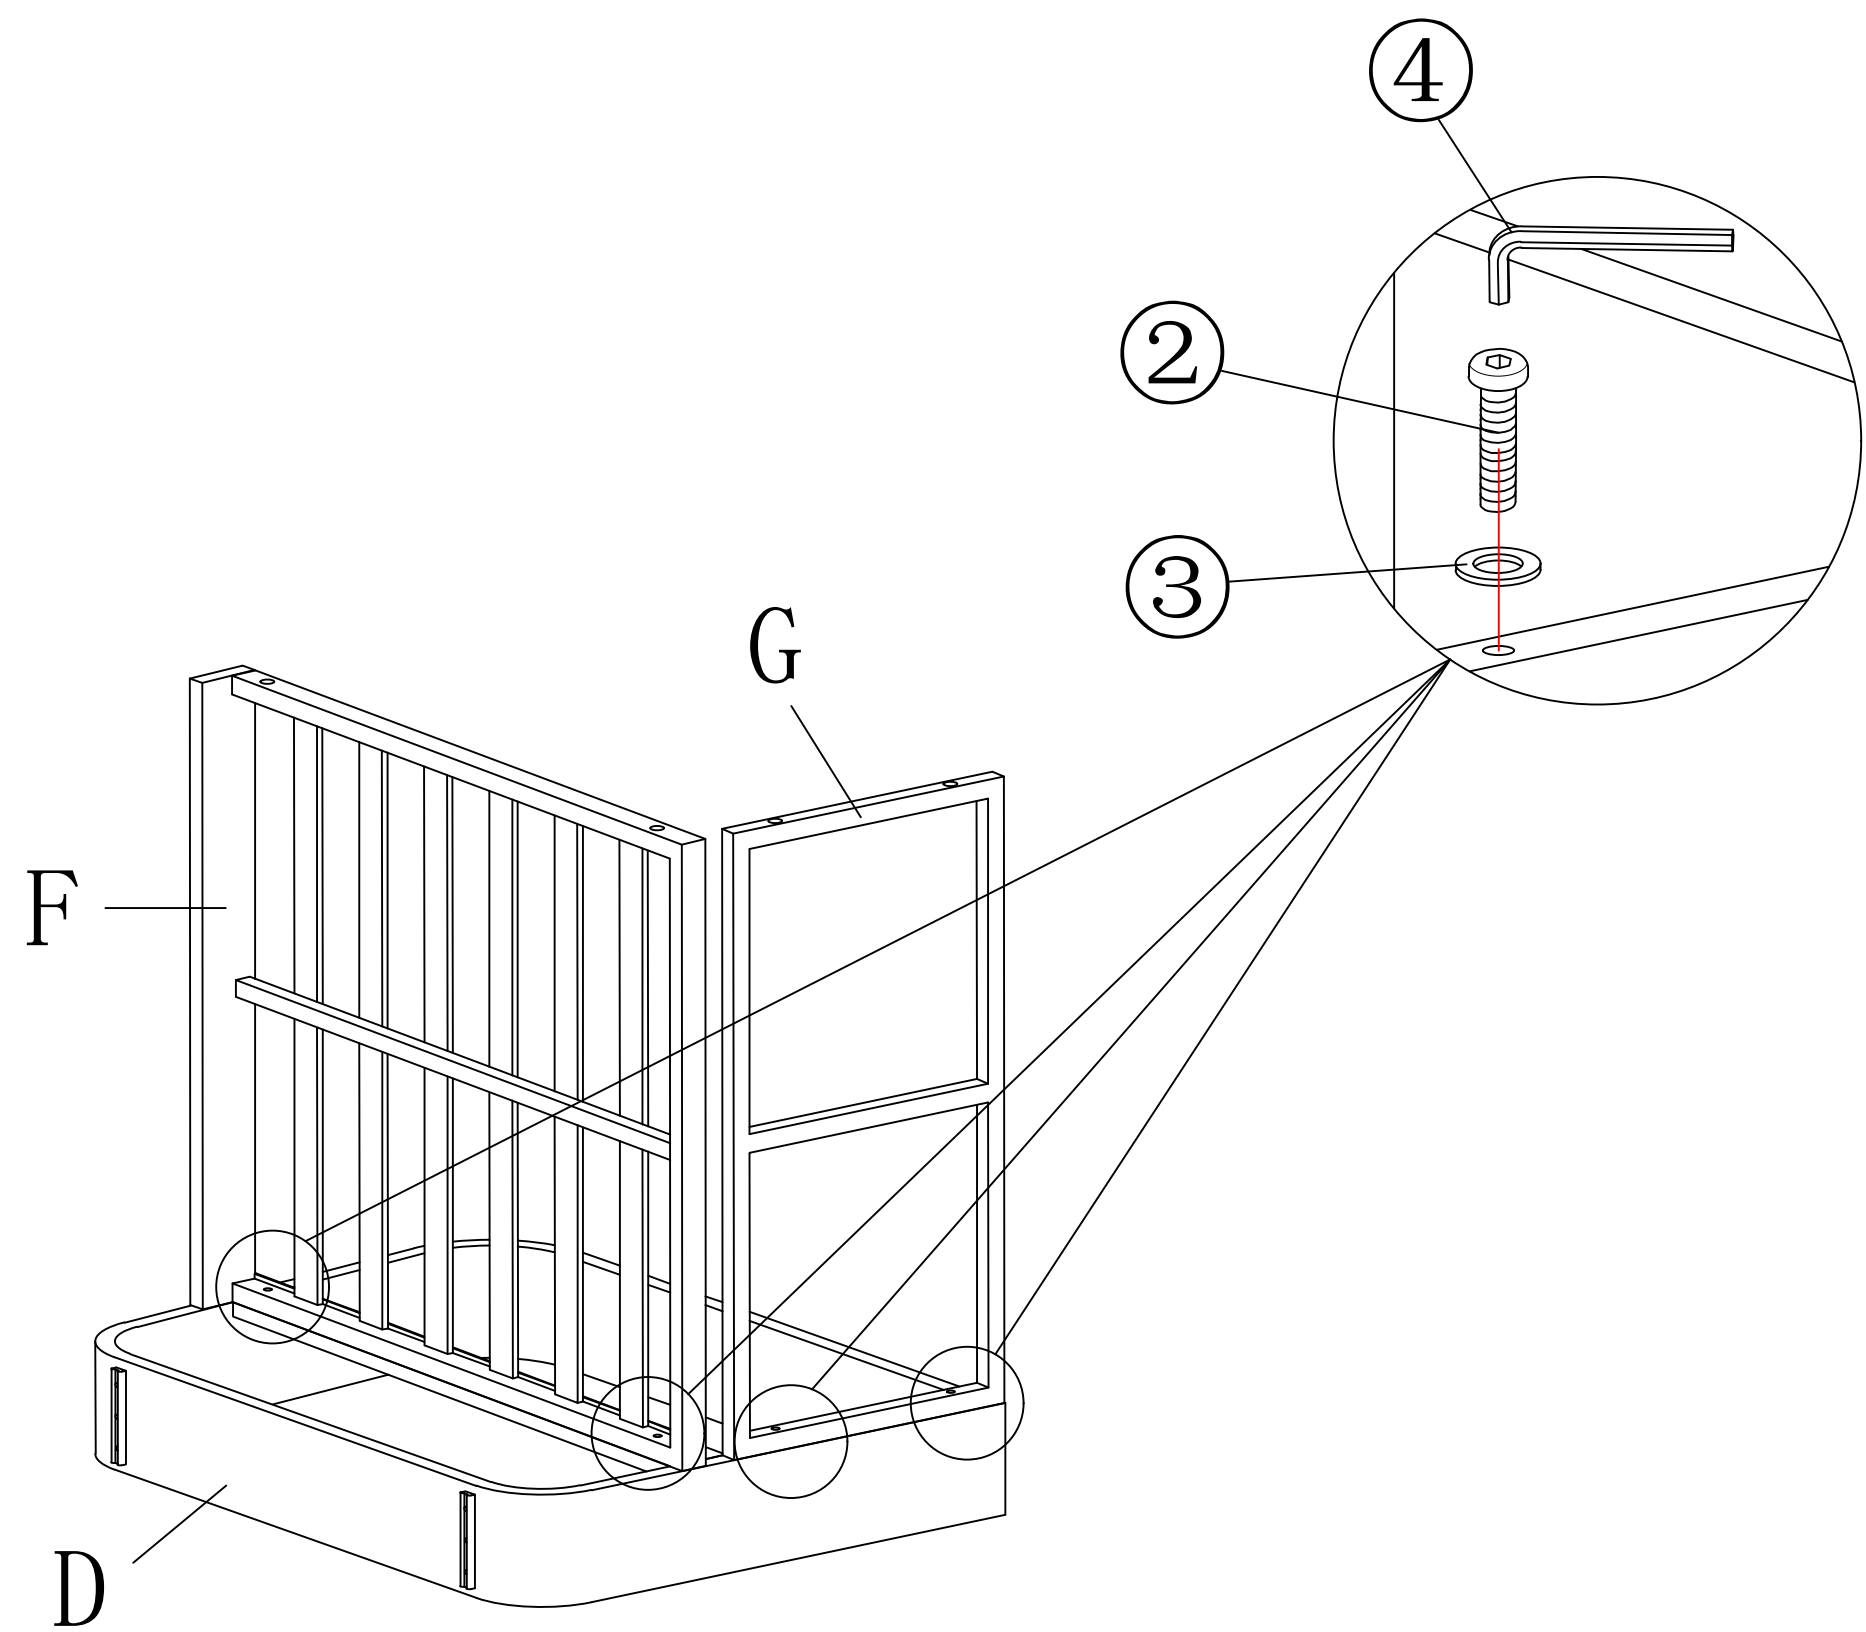

②*4


③*4

D*1

F*1

G*1

STEP 4

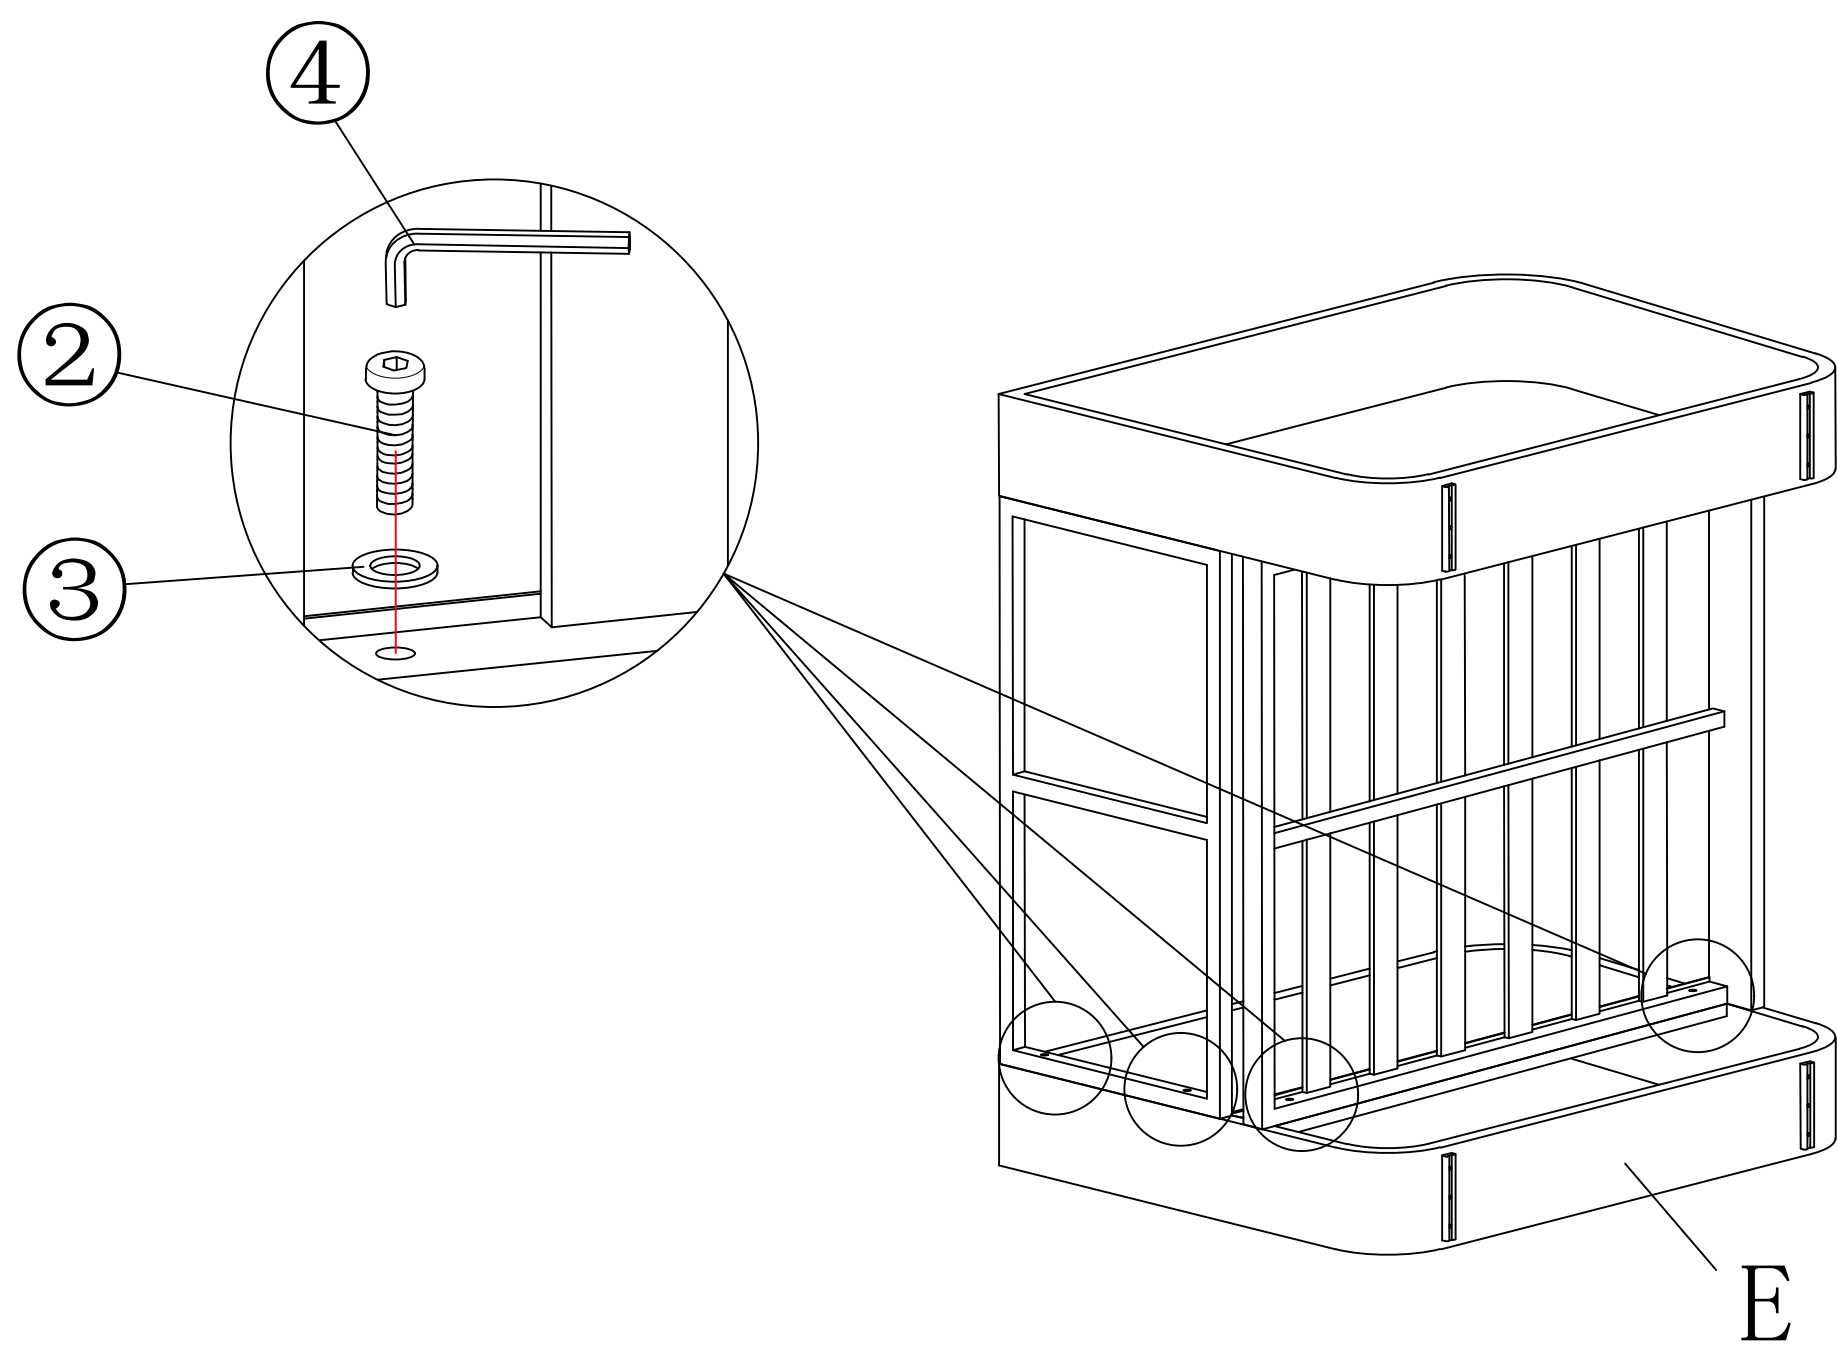


②*4

③*4

E*1

STEP 5

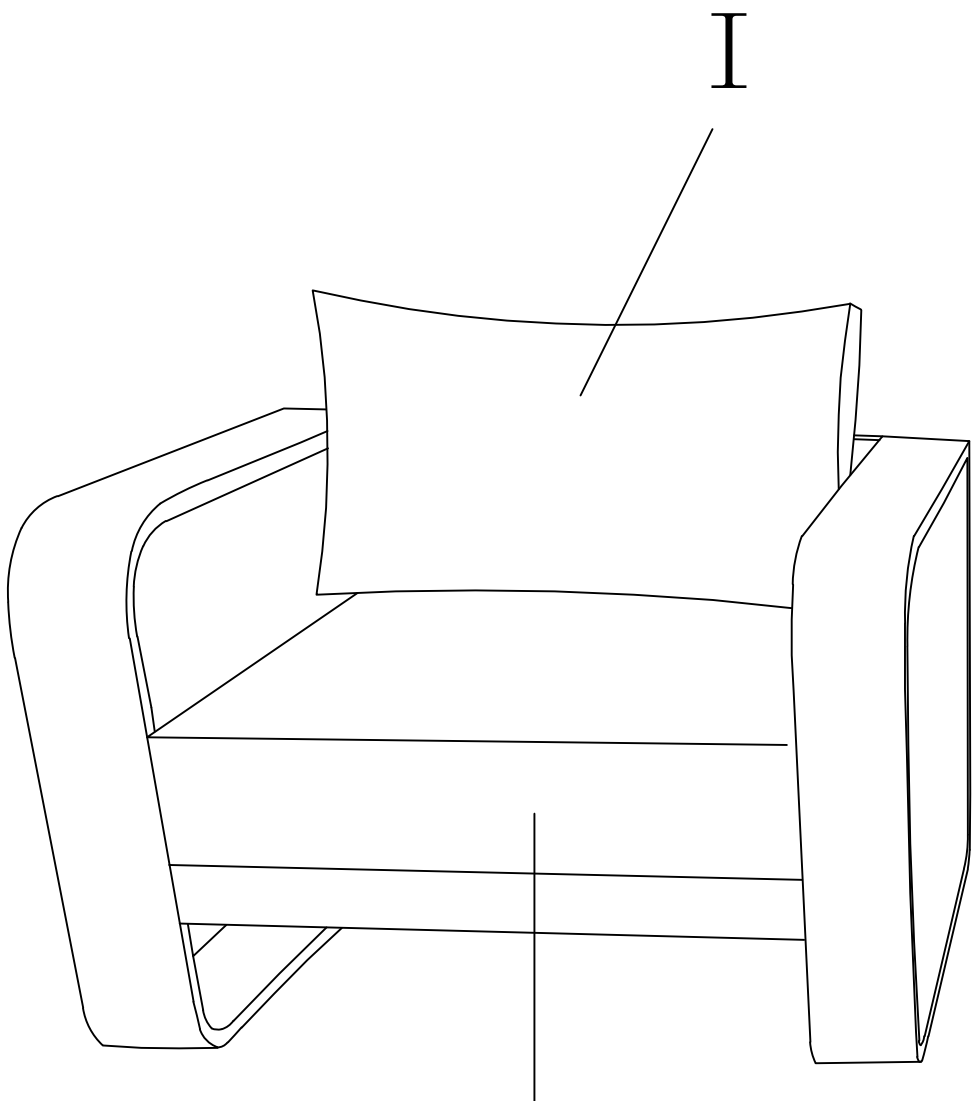


H

×
2

H*1

I*1

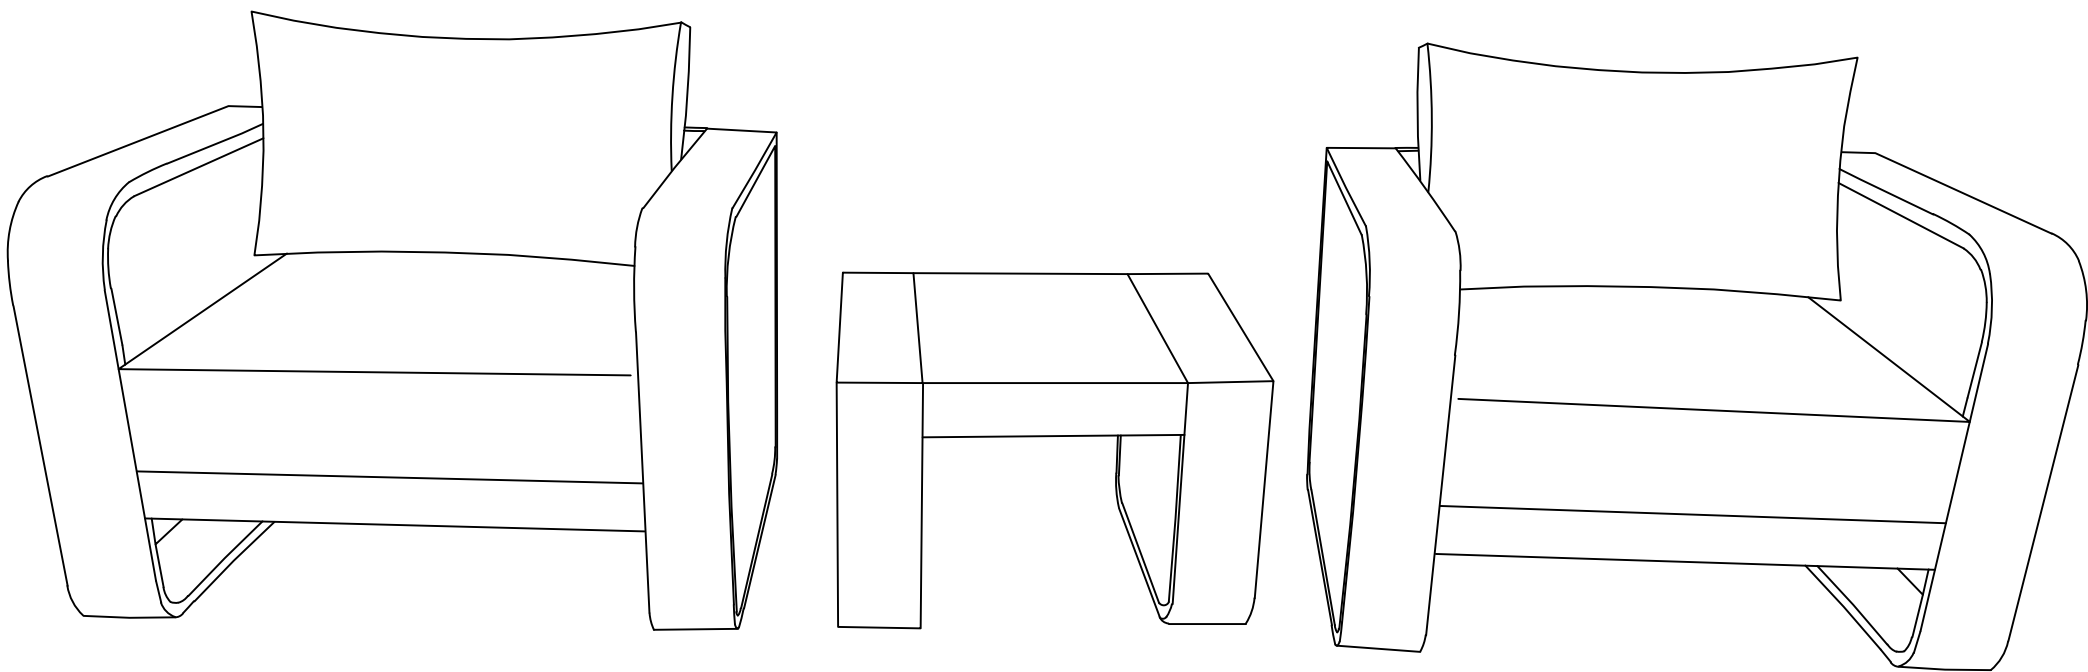

FINISH