

Brickweb™ is easy to install:



Apply adhesive to substrate using 1/4" x 1/4" notch trowel.
(Aplicar el cemento en la superficie con una llana de 1/4" x 1/4" de a bertura.)




Begin layout process by applying brickweb corners. Firmly press brickweb into adhesive.
(Iniciar el proceso de diseño aplicando primero las esquinas y presione firmemente sobre el cemento ala brickweb.)



Apply brickweb sheets by over-lapping exposed webbing. Firmly press brickweb into adhesive.
(Aplique las hojas brickweb sobre las telas expuestas y presione firmemente sobre el cemento ala brickweb.)



Scan for Installation
Tips & Tricks

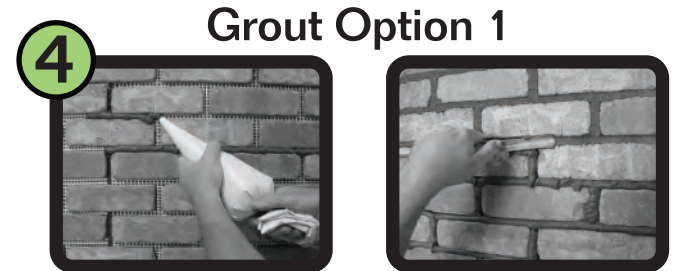

Apply grout using grout bag.
(Aplique el grout con la bolsa.)

Finish grout with tool.
(Termine el grout con la herramienta.)



Apply grout using tile float.
(Aplicar el grout usando una flota para piso de ceramic.)

Finish grout with sponge.
(Terminar el grout con una esponja humeda.)

*To help keep brick faces clean, apply a grout release product on the brick prior to grout application.

www.installbrickweb.com



WARNING: The dust generated from dry sawing may contain silica and may be a potential health problem for the lungs. Wet sawing is recommended. Wear all necessary protective gear.