


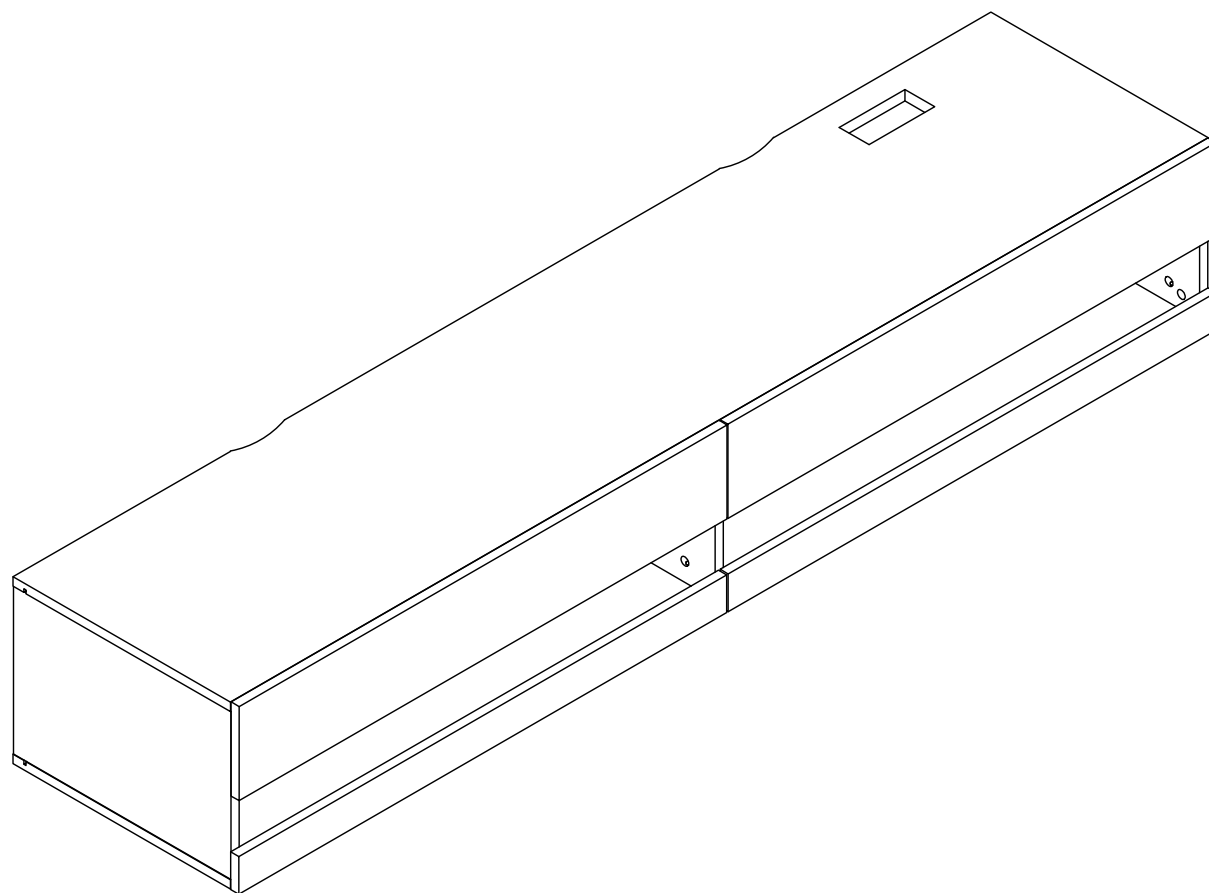
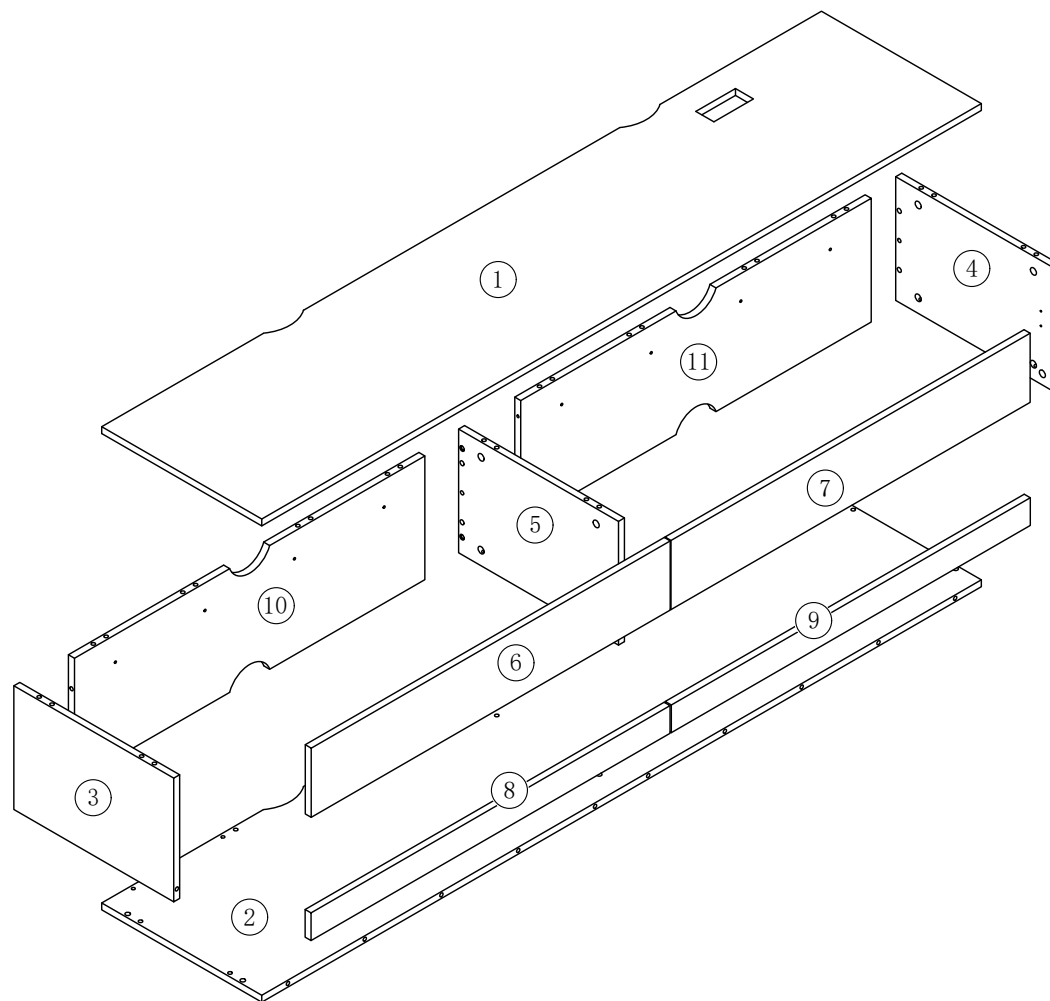
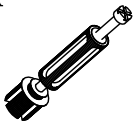



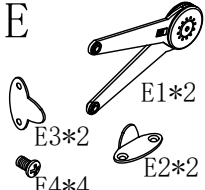



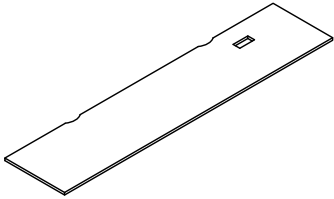
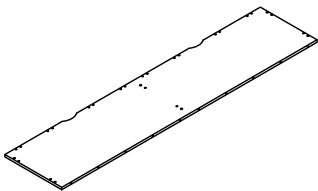
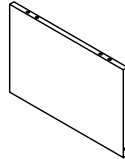
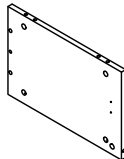
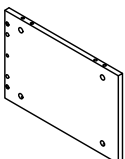
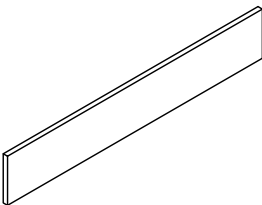
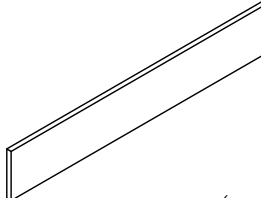
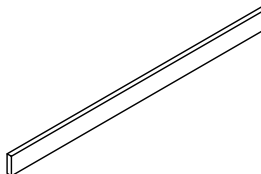


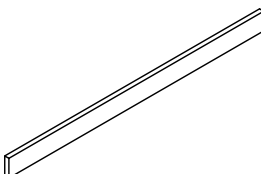

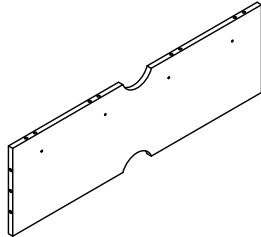


A  34PCS	B 8*40  35PCS	C  4PCS	D 3.5*14  34PCS	E  E3*2 E4*4 E1*2 E2*2	F  8PCS	G  1PC	H 7*50  10PCS	LED  1PC	I  34PCS
--	---	--	---	--	--	---	---	---	---

1  1800*400 (mm) 70.87*15.75 (inch)	2  1800*400 (mm) 70.87*15.75 (inch)	3  268*400 (mm) 10.55*15.75 (inch)	4  268*400 (mm) 10.55*15.75 (inch)	5  268*400 (mm) 10.55*15.75 (inch)
6  898*150 (mm) 35.35*5.91 (inch)	7  898*150 (mm) 35.35*5.91 (inch)	8  898*60 (mm) 35.35*2.36 (inch)	9  898*60 (mm) 35.35*2.36 (inch)	10  876.5*268 (mm) 34.51*10.55 (inch)
11  876.5*268 (mm) 34.51*10.55 (inch)				

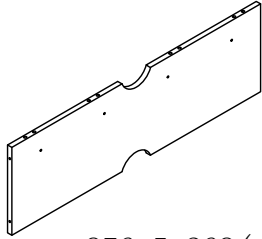


Hardware installation demonstration
NOTE: Please make sure "A" hardware tightened and can't be pulled out!


I

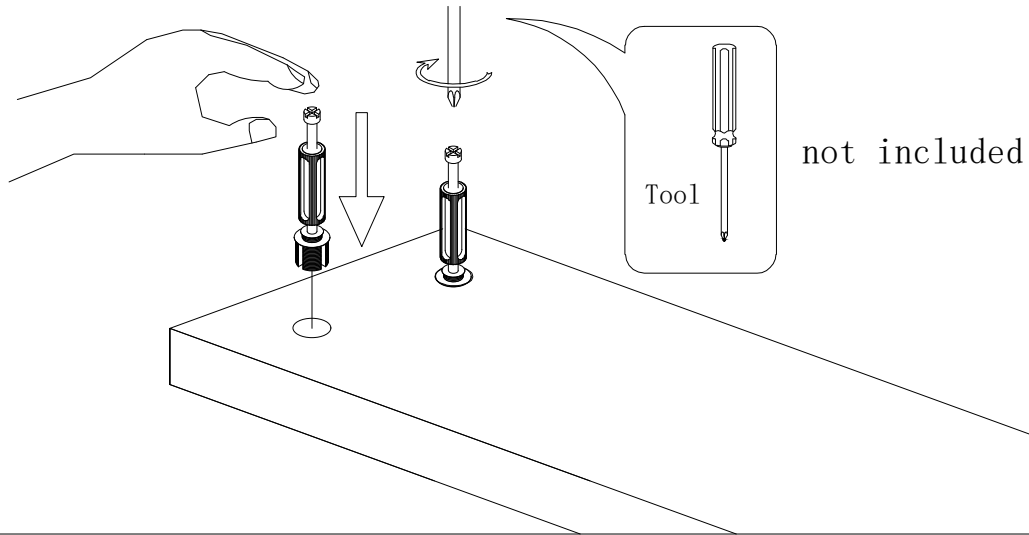

II

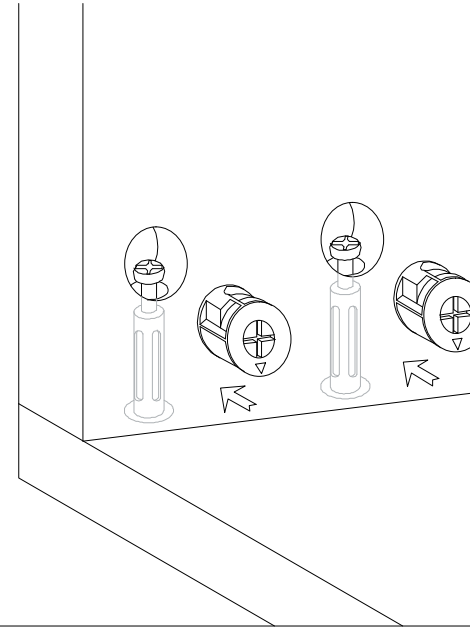



III

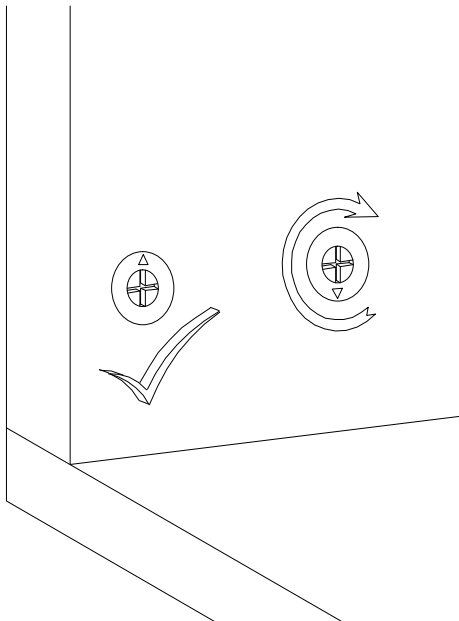

IV





Please scan QR code for assembly video.

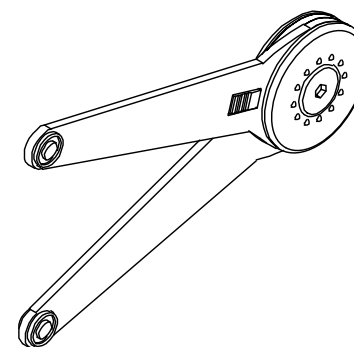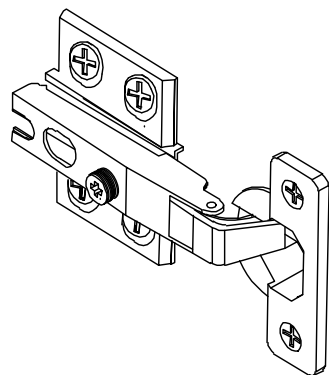

Please scan QR code for assembly video.

1








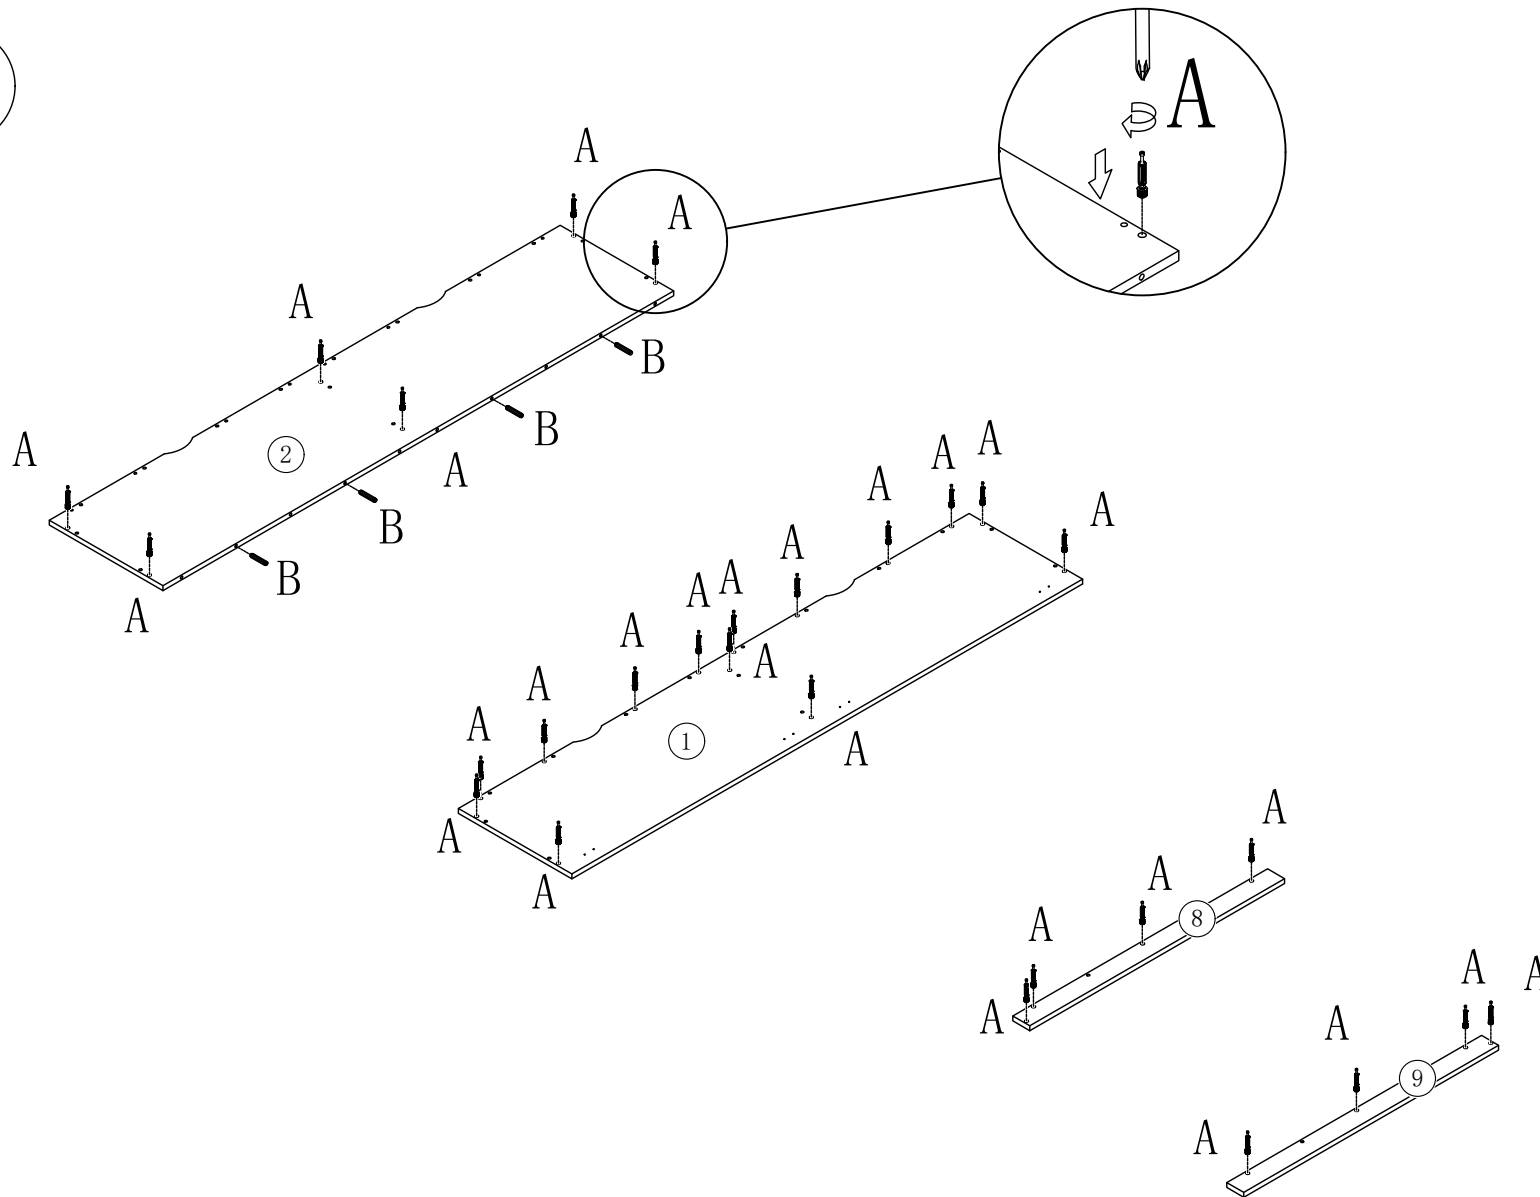


B*4



A*28

2

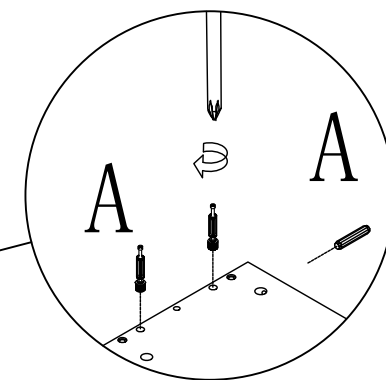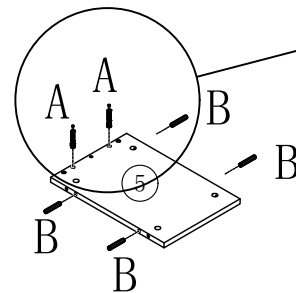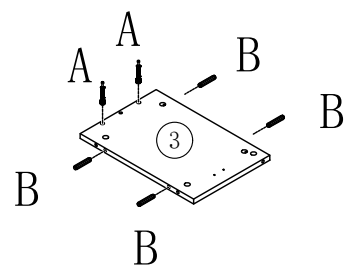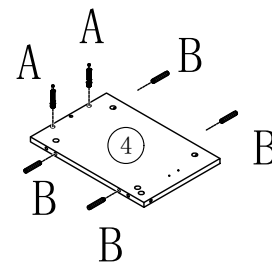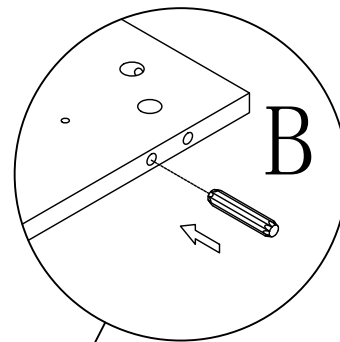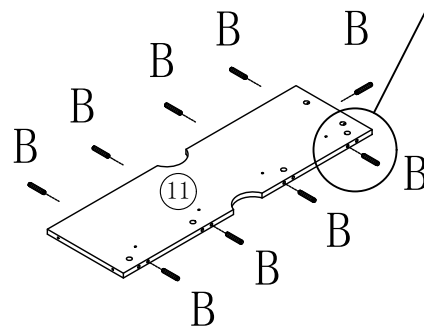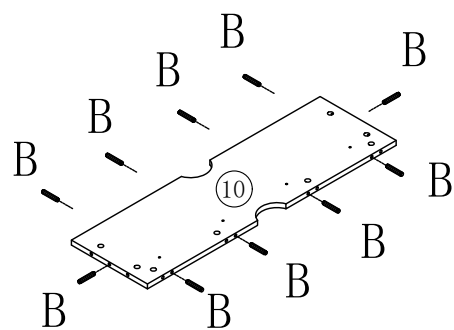


B*31




A*6

3

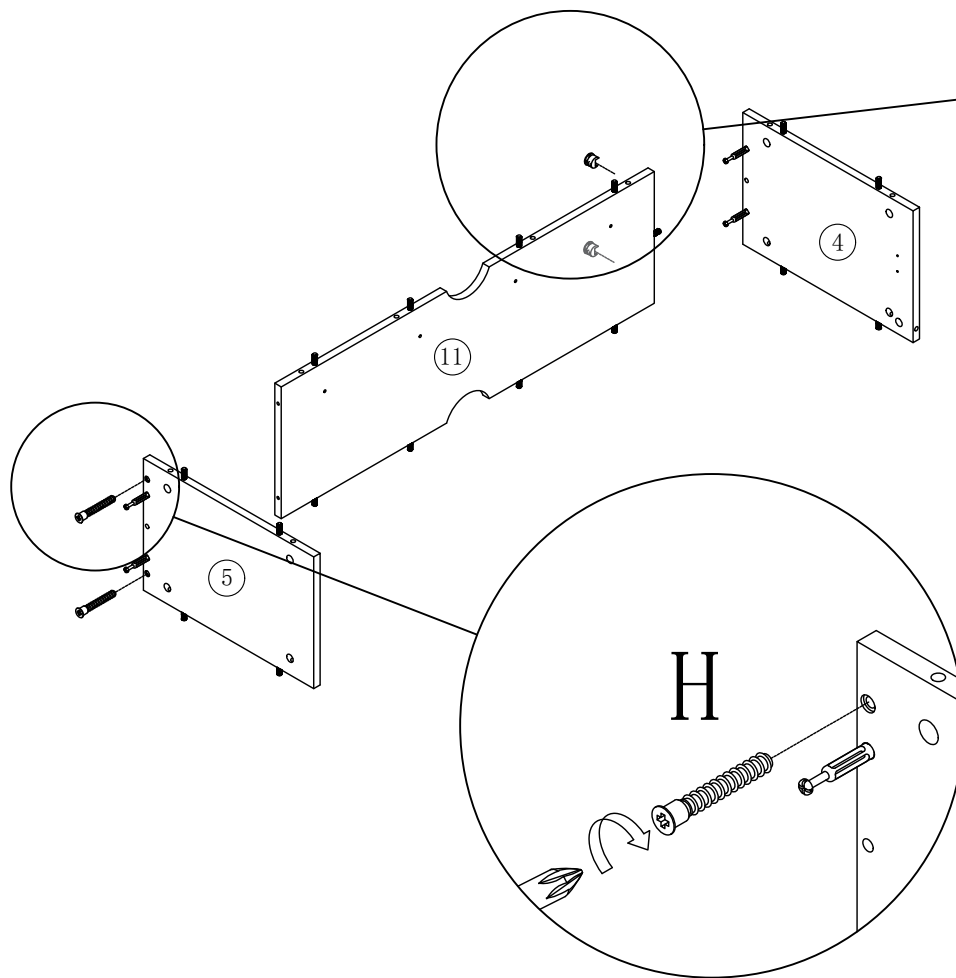


Make sure the arrow on the screw align to the hole on the side.

	I*2
	H*2

Put H on board 5
Put I on board 11


4

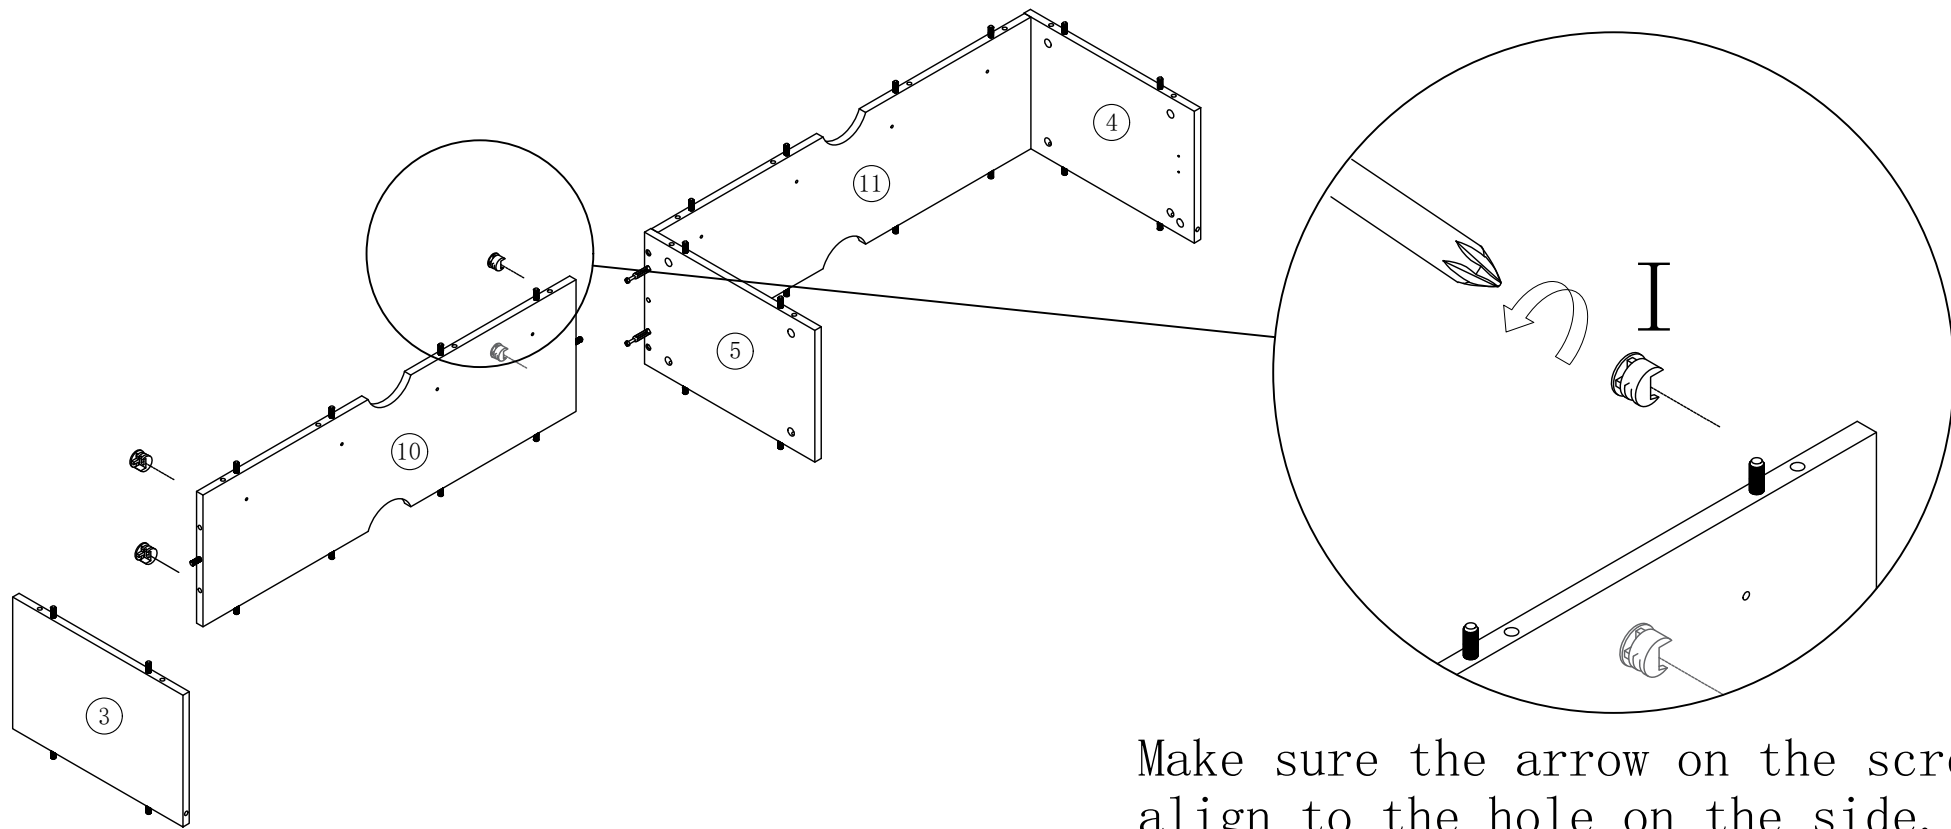


I*4

Put I on board ⑩

5

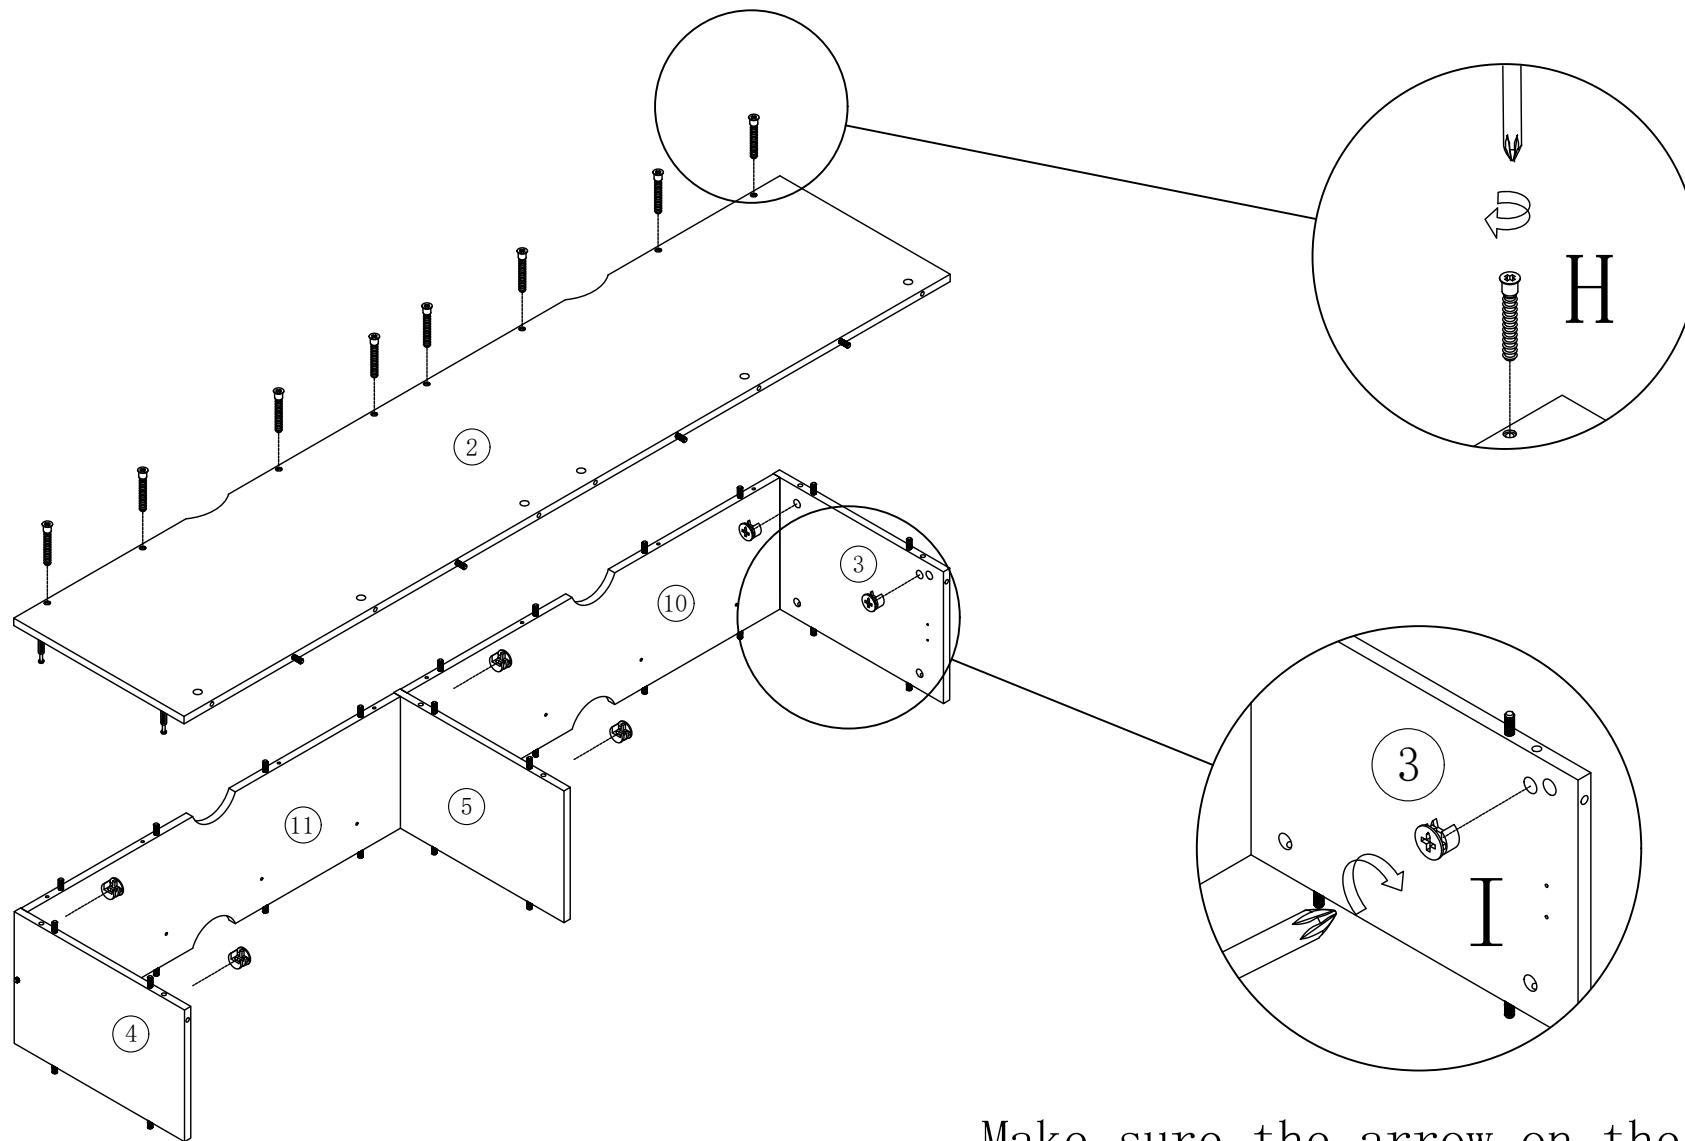

Make sure the arrow on the screw align to the hole on the side.



H*8





I*6

Put H on board (2)

Put I on board (3) (4) (5)

6

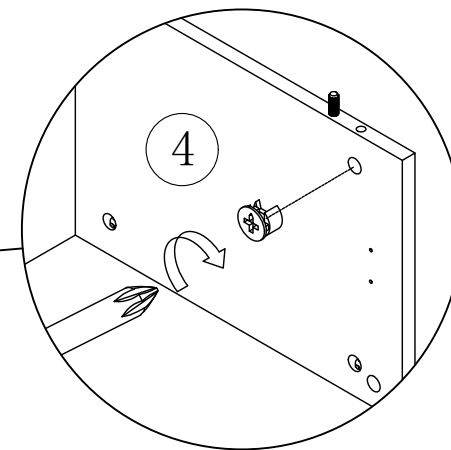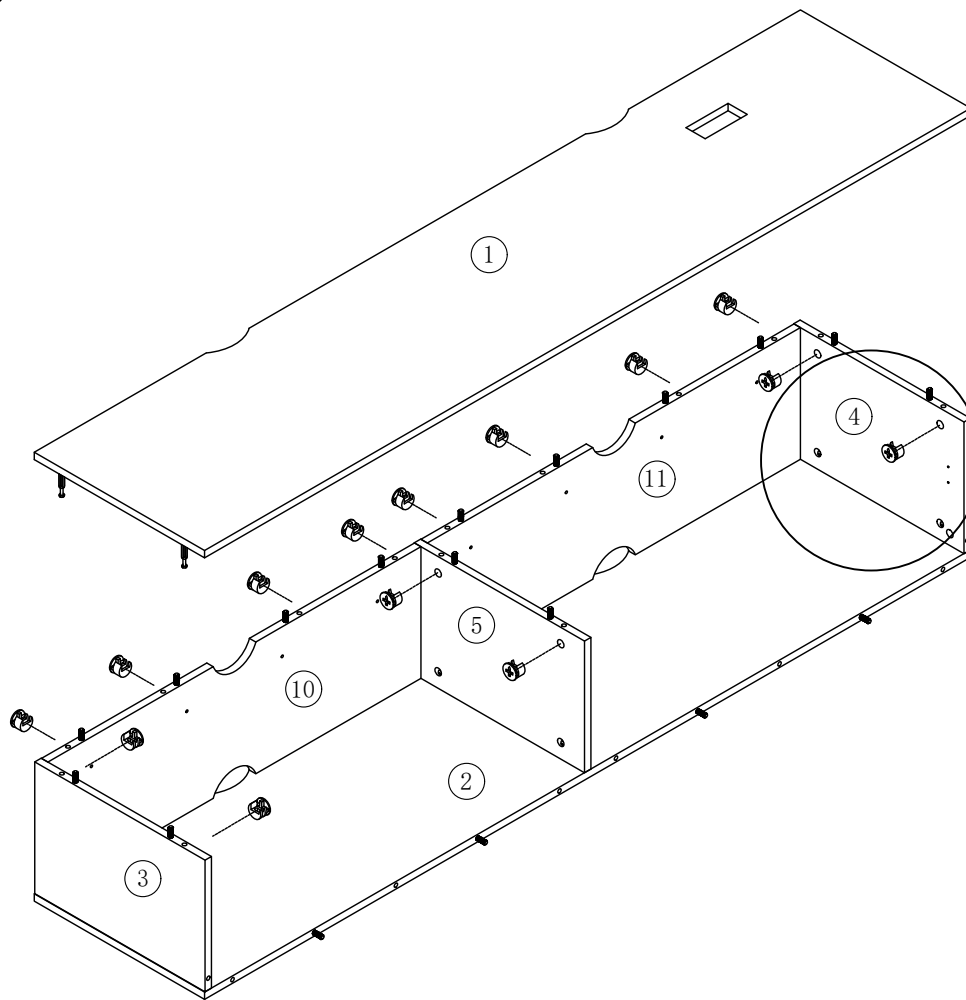

Make sure the arrow on the screw align to the hole on the side.



I*14

Put I on board

3


4

5

10

11

7

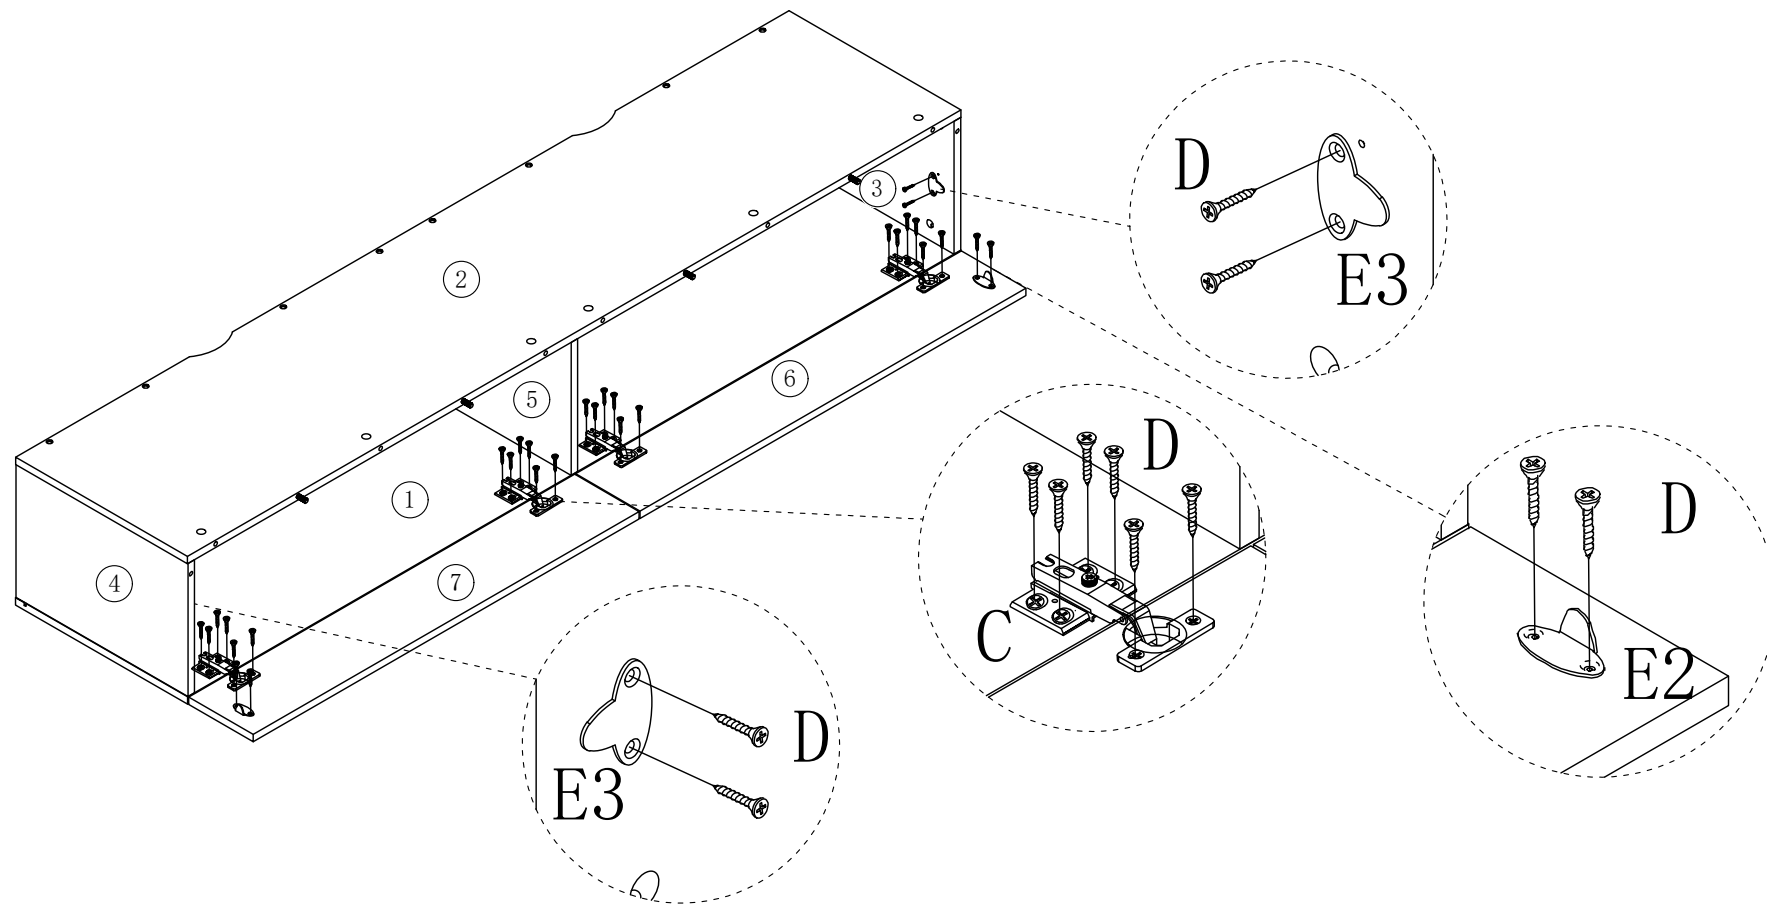


	E2*2
	E3*2
	D*32
	C*4

Put C and D on board ① ⑥ ⑦

Put E3 and D on board ③ ④

Put E2 and D on board ⑥ ⑦


8

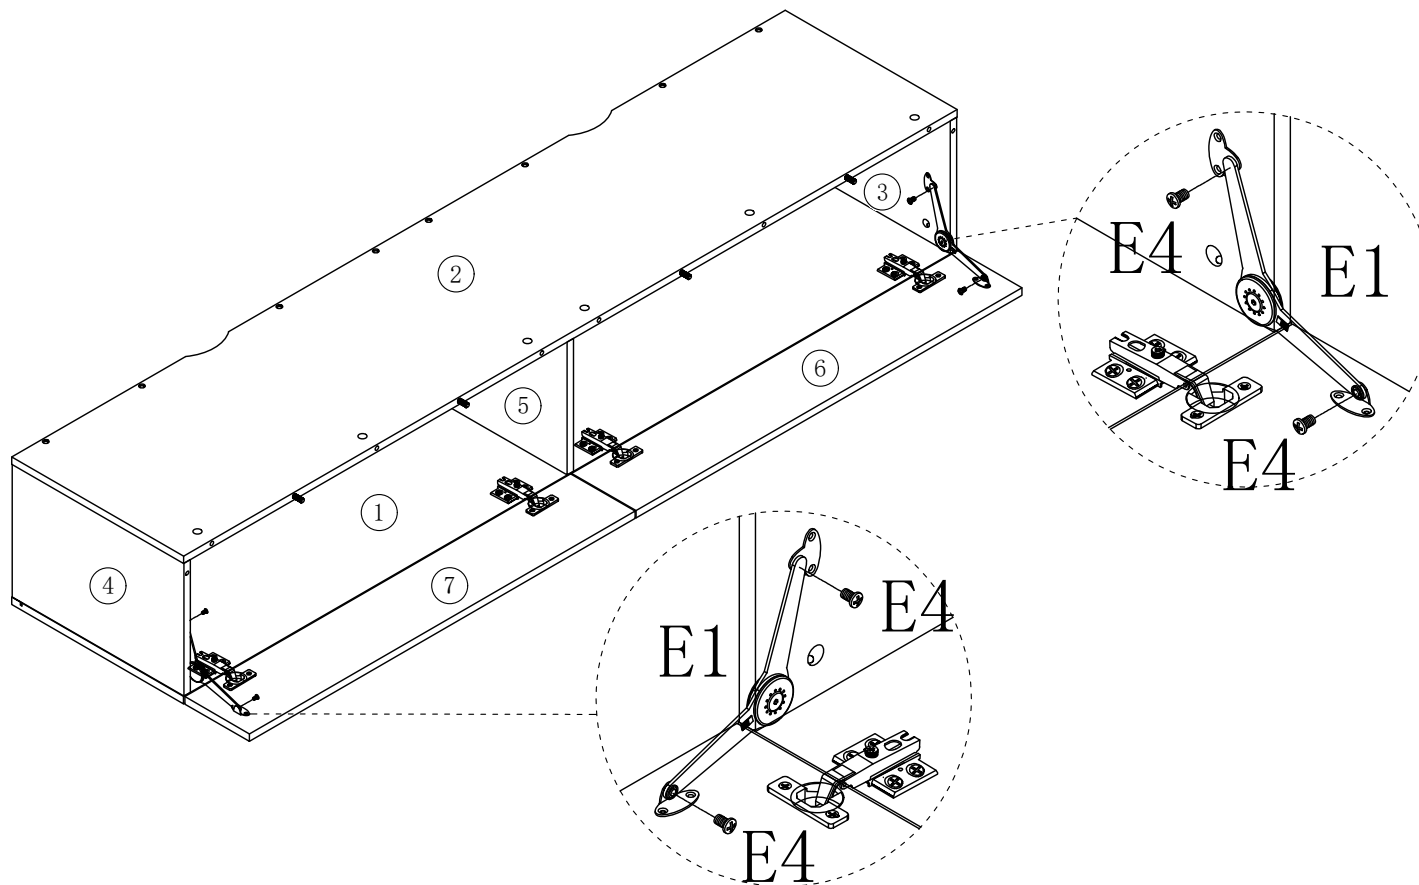

	E4*4
	E1*2

Connect E1 and E4 together

9

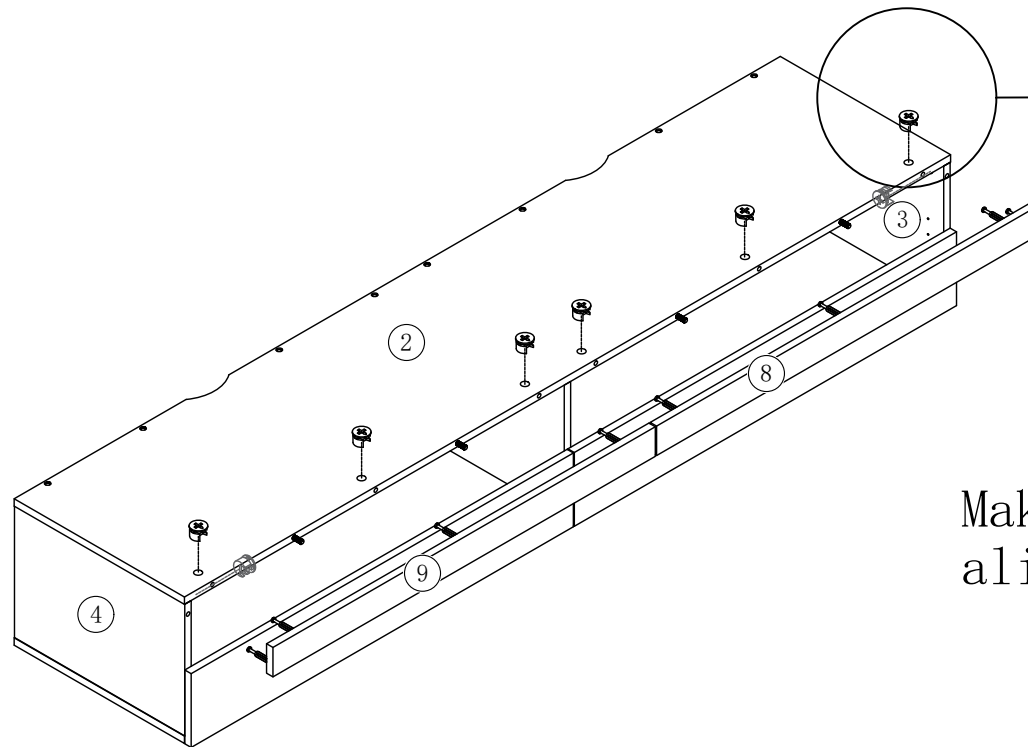

Make sure the arrow on the screw align to the hole on the side.





I*8

Put I on board

(2) (3) (4)



10

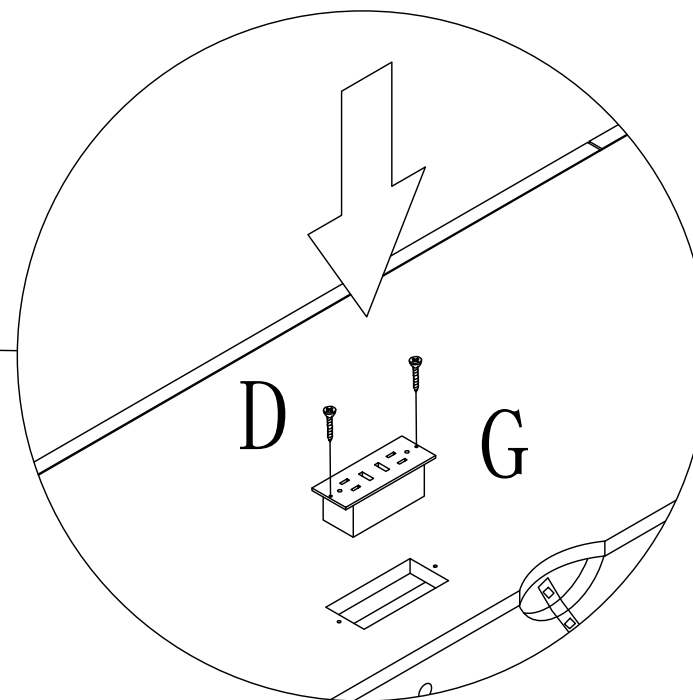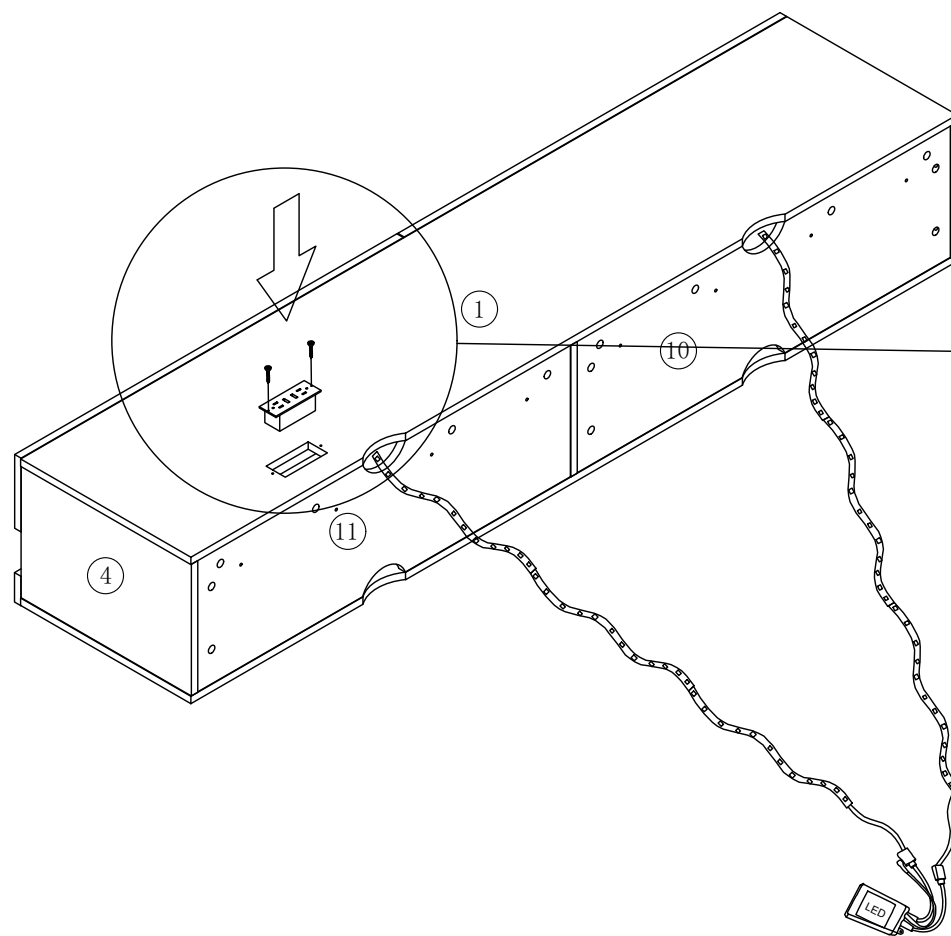


	D*2
	LED
	G*1

Put G and LED on board ①

11

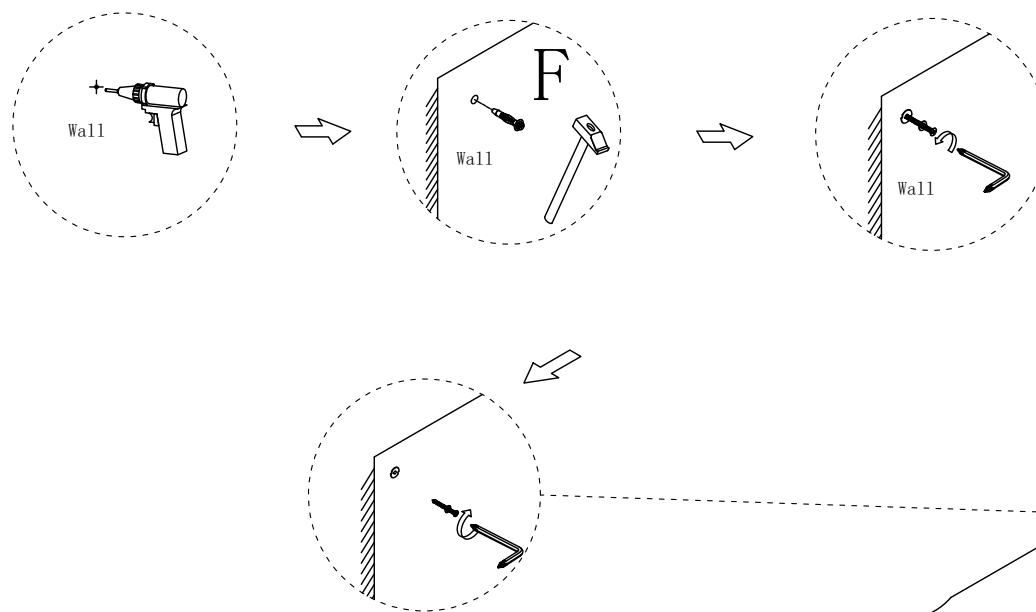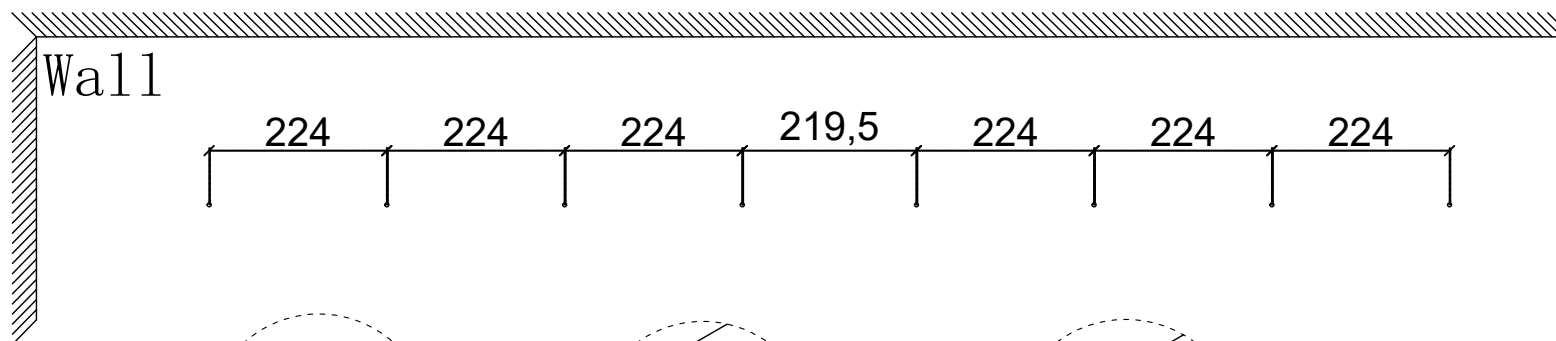

Install the cabinet on the wall with F

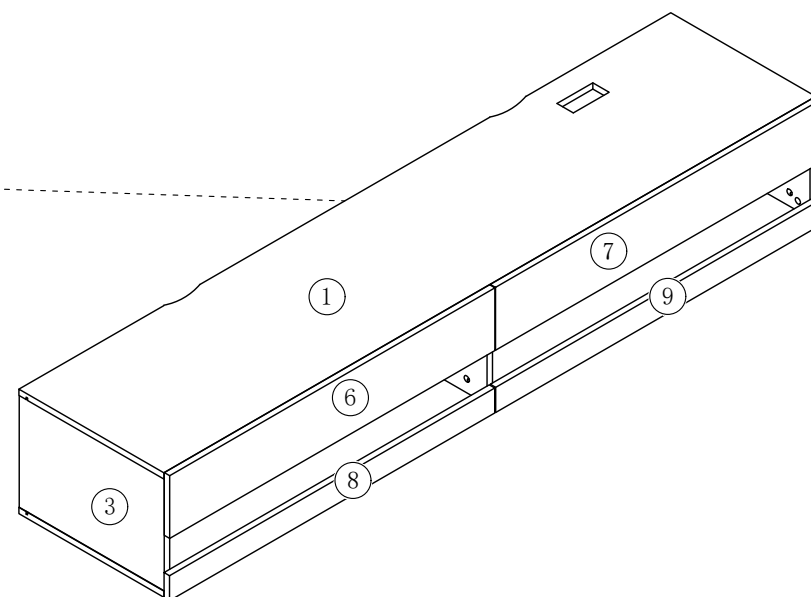

F*8

LED Light

If you can't let the lights work successfully, please check the following:

1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
2. Please check the remote control, it need you to tear down the plastic septum before use it.
3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

