



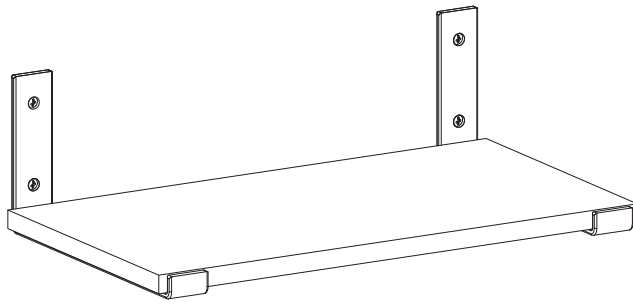

A

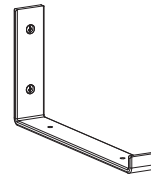


Fasteners:

AA




F/H Screw, #10 x 1-3/4"
2PCS

BB




Anchor, M6x30mm
2PCS

1

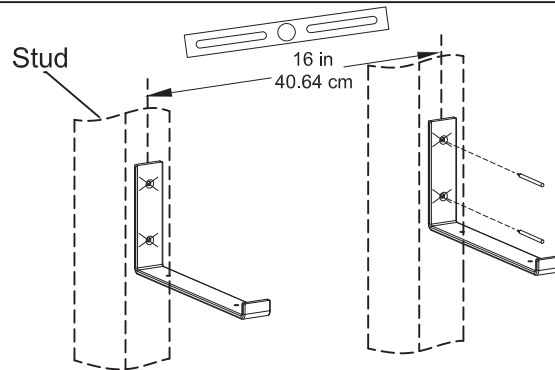

2


pre-drill 1/2" deep

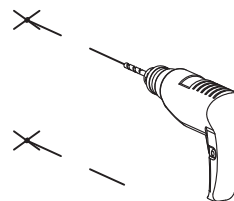

If using anchor, the hole should not be less than 1-1/4" deep


3-1

For drywall or wood

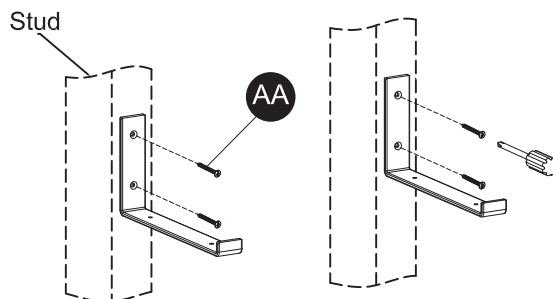


3-2

For Concrete Wall

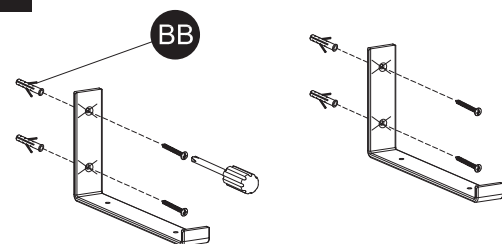

4

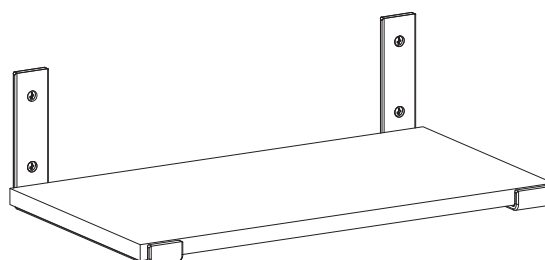

Recommended :

Board size: 300 x 15 x 458 mm
(11.81" x 0.59" x 18")

screw size: F/H #8 x 5/8" x 2