


ASSEMBLY INSTRUCTIONS




ITEM CODE: WF318949 - WF318950

If you have any questions, please feel free
to contact us.



Email: lowesteam@aminalife.com

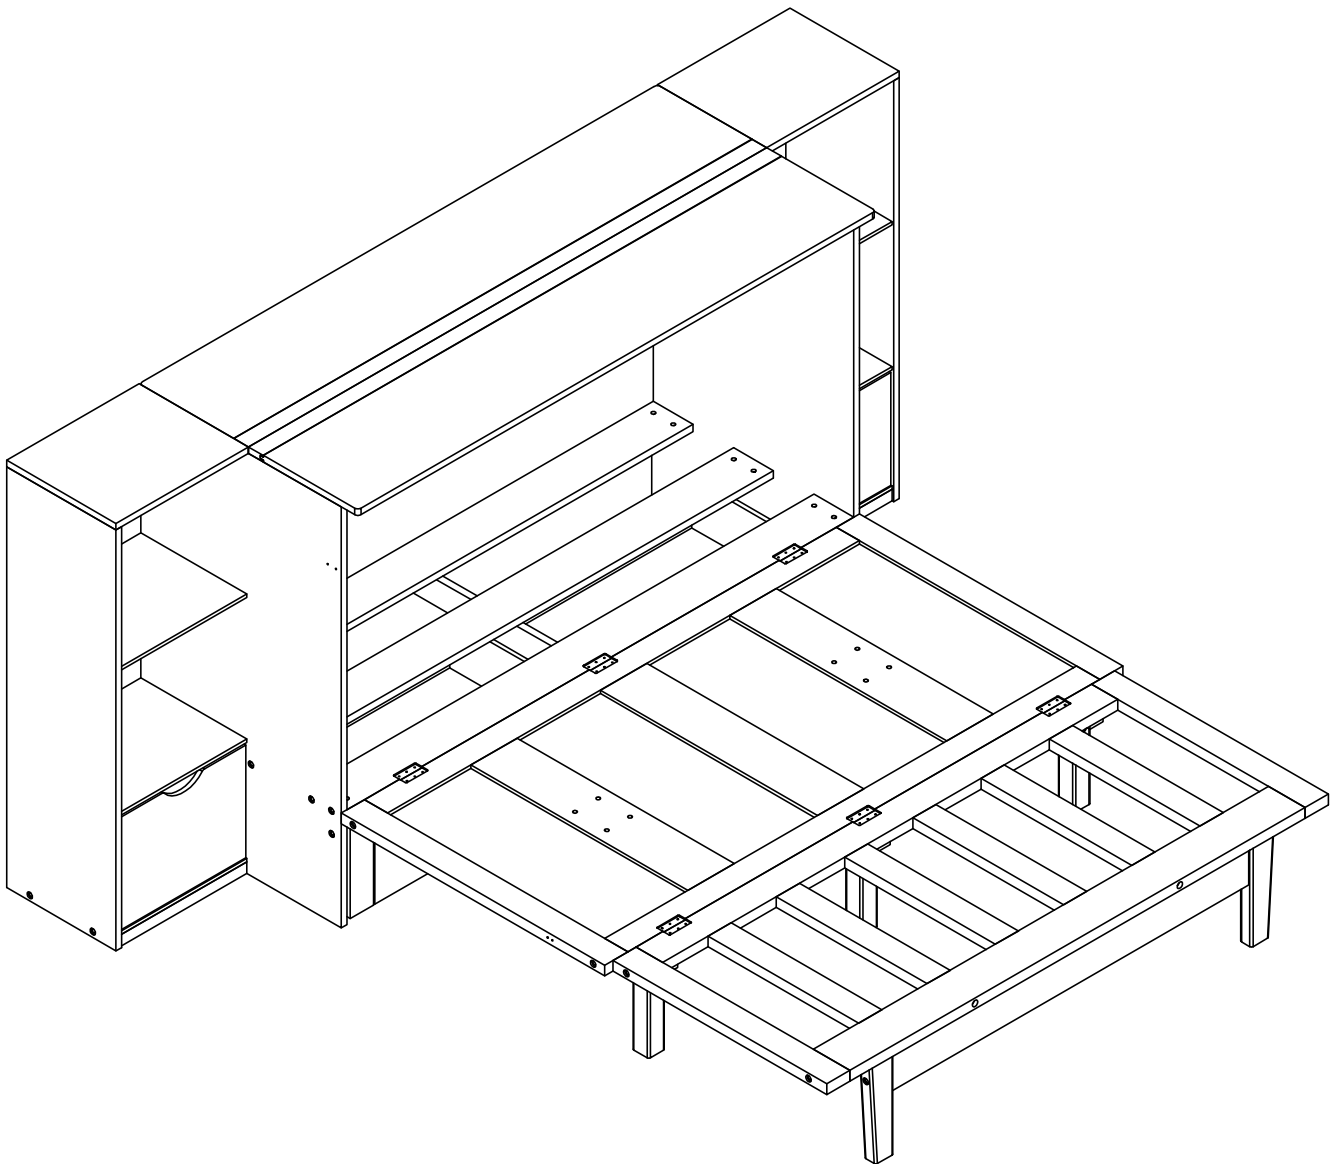


















DETAIL VIEW

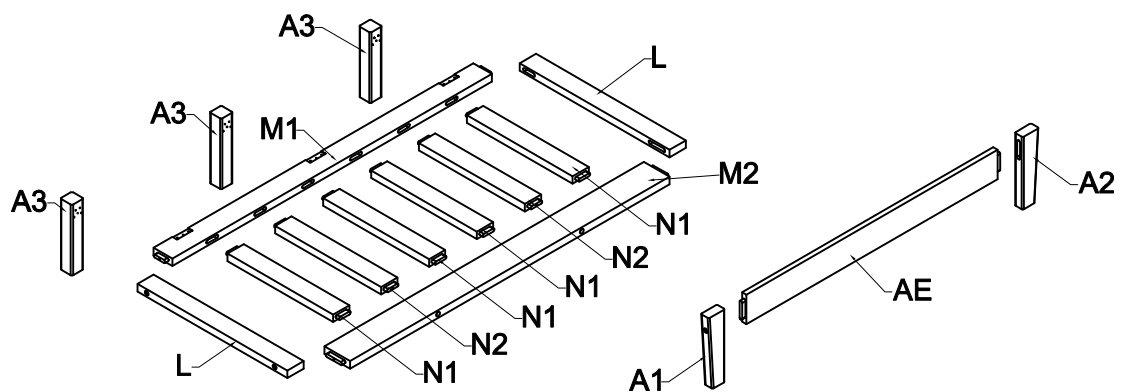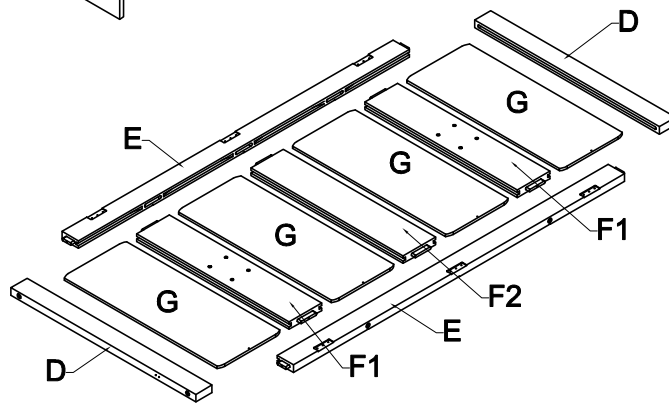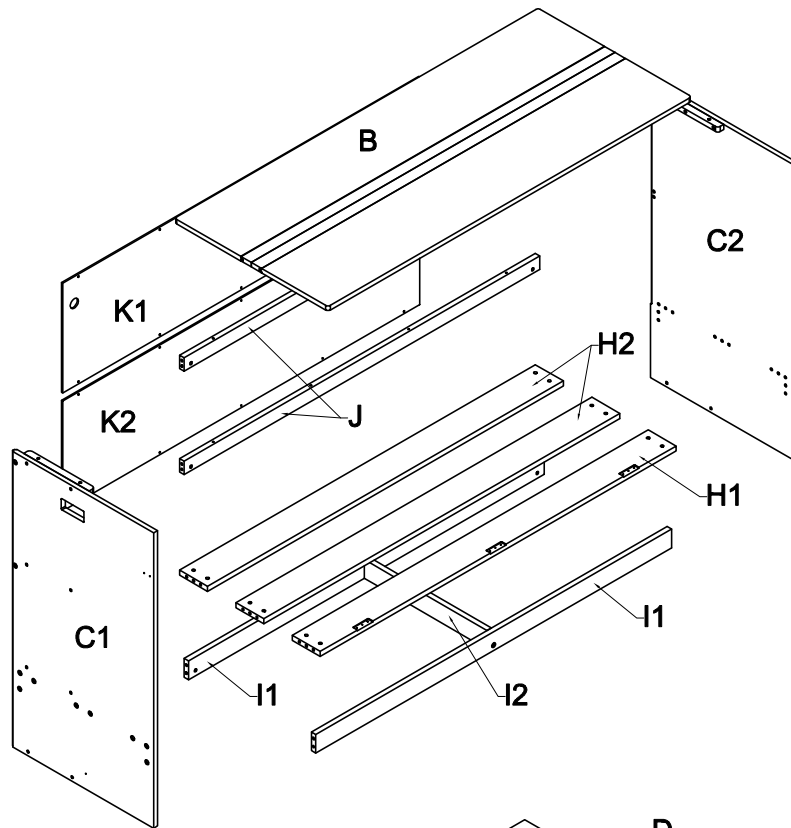













DETAIL VIEW

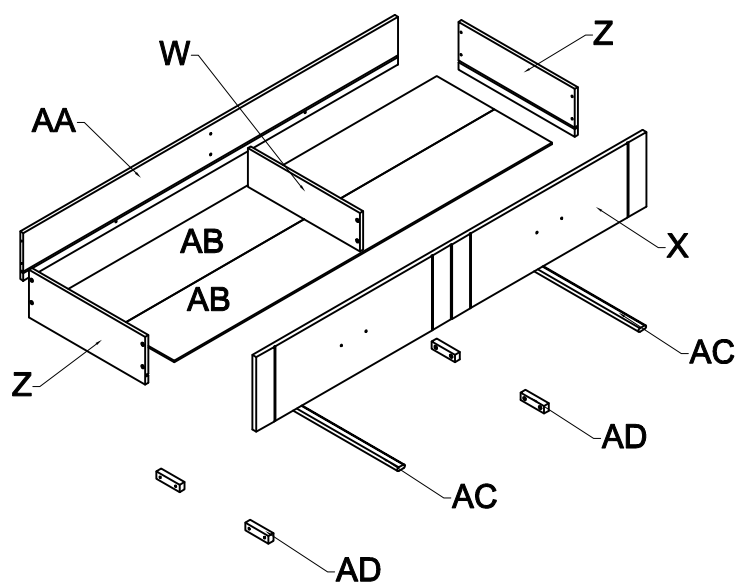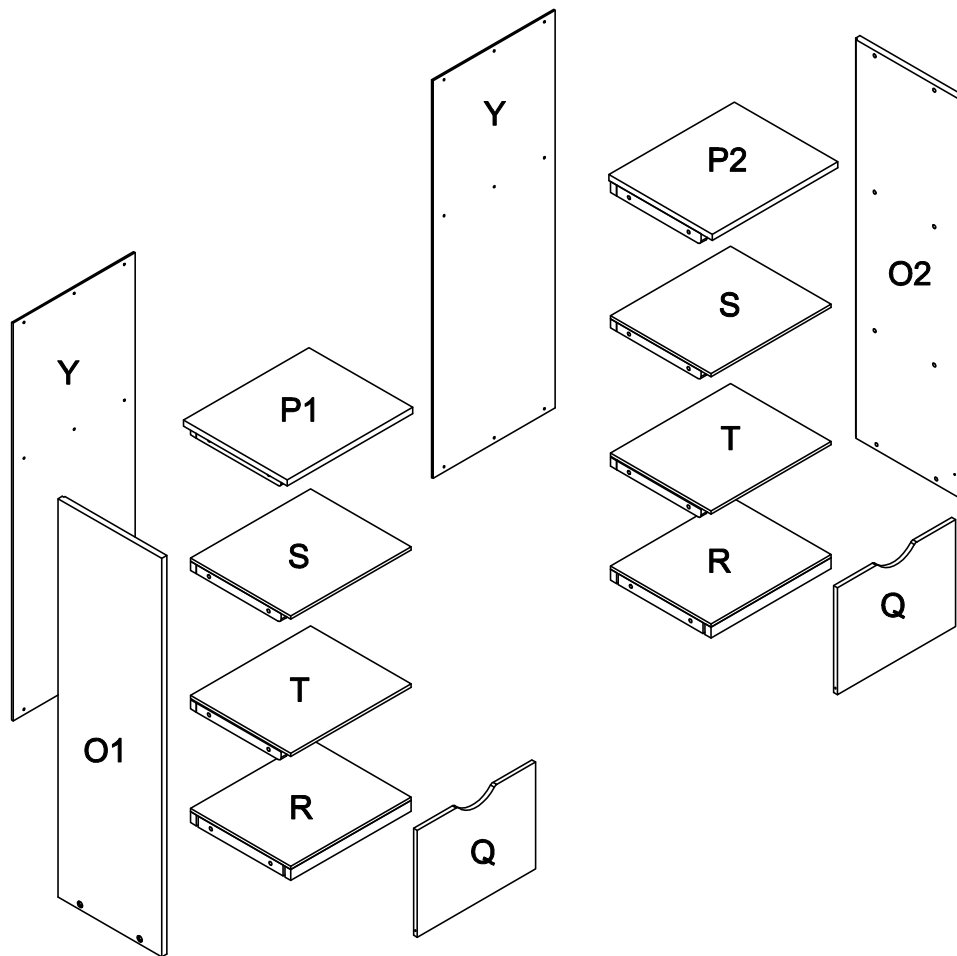

BOX 1: WF318949

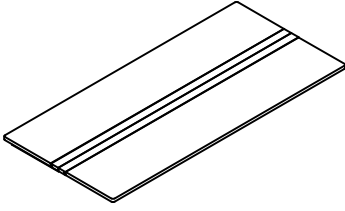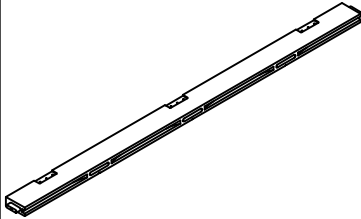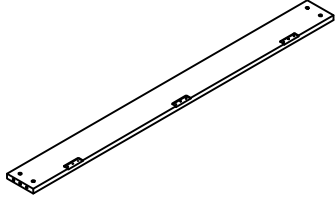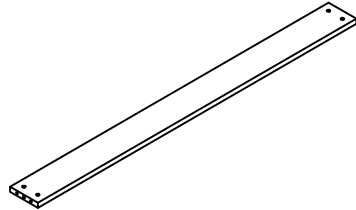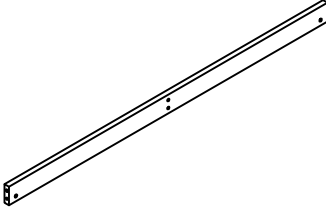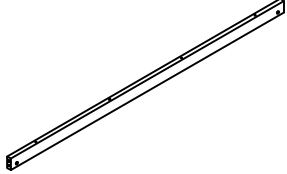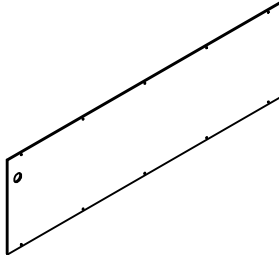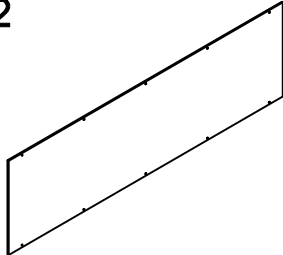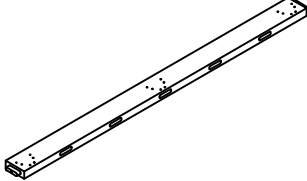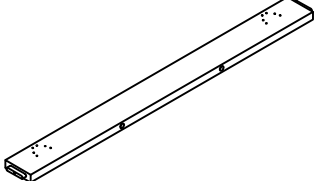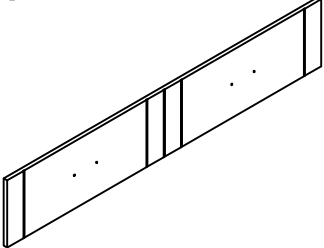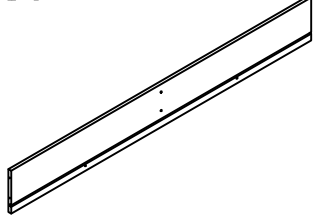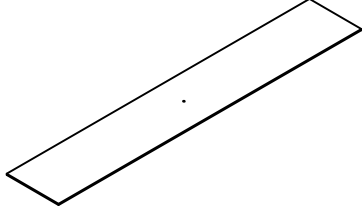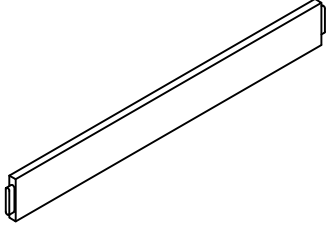
B  Top panel (1pc)	E  Horizontal rail (2pcs)	H1  Bottom panel (1pc)	H2  Bottom panel (2pcs)
I1  Support - bottom (2pcs)	J  Back rail (2pcs)	K1  Back panel (1pc)	K2  Back panel (1pc)
M1  Horizontal rail (1pc)	M2  Horizontal rail (1pc)	O1  Side frame - left (1pc)	O2  Side frame - right (1pc)
X  Front of drawer (1pc)	AA  Back of drawer (1pc)	AB  Board that drawer (2pcs)	AC  Support drawer (2pcs)
AE  Support leg- top (1pc)			

BOX 2: WF318950

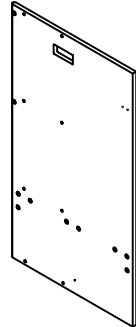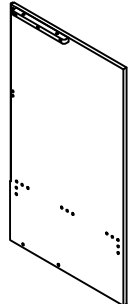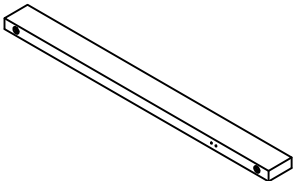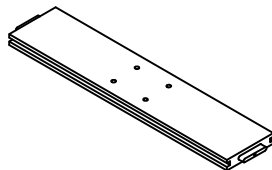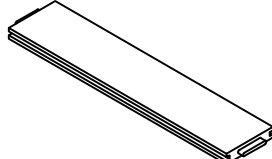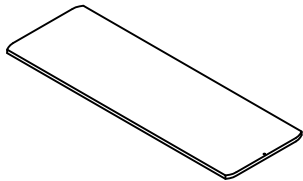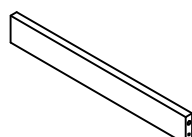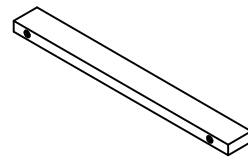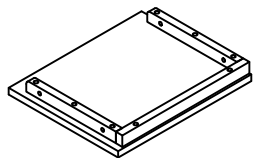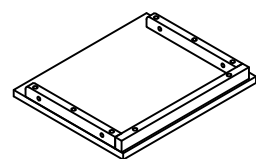A1  Front leg - left (1pc)	A2  Front leg - right (1pc)	A3  Extra leg (3pcs)	C1  Side frame - left (1pc)
C2  Side frame - right (1pc)	D  Vertical side rail (2pcs)	F1  Vertical bar (2pcs)	F2  Vertical bar (1pc)
G  Front panel (4pcs)	I2  Support bottom (1pc)	L  Vertical side rail (2pcs)	N1  Vertical bar (4pcs)
N2  Vertical bar (2pcs)	P1  Cabinet face (1pc)	P2  Cabinet face (1pc)	


BOX 2: WF318950

Q

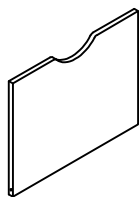


Door (2pcs)

R

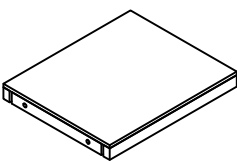


Cabinet shelves (2pcs)

T

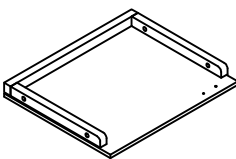


Cabinet shelves (2pcs)

S

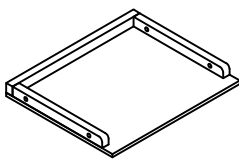

Cabinet shelves (2pcs)

W

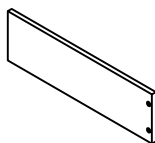


Middle divider (1pc)

Y




Back panel (2pcs)

Z

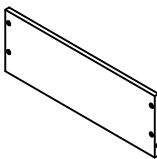









Hip pull (2pcs)

AD




Wheel support (4pcs)

HARDWARE LIST: WF318950

1  Wood dowel Ø8 * 30 - 16pcs	2  Horizontal - Hold bolts Ø1/4" - 20pcs	3  Hexagonal bolts catch wood Ø1/4" * 50 - 2pcs	4  Hex - Head bolts Ø1/4" * 60 - 20pcs
5  Wood crews M4 * 45 - 4pcs	6  Wood crews M4 * 25 - 22pcs	7  Round wood crews M3.5 * 20 - 55pcs	8  Round wood crews M3.5 * 15 - 56pcs
9  Power outlet - 1pc	10  Wood crews M3.5 * 12 - 4pcs	11  Mending plate - 2pcs	12  Magnet - 2pcs
13  Hex - Head bolts Ø1/4" * 30 - 36pcs	14  Steel dowel Ø3 * 17 - 4pcs	15  Hexagonal bolts catch wood Ø1/4" * 90 - 16pcs	16  Hexagonal bolts catch wood Ø1/4" * 120 - 2pcs
17  Folded patt - 5pcs	18  Round crews Ø5/32" * 25 - 12pcs	19  Handle - 6pcs	20  Wood crews M3.5 * 15 - 44pcs
21  Hinge - 6pcs	22  Duckbill lock A - 2pcs	23  Duckbill lock B - 2pcs	24  Wheel 4pcs
25  Allen key K4 - 2pcs	 Assembly Tools Required (Not Included)		

STEP 1

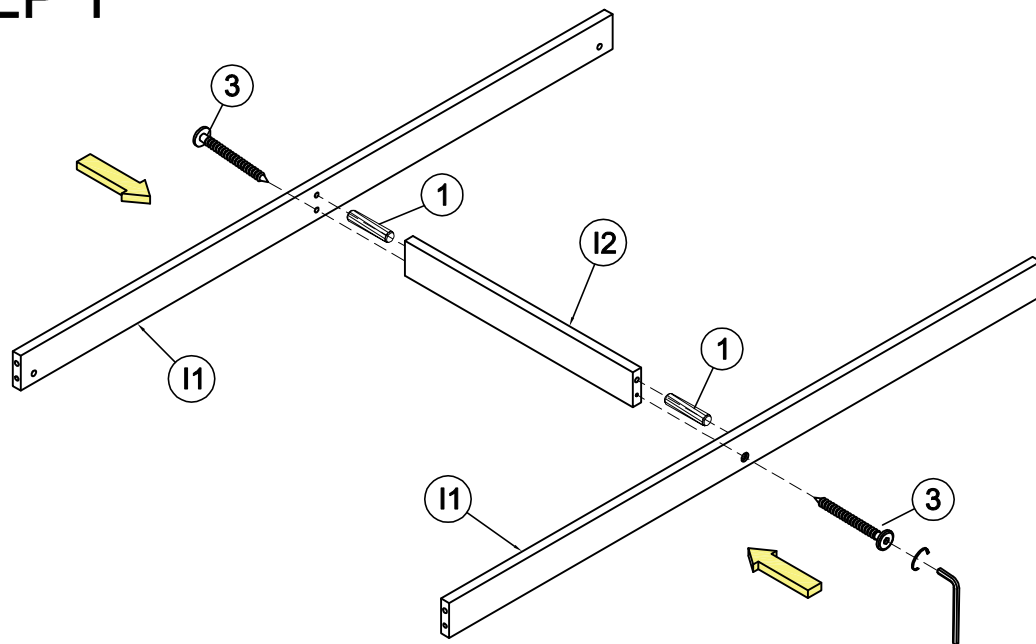

1




Wood dowel
Ø8 * 30 - 2pcs

3



Hexagonal bolts catch wood
Ø1/4" * 50 - 2pcs

STEP 2

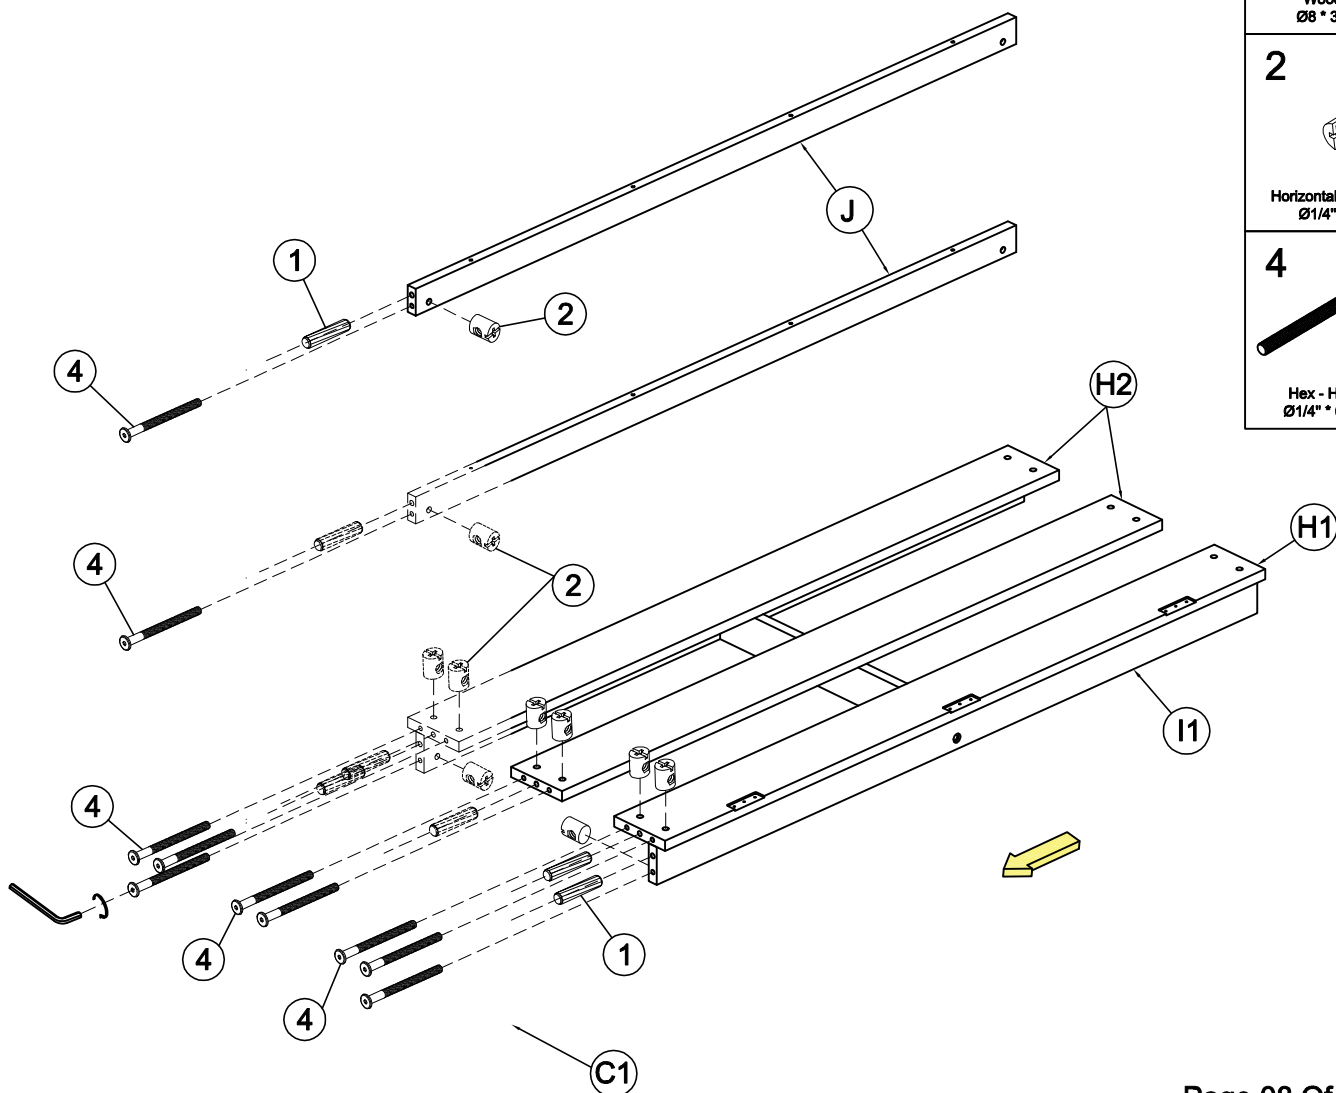

1



Wood dowel
Ø8 * 30 - 7pcs

2



Horizontal - Hold bolts
Ø1/4" - 10pcs

4



Hex - Head bolts
Ø1/4" * 60 - 10pcs

STEP 3

1



Wood dowel
Ø8 * 30 - 7pcs

2




Horizontal - Hold bolts
Ø1/4" - 10pcs


4



Hex - Head bolts
Ø1/4" * 60 - 10pcs

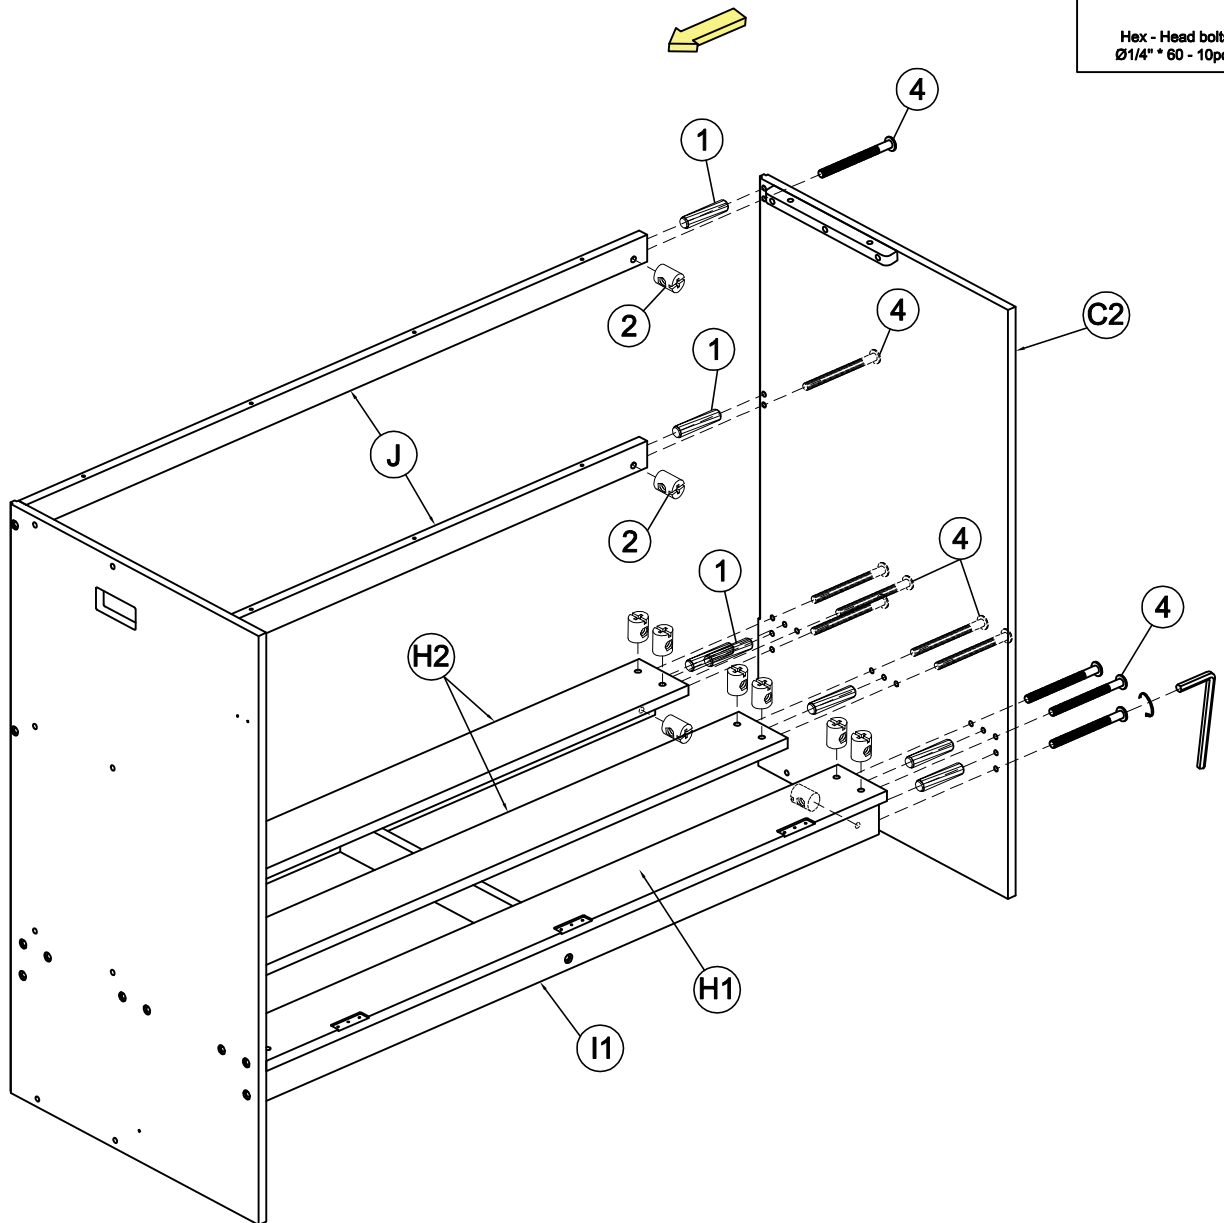

STEP 4

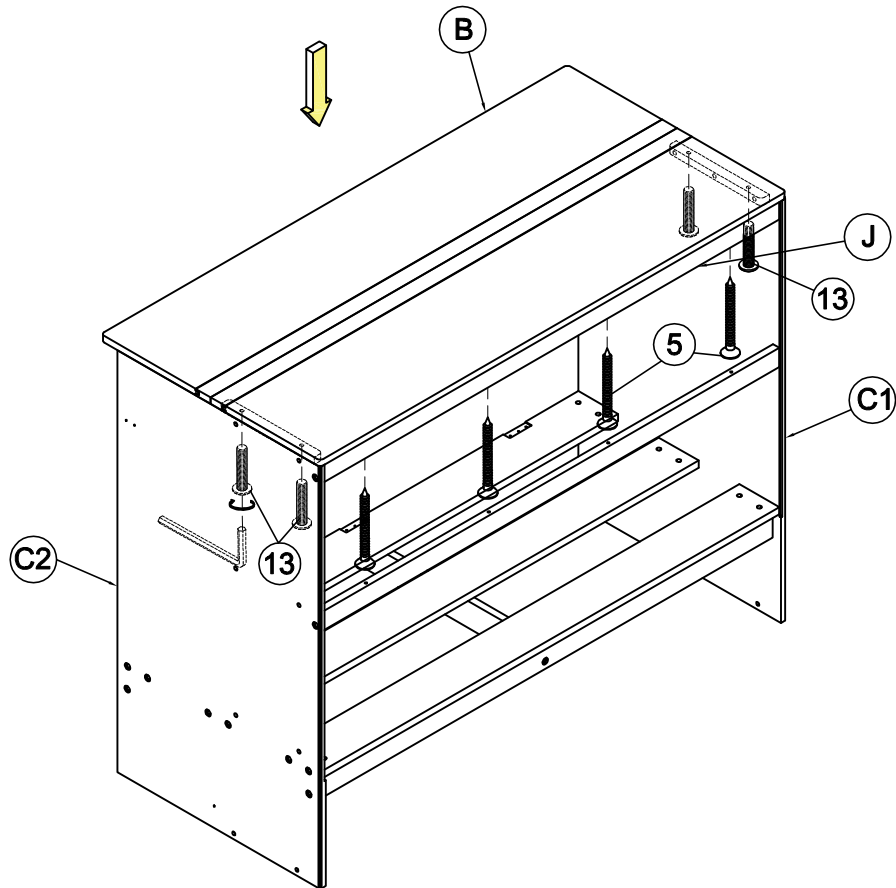

13




Hex - Head bolts
Ø1/4" * 30 - 4pcs

5



Wood screws
M4 * 45 - 4pcs

STEP 5

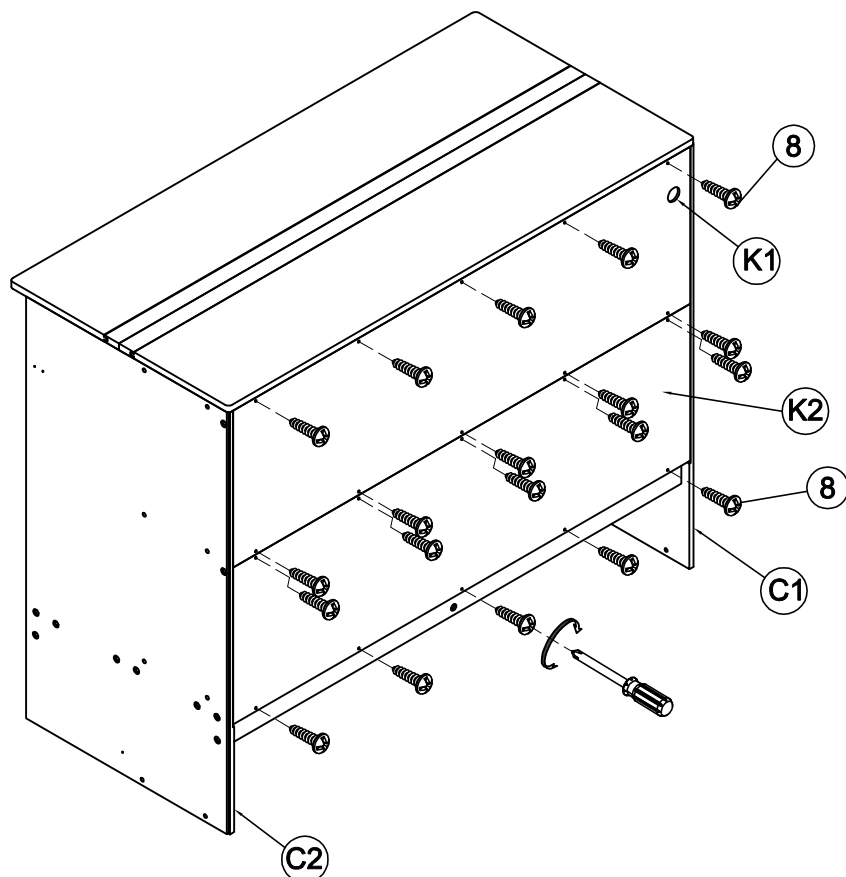

8



Round wood screws
M3.5 * 15 - 20pcs


STEP 6

8




Round wood crews
M3.5 * 15 - 4pcs

9



Power outlet - 1pc

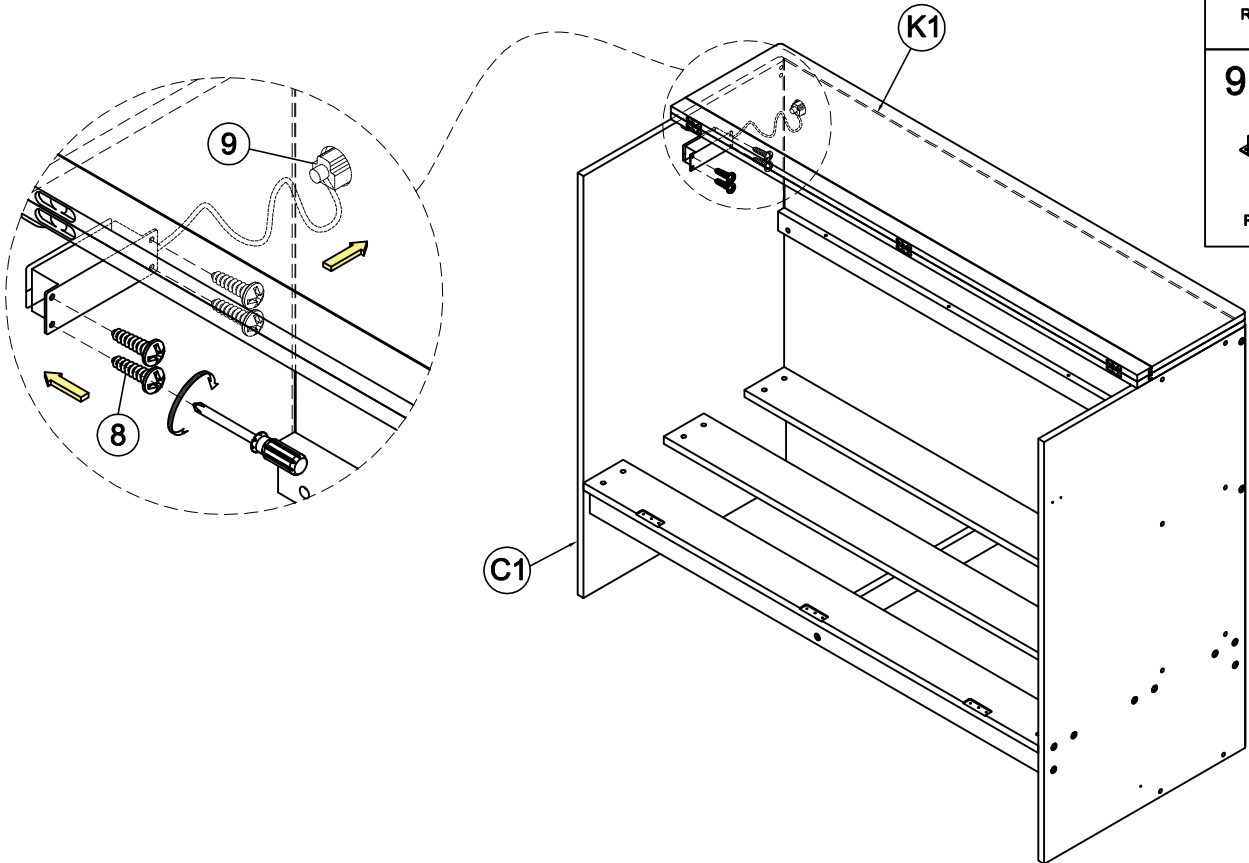

STEP 7

8




Round wood crews
M3.5 * 15 - 4pcs

10



Wood crews
M3.5 * 12 - 4pcs

11




Mending plate - 2pcs

12




Magnet - 2pcs

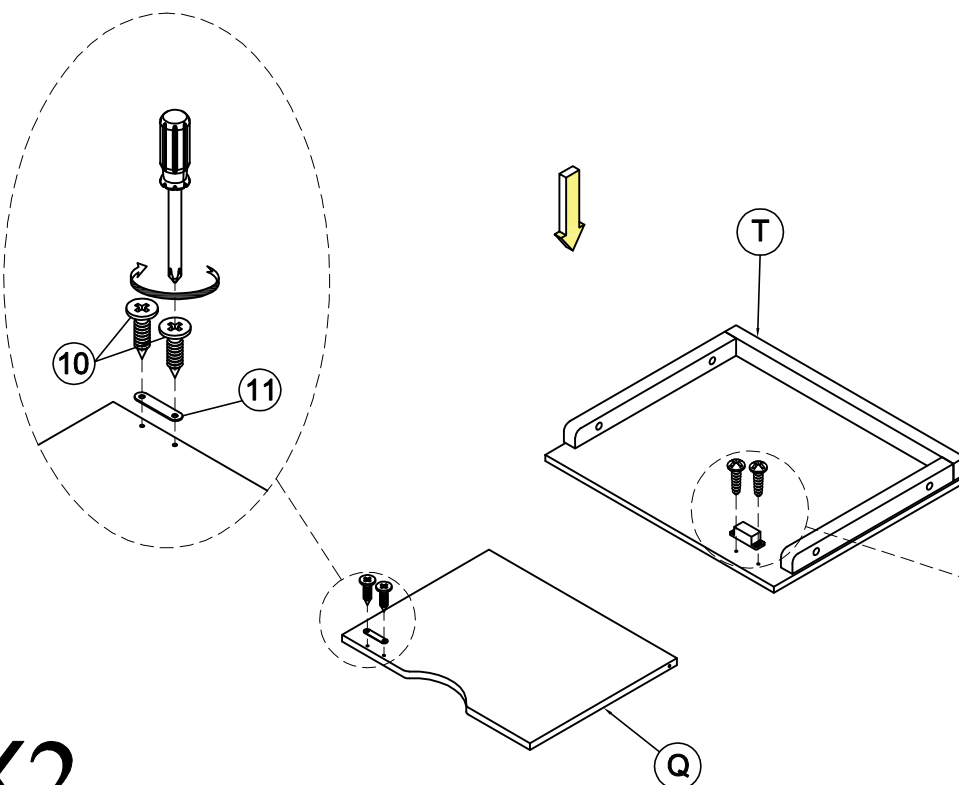

X2

STEP 8

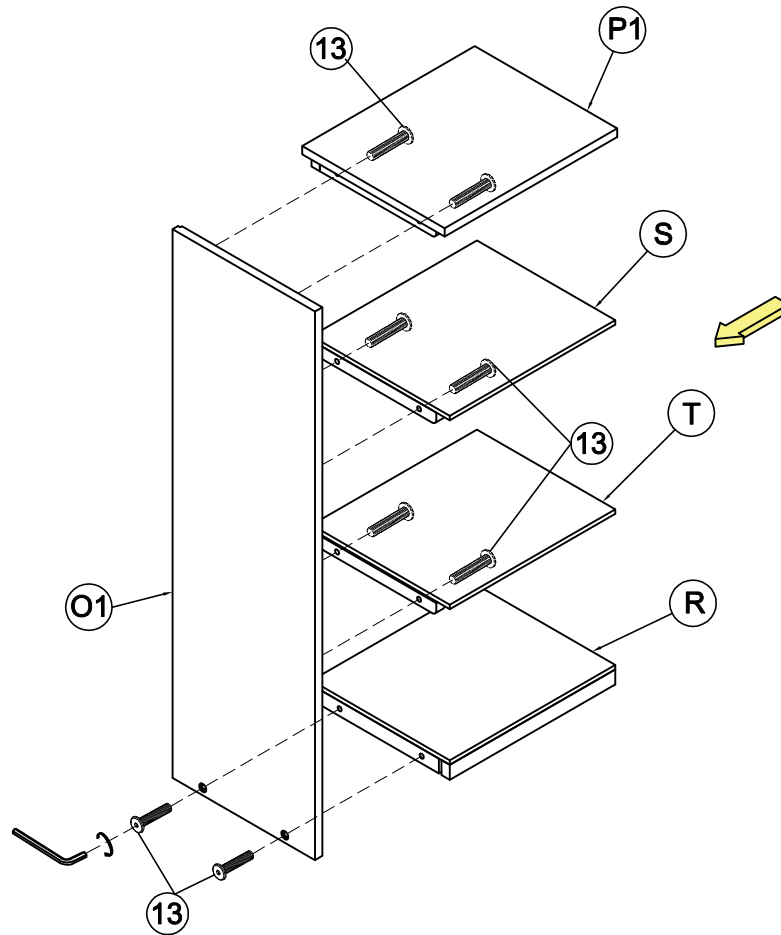


13



Hex - Head bolts
Ø1/4" * 30 - 8pcs

STEP 9

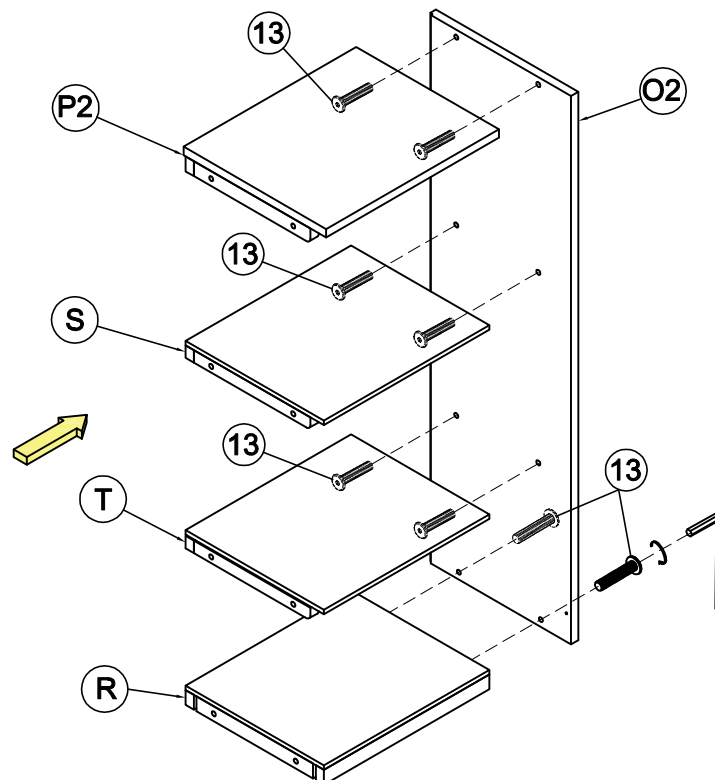


13



Hex - Head bolts
Ø1/4" * 30 - 8pcs

STEP 10

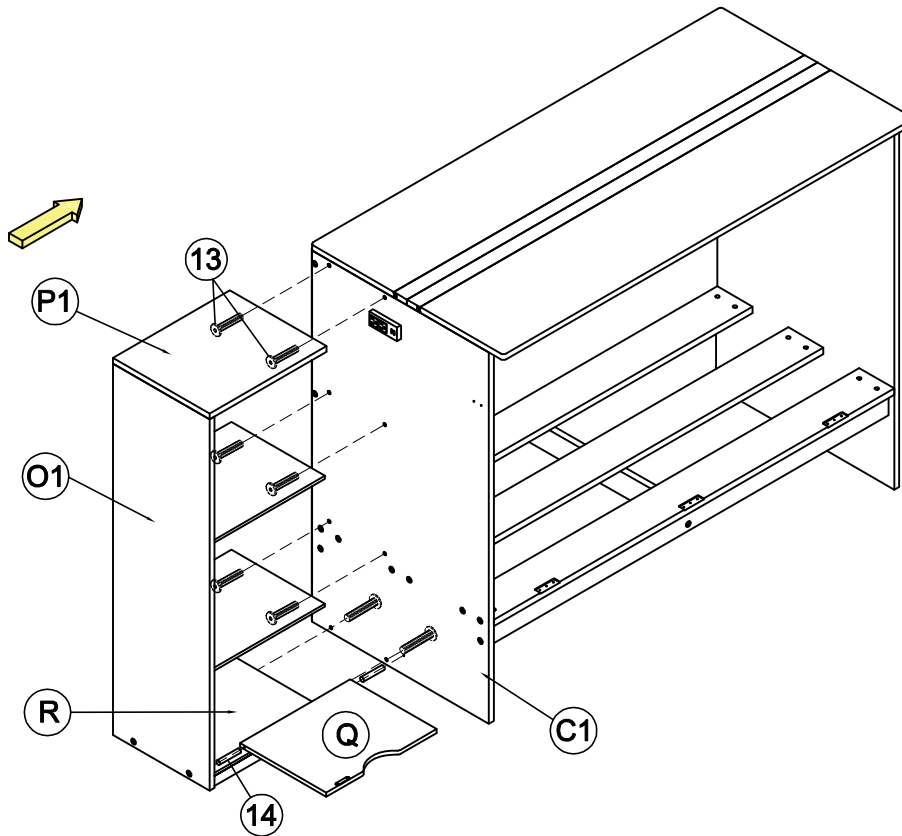

13




Hex - Head bolts
Ø1/4" * 30 - 8pcs

14



Steel dowel
Ø3 * 17 - 2pcs

STEP 11

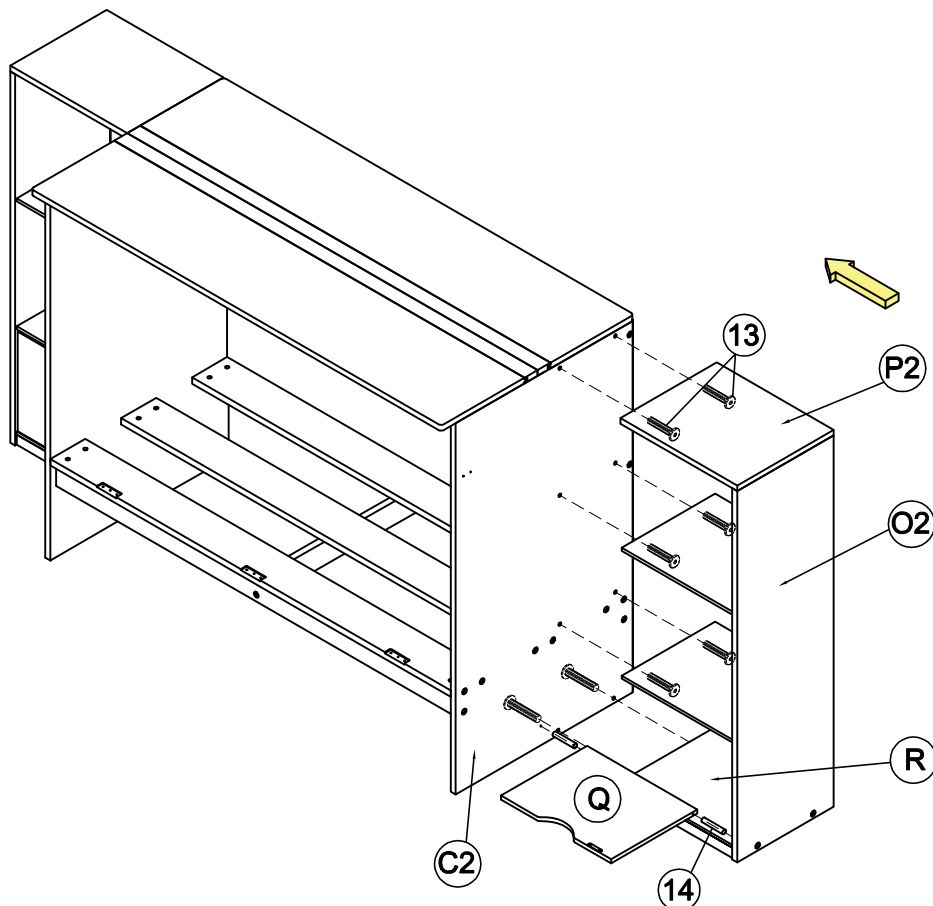

13




Hex - Head bolts
Ø1/4" * 30 - 8pcs

14



Steel dowel
Ø3 * 17 - 2pcs


STEP 12

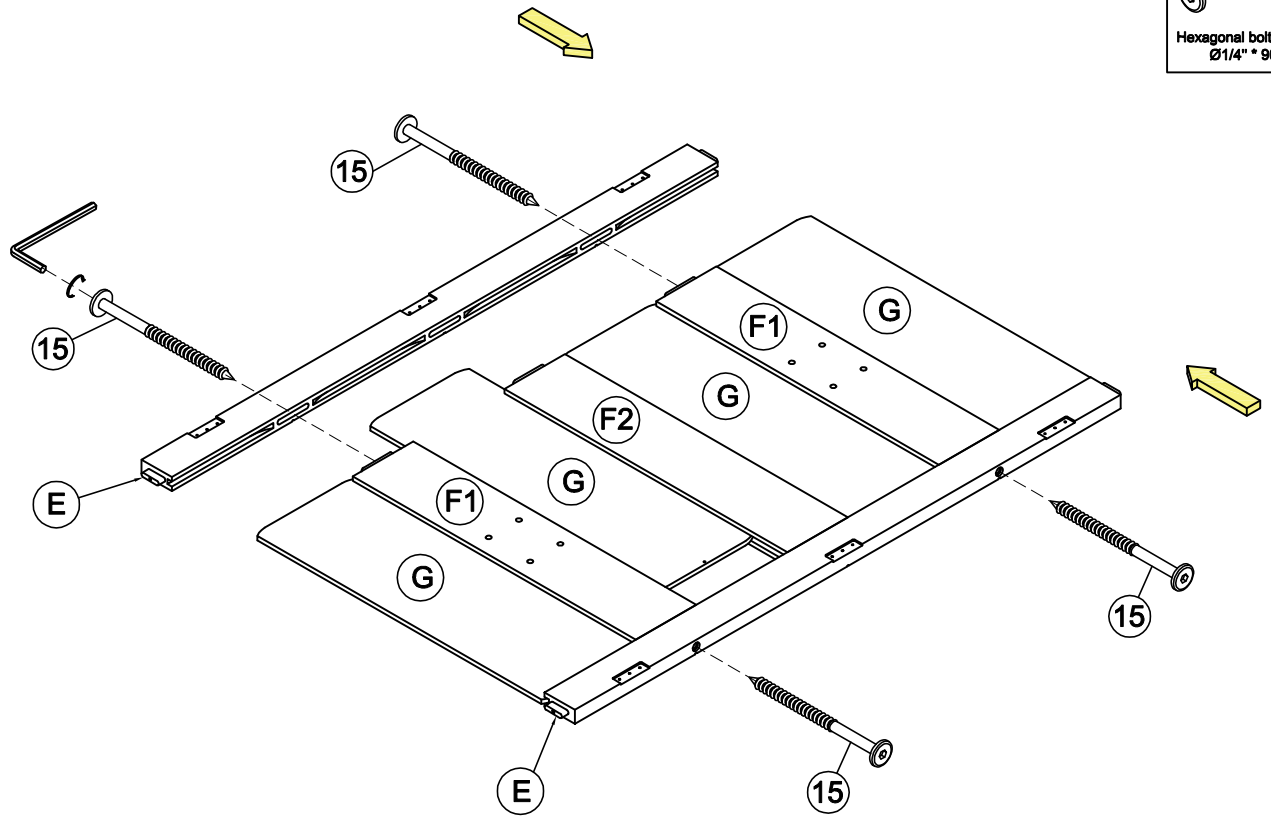

15

Hexagonal bolts catch wood
Ø1/4" * 90 - 4pcs


STEP 13

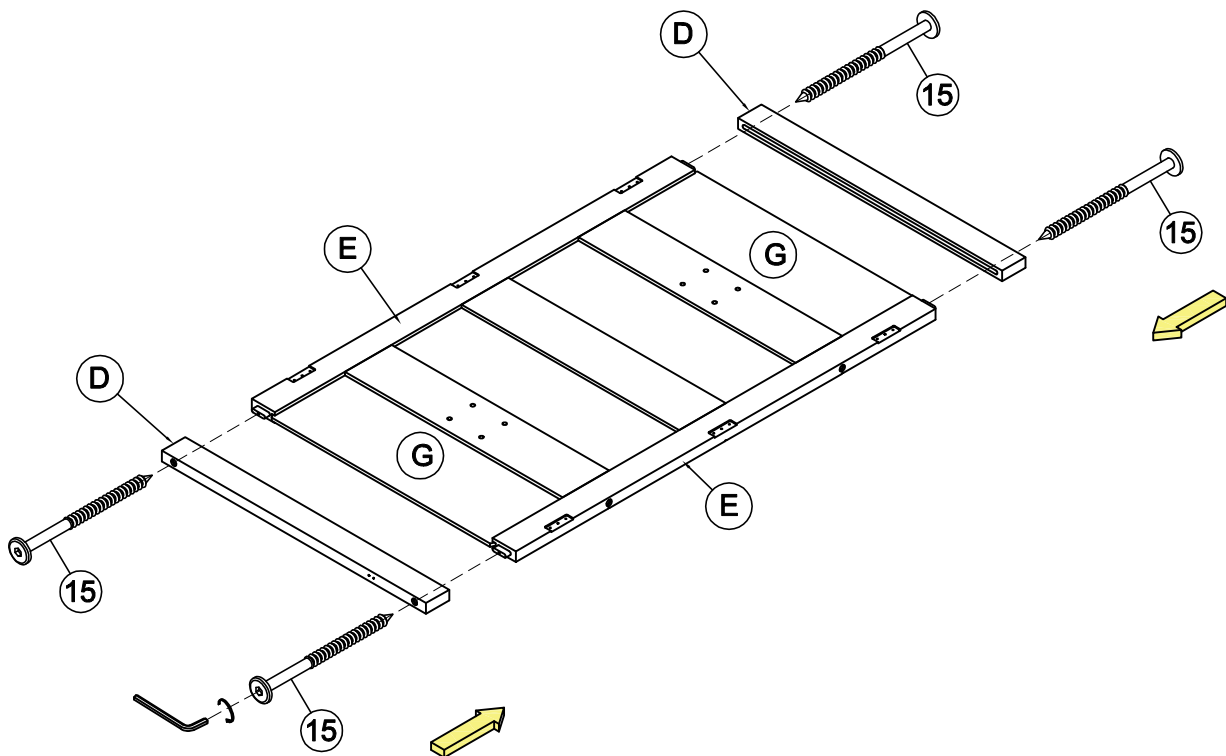

15

Hexagonal bolts catch wood
Ø1/4" * 90 - 4pcs

STEP 14

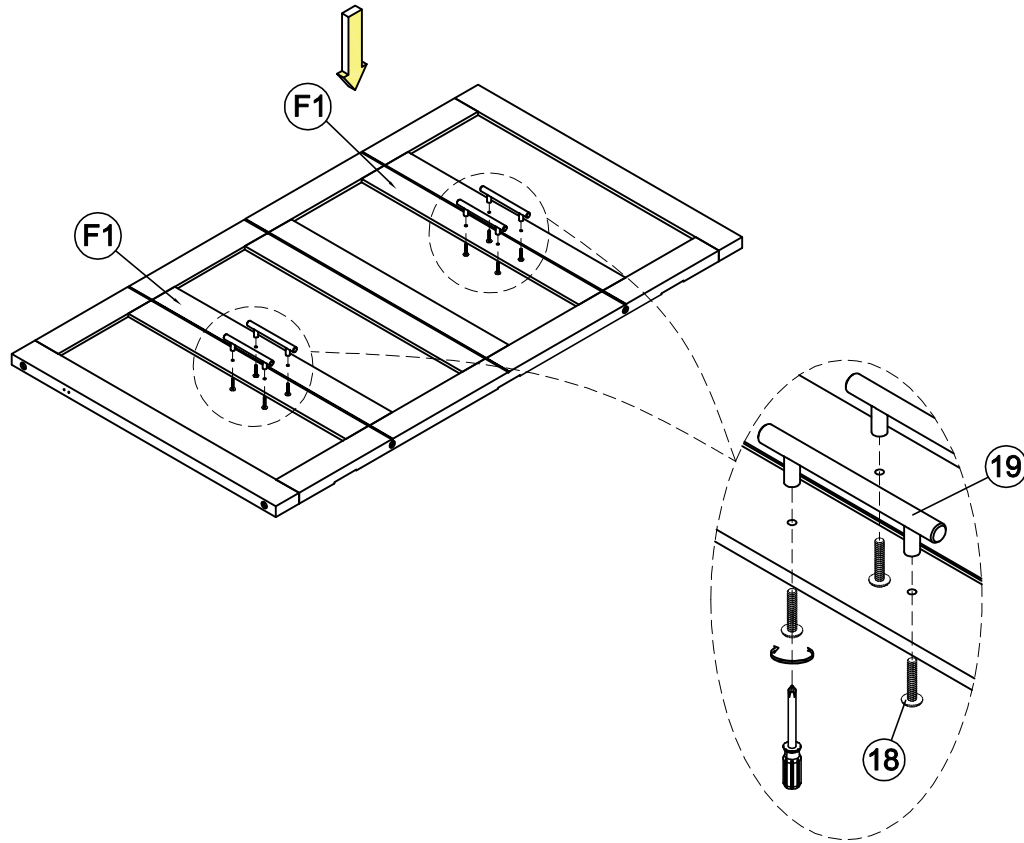


18




Round crews
Ø5/32" * 25 - 8pcs

19

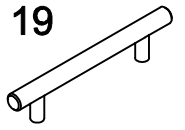


Handle - 4pcs

STEP 15

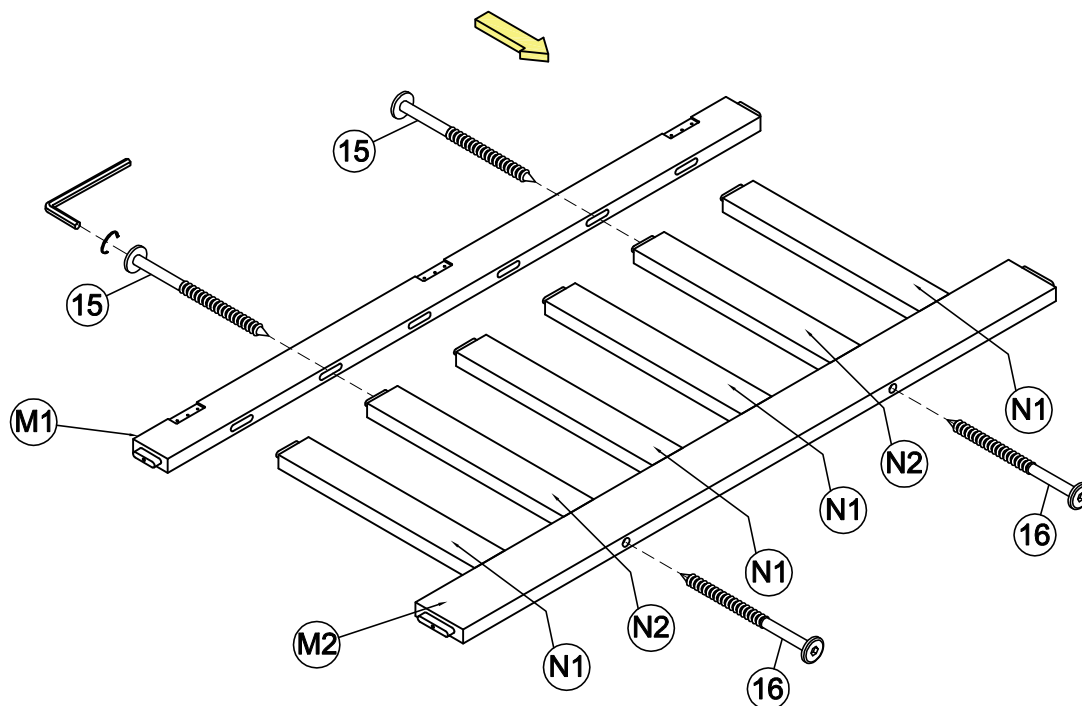

15

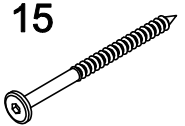


Hexagonal bolts catch wood
Ø1/4" * 90 - 2pcs

16



Hexagonal bolts catch wood
Ø1/4" * 120 - 2pcs


STEP 16

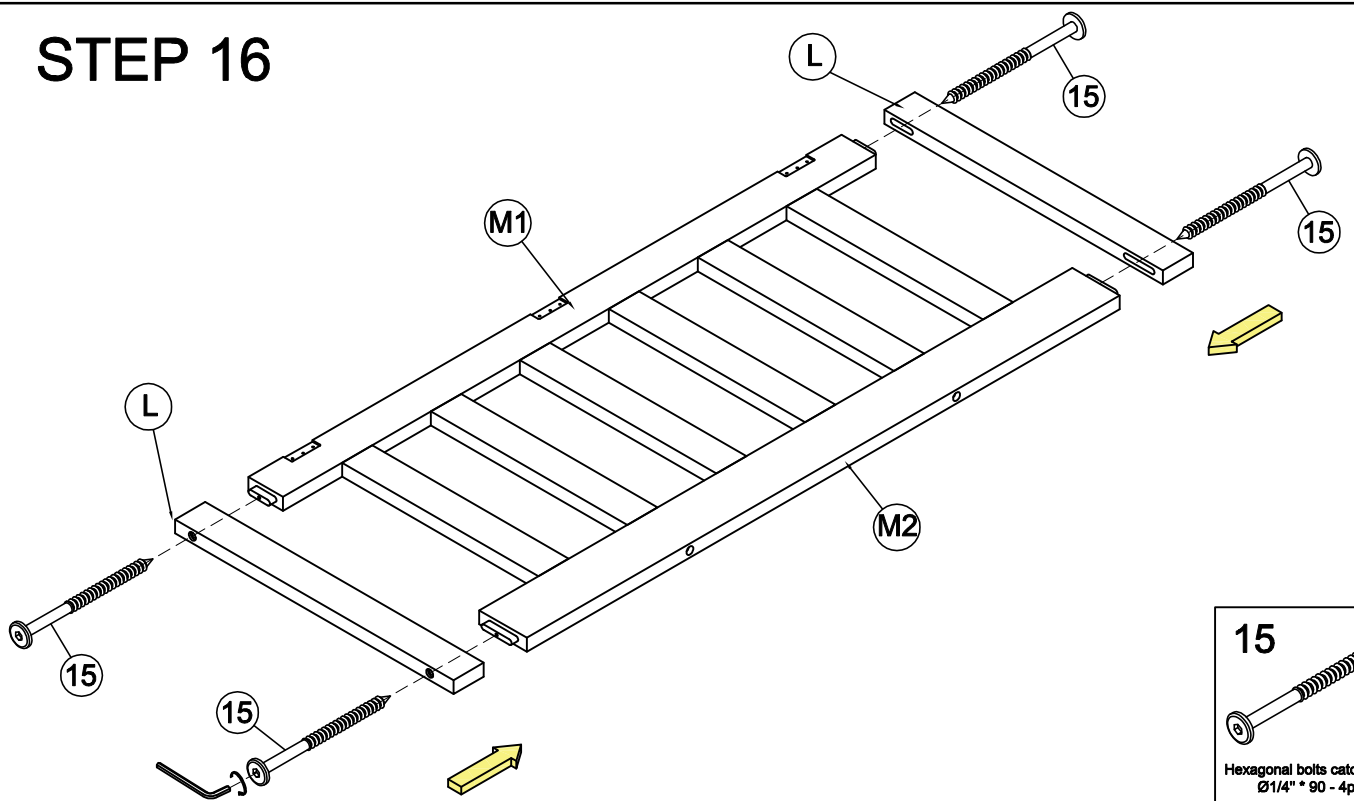

15

Hexagonal bolts catch wood
Ø1/4" * 90 - 4pcs


STEP 17

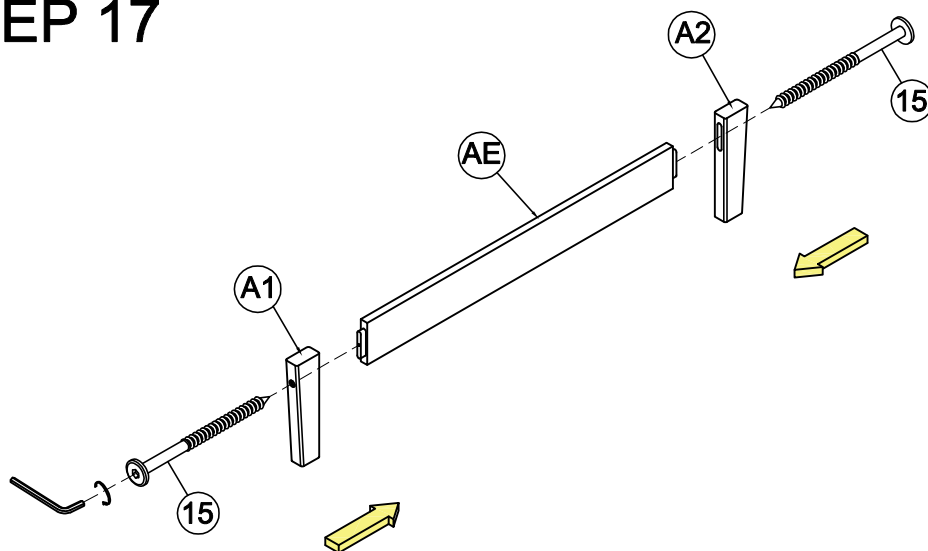

15

Hexagonal bolts catch wood
Ø1/4" * 90 - 2pcs

STEP 18

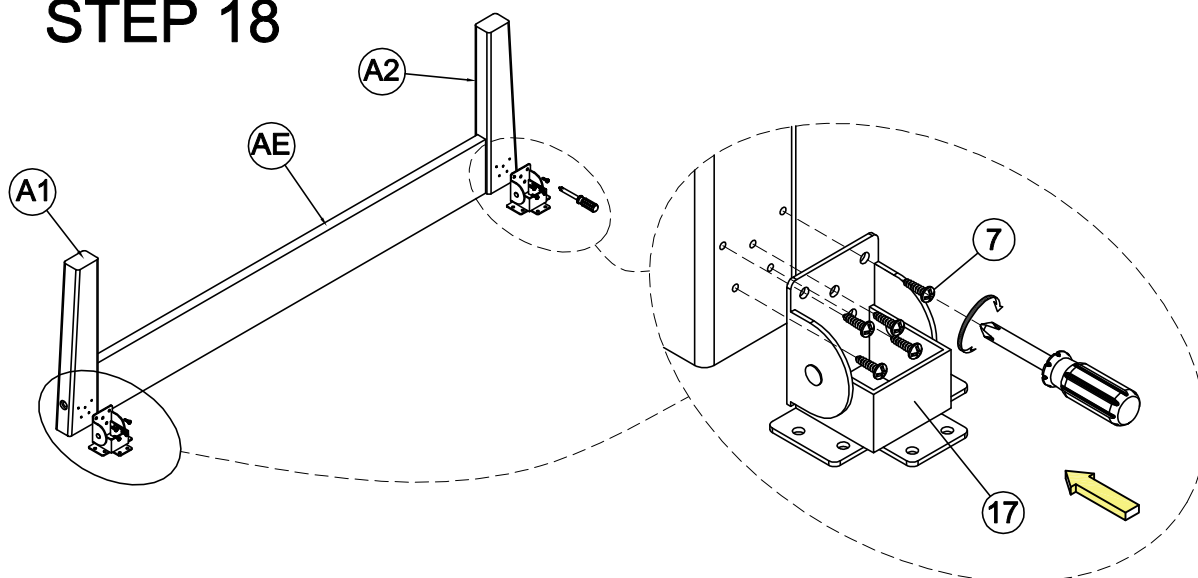

7

Round wood crews
M3.5 * 20 - 10pcs

17

Folded patt - 2pcs

STEP 19

7




Round wood crews
M3.5 * 20 - 15pcs

17



Folded patt - 3pcs

X3

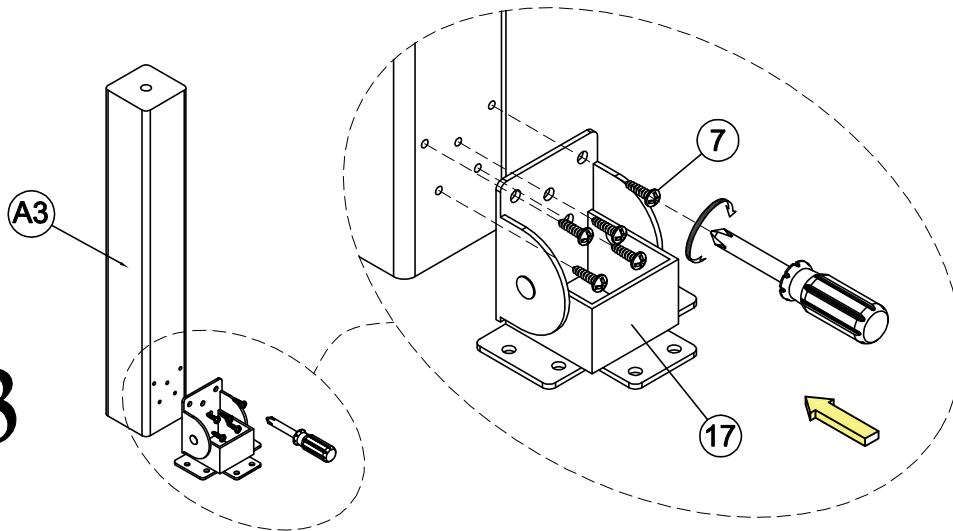


STEP 20


7




Round wood crews
M3.5 * 20 - 30pcs

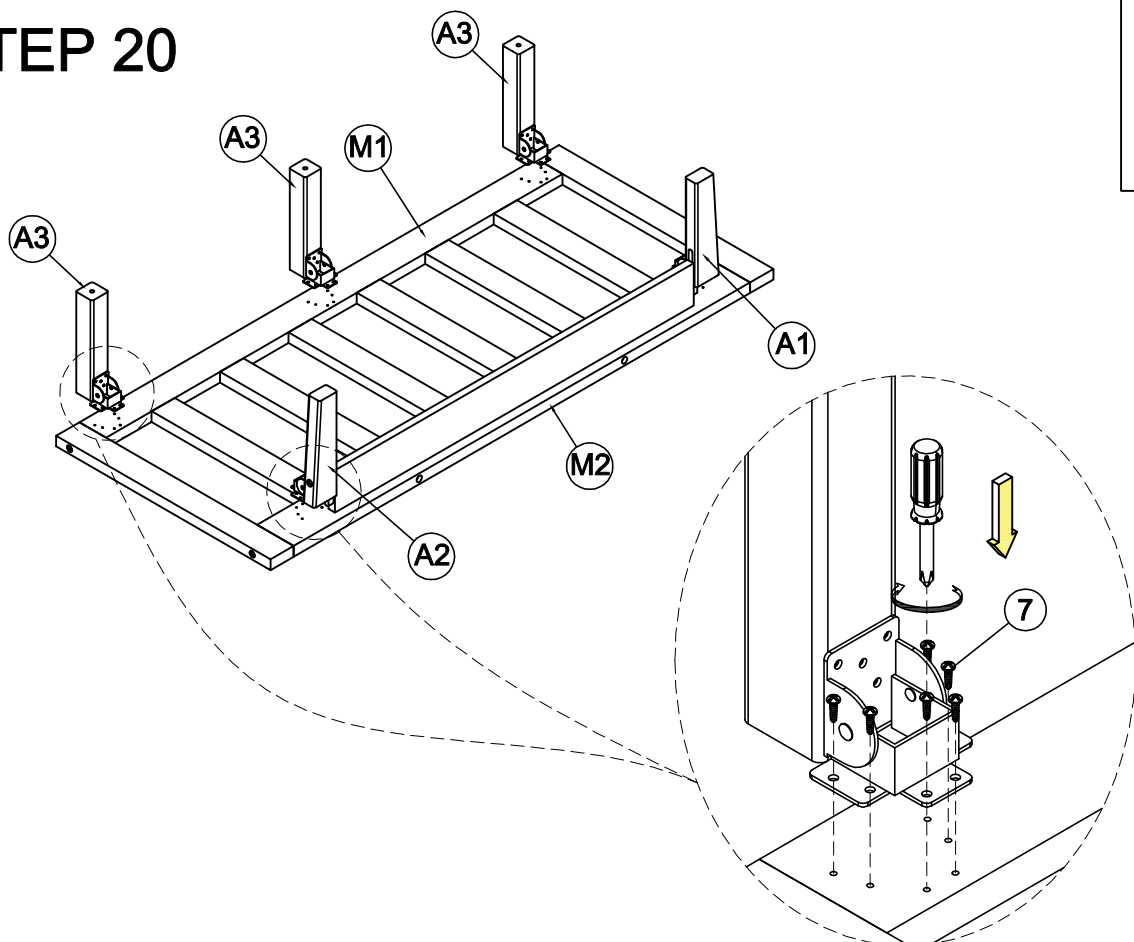

STEP 21

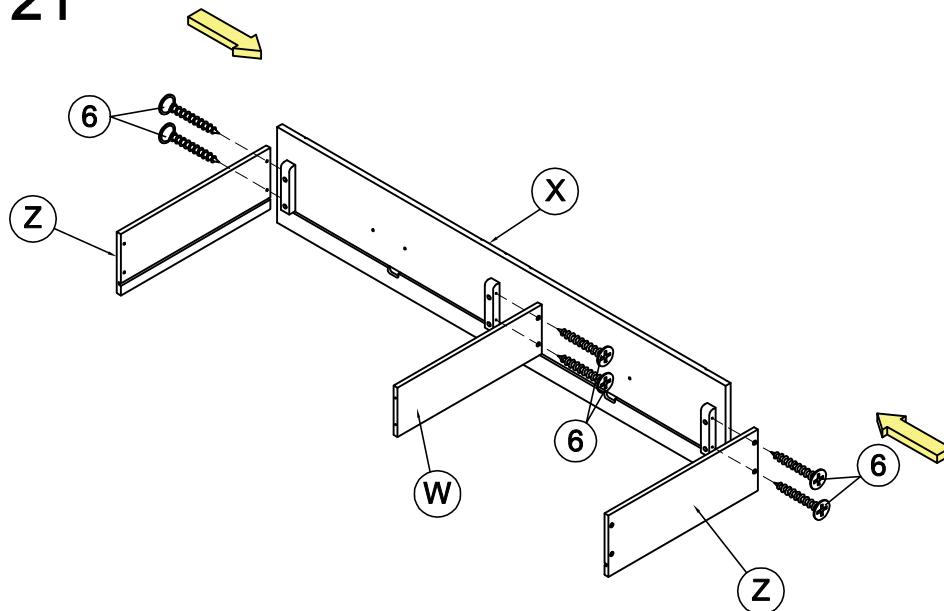


6




Wood screws
M4 * 25 - 6pcs


STEP 22

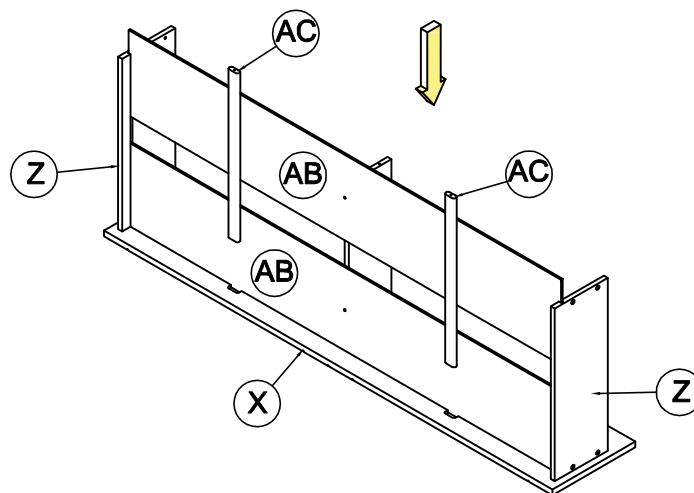

STEP 23

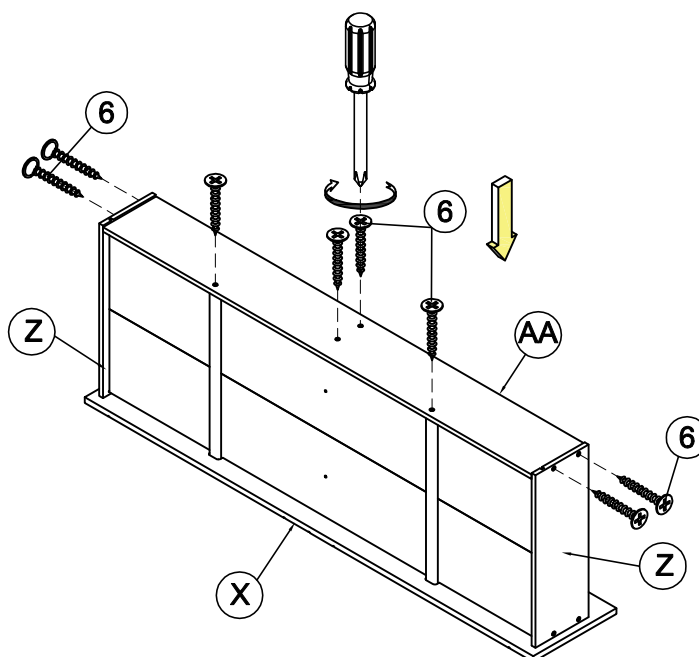


6



Wood screws
M4 * 25 - 8pcs

STEP 24

X4

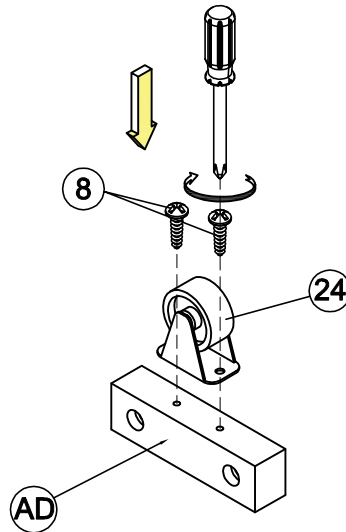

8



Round wood crews
M3.5 * 15 - 8pcs


24



Wheel
4pcs

STEP 25

6




Wood crews
M4 * 25 - 8pcs


8



Round wood crews
M3.5 * 15 - 2pcs

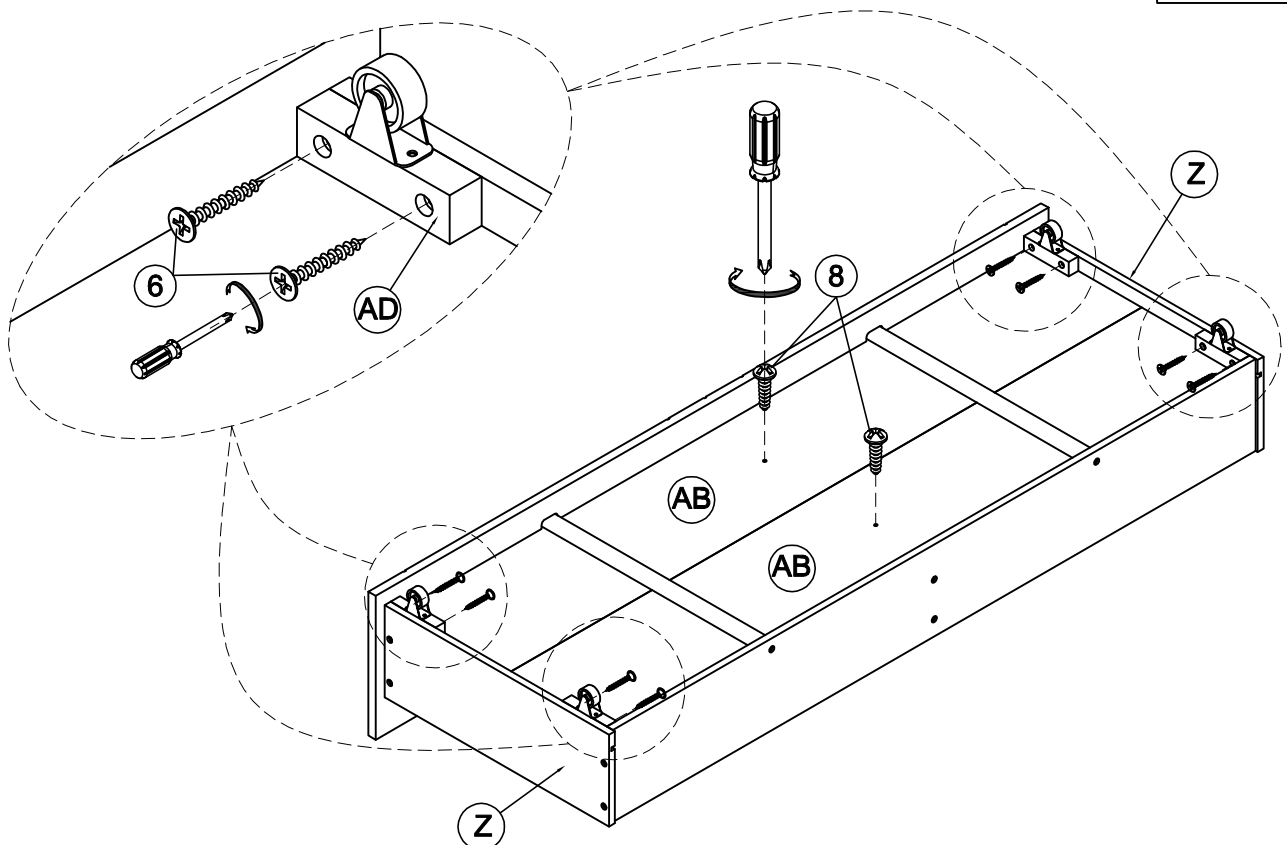

STEP 26

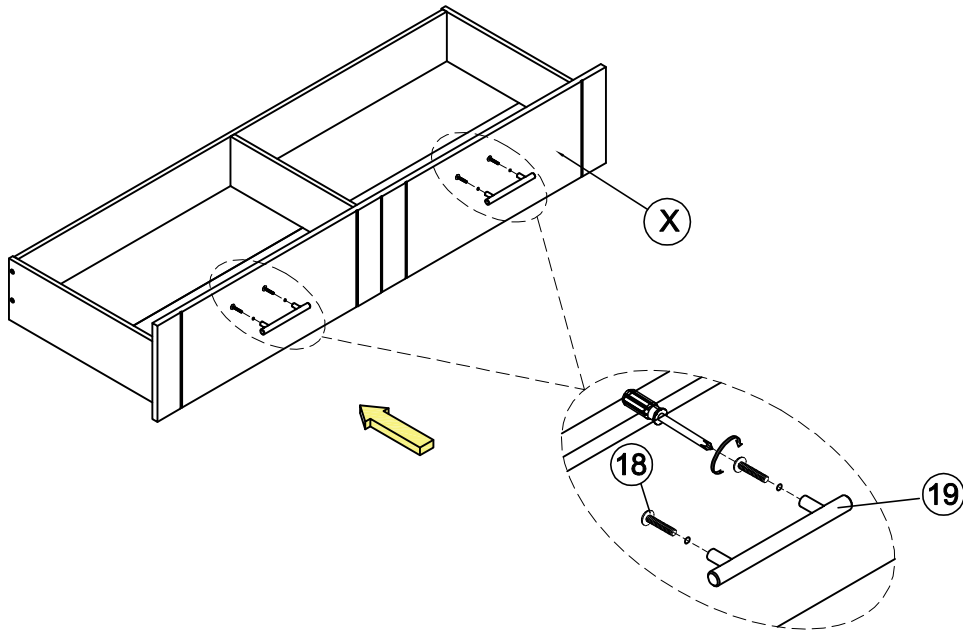


18




Round crews
Ø5/32" * 25 - 4pcs

19

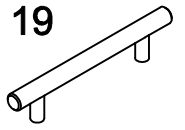


Handle - 2pcs

STEP 27

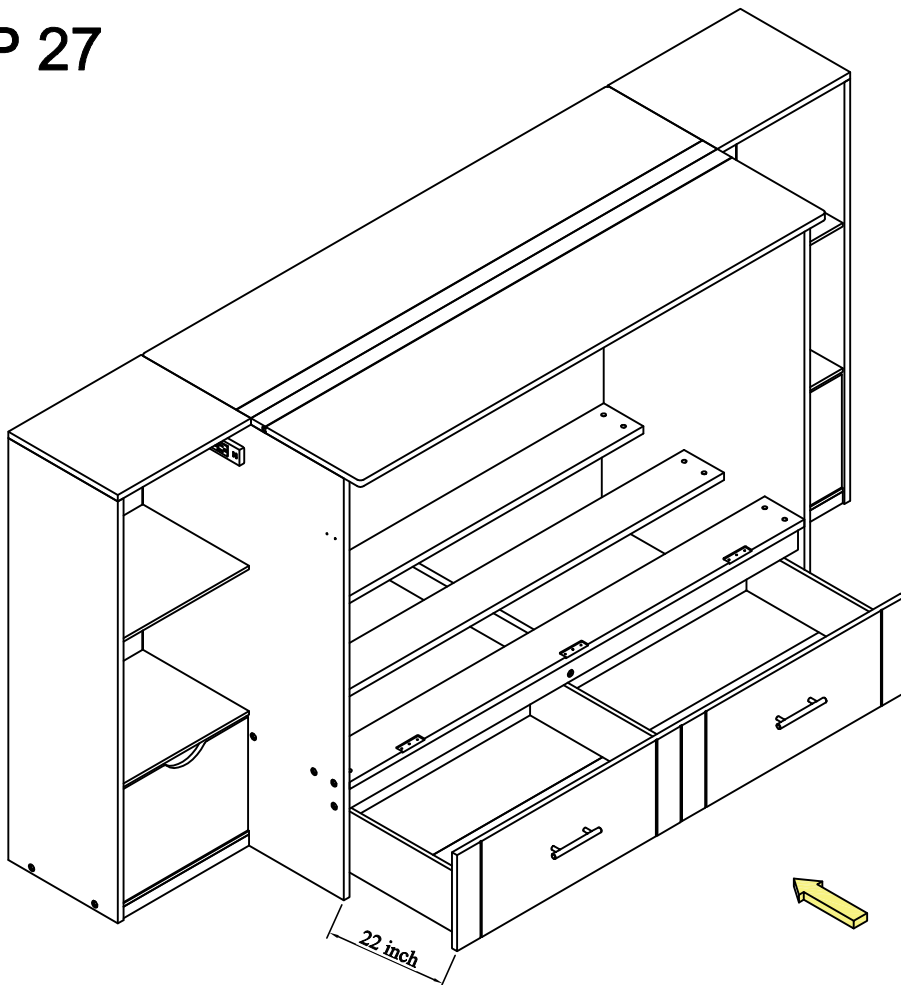


Push the pull - in drawer 22 inches from the hip edge

STEP 28

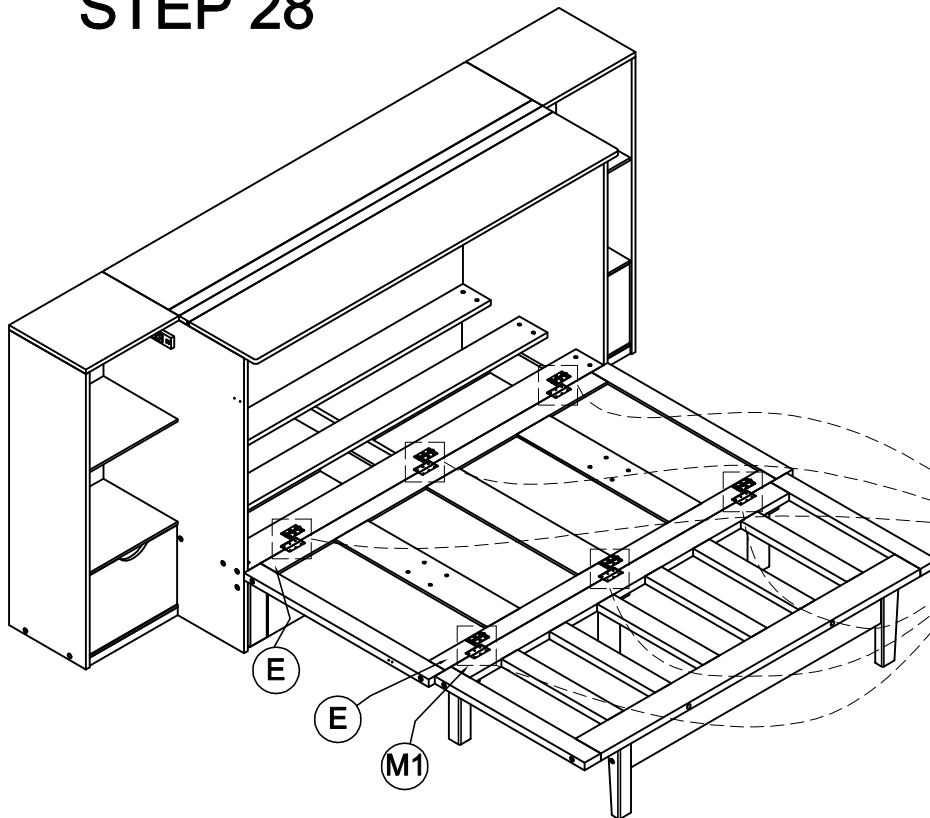

21




Hinge - 6pcs


20



Wood crews
M3.5 * 15 - 36pcs

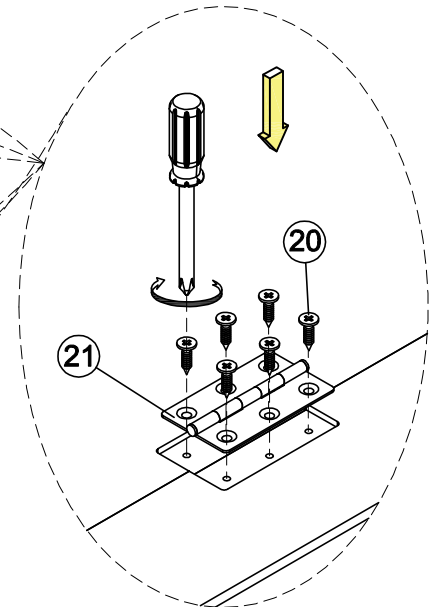

STEP 29

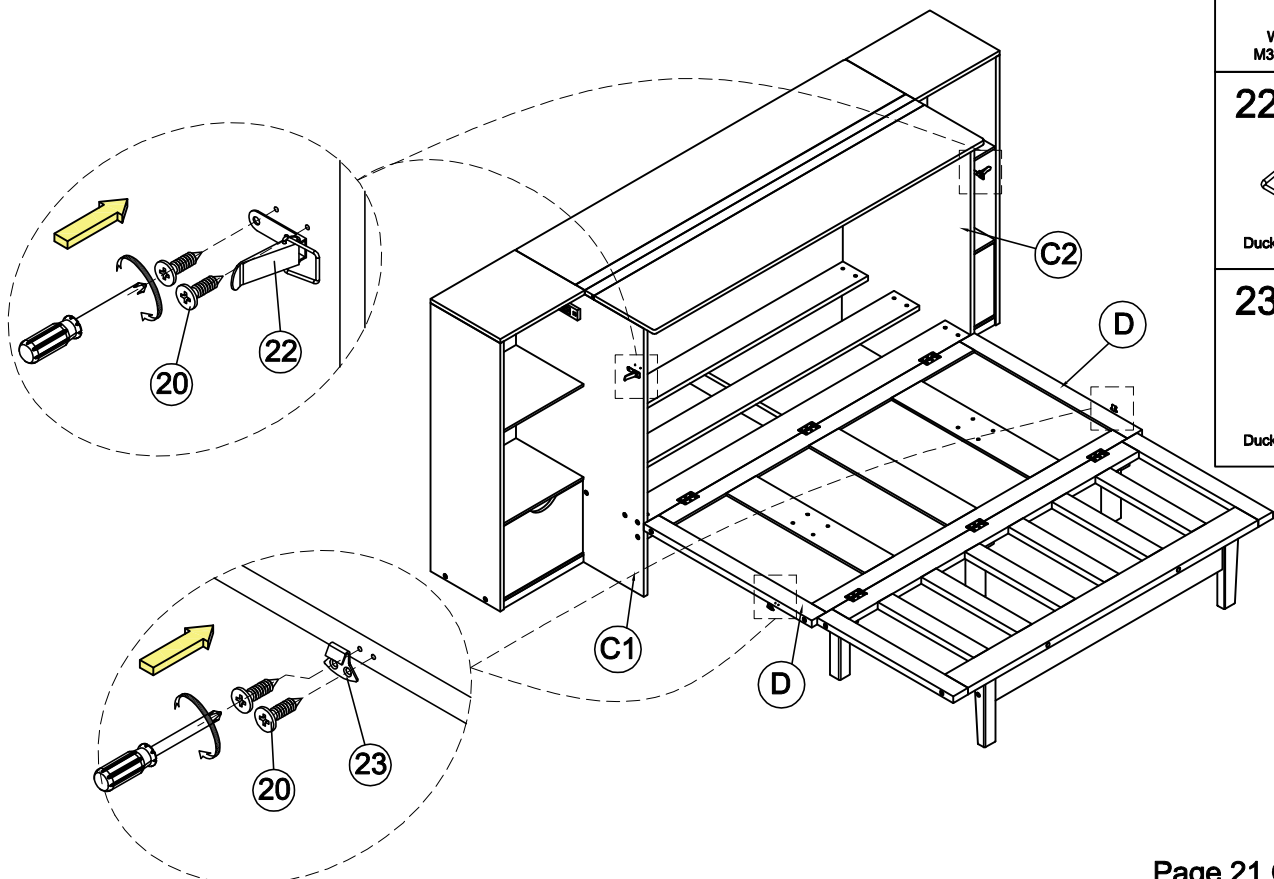


20



Wood crews
M3.5 * 15 - 8pcs

22



Duckbill lock A - 2pcs

23




Duckbill lock B - 2pcs

STEP 30


8




Round wood screws
M3.5 * 15 - 18pcs

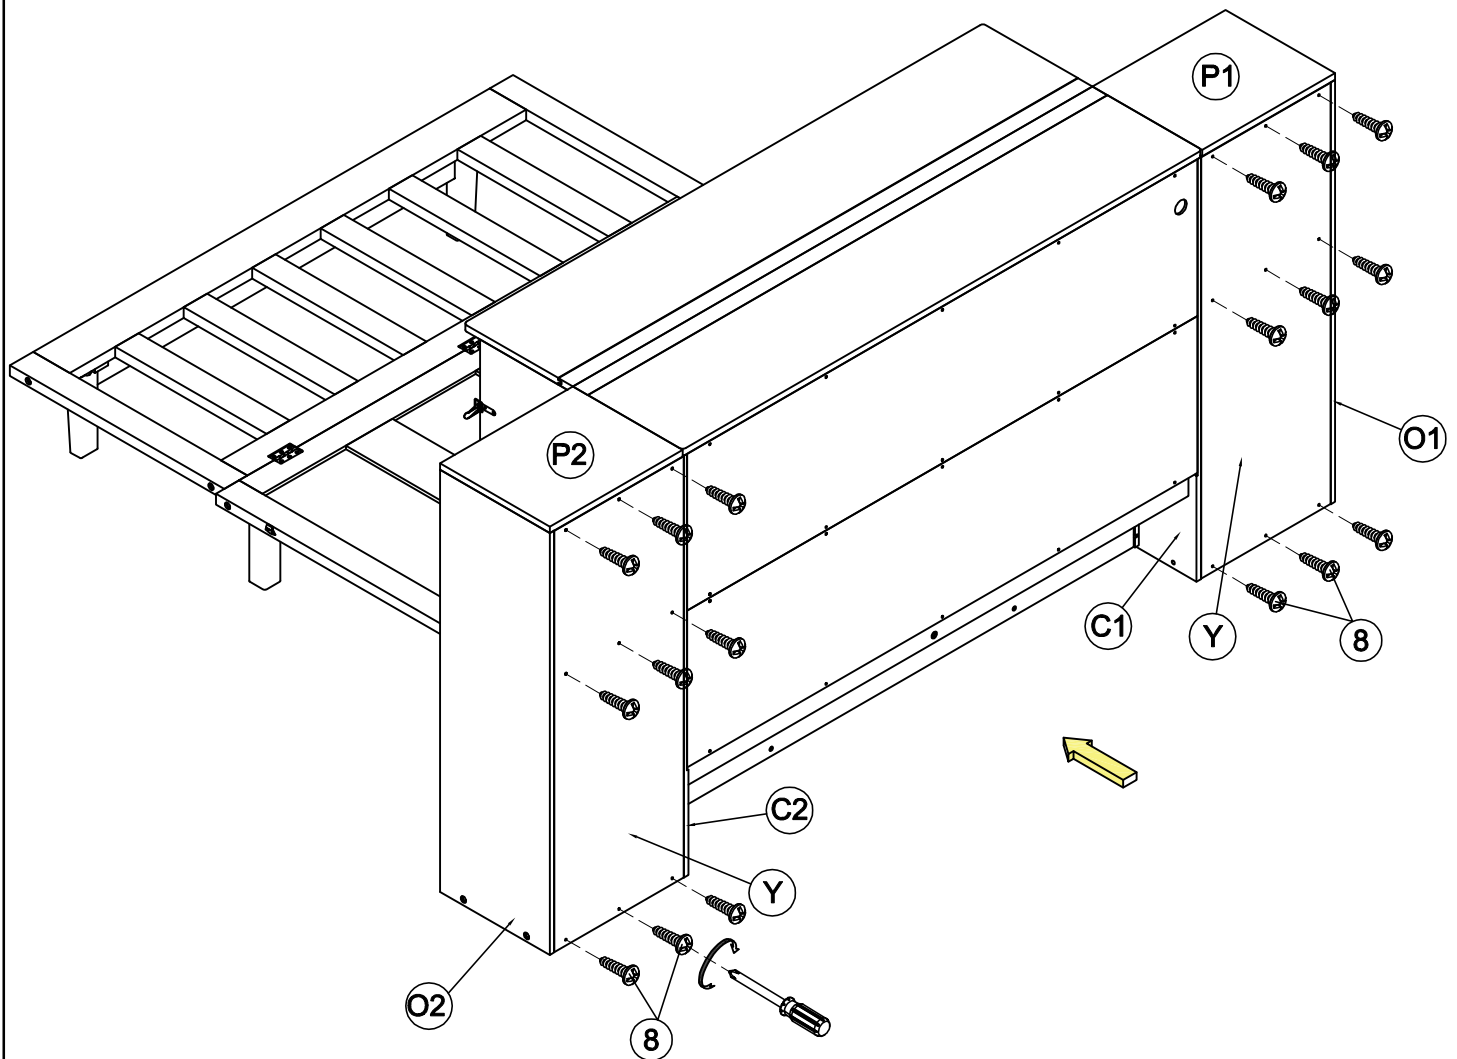


STEP 31

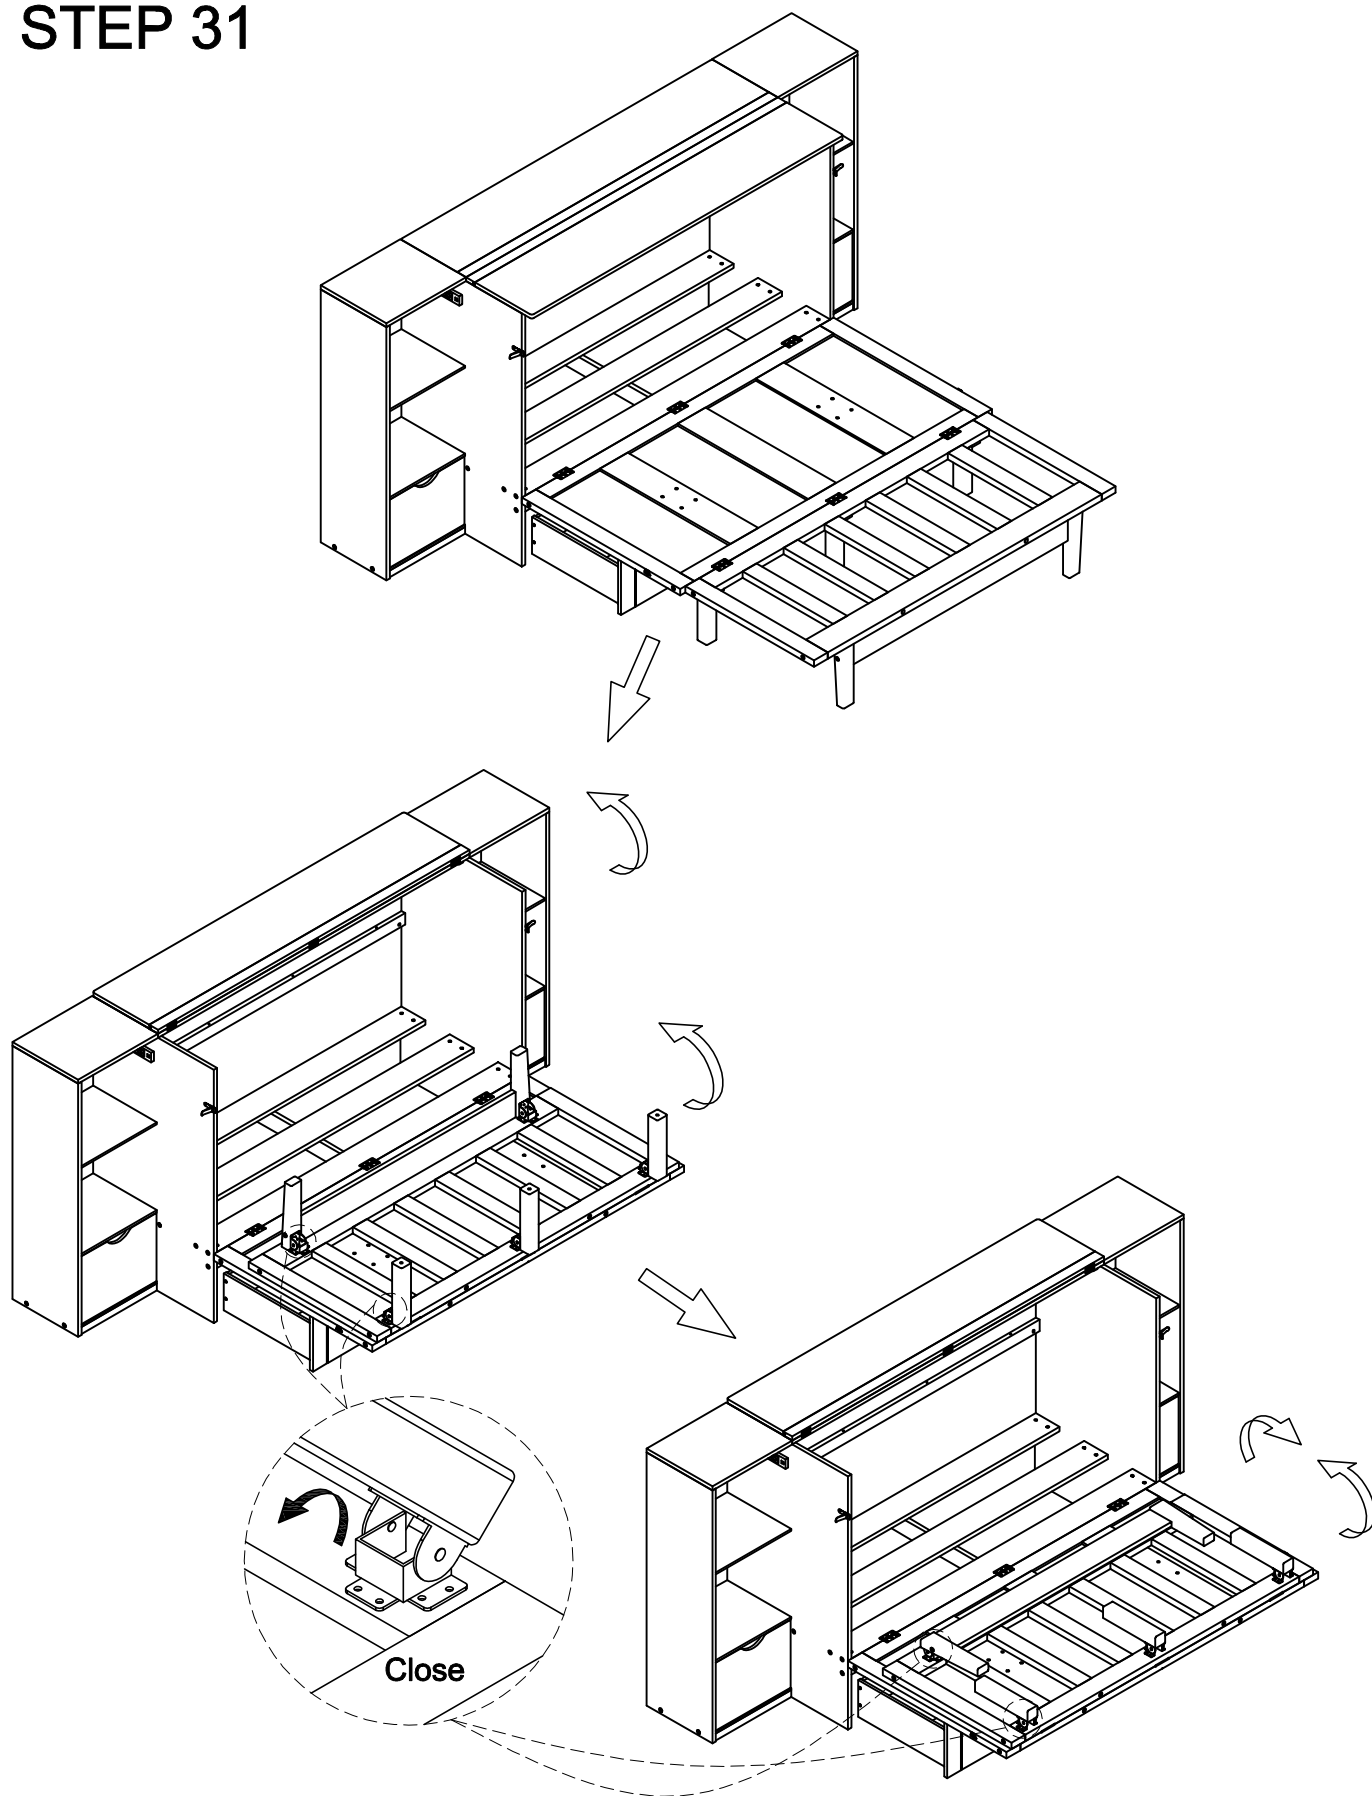


STEP 32

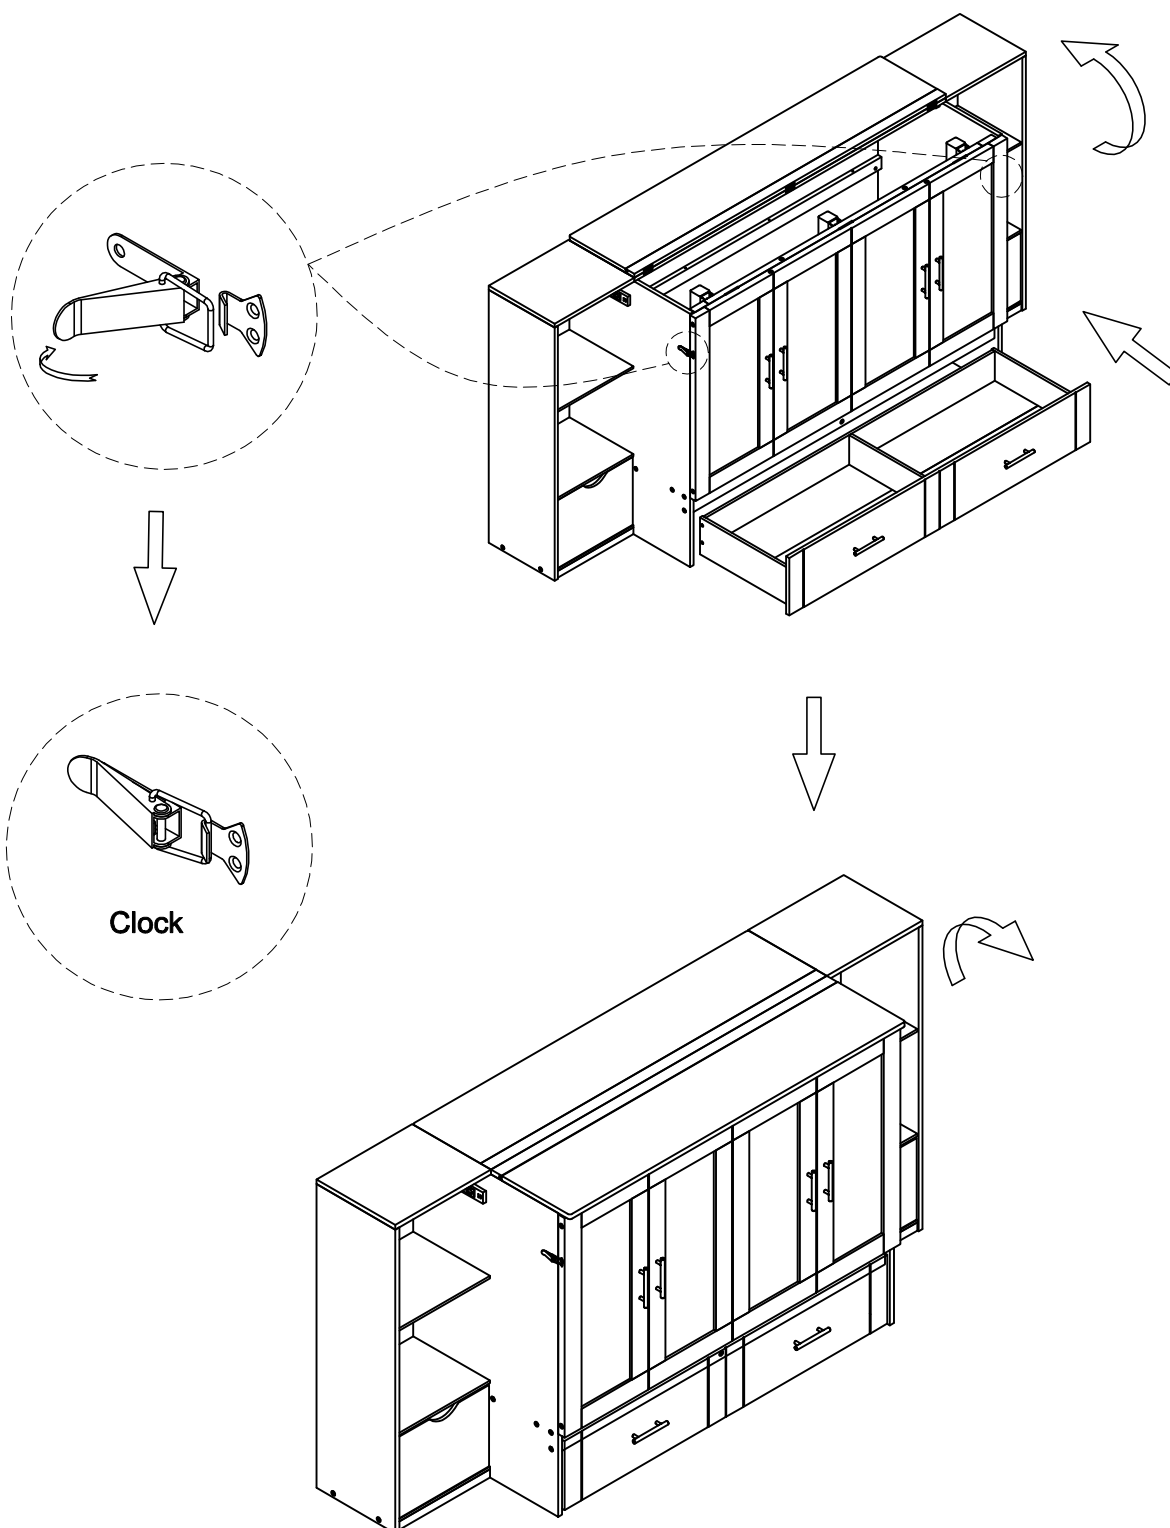


STEP 33

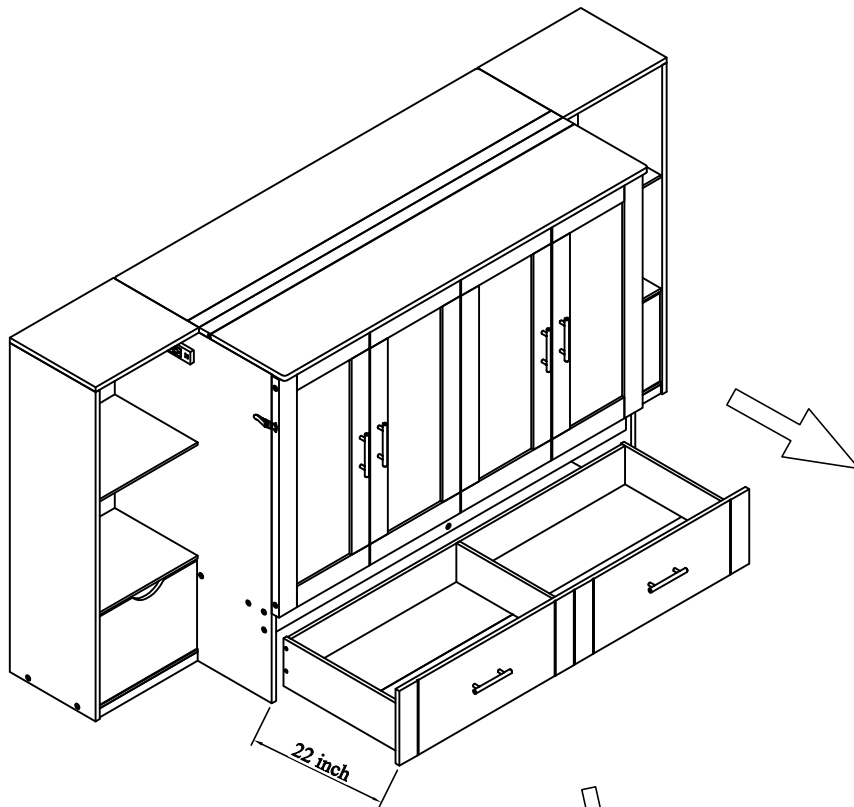

Pull the drawer in 22 inches from the hip edge
before opening the bed

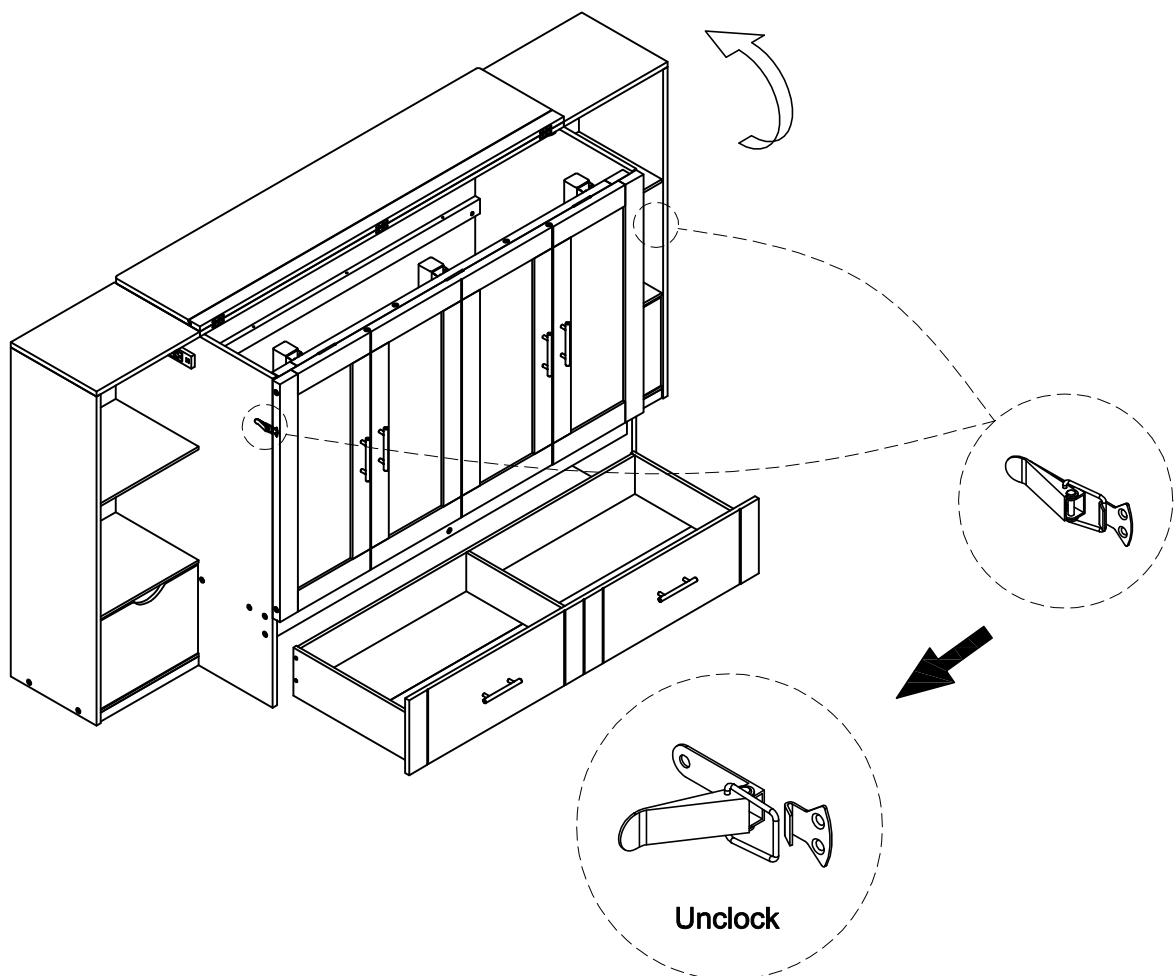

STEP 34

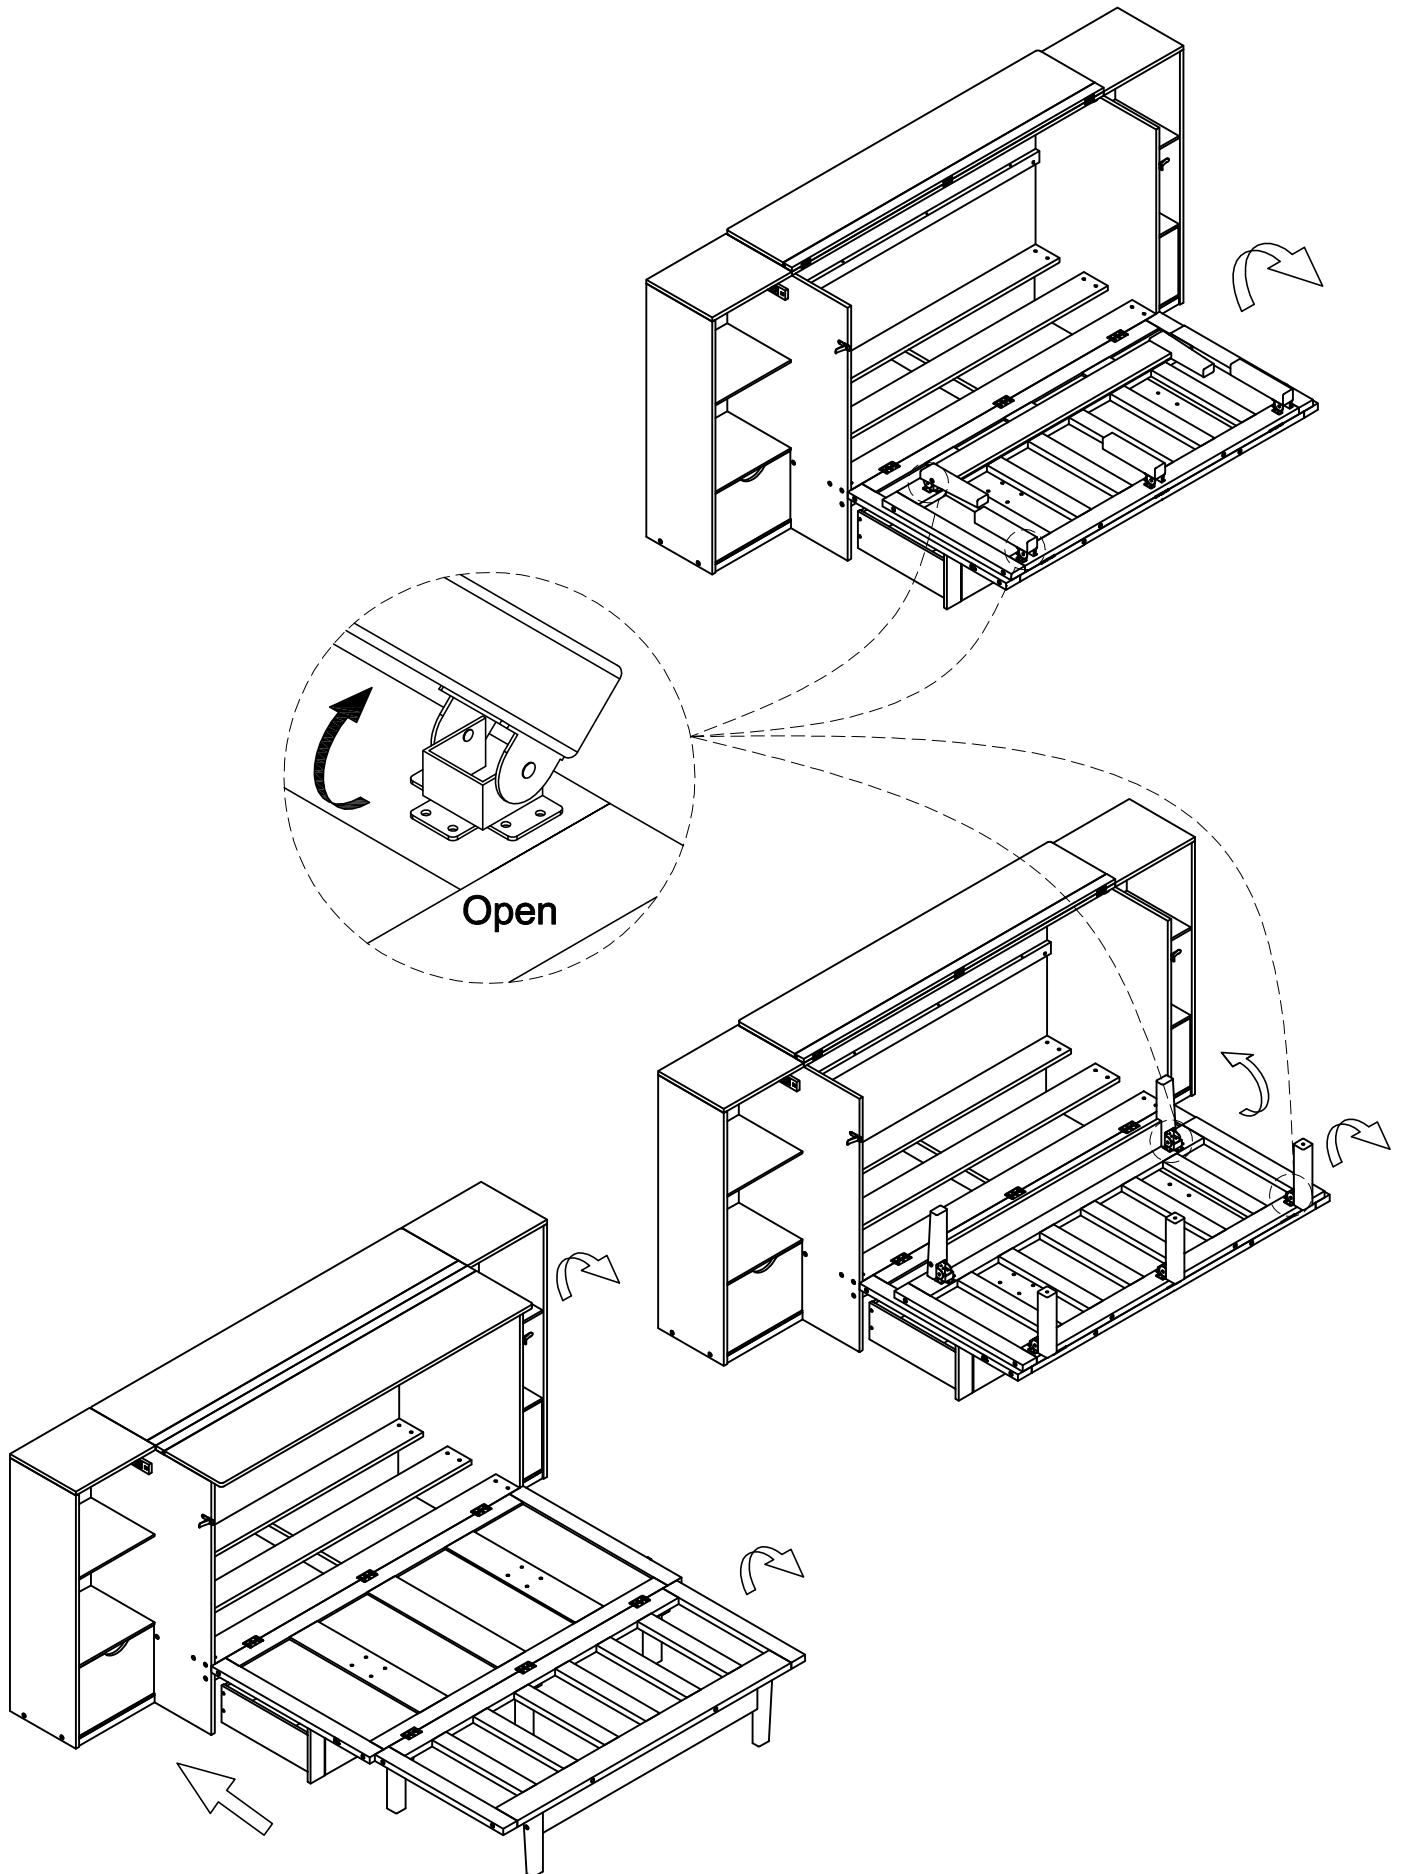

COMPLETED

