

ASSEMBLY INSTRUCTIONS



CAUTION

◆ Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.

◆ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.



If you need further assistance, please contact us by Email: customersupport@superiordecorinc.com

TOOLS REQUIRED



Ladder



Safety glasses



Electrical tape




Phillips screwdriver



Flat blade screwdriver




Pliers




Wire strippers

HARDWARE INCLUDED

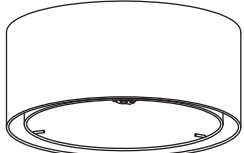

Fixture




Canopy



Stem A



Stem B

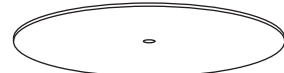


Glass Panel



Rubber Ring



Ball Nut B

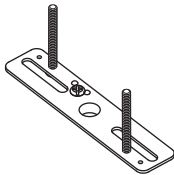

Mounting Unit



Ball Nuts A




Mounting Screws



Wire Nuts

***PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE**


EXPLODED PARTS

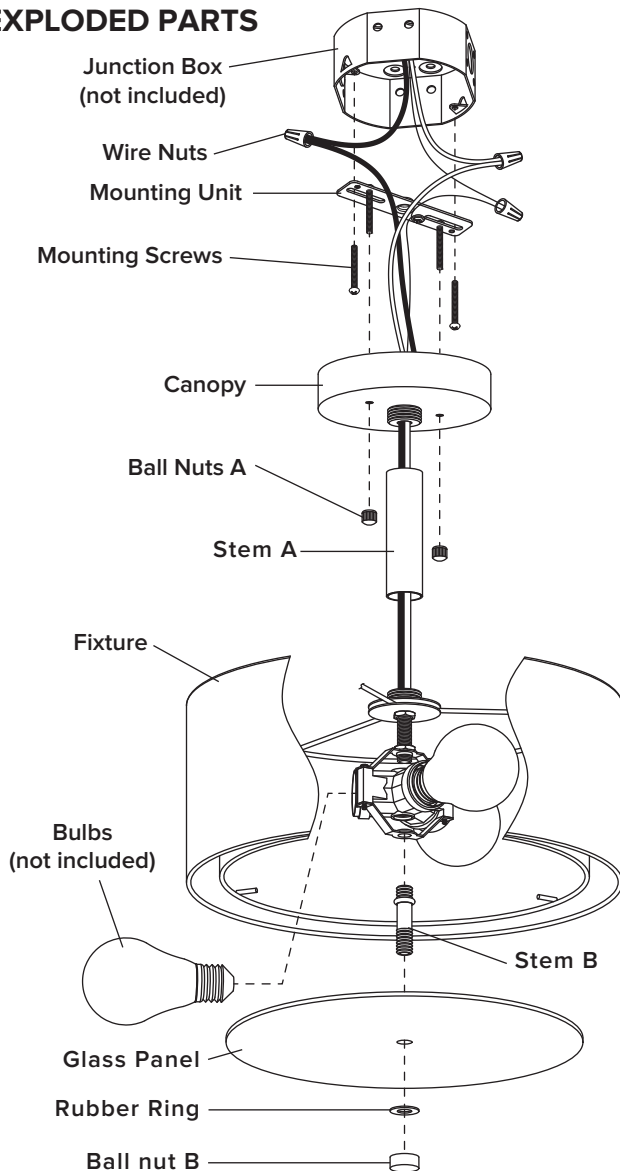

INSTALLATION


STEP 1

Unscrew the **ball nuts A** from the **mounting unit**. Use the **mounting screws** to attach the **mounting unit** to the junction box (not included).

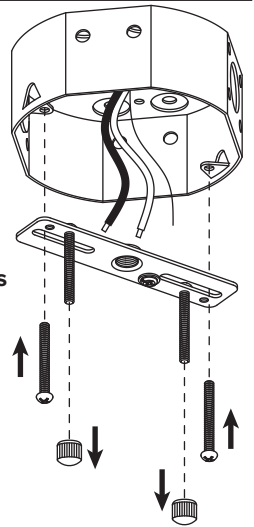

STEP 2



Attach the **canopy** and **stem A** onto **fixture** as shown.

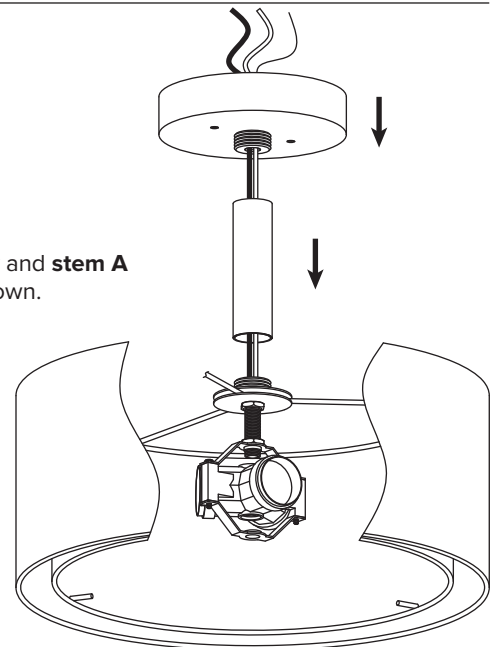

ASSEMBLY INSTRUCTIONS (INSTALLATION)


STEP 3

Make the electrical connection from the junction box (not included) to the **fixture**. Connect the ground wire to the **mounting unit** using the preinstalled green ground screw. Next, connect the live wire, neutral wire and ground wires with the supplied **wire nuts**. Secure with electrical tape.

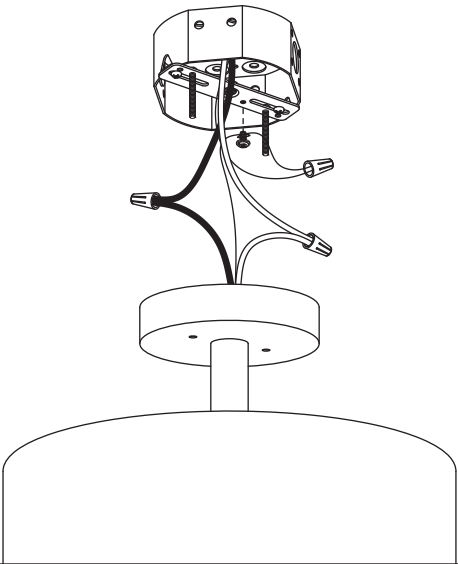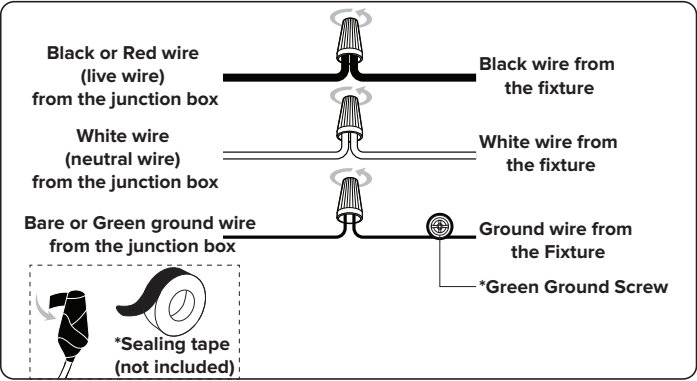


STEP 4

Attach the **fixture** to the **mounting unit** through screws holes as shown, and secure it with **ball nuts A**.

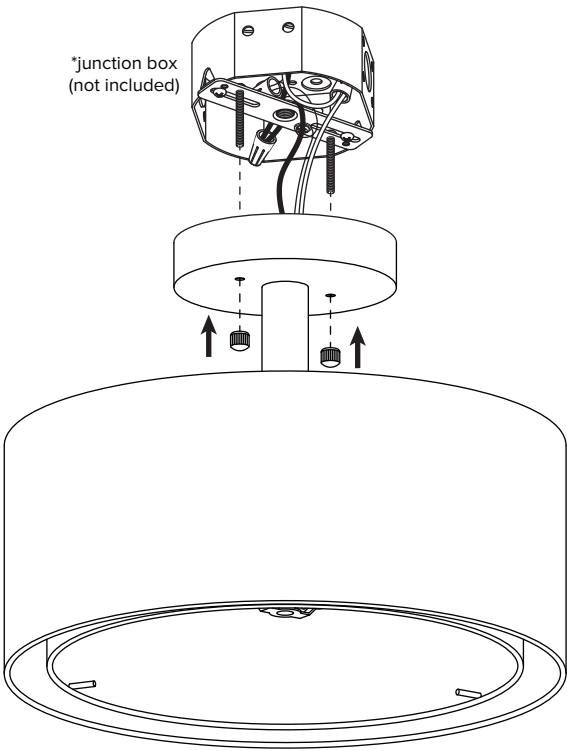


STEP 6

Install bulbs (not included)

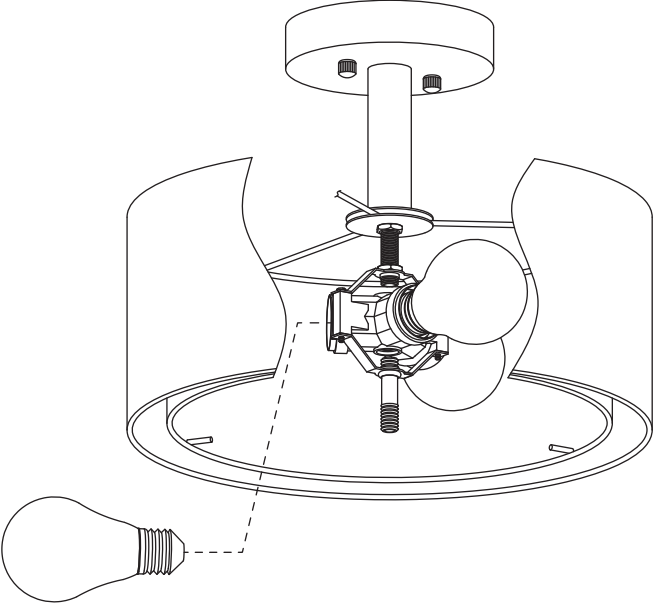

STEP 5

Screw the **stem B** into the **fixture**.

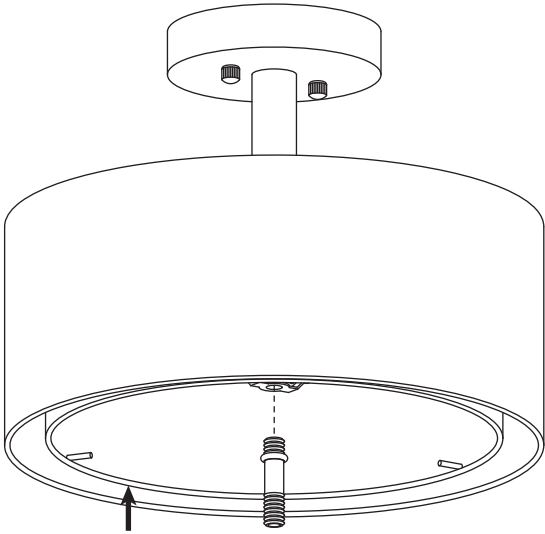

STEP 7

Place the **glass panel** and **rubber ring** into the **stem B**, then secure with **ball nut B**.

