

Installation manual

Metal curtain rod set

1/4

Step 1 A


For ceiling brackets see page 3.

Take the wall piece of each bracket out by rotating them counter clockwise (do not unscrew the screw, but the wall piece as a whole!).



Step 2 A


Mount the wall piece to the wall by using at least 2 plugs and screws, which are included in the packaging.

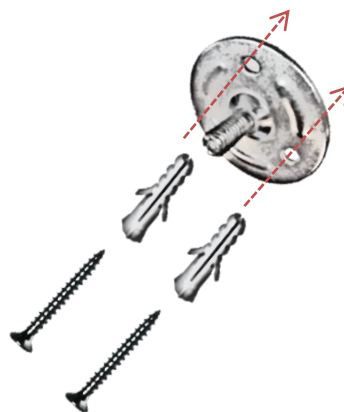

Step 3 A

Attach the main part of the bracket back on the wall piece by rotating it clockwise.

For bracket type II first put the cover over the wall piece and then attach the main part of the bracket.

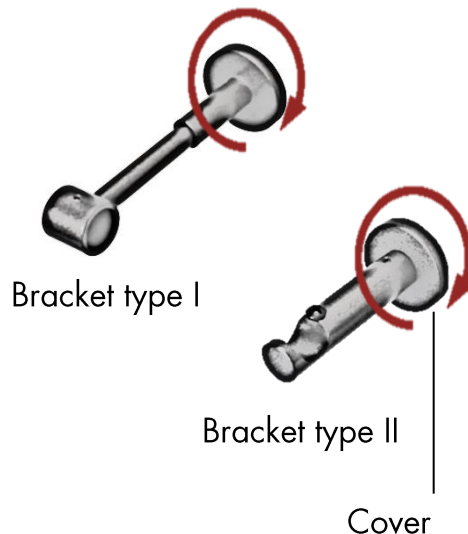

Installation manual

Metal curtain rod set

2/4


Step 4 A

Attach the rod(including the curtain) and tighten the brackets by fixing the allens/screws with help of the included allen key.


A crosshead screwdriver is needed to fix bracket type II to the rod.



Included allen key

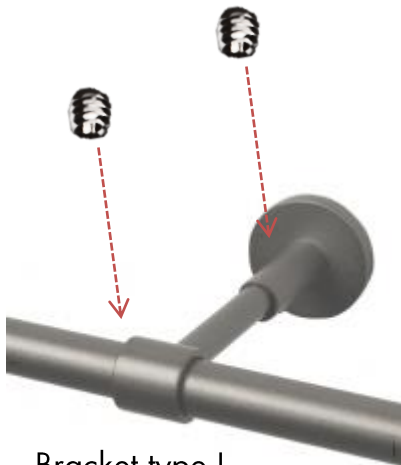

Bracket type I

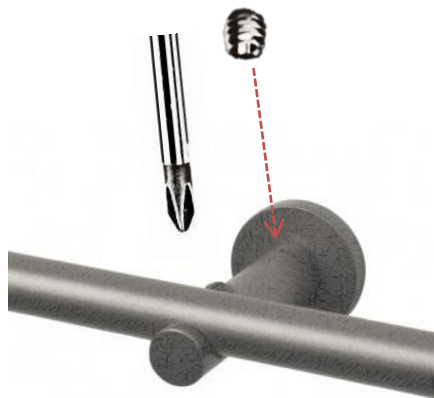

Bracket type II

Installation manual

Metal curtain rod set


3/4

Step 1 B

Ceiling brackets are mounted directly to the ceiling and have no separate wall piece. Therefore 2 extra long screws are included.


Remove the main part of the bracket by unscrewing the upper allen.

It is also possible to mount a ceiling bracket to the wall!.

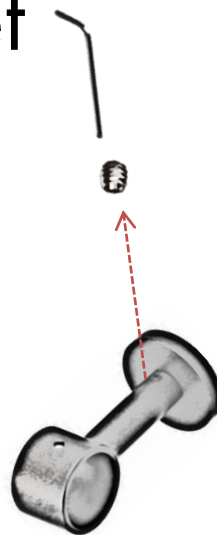

Step 2 B

Use the plugs and extra long screws to attach the foot of the brackets directly to the ceiling.

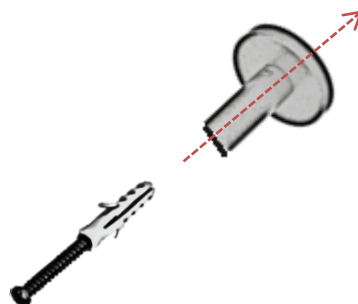


Step 3 B

First attach the main part of the bracket back on the installed piece and tighten it by fixing the allen.

Step 4 B

Then attach the rod (including the curtain) and tighten the bracket by fixing the allens.

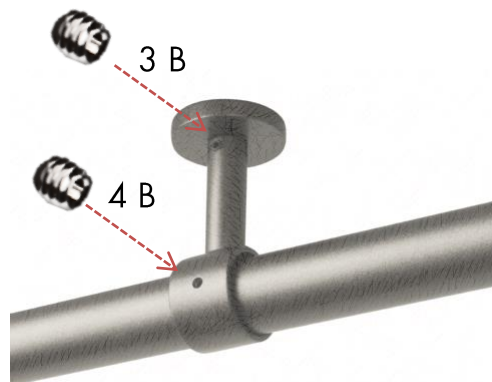

Installation manual

Metal curtain rod set

4/4

Step 5

All finials are easily attached in the same way by putting the finial over both ends of the rod and tighten them by fixing the allen.

The allen key is included in the packaging.

