




!WOODEN MATERIALS ! NO ELECTRIC DRILL!


ASSEMBLY INSTRUCTION

1.

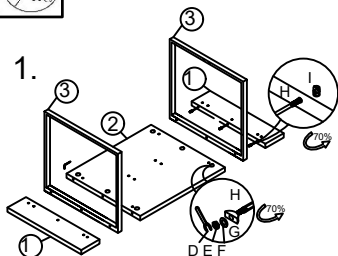


70% do not need to be tightened

2.

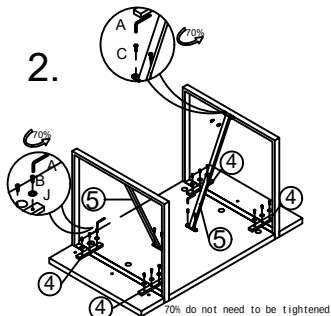


70% do not need to be tightened

3.

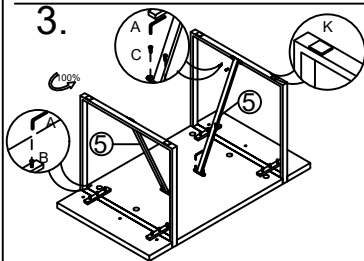


100% fully tightened

4.

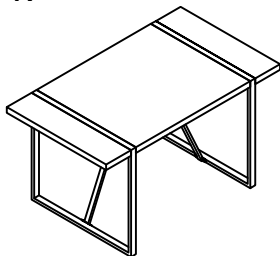

① X2	② X1	③ X2	④ X4	⑤ X2
A X1	B X12	C X8	D X1	E X6
F X6	G X6	H X6	I X6	J X12
K X4				

ASSEMBLY INSTRUCTION

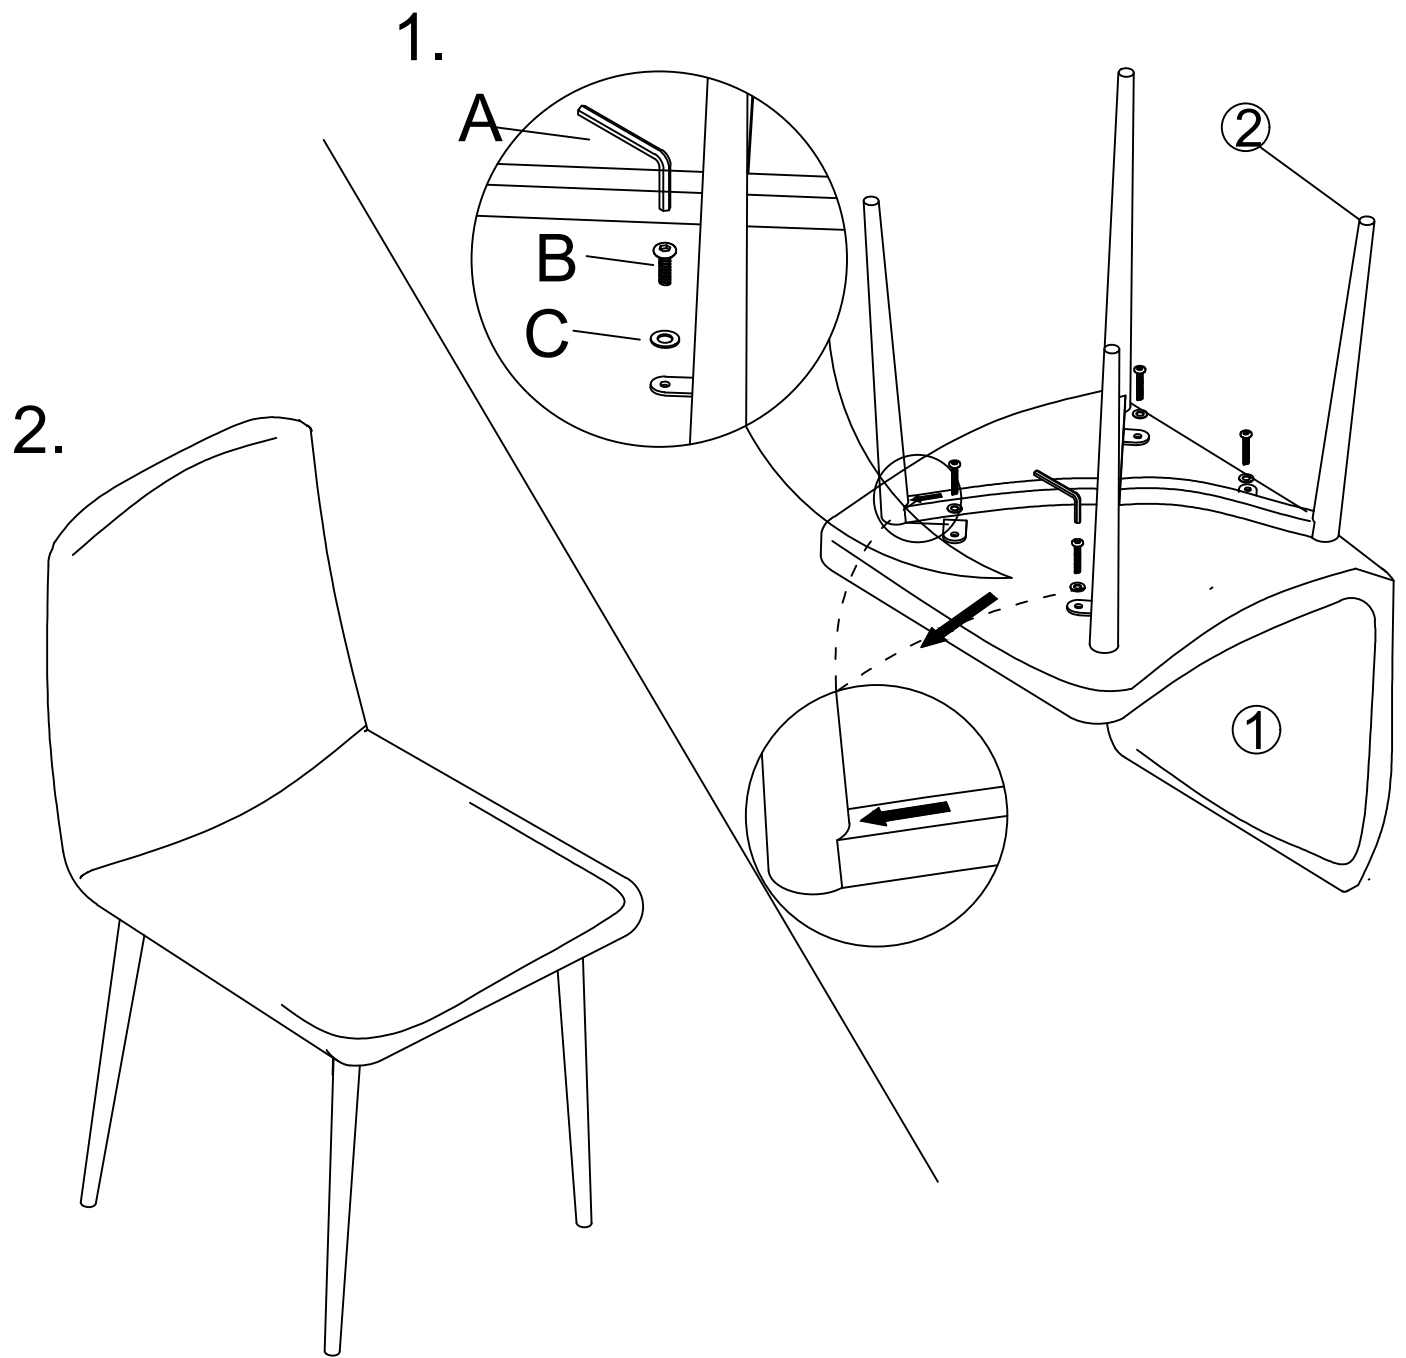

①




X1

②



X1

A

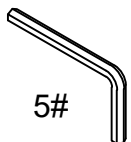

5#

X1

B

M6X16



X4

C



M6

X4