


Assembly Instructions


Caution: You must read this before you proceed

Please look in the magic tape pouch for hardware packs and legs

Sofa

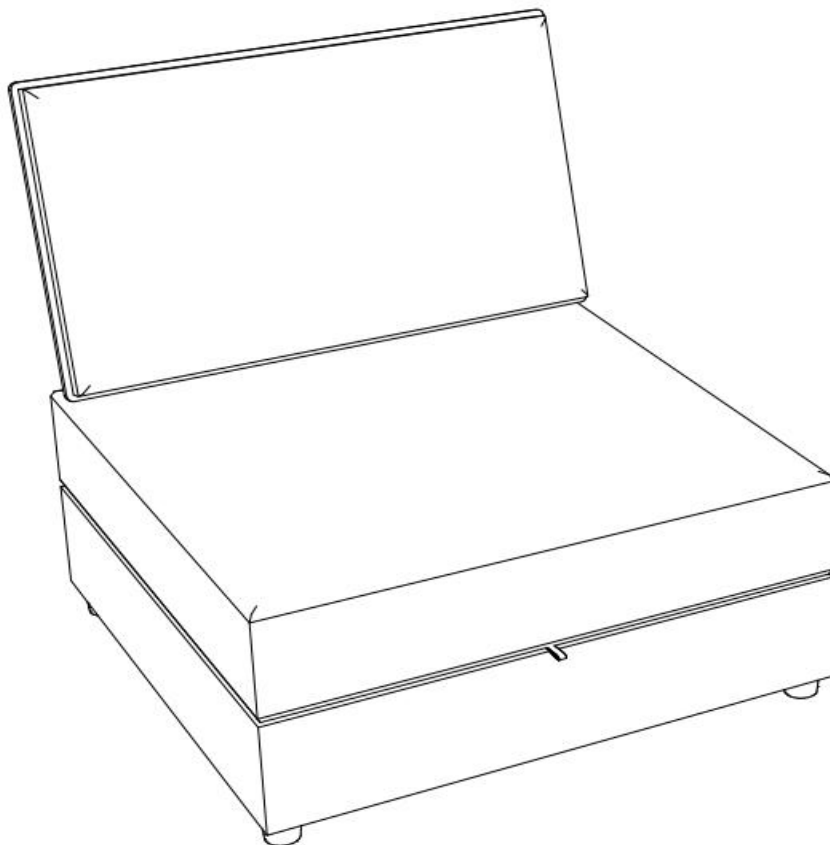


Part List

Label	Picture	Description	QTY (PCS)
A		Backrest	2
B		Seat Panel	2
C		Seat Frame	2
D		Wood Batten	8
E		Back/Seat Cushion Package	2
E1		Back Cushion after decompression from(E)	2
E2		Seat Cushion after decompression from(E)	2
F		Short Leg	8
G		High Leg	8


Hardware

①		Plastic Washer	8
②		Metal Hook	4
③		Bolt(M6*35MM)	16
④		Flat Washer(M6)	16
⑤		Bolt(M6*20MM)	12
⑥		Metal Connector	2
⑦		Metal Clip	4
⑧		Allen Wrench (S4)	1


Step 1

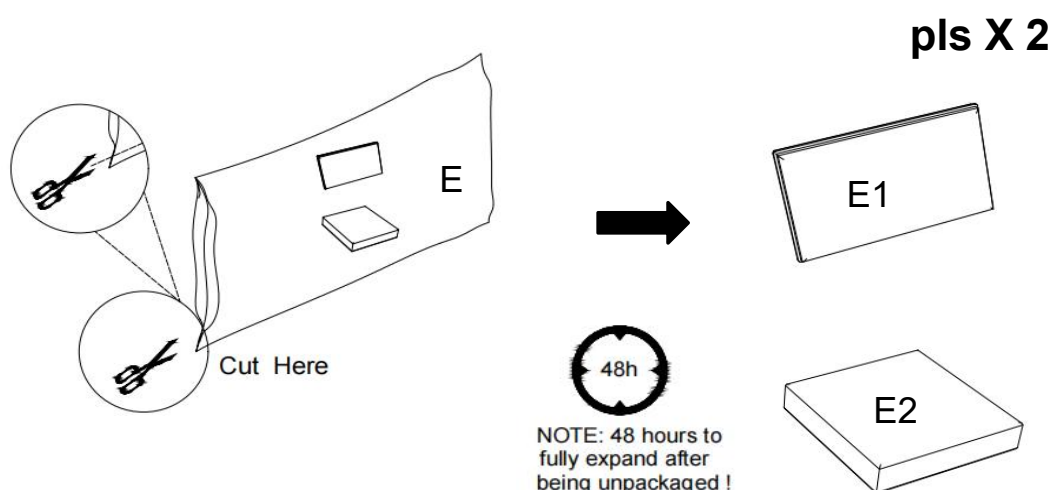

Step 2

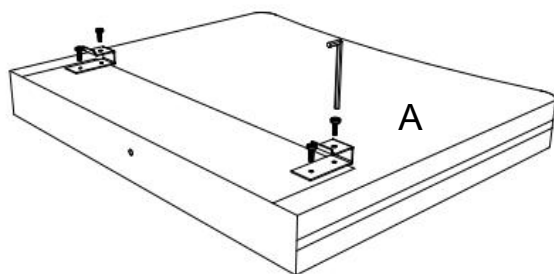


pls X 2

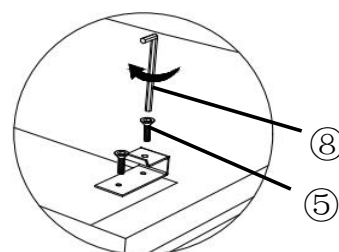


M6*20mm

Step 3


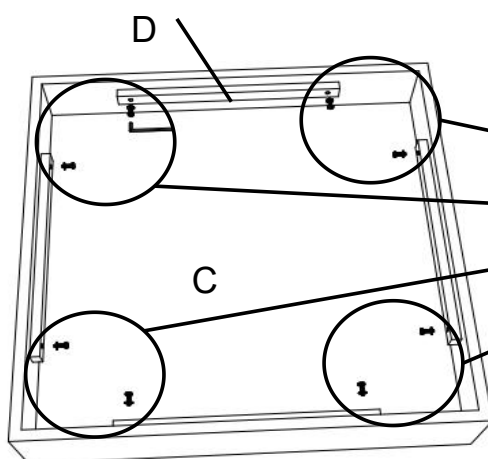


pls X 2

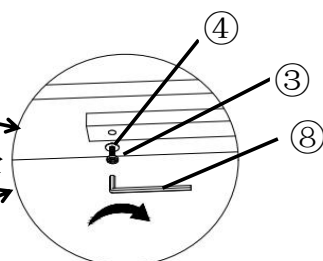


M6*35mm

Step 4



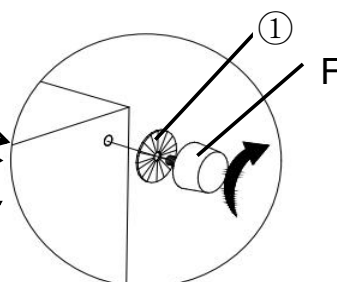
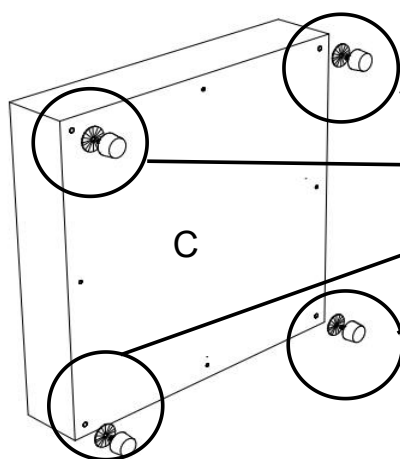


pls X 2


Step 5

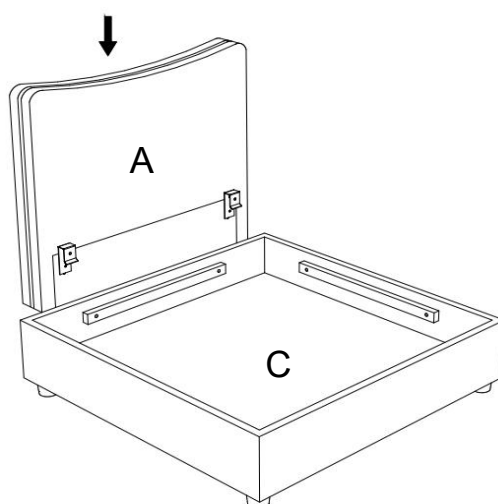


pls X 2
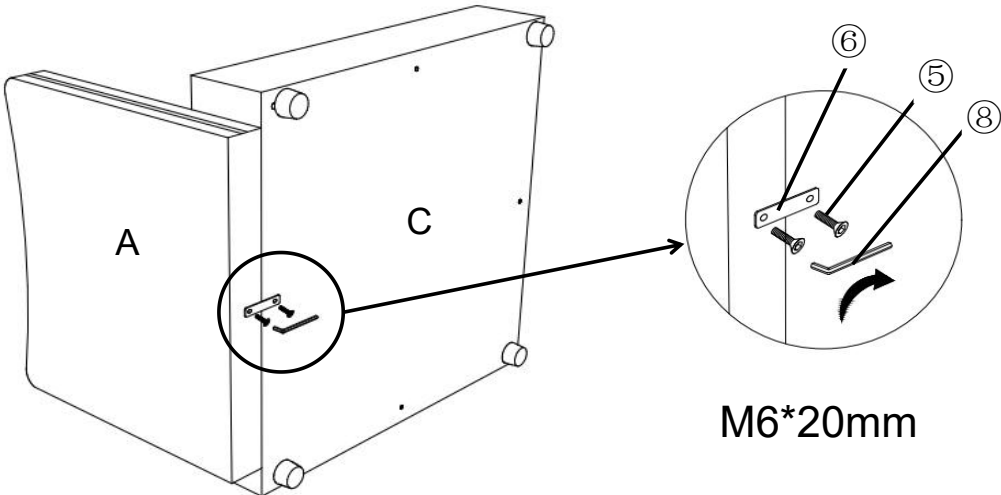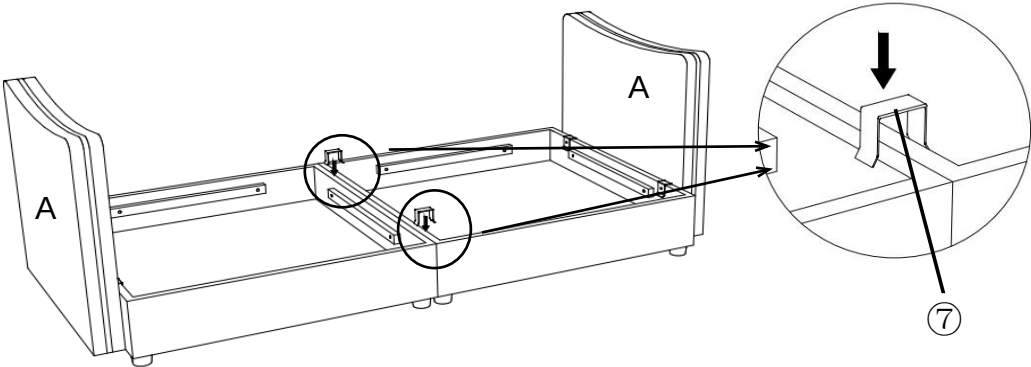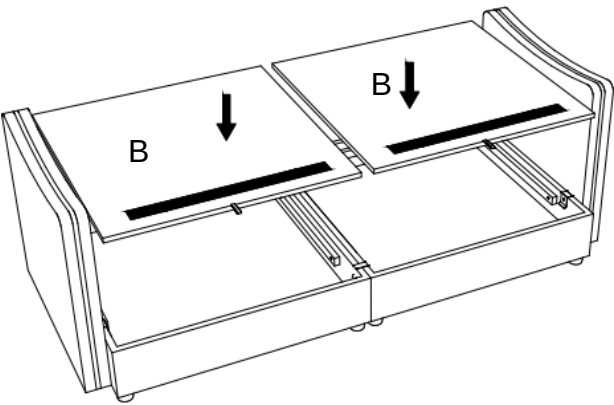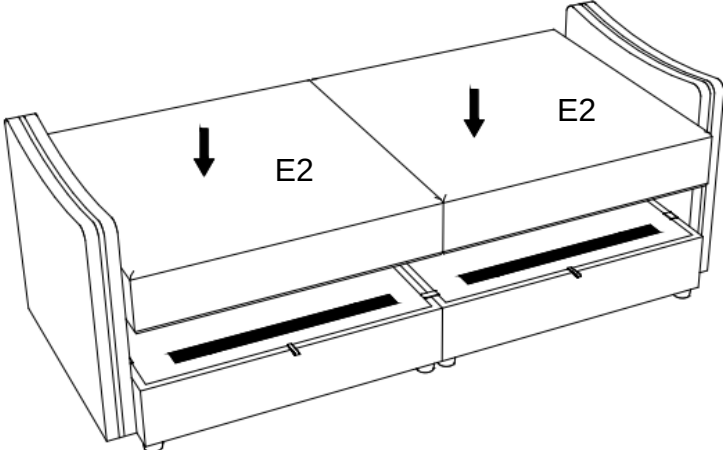
<u>Step 6</u>	pls X 2  M6*20mm
<u>Step 7</u>	
<u>Step 8</u>	
<u>Step 9</u>	

Step 10

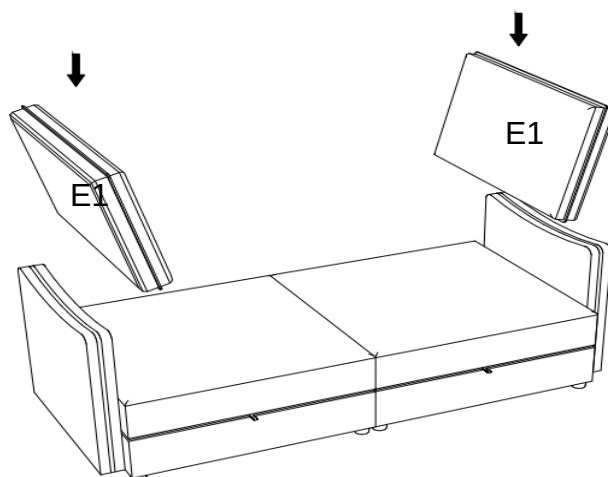

Step 11

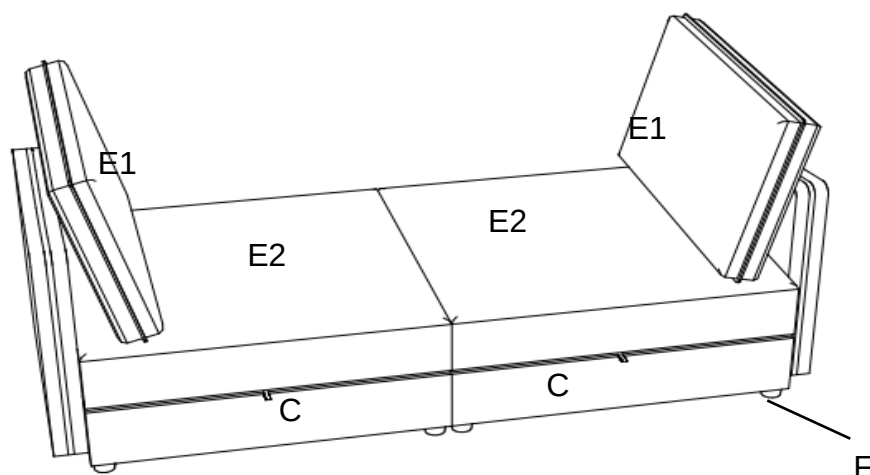

When sofa is intended with the murphy bed, The back cushion E1 and seat cushion E2 needs to be removed before it can be used.