


ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

STORAGE BENCH

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

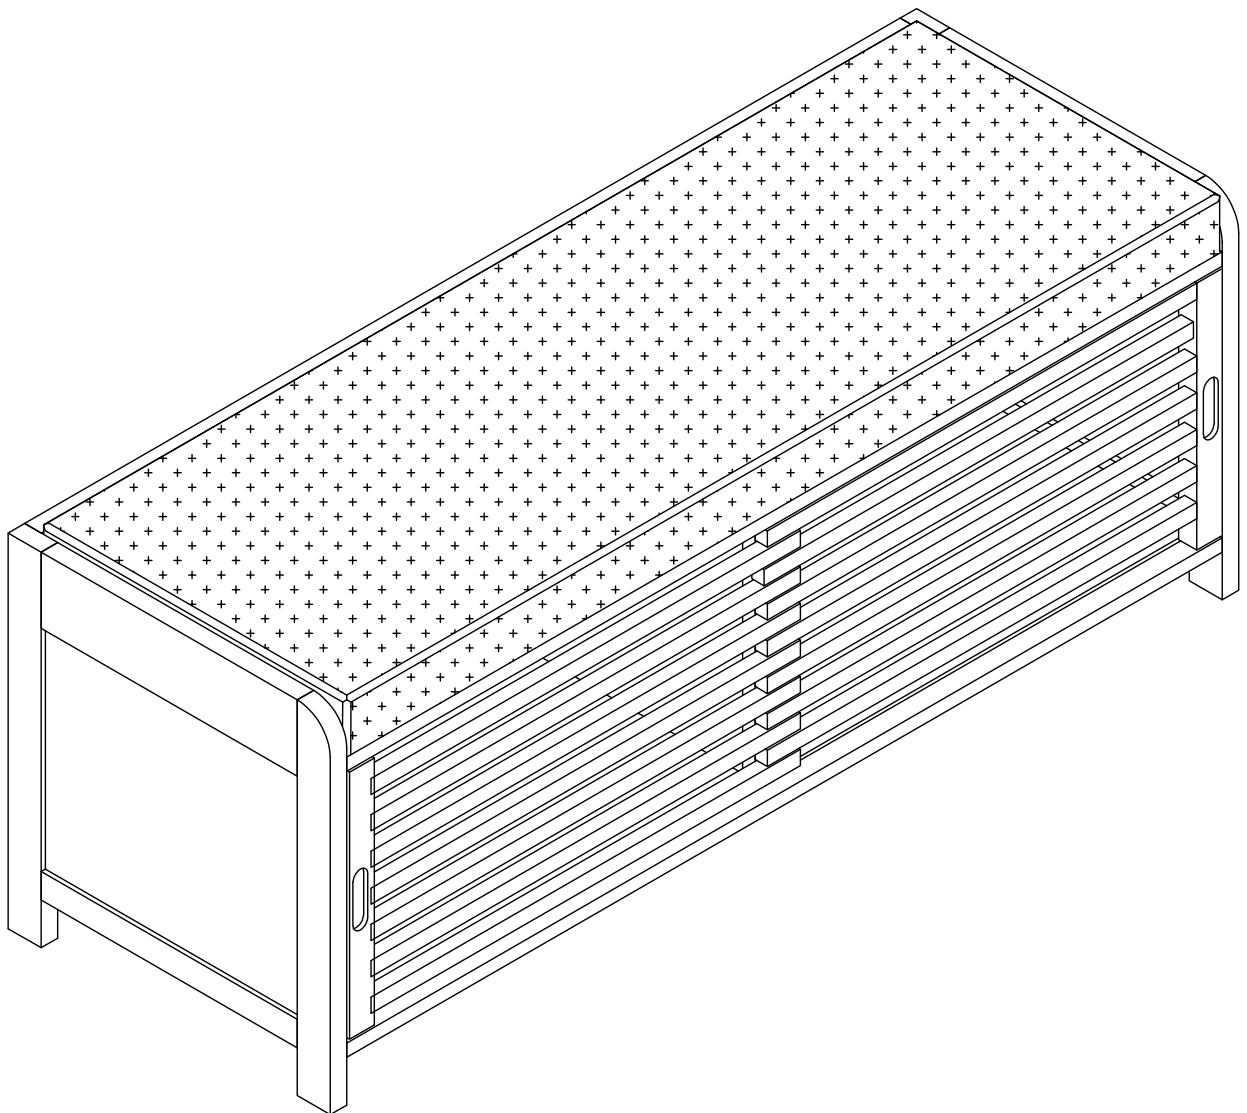

ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

Please read these instructions fully before starting assembly:


1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

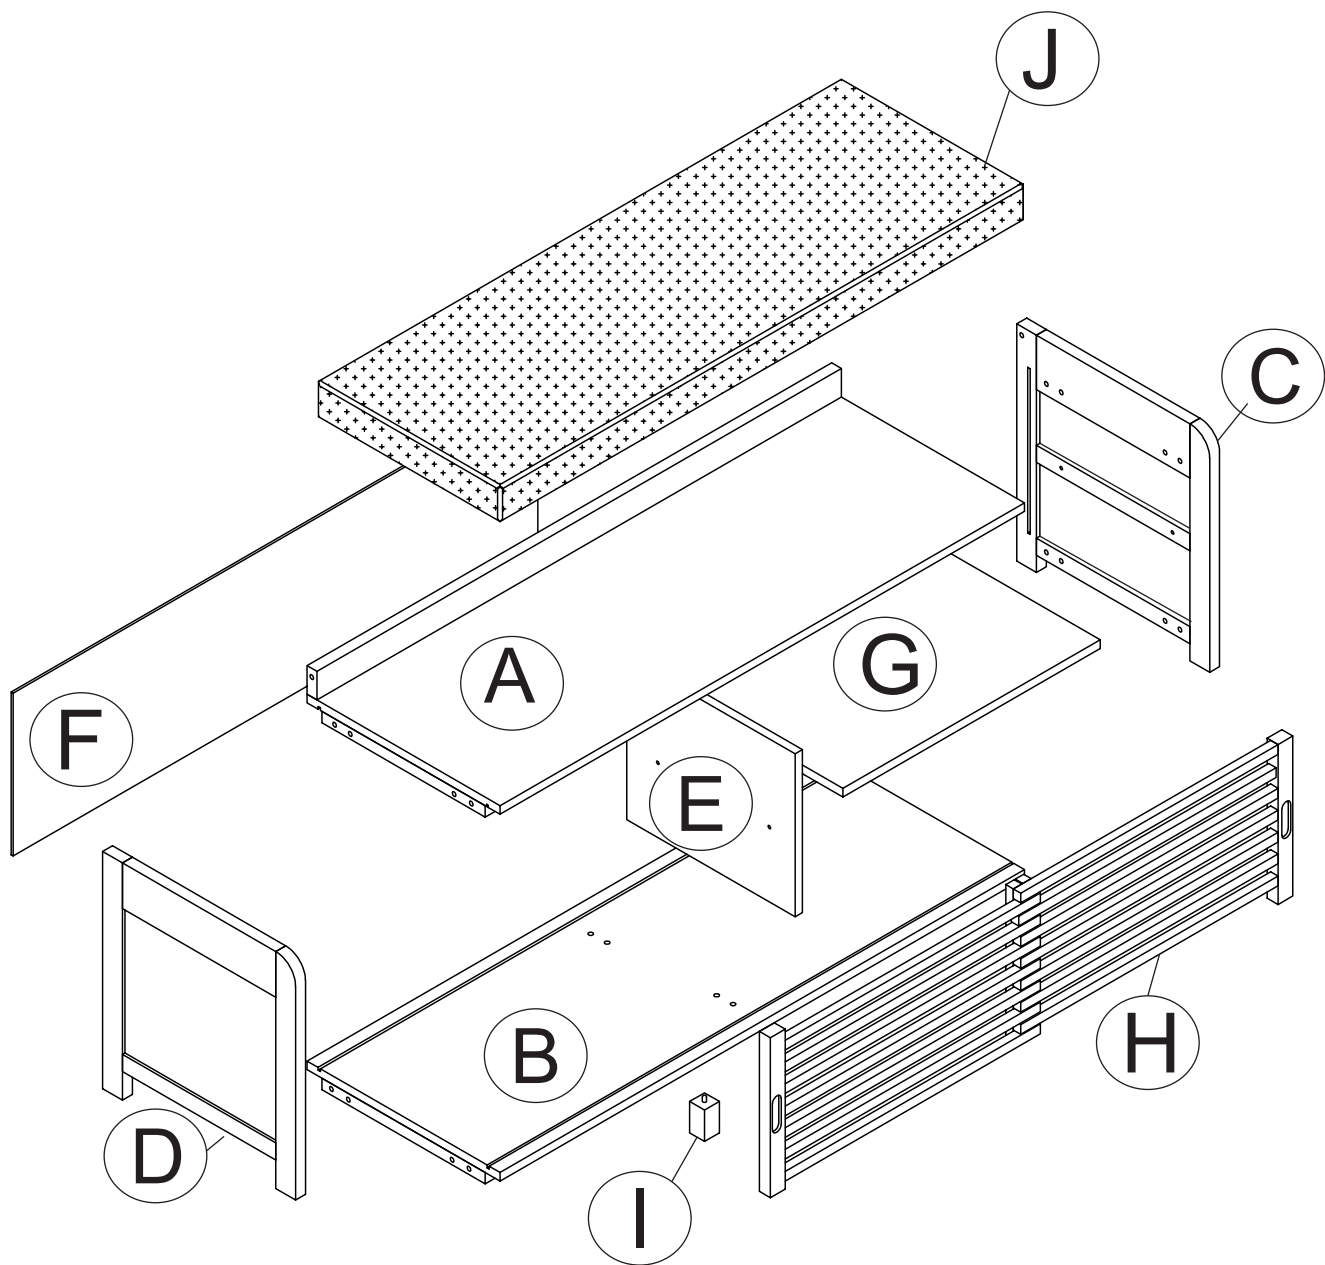


ASSEMBLY INSTRUCTION

ITEM NO.N715P196968


Part List

A

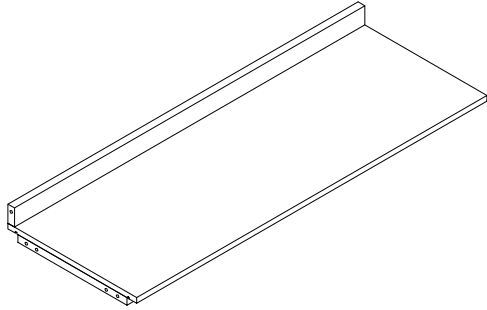


TOP (1 pc)

B

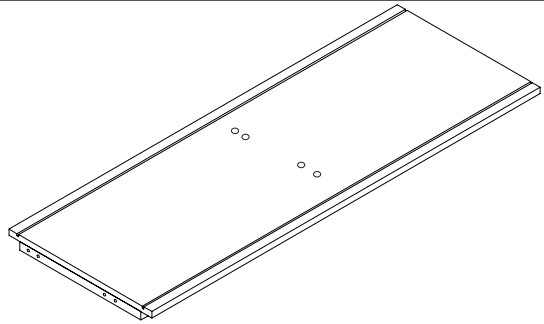


BOTTOM (1 pc)

C

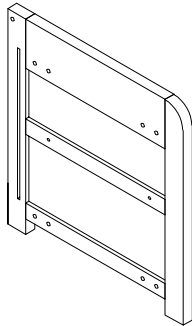


RIGHT SIDE PANEL (1 pc)

D

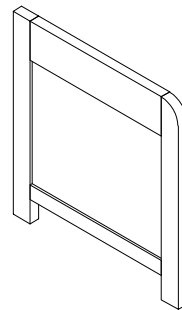


LEFT SIDE PANEL (1 pc)

E

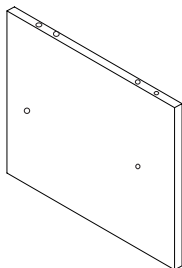


MIDDLE PANEL (1 pc)

F

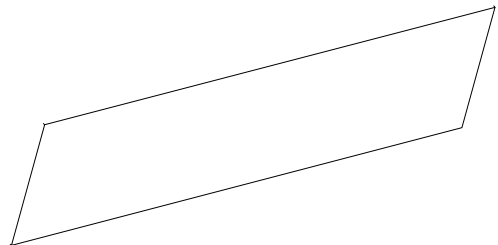


BACK PANEL (1 pc)

G

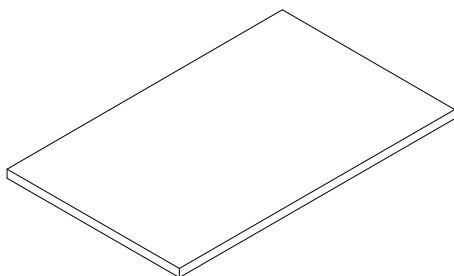


SHELF (1 pc)

H

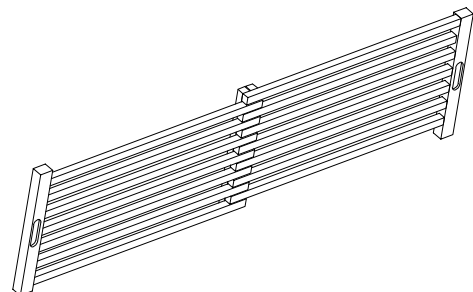


DOOR (1 Set)

I



SUPPORT LEG (1 pc)

J





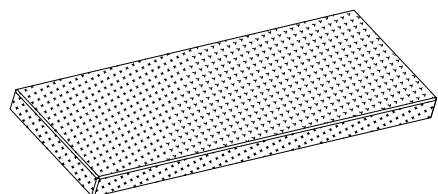


CUSHION (1 pc)

ASSEMBLY INSTRUCTION

ITEM NO.N715P196968



Hardware List

①  Ø 6 x 28 mm Cam Bolt (2 pcs)	②  Ø 15 x 12 mm Cam Lock (2 pcs)
③  Ø 8 x 30 mm Wooden Dowel (14 pcs)	④  Ø 6 x 30 mm SHORT BOLT (8 pcs)
⑤  Ø6 x 38mm LONG BOLT (2 pcs)	⑥  Ø6 x 12mm Flat Washer (10 pcs)
⑦  Ø6 x 12mm Lock Washer (10 pcs)	⑧  Ø9 x 12 mm T Nut (2 pcs)
⑨  Allen Key (1 pc)	⑩  Ø6 x 10 mm Support Pin (4pcs)
⑪  Slide Guide (4 pcs)	⑫  Metal Spindle Lock (4 pcs)

ASSEMBLY INSTRUCTION


ITEM NO.N715P196968

STEP 1:

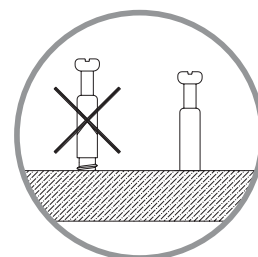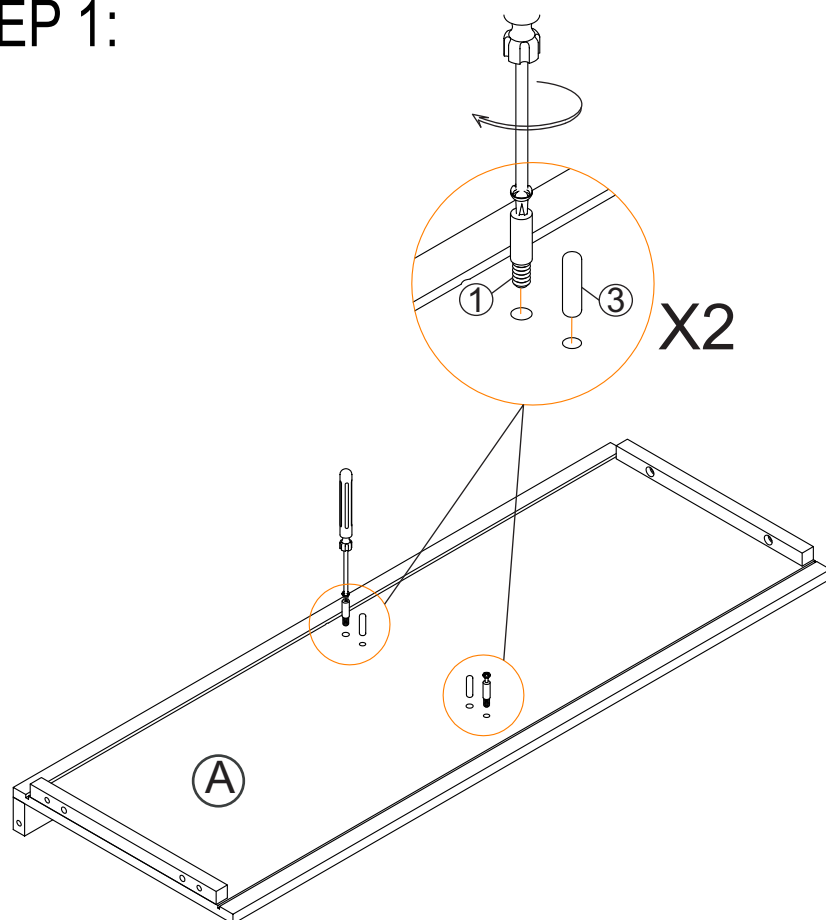

Cam Bolt	Wooden Dowel
Ø 6 x 28 mm	Ø 8 x 30 mm
	
① x 2	③ x 2

STEP 2:

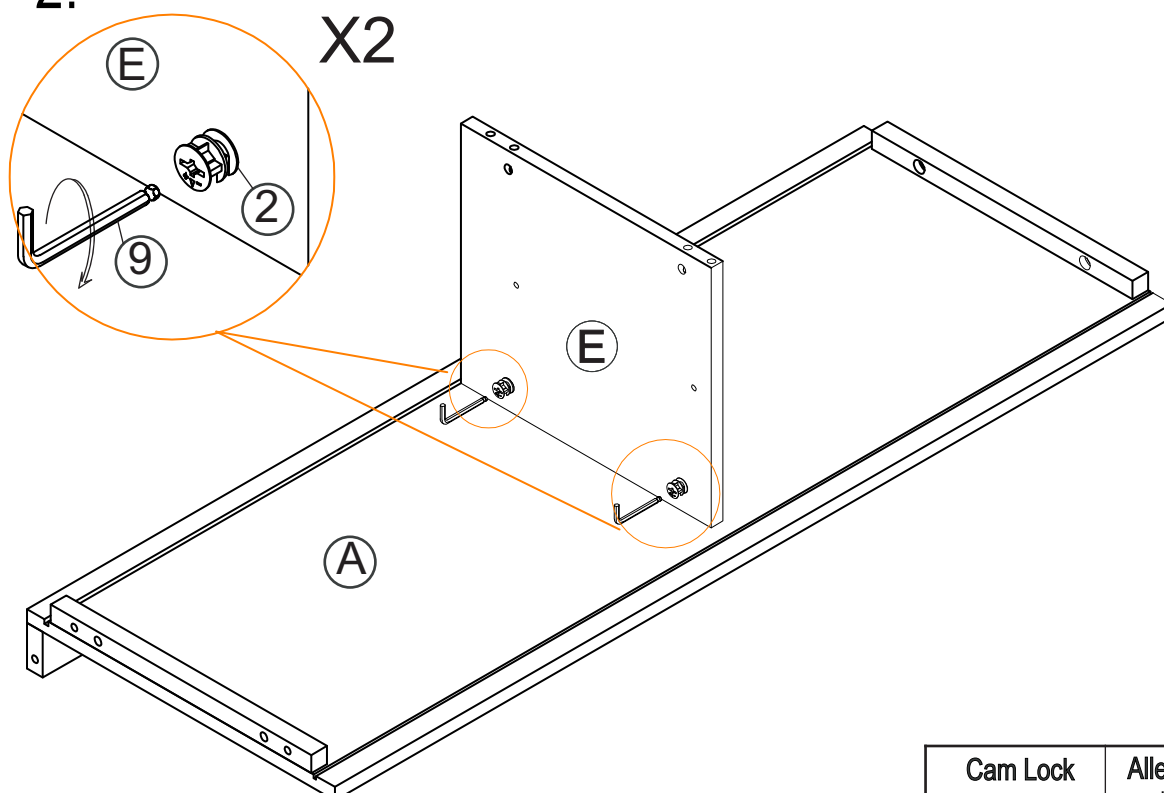


Cam Lock	Allen Key
Ø 15 x 12 mm	K4
	
② x 2	⑨ x 1

ASSEMBLY INSTRUCTION


ITEM NO.N715P196968

STEP 3:

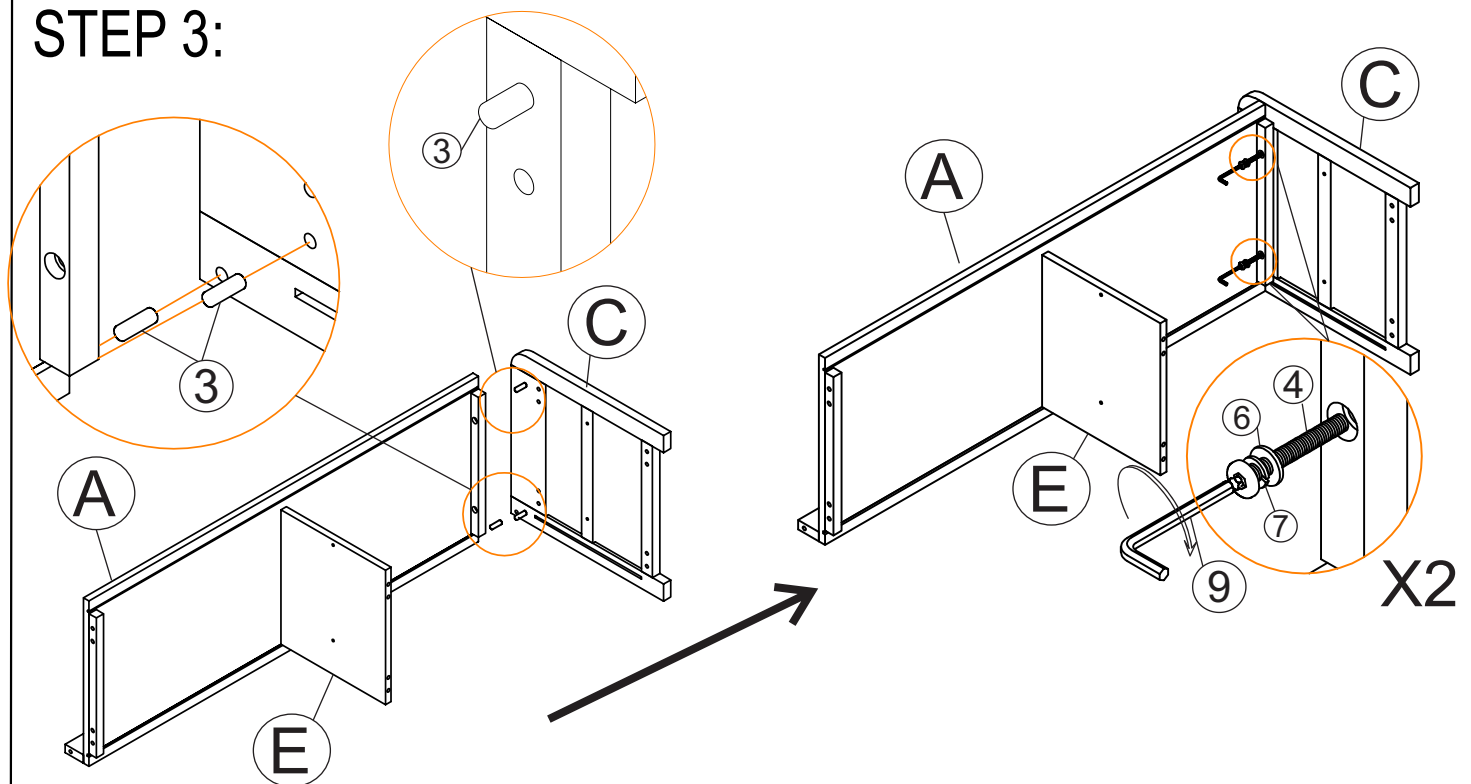

Wooden Dowel Ø 8 x 30 mm	Short Bolt Ø 6 x 30 mm	Flat Washer	Lock Washer	Allen Key K4
				
③ x 3	④ x 2	⑥ x 2	⑦ x 2	⑨ x 1

STEP 4:

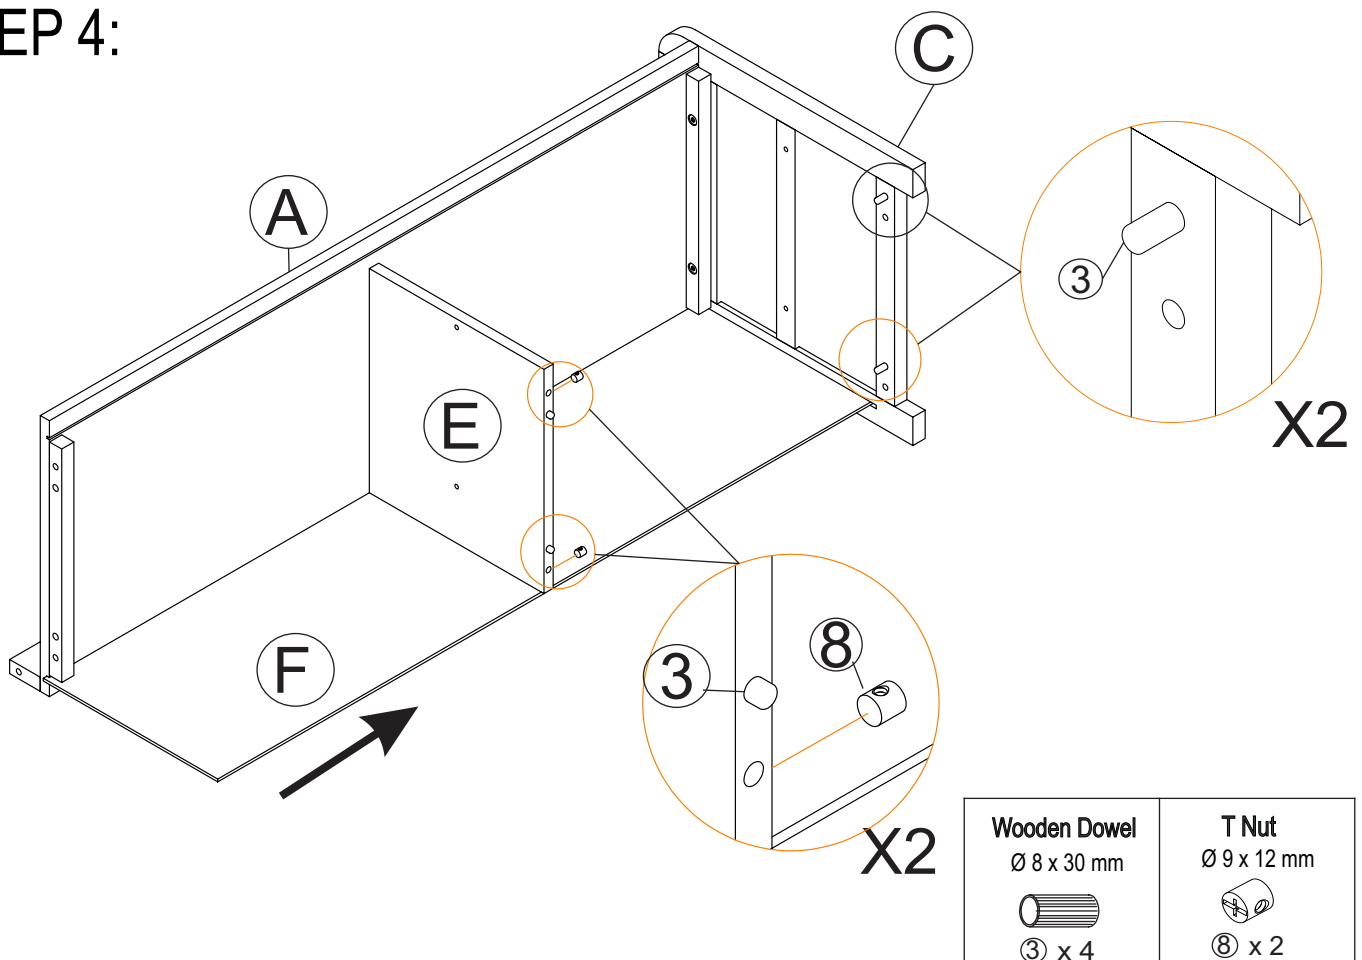


Wooden Dowel Ø 8 x 30 mm	T Nut Ø 9 x 12 mm
	
③ x 4	⑧ x 2


ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

STEP 5:

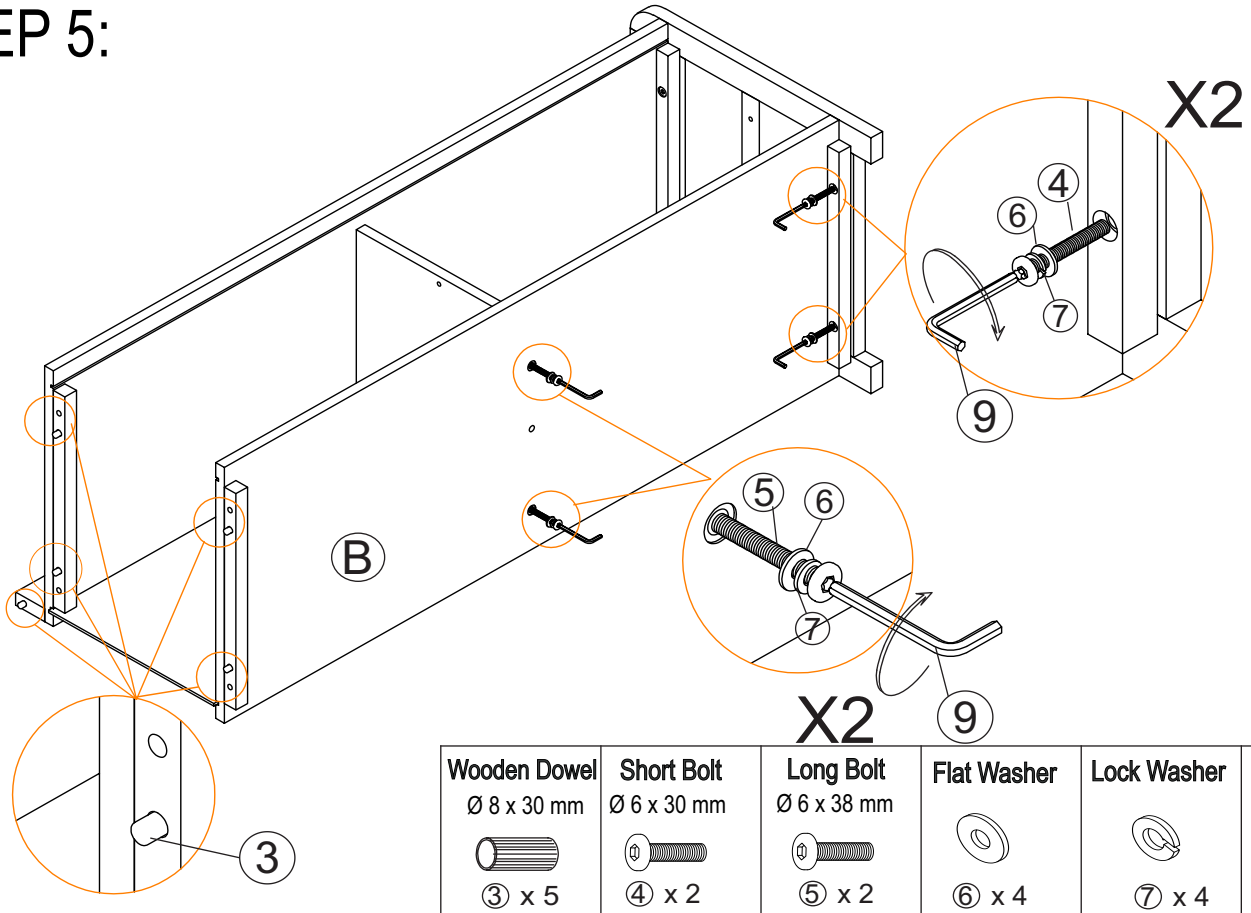


STEP 6:

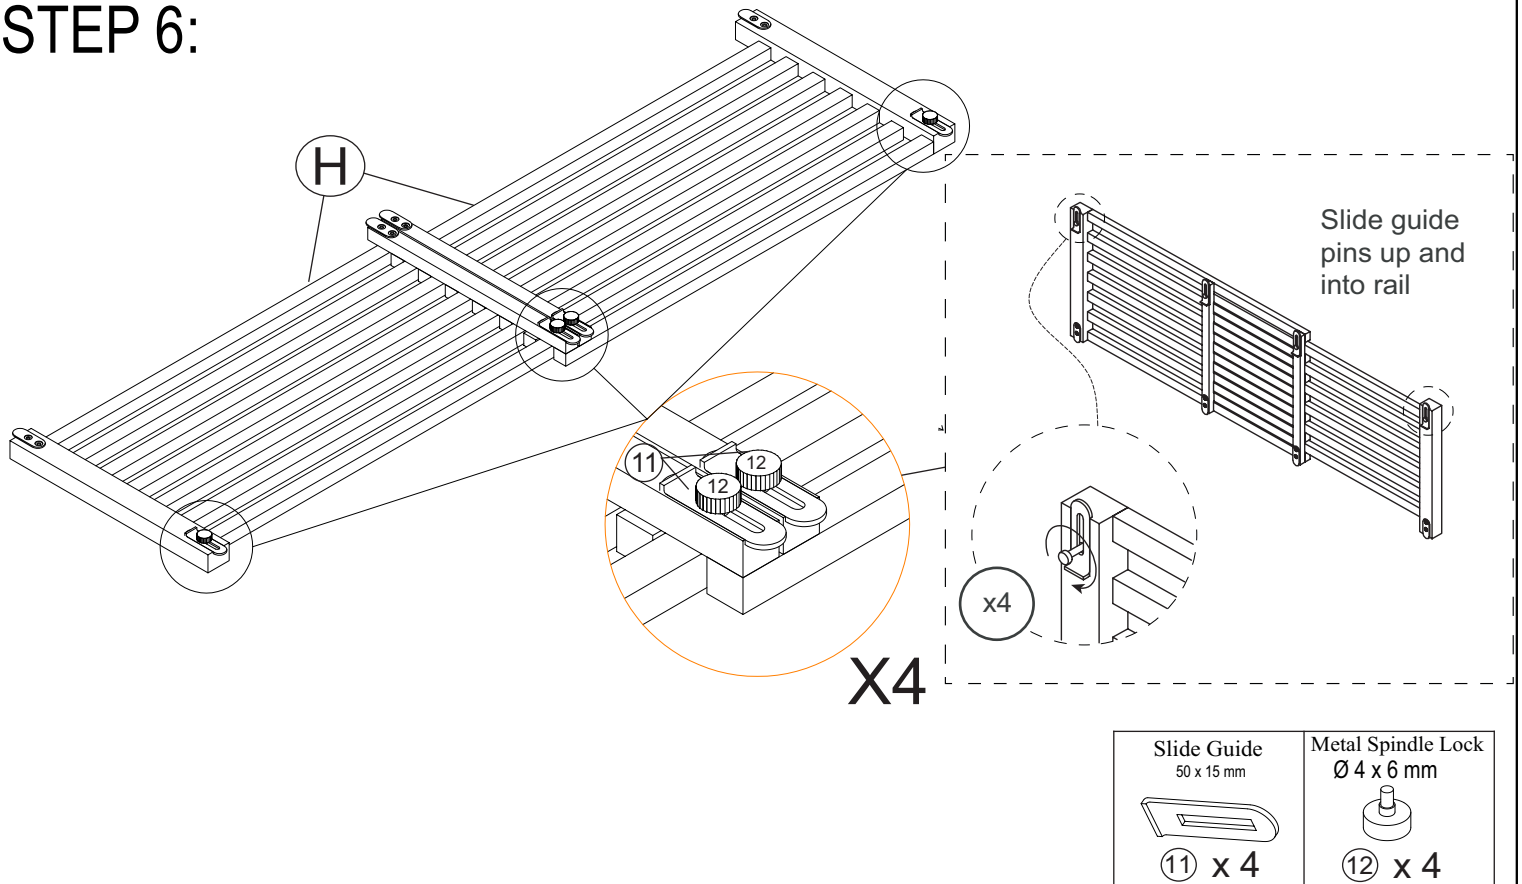


ASSEMBLY INSTRUCTION

ITEM NO.N715P196968

STEP 7:

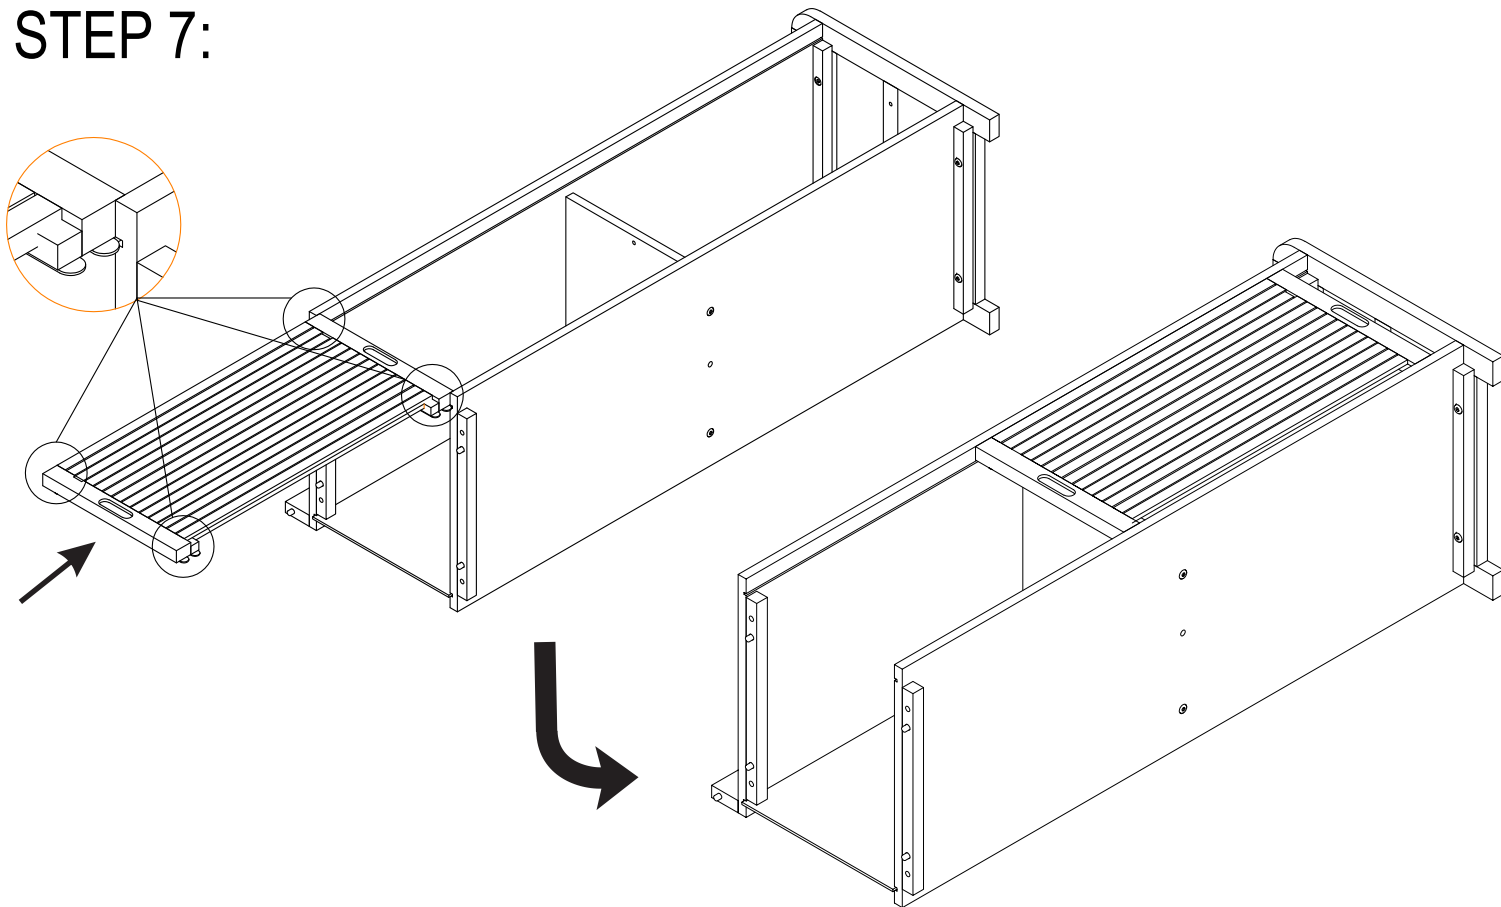

STEP 8:

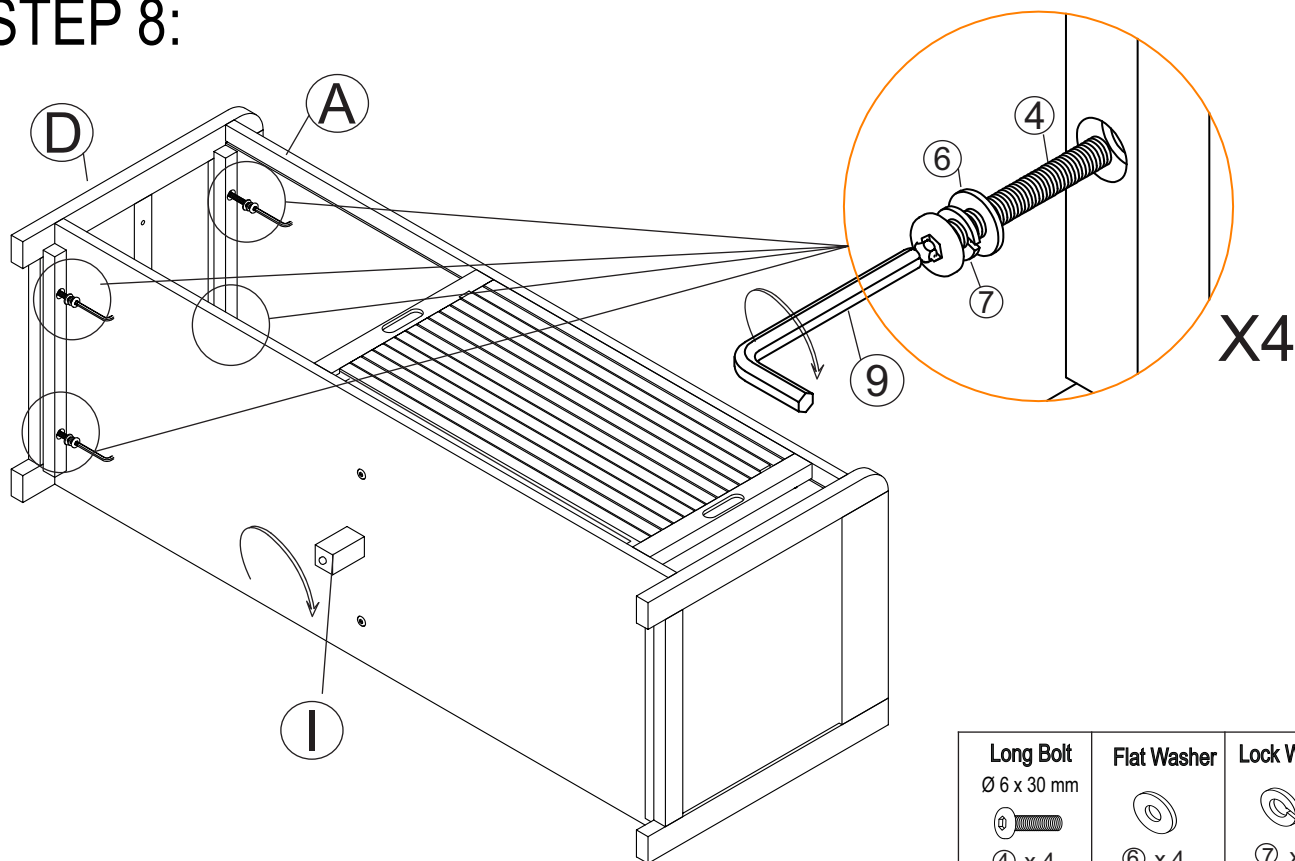


Long Bolt Ø 6 x 30 mm	Flat Washer	Lock Washer	Allen Key K4
			
④ x 4	⑥ x 4	⑦ x 4	⑨ x 1

ASSEMBLY INSTRUCTION

ITEM NO.N715P196968


STEP 9 : The Shelf can be put in the left or right compartment, the process is the same

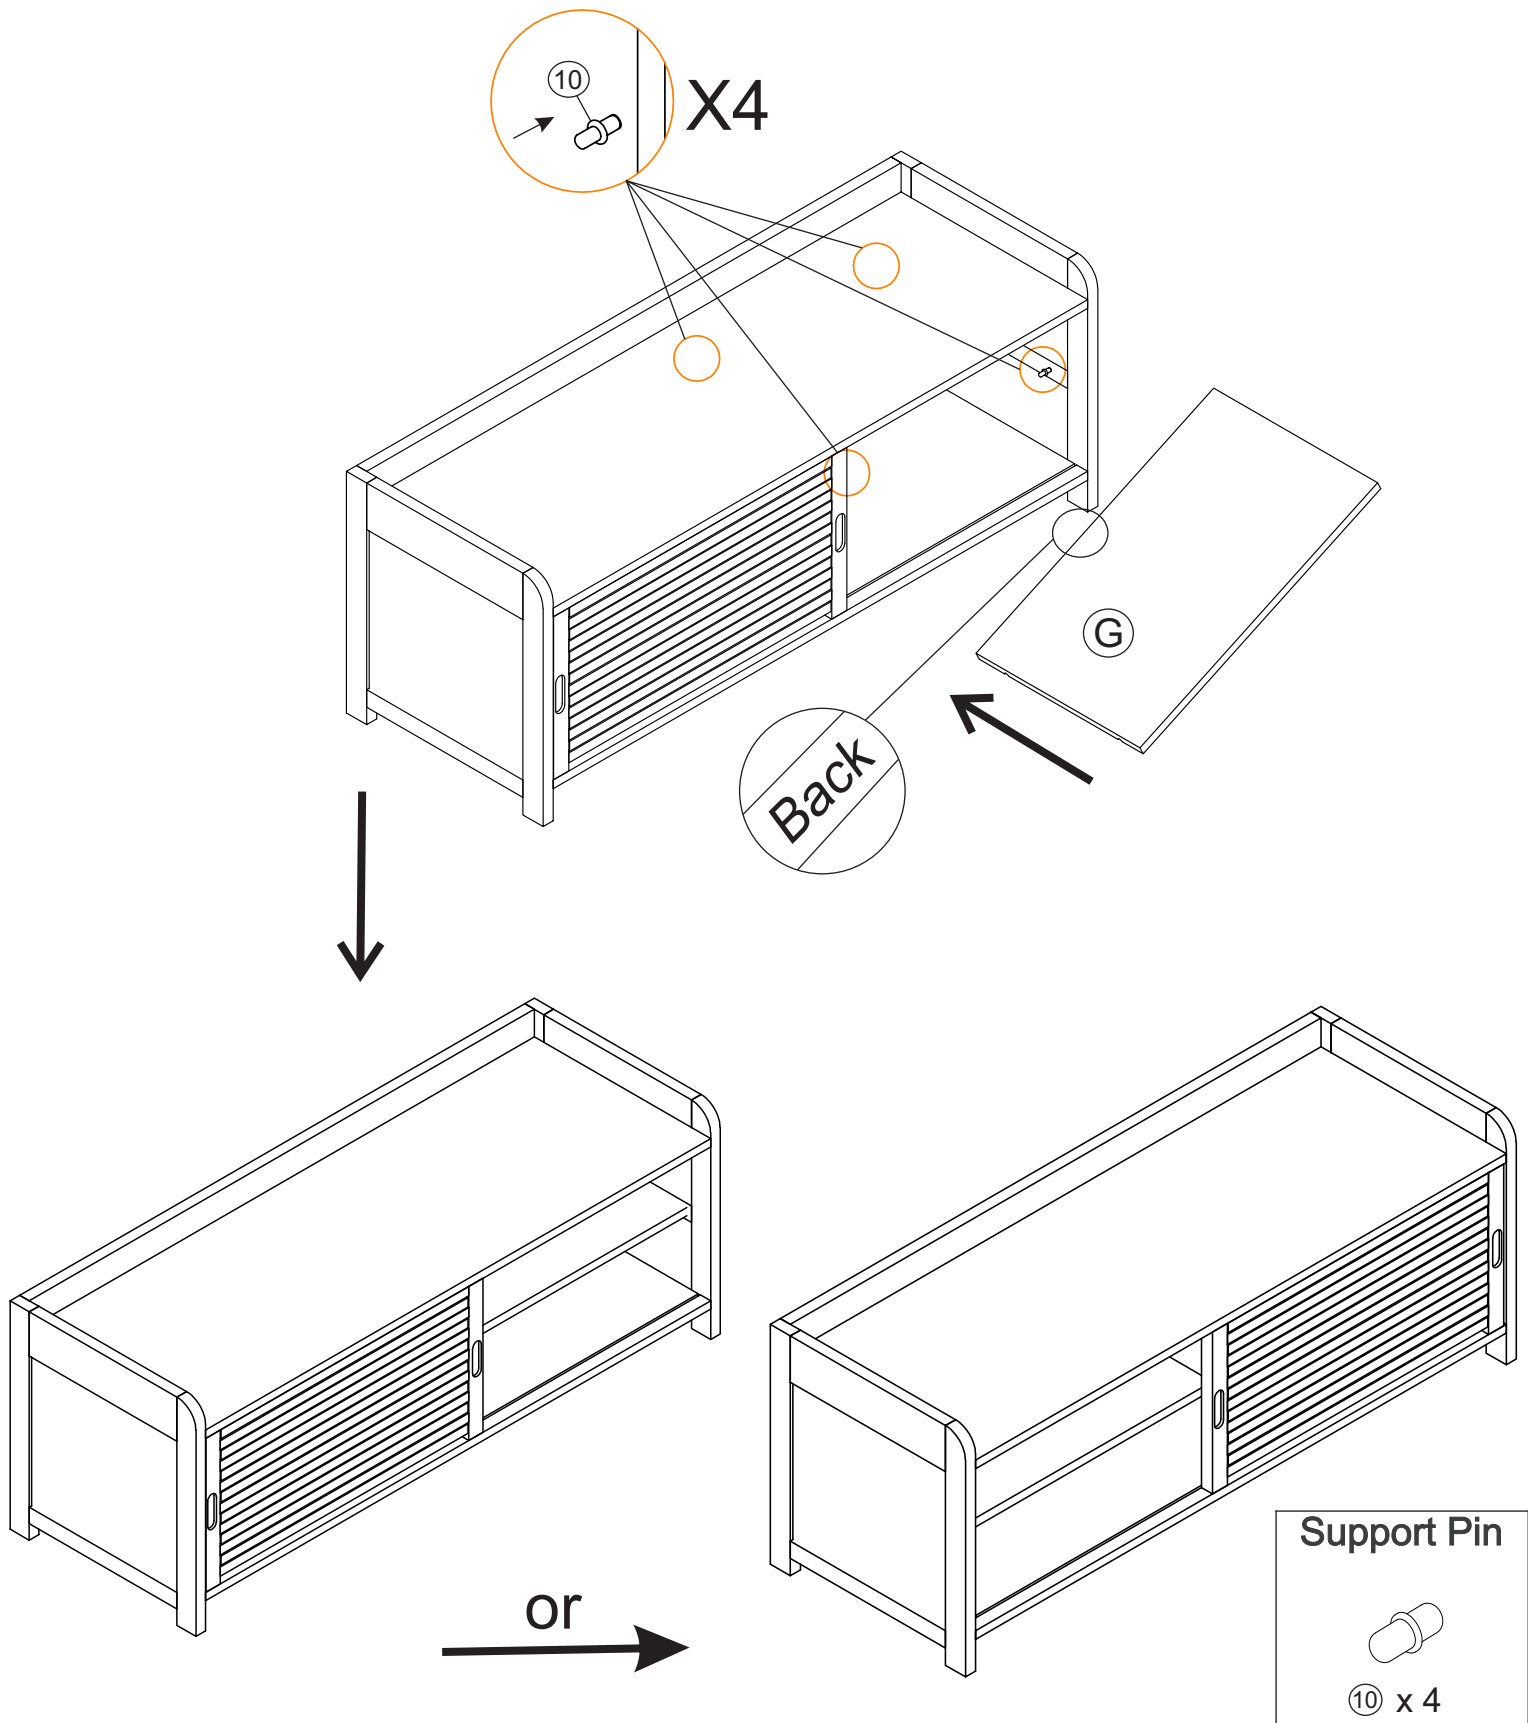

ASSEMBLY INSTRUCTION

ITEM NO. N715P196968

STEP 10 :

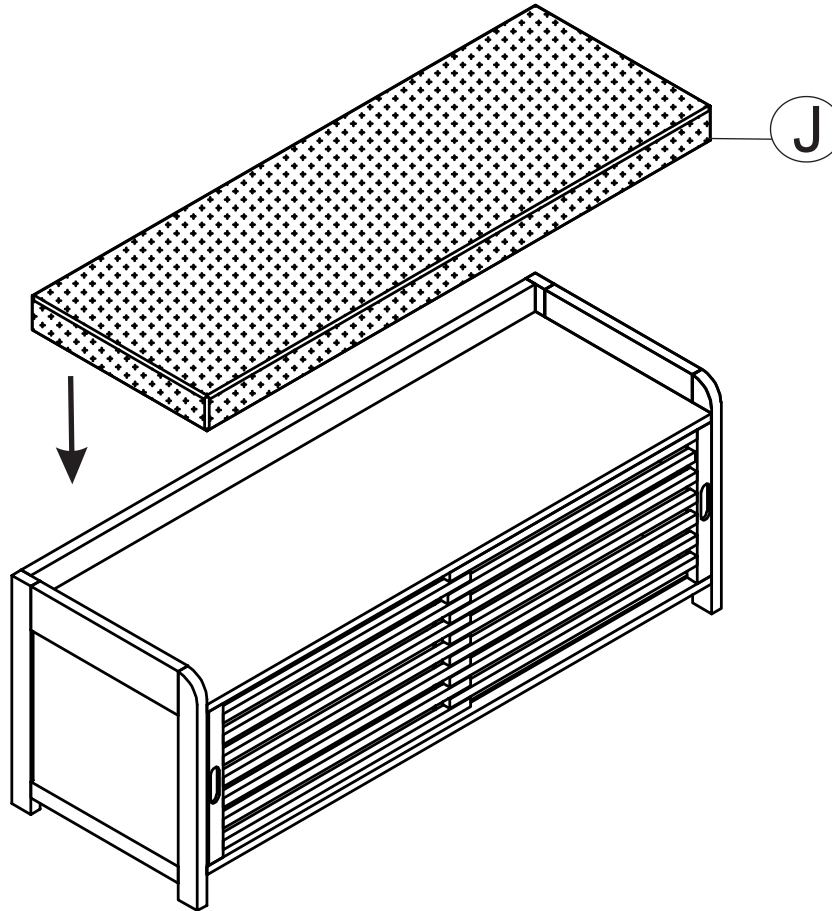

Finished :

