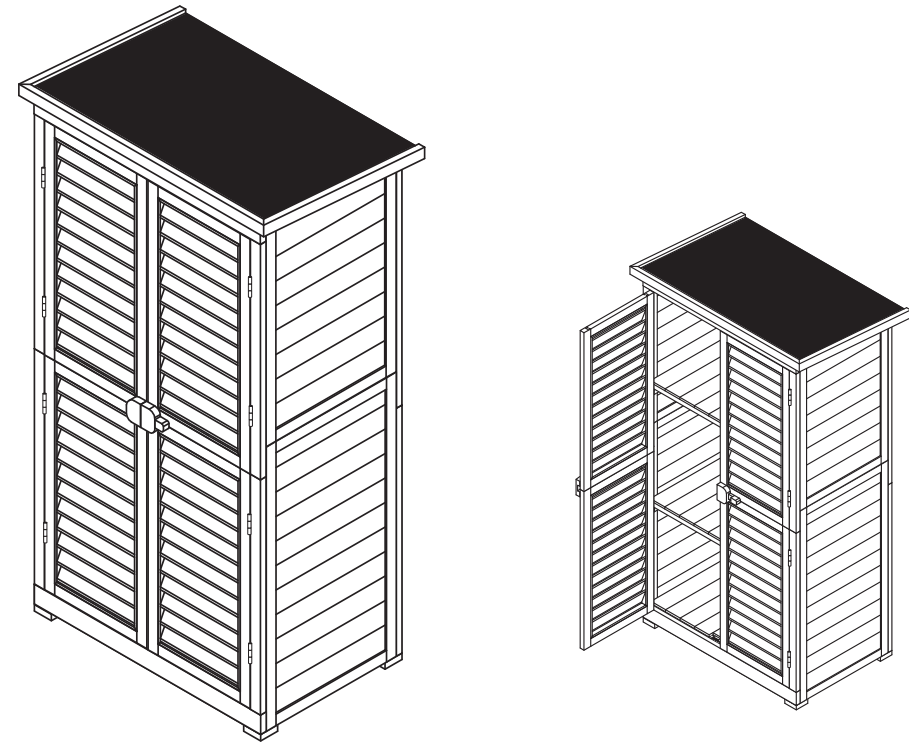




ASSEMBLY INSTRUCTIONS

WOOD GARDEN SHED

SKU: T-PS23-0222-MBG

BE
YOUR
LIFE BUILDER
















www.patiowell.com



Patiowell
Wood Garden Shed
Installation Tutorial
[https://www.patiowell.com/
pages/video-t-ps23-0222-mbg](https://www.patiowell.com/pages/video-t-ps23-0222-mbg)


 saleservice@patiowell.com

PARTS

 1 2pcs	 2 1pcs	 3 2pcs	 4 4pcs
 5 1pcs	 6 1pcs	 7 1pcs	 8 1pcs
 9 1pcs	 10 1pcs	 11 1pcs	 12 1pcs
 13 1pcs	 14 1pcs	 15 1pcs	 16 1pcs
 17 2pcs	 18 1pcs	 M4*25 12 pcs	 D 4 pcs
	 M4*35 44 pcs	 M3*30 8pcs	 E 8pcs


STEP 1

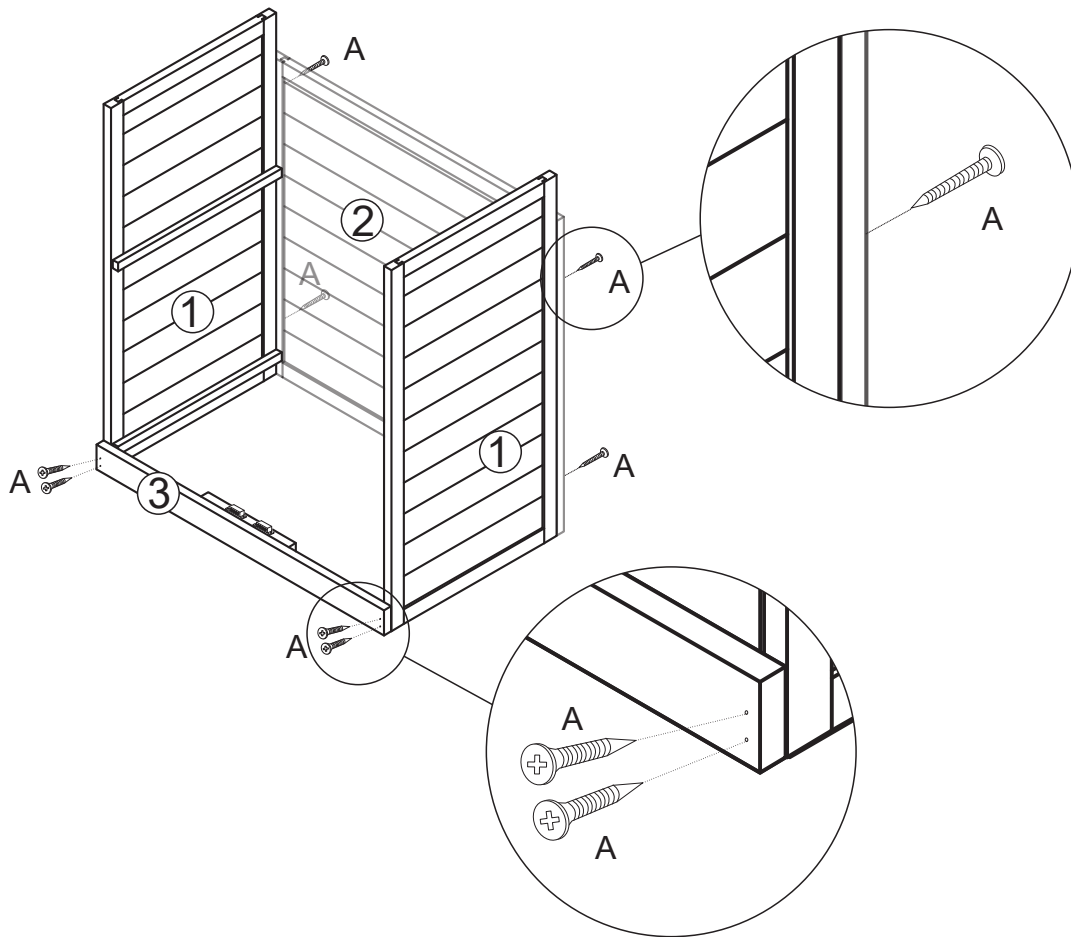When screwing, it is necessary to be vertical.




STEP 2

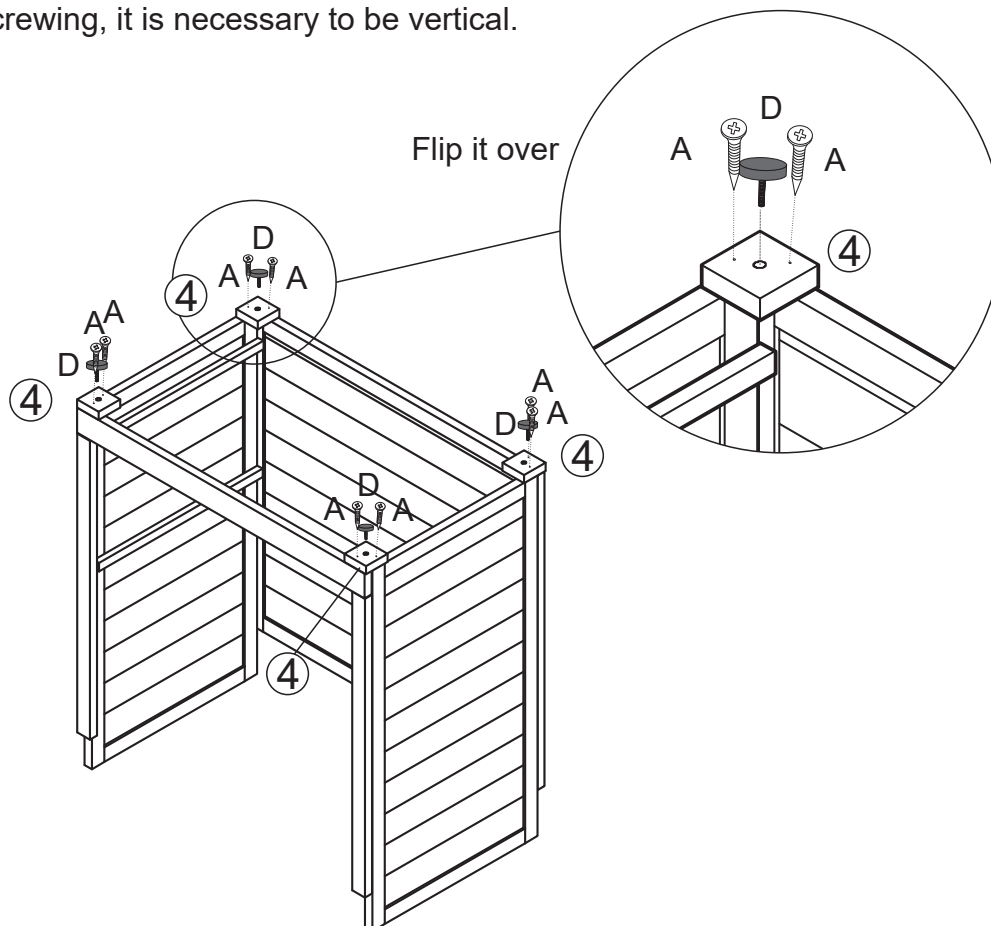When screwing, it is necessary to be vertical.




STEP 3

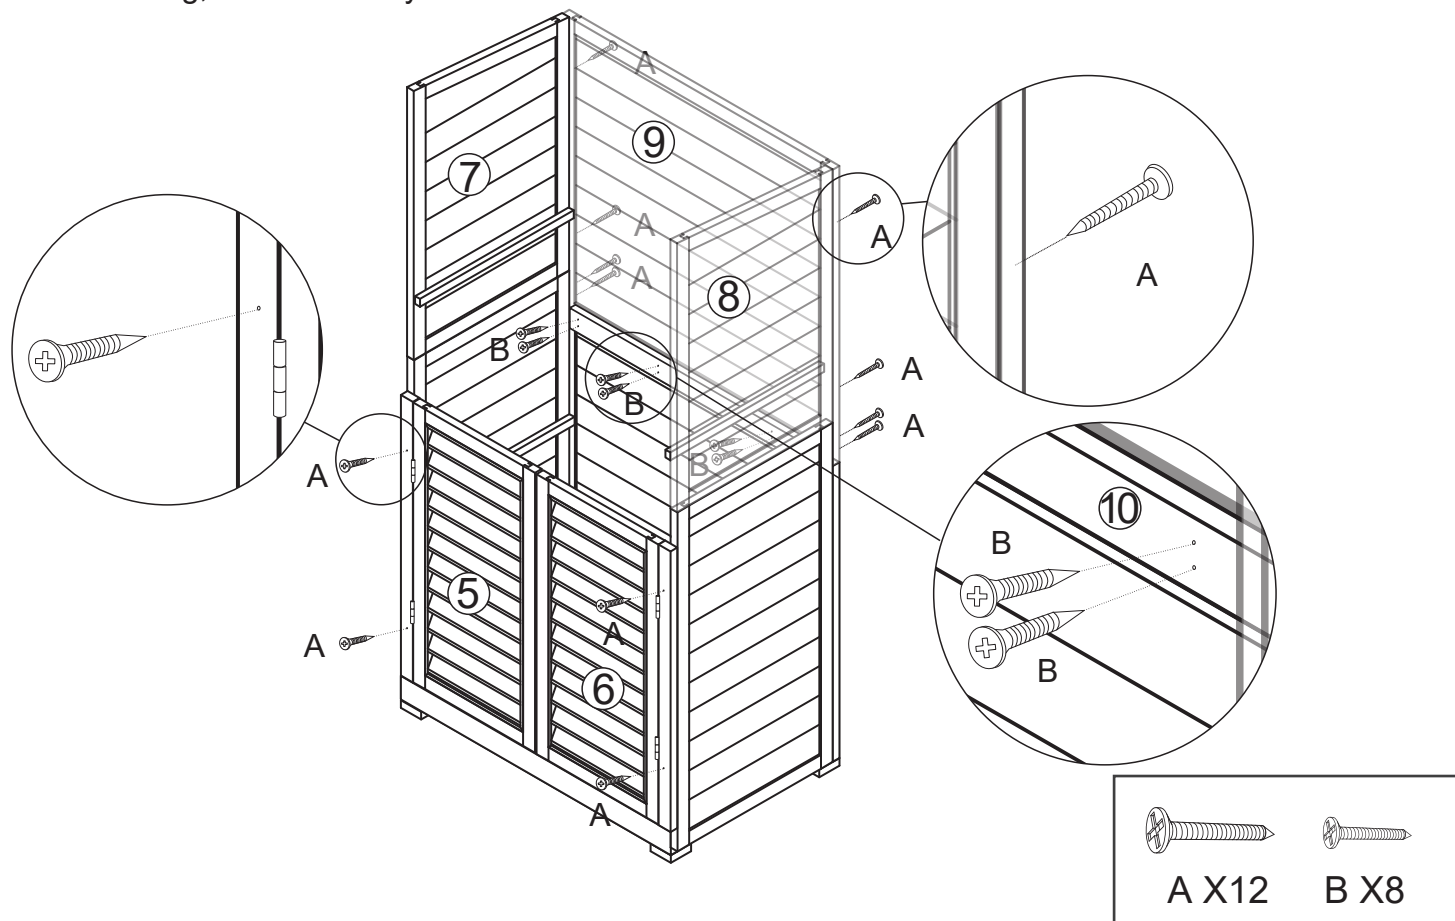When screwing, it is necessary to be vertical.




STEP 4

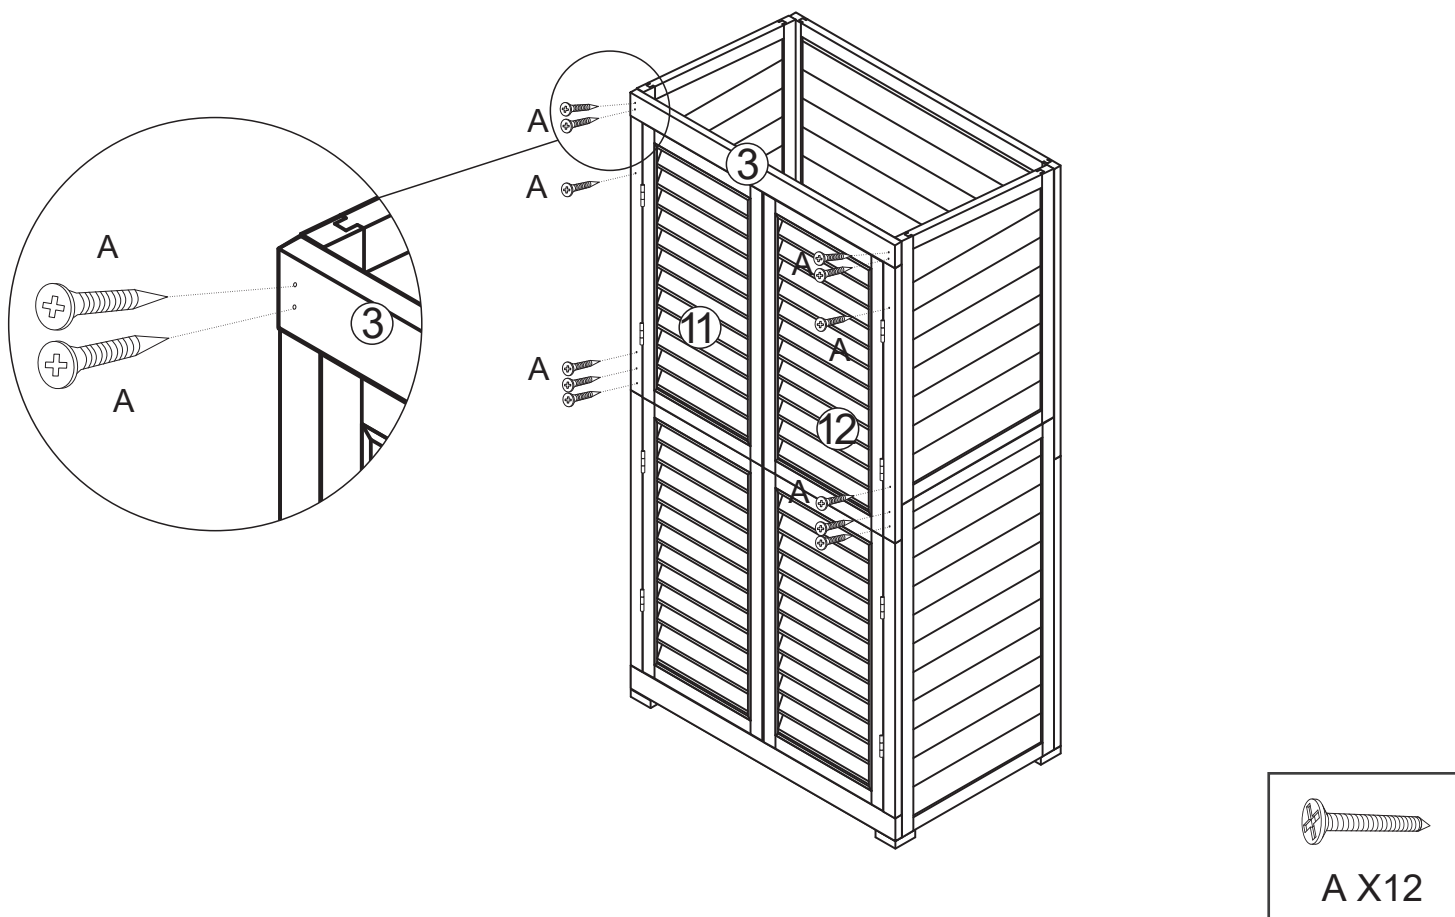When screwing, it is necessary to be vertical.



STEP 5

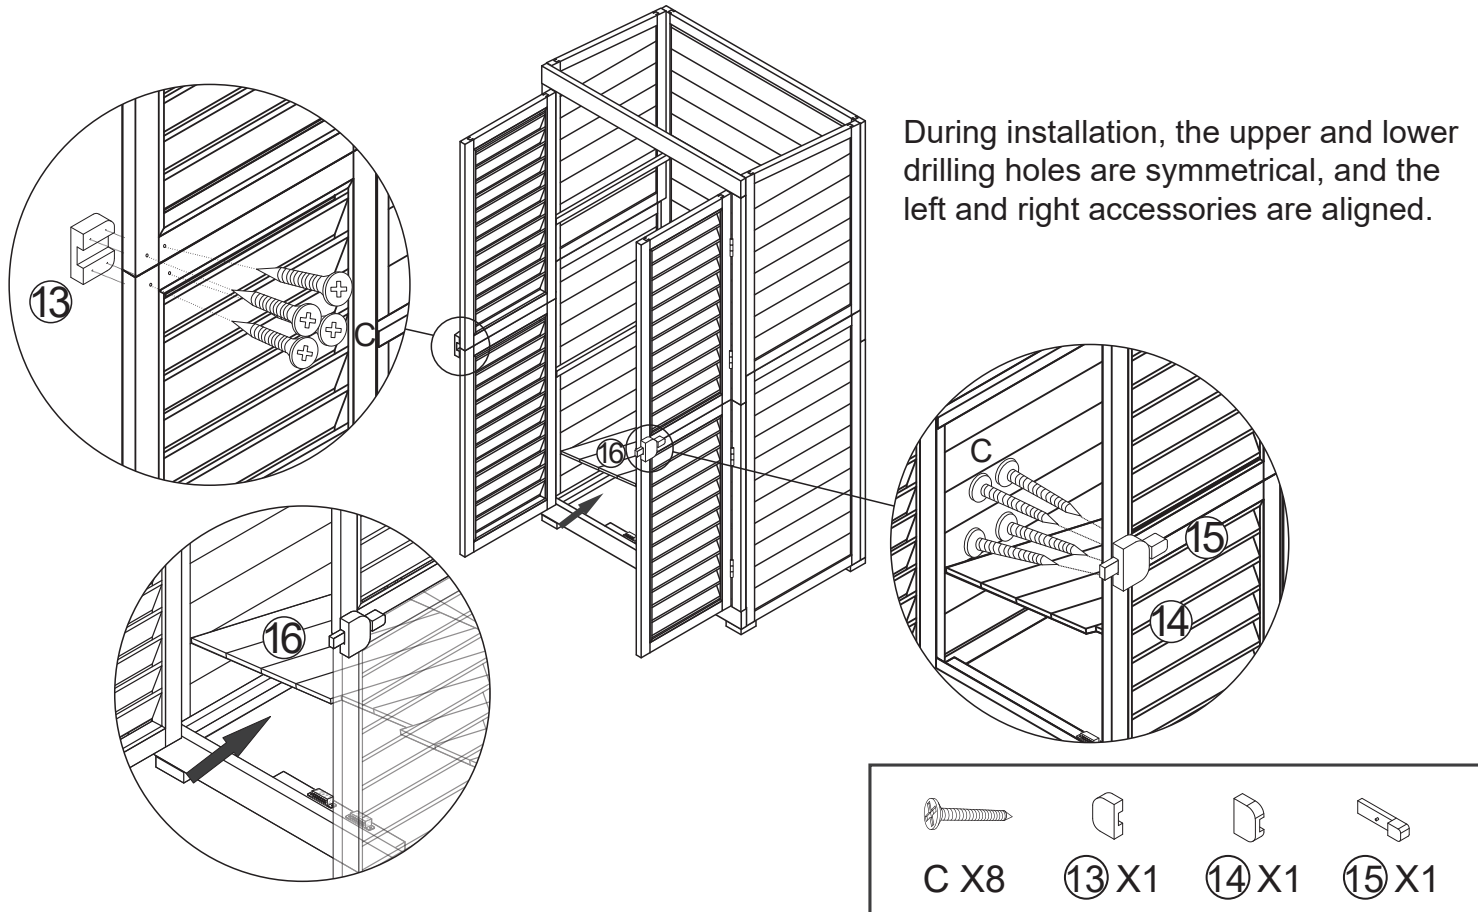When screwing, it is necessary to be vertical.



STEP 6

When screwing, it is necessary to be vertical.

