



Post & Frame Installation System

How It Works


Basic Installation Steps

5½" WPC Fence Slats on 72" Horizontal Fence Kits* and 75" Posts*

1. Bolt down 1st Post.
2. Loosely screw Slat Channels into pre-drilled Posts. Adjust Channels to Slat thickness and tighten screws.
3. Slide first Slat into Channels. Secure with Slat Locking Screws. Add a Slat Spacer.
4. Bolt down 2nd Post. Add remaining Slats and Spacers.
5. Secure with Slat Locking Screws and Brace Strap.


*See detailed instructions included with
OUTDECO Horizontal (Slat) Fence Kits.**

**Sold separately. All hardware is
included with Slat Fence Kits and Posts.
Illustrations not to scale.*

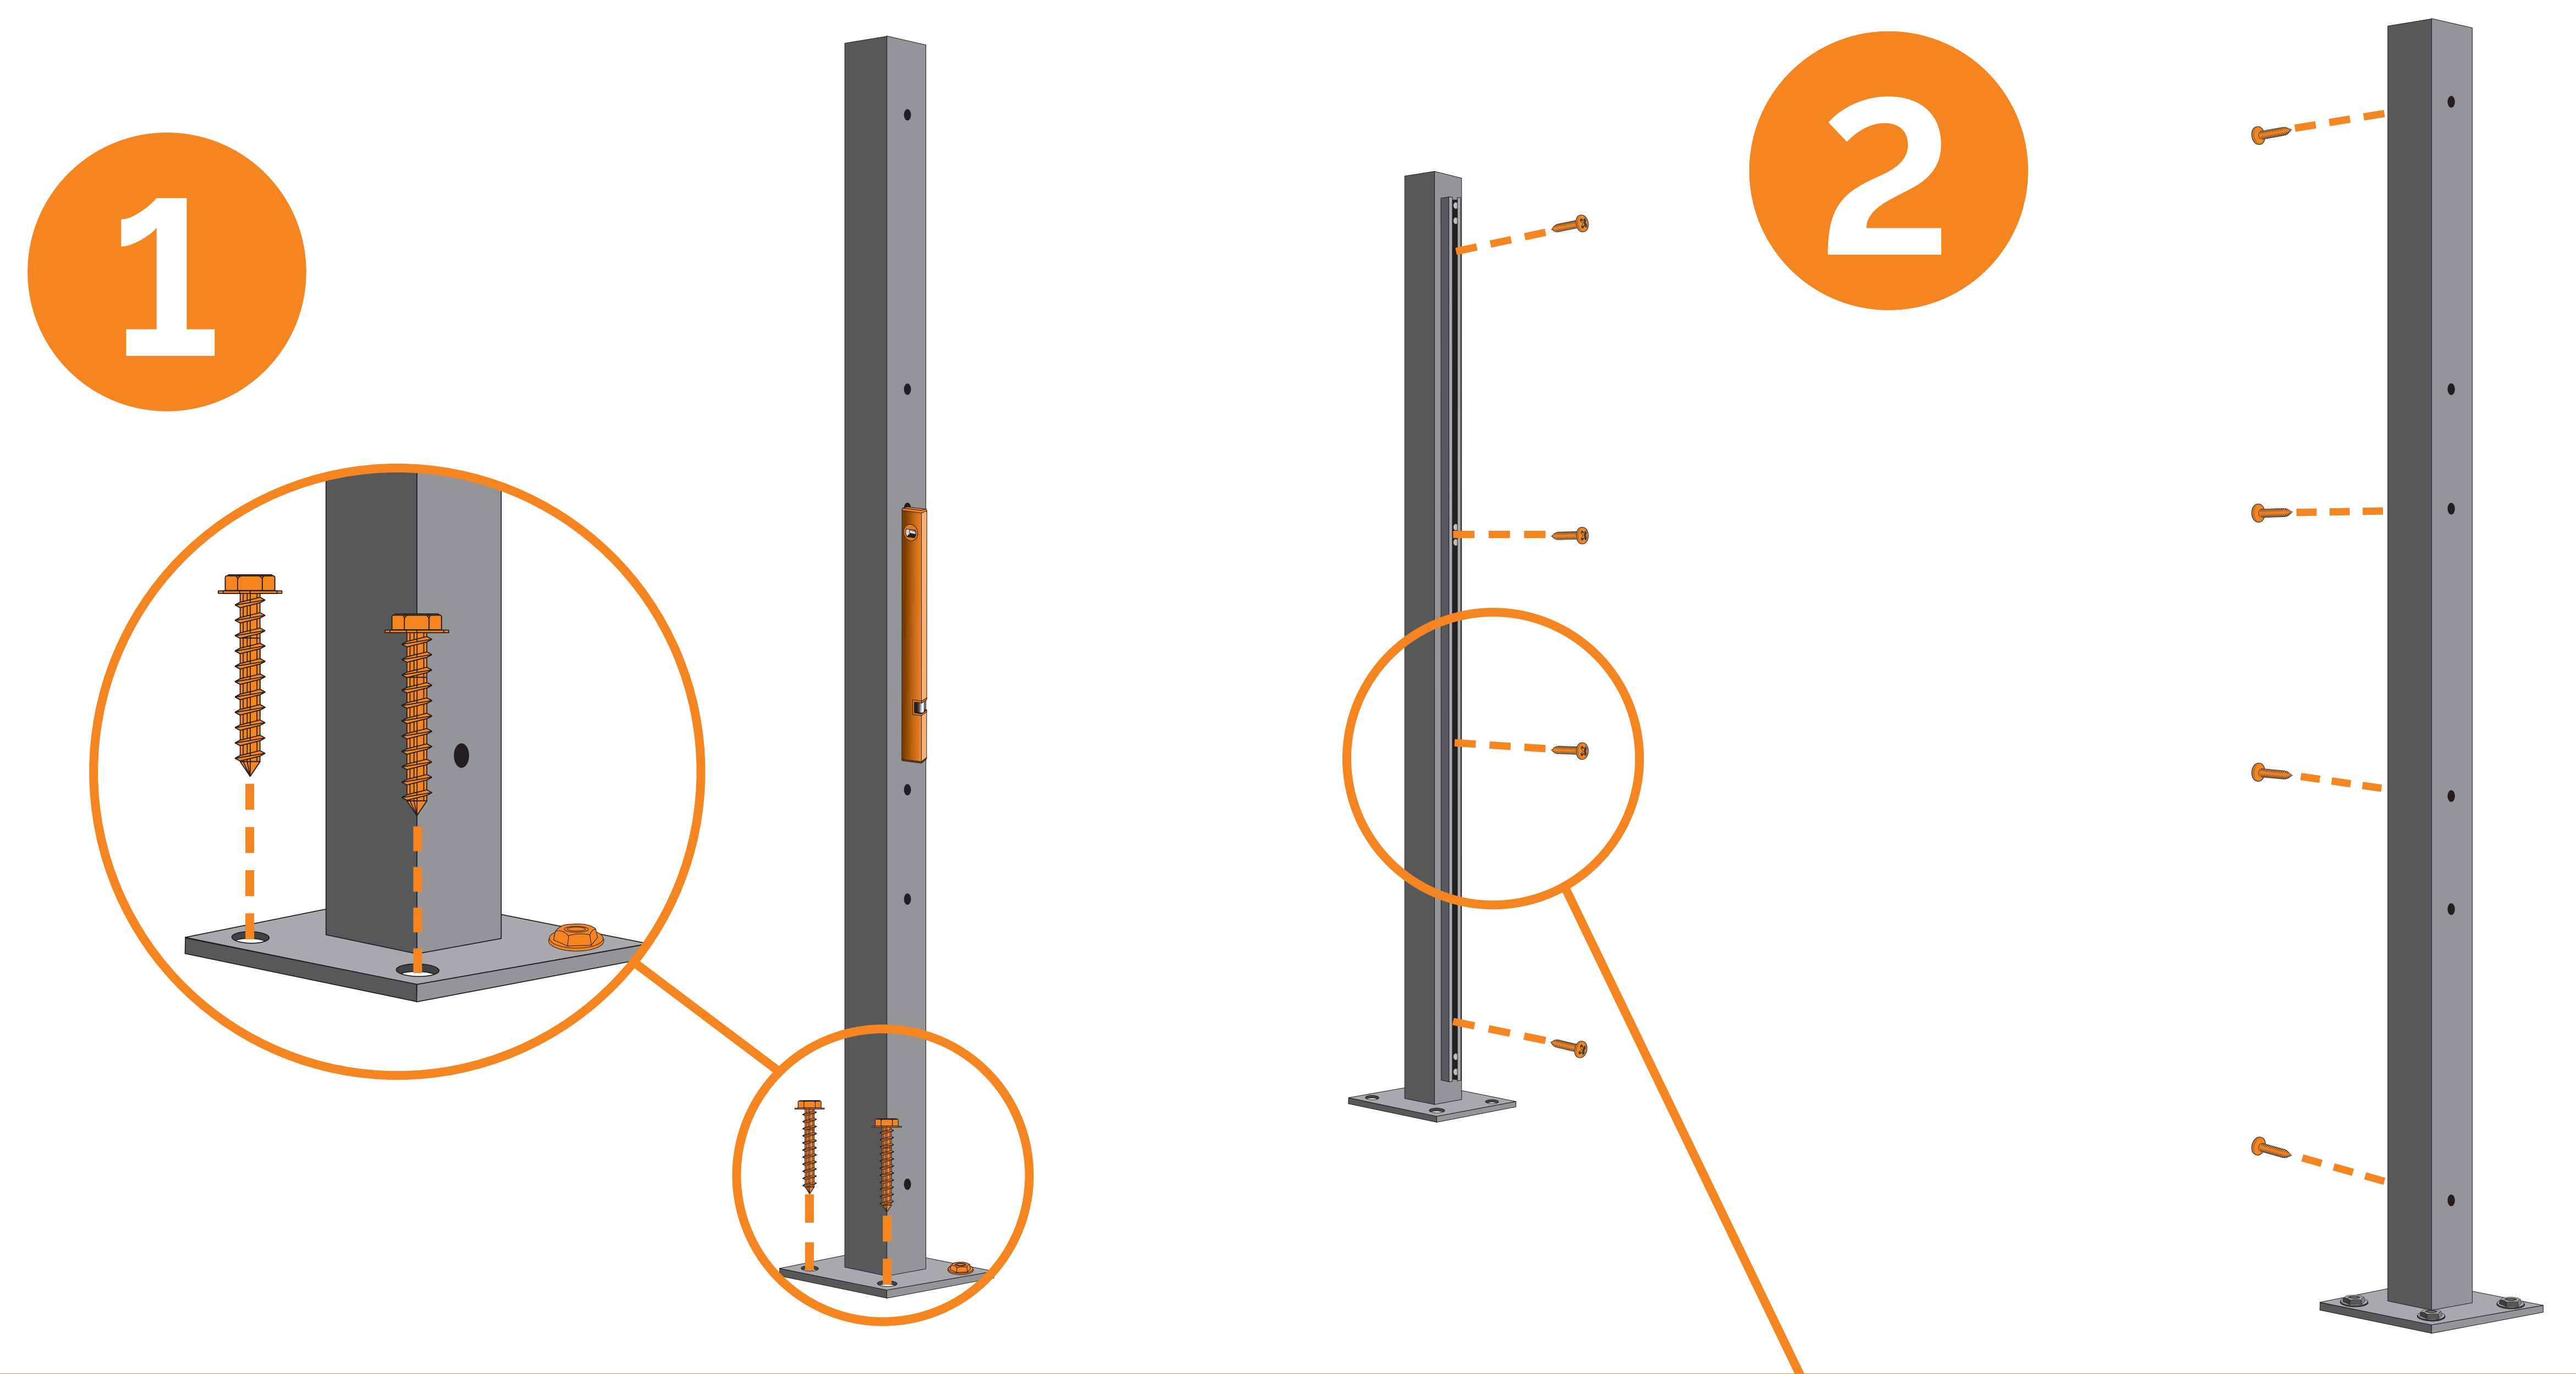


Channels adjust to fit Slats ½" to 1" thick.



Position
Channels

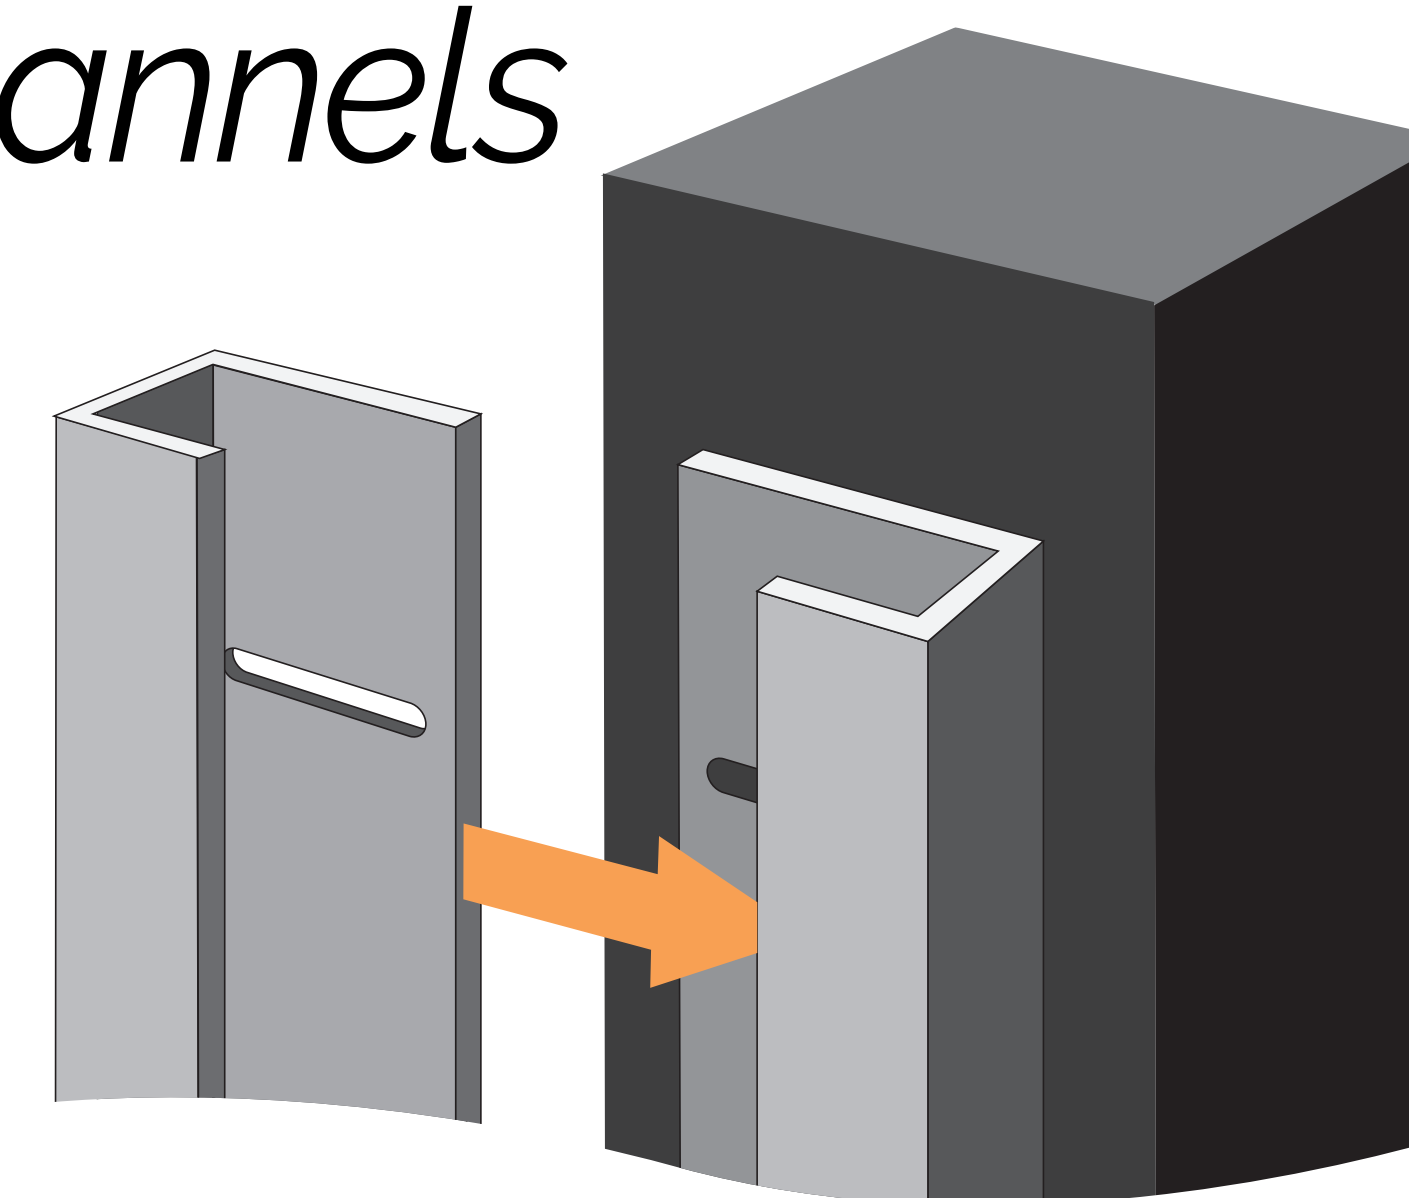

Fit Channels
to Slat

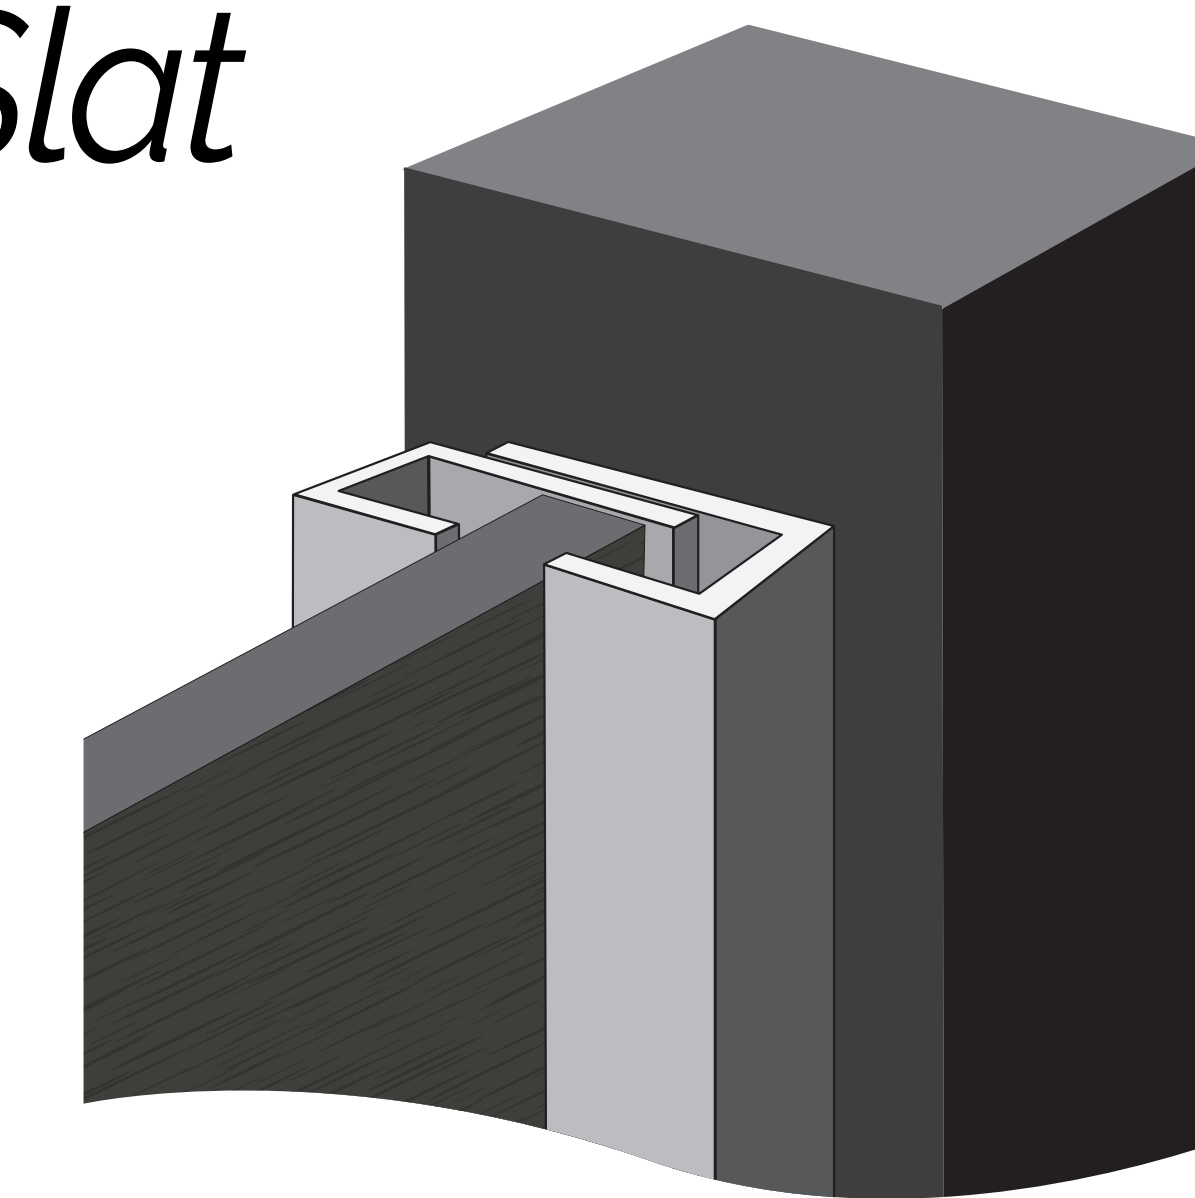


Screw in Channels

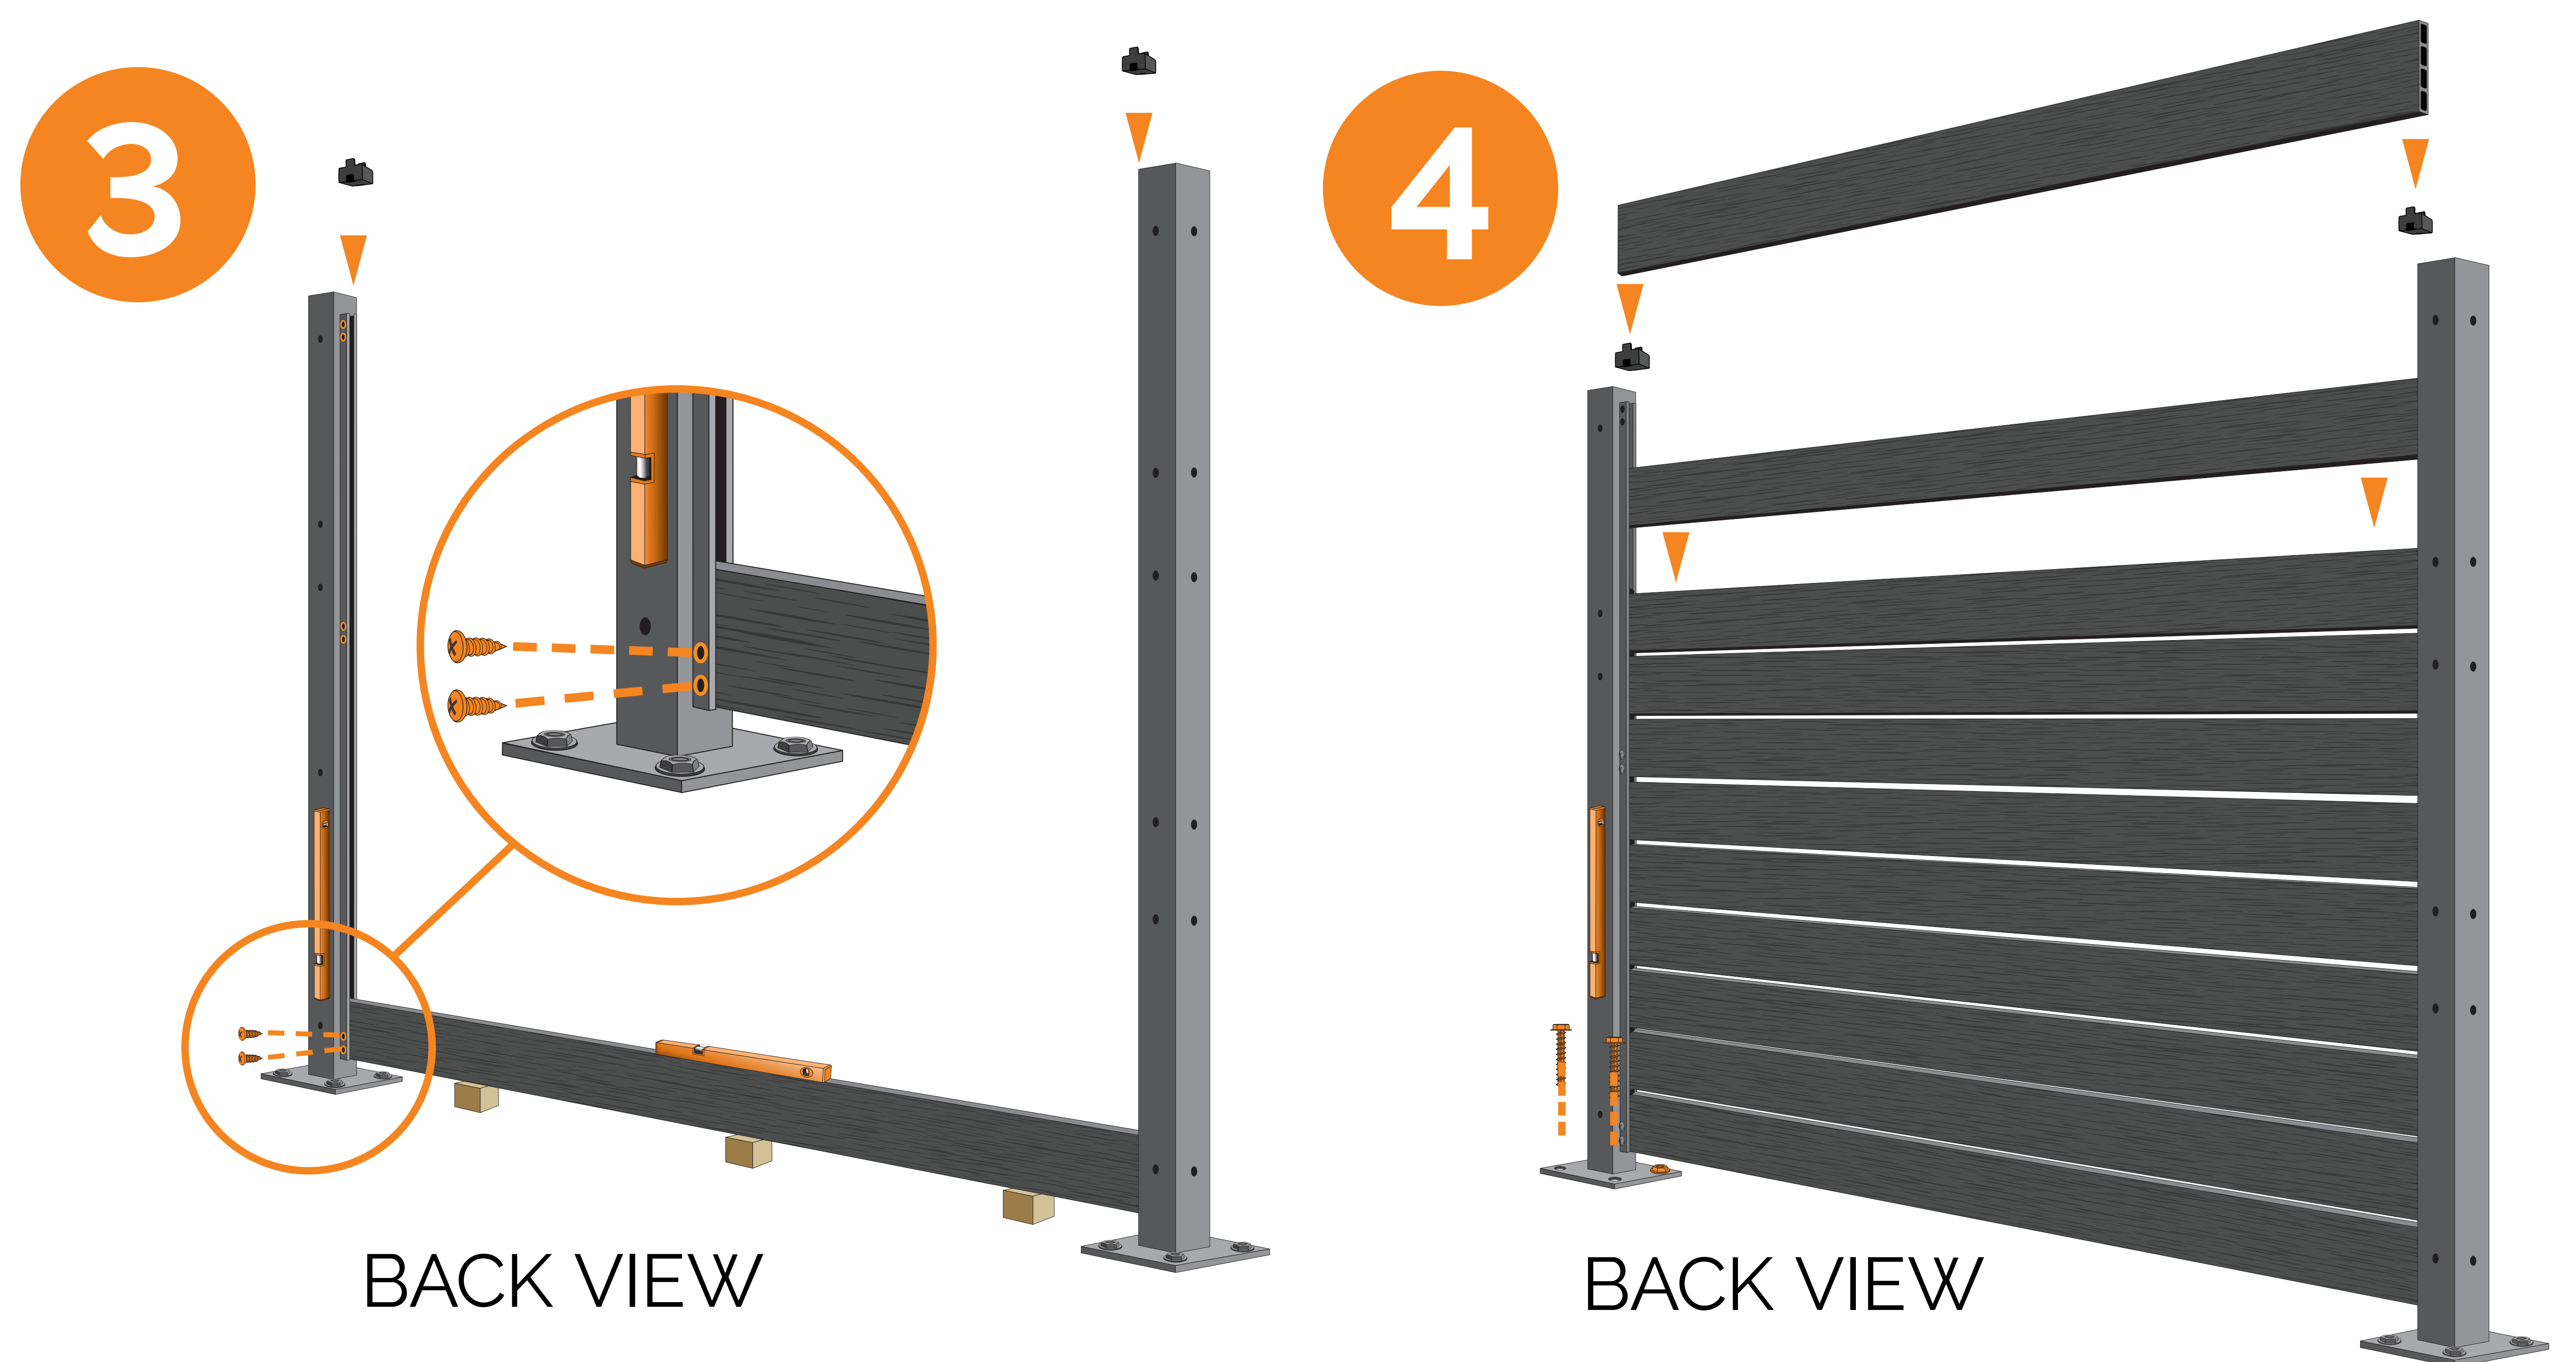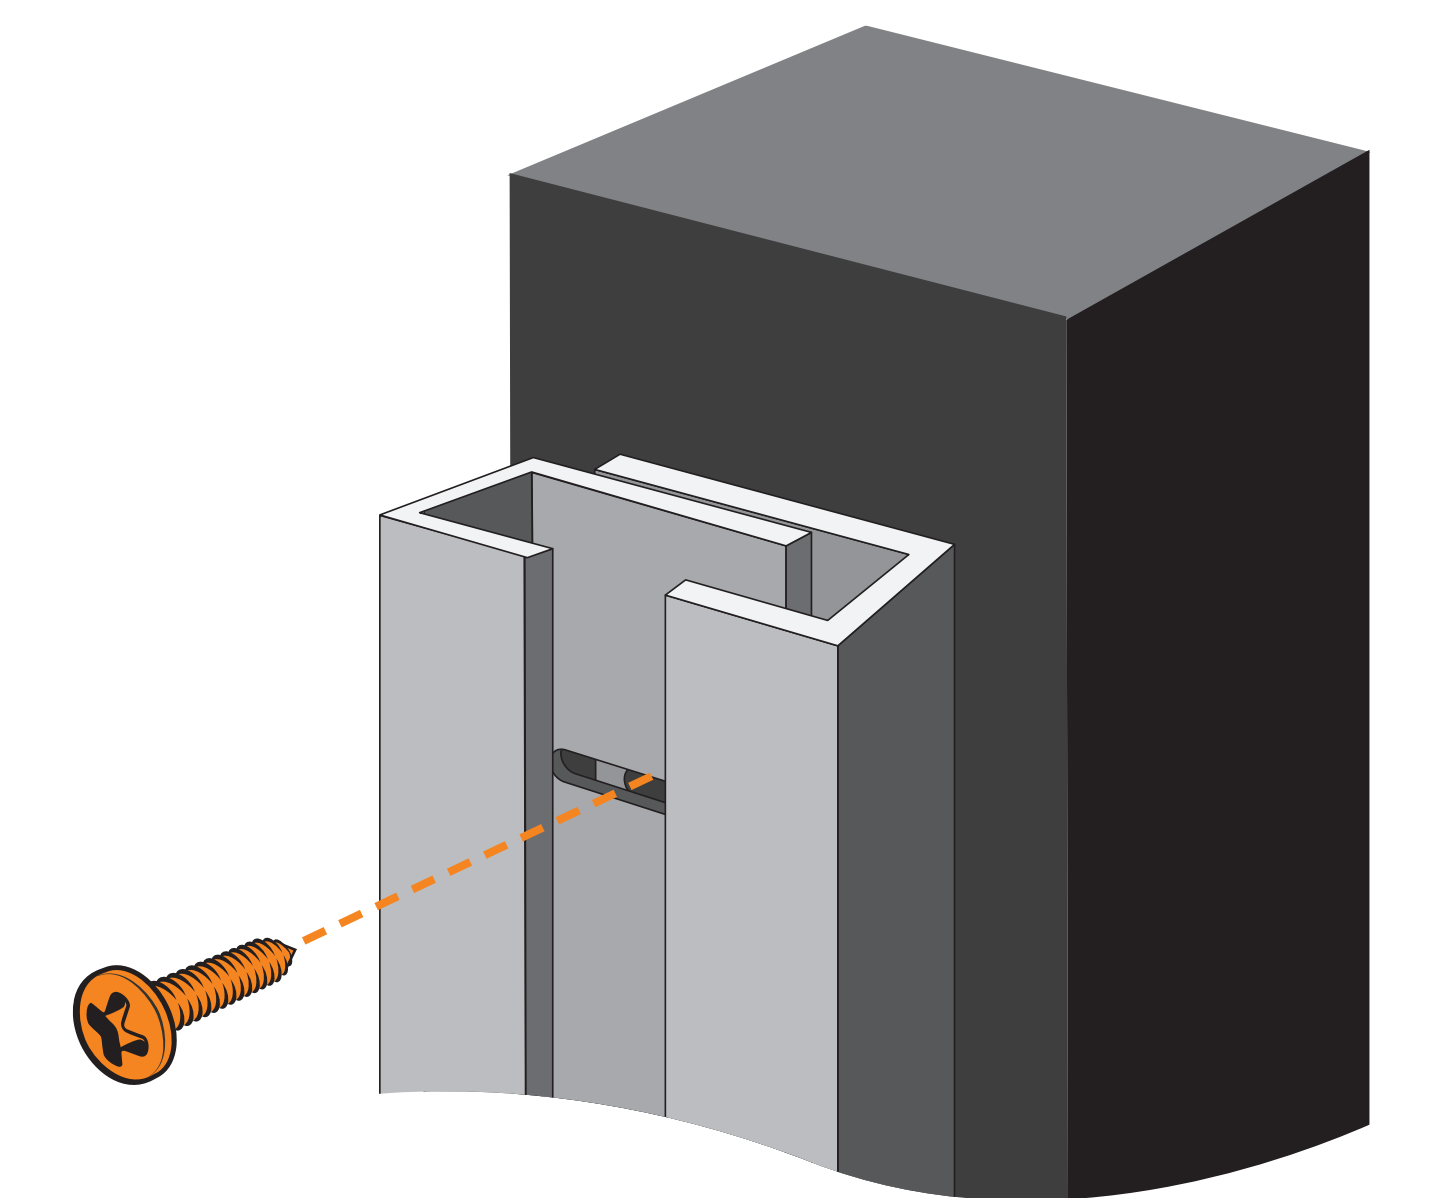

BACK VIEW

BACK VIEW

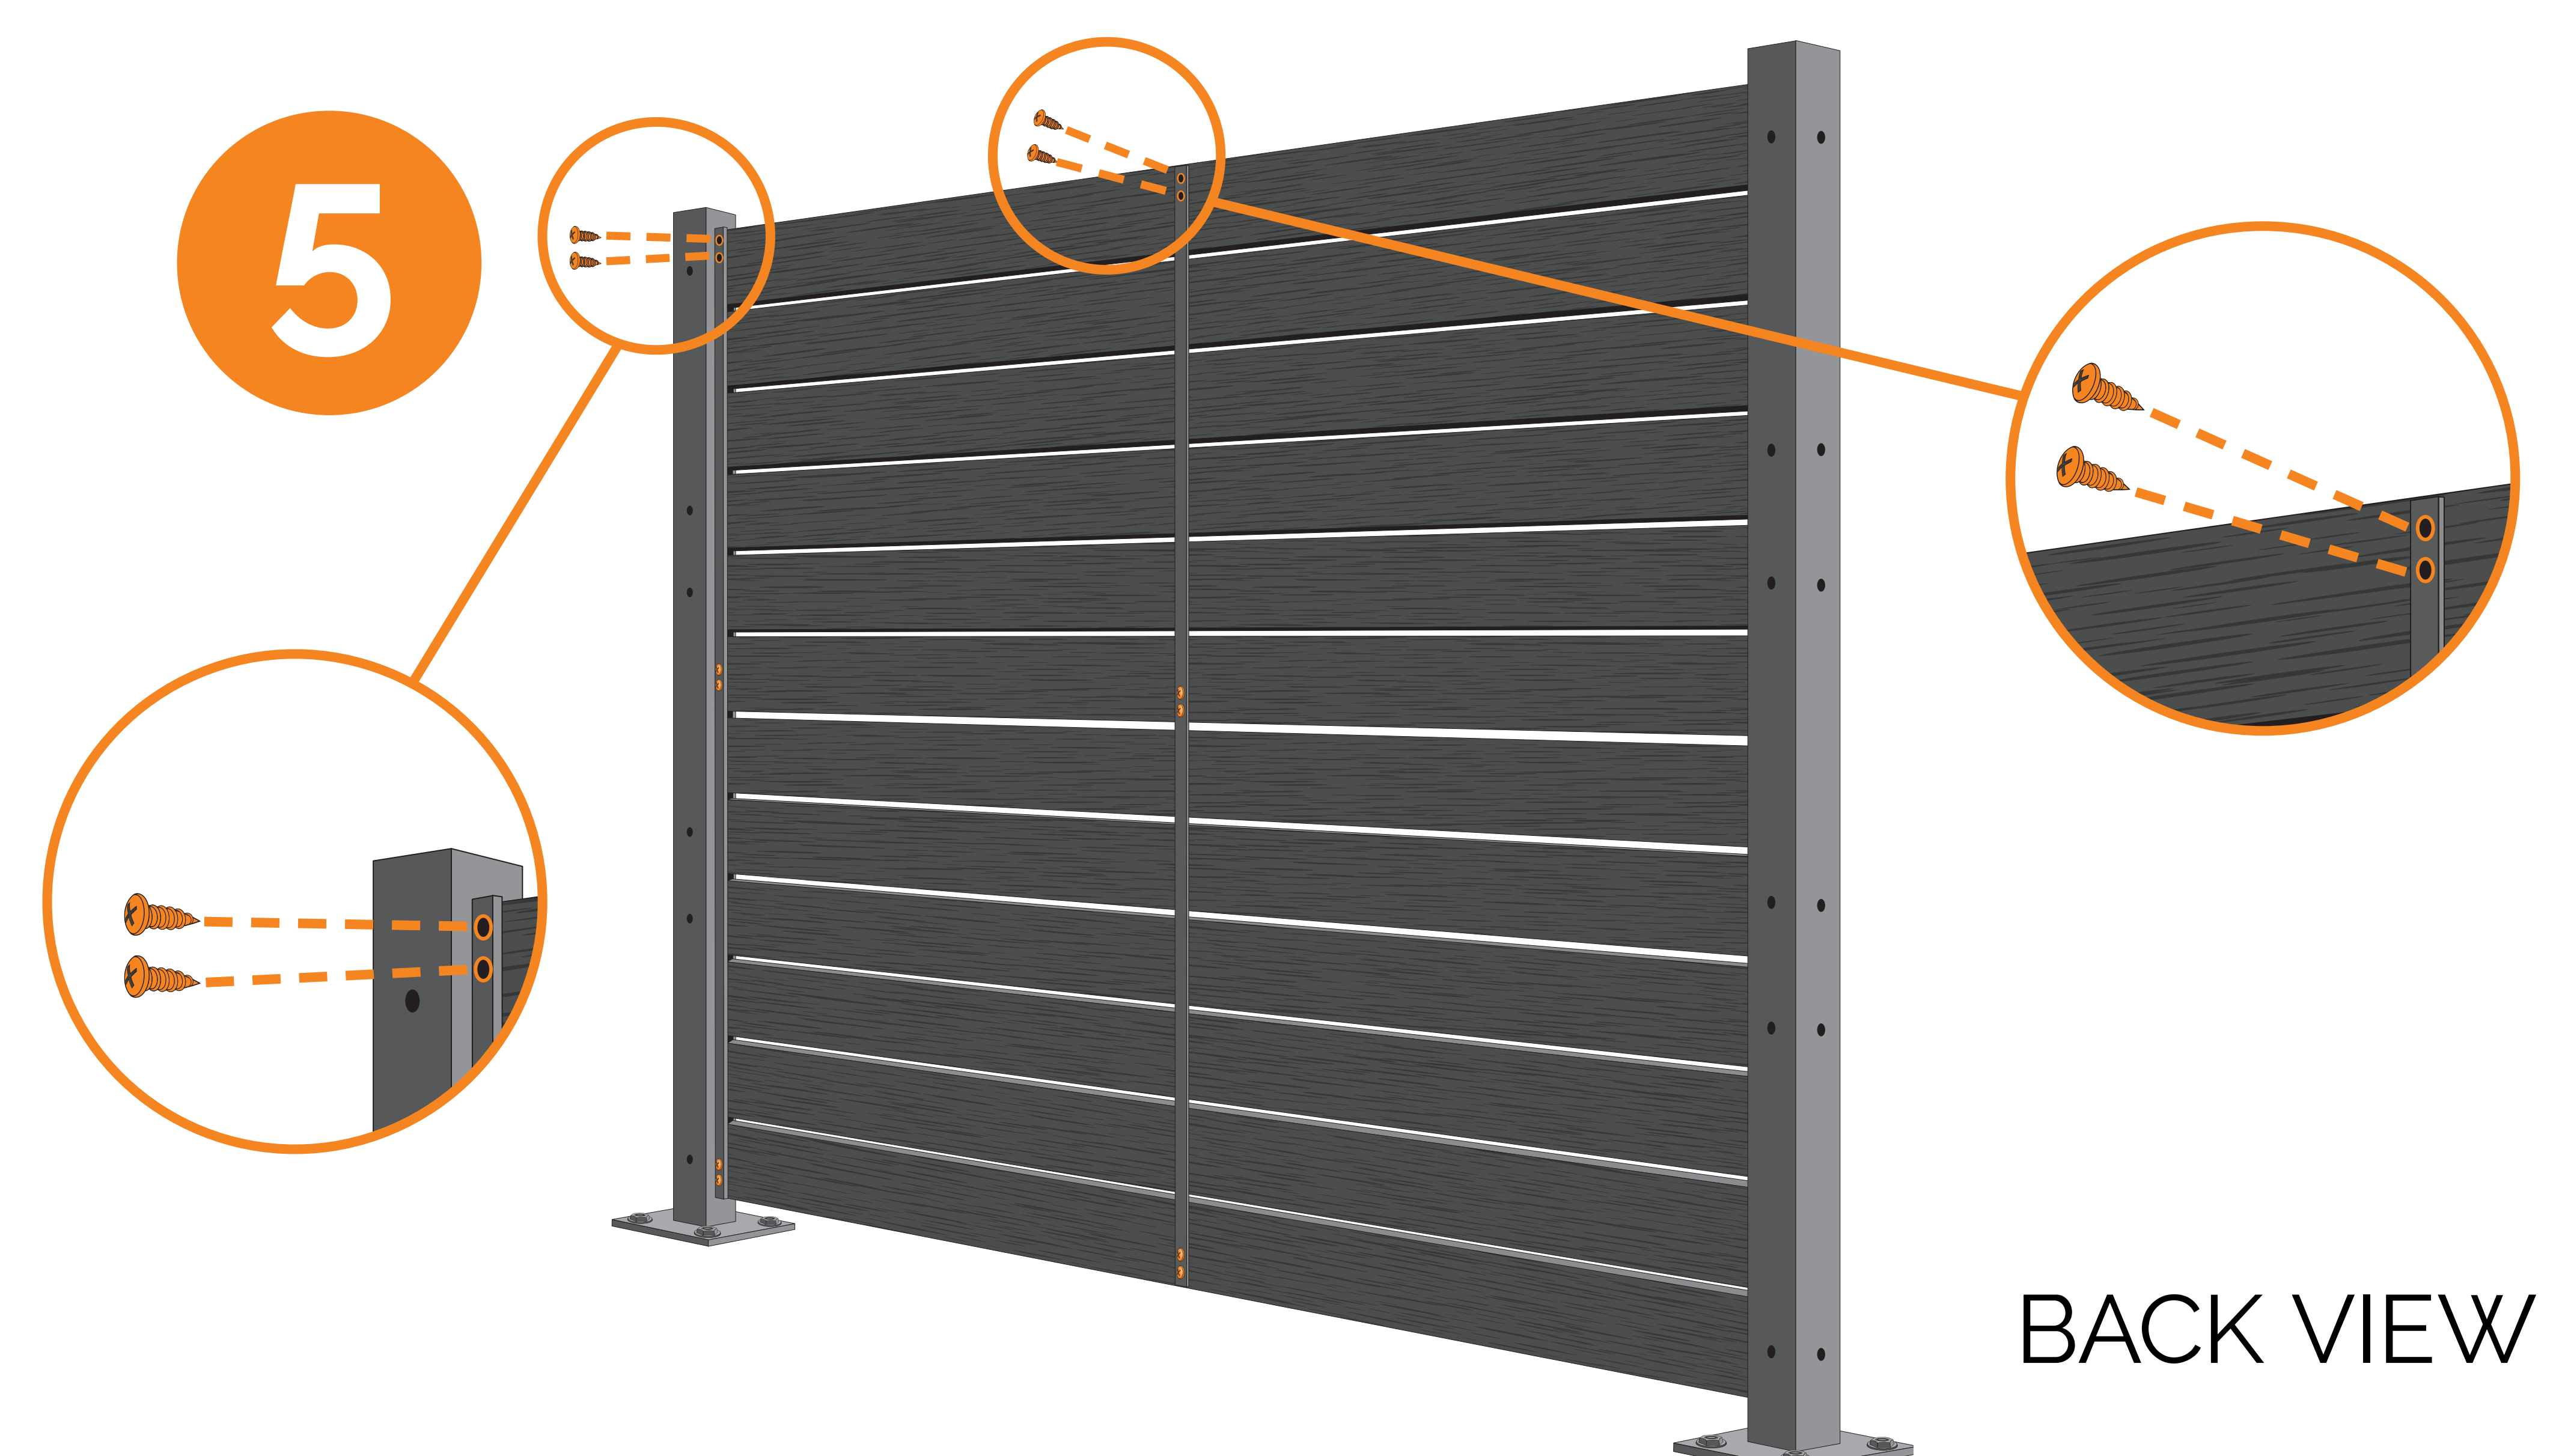

BACK VIEW

12 – 5½" Slats + 22 Slat Spacers