

Installation Instructions for Camalay® French Door Shade

Some fabrics will need to be ironed from being shipped. After installation, if wrinkles appear, the curtain can simply be sprayed using a water spray bottle, and the wrinkles will fall out.

INSTALLATION

1. Clean and dry surface where the adhesive strip will be attached.
2. From detached piece of hook fastener strip, remove plastic backing, exposing sticky side. (SEE PICTURE 1)
3. Place hook fastening strip above window molding or in desired position, making sure it is centered before adhering. (SEE PICTURE 2)
4. Use spoon or hard object to rub against adhesive hook fastener, smoothing and removing any air bubbles.
5. For lengthened life of adhesive, let cure for 24 hours before attaching shade.
6. Attach shade to the hook fastener strip that is now on door. (SEE PICTURE 3)


There are small pieces of loop fastener on the bottom of the shade which can be used to hold the curtain flat to the door. Install the 1"x 1" pieces of adhesive hook fastener at the desired location on the bottom of the door.

OPERATING INSTRUCTIONS

1. Lift shade about 2/3rd of the way up. (SEE PICTURE 4)
2. Continue folding or rolling the shade the rest of the way up. (SEE PICTURE 5)
3. Attach the straps to either set of the hook strips located underneath the valance. (SEE PICTURE 6)
4. Raise and lower your French Door Shade for privacy and to control light. (SEE PICTURE 7-8)

Go to www.eaststreethome.com for video hanging instructions.

PICTURE 1

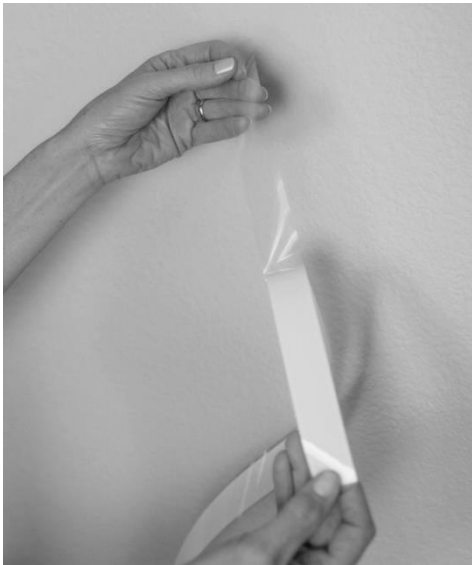

PICTURE 2



PICTURE 3



PICTURE 4



PICTURE 5



PICTURE 6



PICTURES 7 - 8

