


ASSEMBLY INSTRUCTIONS

FULL LOFT BED WITH SLIDE

If you have any questions, please feel free to contact us.

Email: lowes.team@qualfurn.net

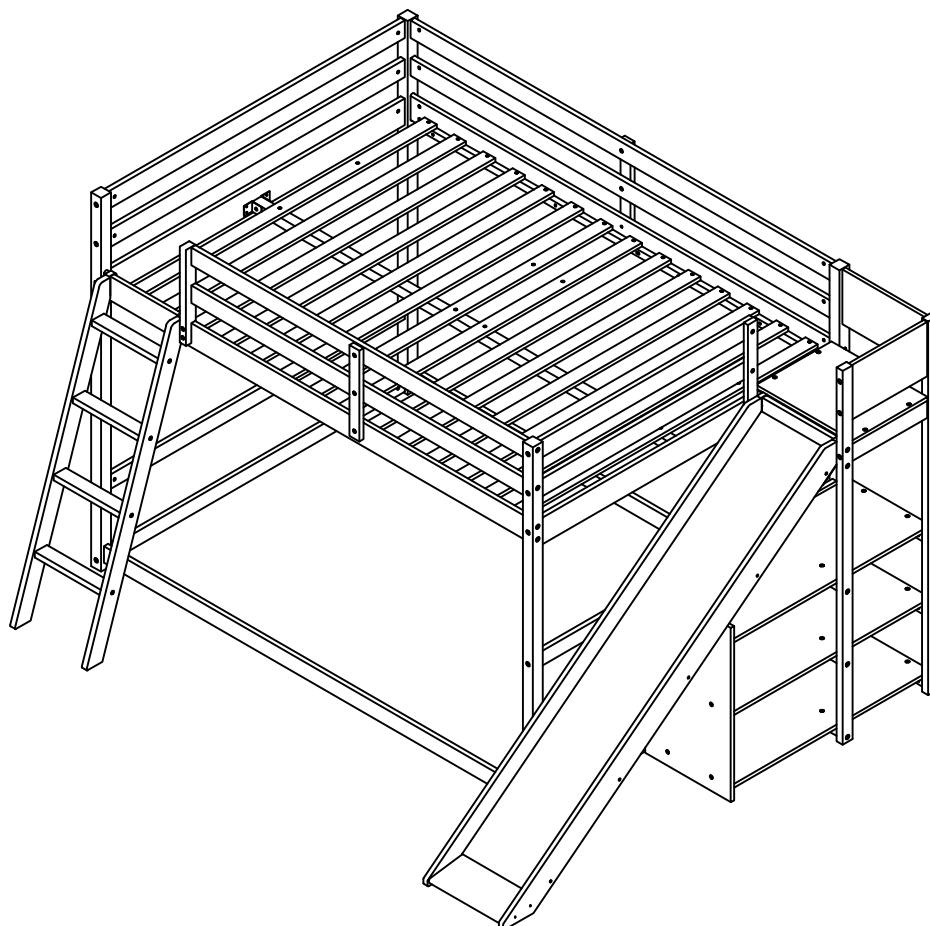

WF301737/WF301738

SAFETY WARNINGS AND GENERAL NOTES:

Follow the information on the warnings on the loft bed end structure and on the carton. Do not remove the warning label from the bed. Always use the recommended size mattress on mattress support, or both, to help prevent the likelihood of entrapment or falls.

The top surface of the mattress must be at least 5*inch (127mm) below the upper edge of the guardrail.

Do not allow children under 6 years of age to use the upper bunk.

Periodically check and ensure the guardrail, ladder and other components are in their proper position, free from damage, and all connectors are tight.

Do not allow horseplay on or under beds.

Always prohibit jumping on the bed.

Prohibit more than one person on upper bunk.

Always use the ladder for entering and leaving the upper bunk.

Do not use substitute parts. Contact the manufacturer or dealer for replacement parts.

Use of a night-light may provide added safety precaution for a child using the upper bunk.

Always use guardrails on both long sides of the upper bunk.

If the loft bed will be placed next to a wall, the guardrail that runs the full length of the bed should be placed against the wall to prevent entrapment between the bed and the wall.

The use of water or sleep flotation mattresses is prohibited.

STRANGULATION HAZARD-Never attach or hang items to any part of the loft bed that are not designed for use with the bed.

Keep these instructions for future reference.

We recommend assembling your loft bed on the shipping carton to protect your floor or carpet.

Be certain all staples are out of the box before beginning assembly on the shipping carton.


USE ONLY MATTRESSES WHICH ARE 74"-75" LONG AND 54" WIDE ON UPPER. ENSURE THICKNESS OF MATTRESS DOES NOT EXCEED 6".

SURFACE OF MATTRESS MUST BE AT LEAST 5" (127MM) BELOW THE UPPER EDGE OF GUARDRAILS.

Replacement Parts:






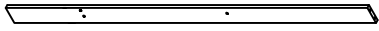

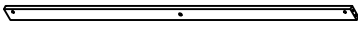
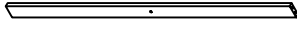

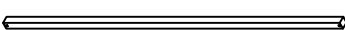
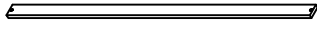

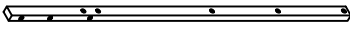
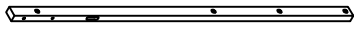



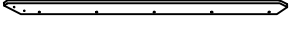

Replacement Parts, including additional guardrails, may be obtained from any of our (GIGACLOUD TECHNOLOGY (USA) INC. 18961 ARENTH AVENUE, CITY OF INDUSTRY , CA, 91748.) dealers

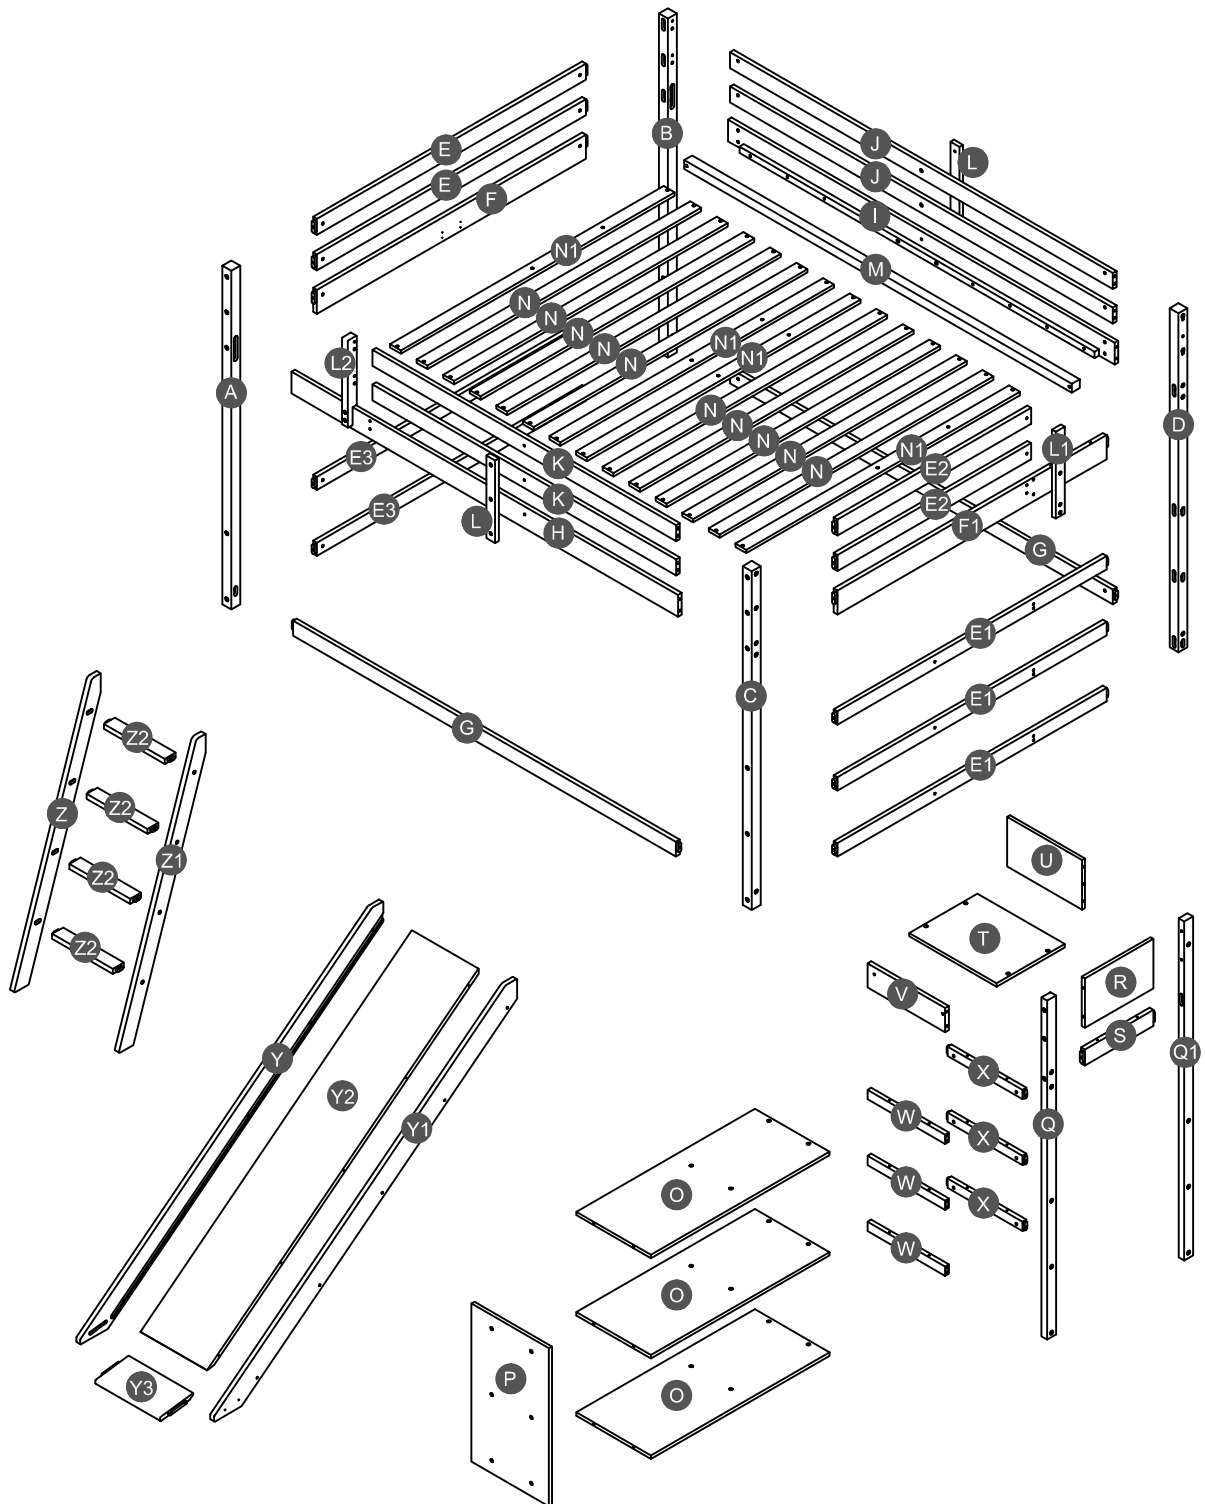Detail View







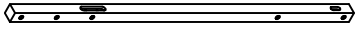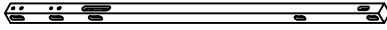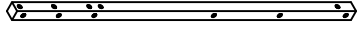
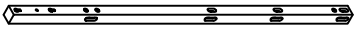



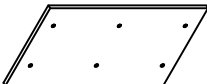
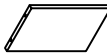

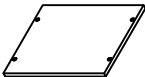
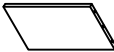
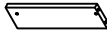

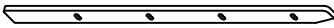

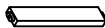
Part List

Hardware List WF301737

A  Leg (Left Front) - 1pc	B  Leg (Left Back) - 1pc	C  Leg (Right Front) - 1pc
D  Leg (Right Back) - 1pc	G  Lower side rail - 2pcs	H  Upper side rail (Front) - 1pc
I  Upper side rail (Back) - 1pc	J  Long guard rail (Back) - 2pcs	K  Short guard rail (Front) - 2pcs
L2  Support guard rail(Left) - 1pc	M  Lower support slat - 1pc	N  Slat - 10pcs
N1  Slat - 4pcs	Q  Leg (Front) - 1pc	Q1  Leg (Back) - 1pc
W  Horizontal bar (Front) - 3pcs	X  Horizontal bar (Back) - 3pcs	Y  Left side ladder -1pc
Y1  Right side ladder -1pc	Y2  Slide panel -1pc	

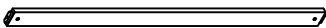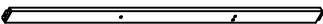Part List

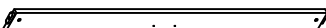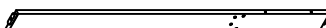
WF301738

E  Horizontal bar HB - 2pcs	E1  Horizontal bar FB - 3pcs	E2  Horizontal bar FB - 2pcs
E3  Horizontal bar HB - 2pcs	F  Horizontal bar HB - 1pc	F1  Horizontal bar FB - 1pc
L  Vertical guard rail - 2pcs	L1  Vertical guard rail - 1pc	O  Shelf panel - 3pcs
P  Side panel (Front) - 1pc	R  Upper side panel - 1pc	S  Upper horizontal bar - 1pc
T  Upper step ladder panel -1pc	U  Upper back panel - 1pc	V  Upper horizontal bar (Front) - 1pc
Y3  Slide base support -1pc	Z  Ladder (Left) - 1pc	Z1  Ladder (Right) - 1pc
Z2  Step ladder - 4pcs		

Hardware List WF301737


1  Ø8*30mm Wood dowel (10pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (32pcs)
4  (Ø12)1/4"*70mm Hex-Head bolts (9pcs)	5  (Ø12)1/4"*60mm Hex-Head bolts (22pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)
7  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)	8  (Ø12)1/4"*30mm Hex-Head bolts (10pcs)	9  1/4"*15 (9.5mm) Horizontal-Hole bolts (81pcs)
10  (Ø12)1/4"*50mm Wood screw bolts (14pcs)	11  (Ø12)1/4"*40mm Wood screw bolts (16pcs)	12  Ø4*30mm Wood screws (36pcs)
13  116*40*27mm Metal bracket (2pcs)	14  (Ø13)1/4"*14mm Connect bolt (2pcs)	15  Ø10*40mm Wood dowel (8pcs)
16  81*26*21*(2.5mm) Hooks (2pcs)	17  142*18*2mm Hooks (2pcs)	18  Ø1/4"*14mm Flat washer (14pcs)
19  Ø13"*3mm Spring Washer (14pcs)	20  Ø4*19mm Wood screws (6pcs)	21  Ø3.5*15mm Wood screws (12pcs)
22  (1/4")4.5*58mm Allen key (2pcs)	23  21*21*17*1.7mm Metal bracket (2pcs)	



ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

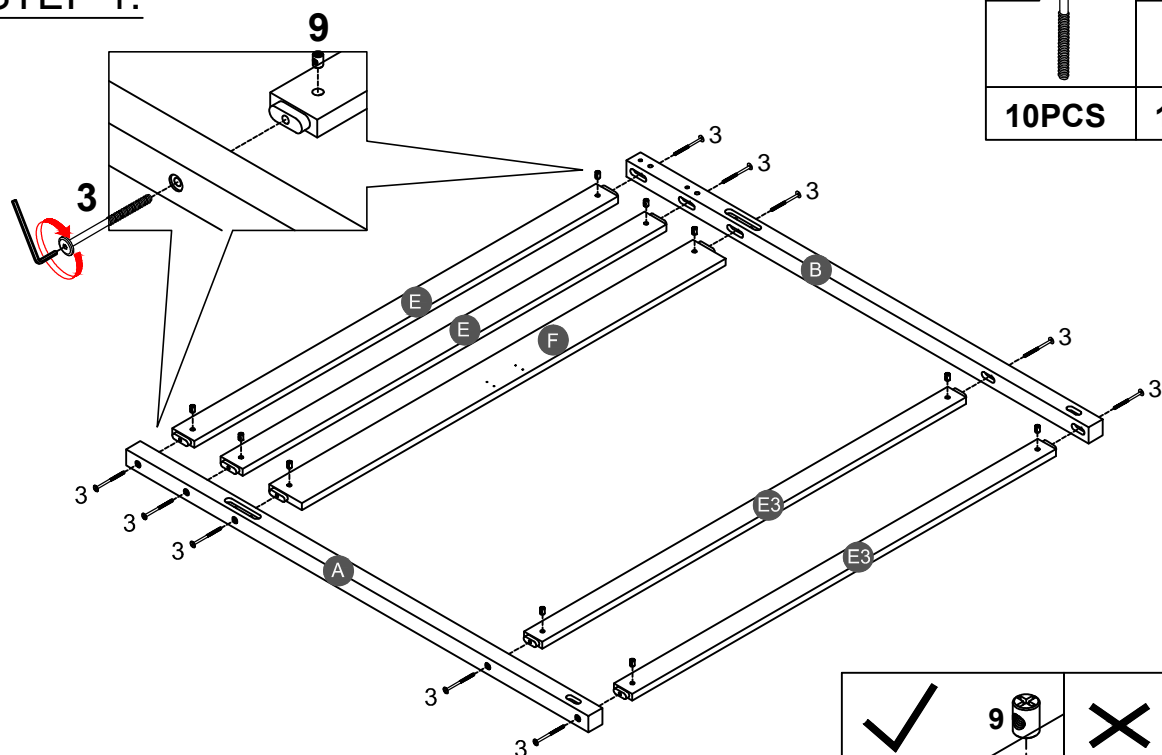STEP 1:






3		9	
10PCS		10PCS	

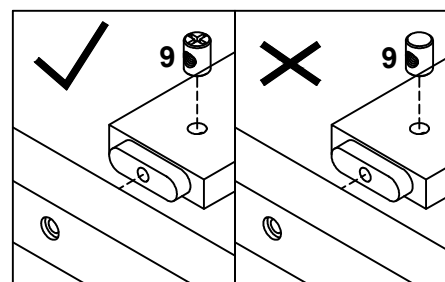Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

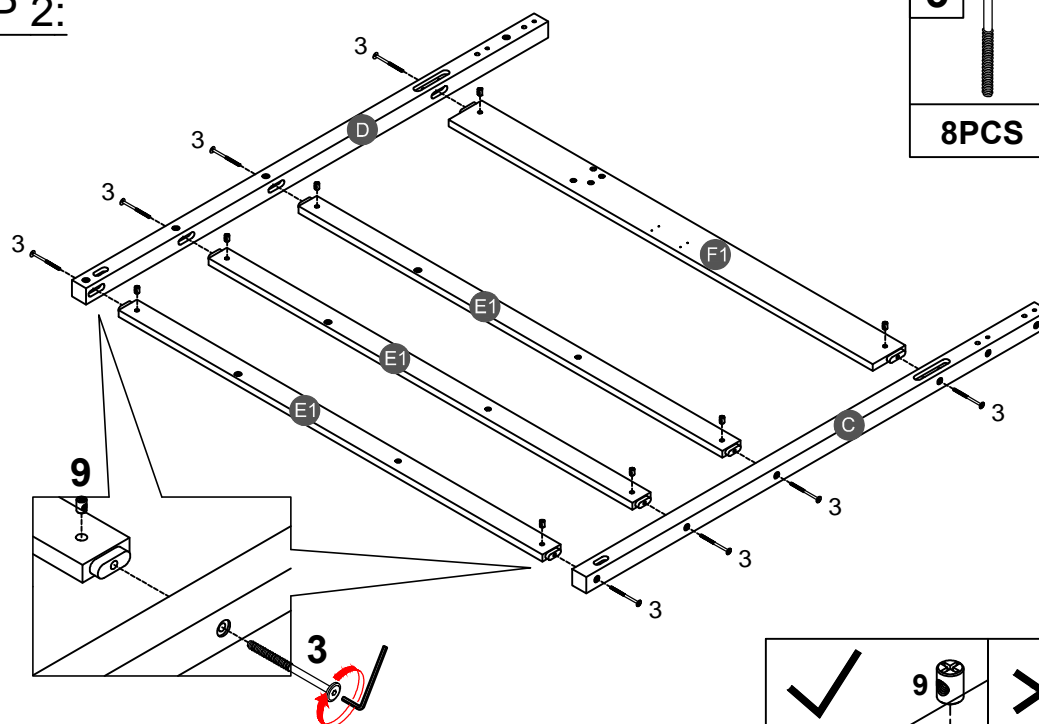


STEP 2:






3		9	
8PCS		8PCS	

Note: Part 9 will face up with the "x" mark on it, otherwise it cannot be tightened

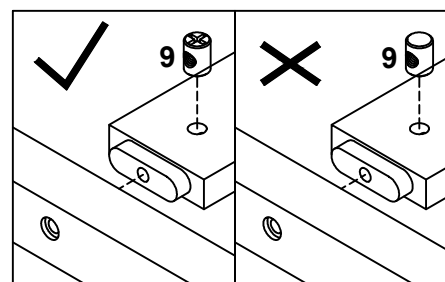




STEP 3:

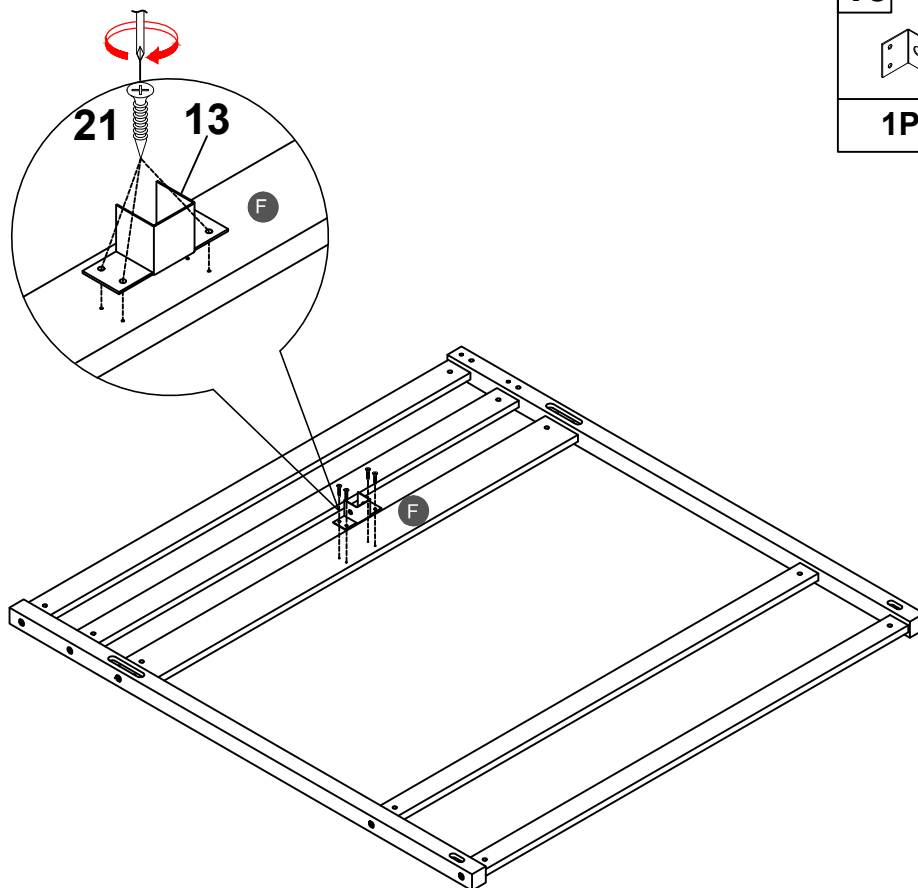


13		21	
1PC		4PCS	

STEP 4:

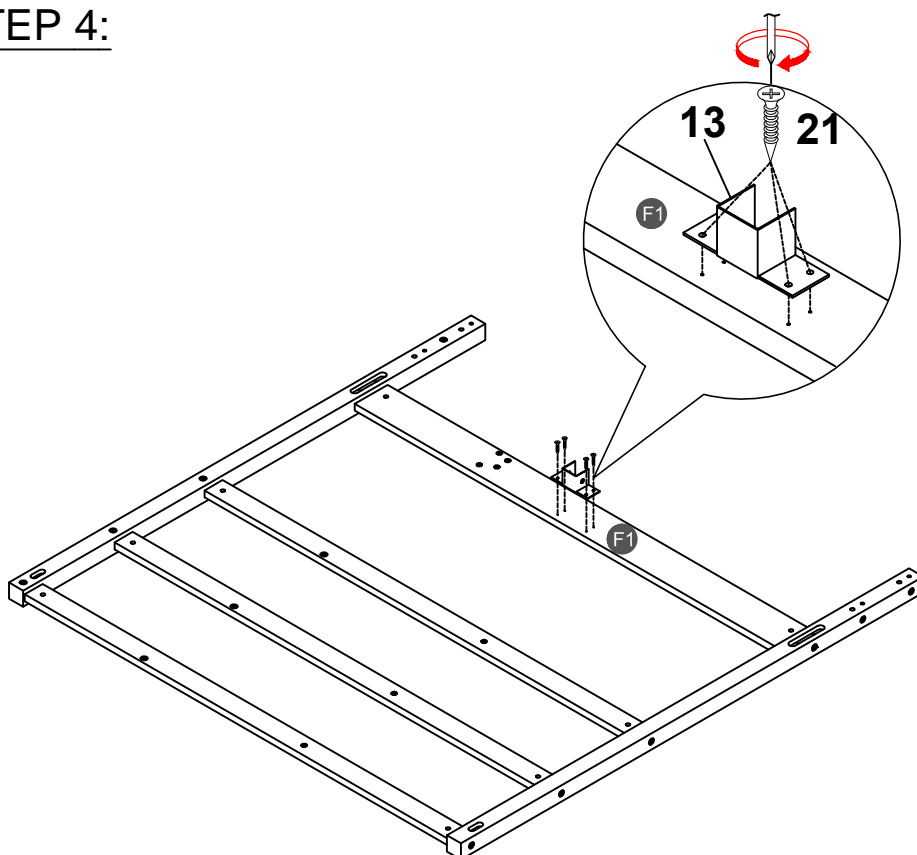


13		21	
1PC		4PCS	


STEP 5:

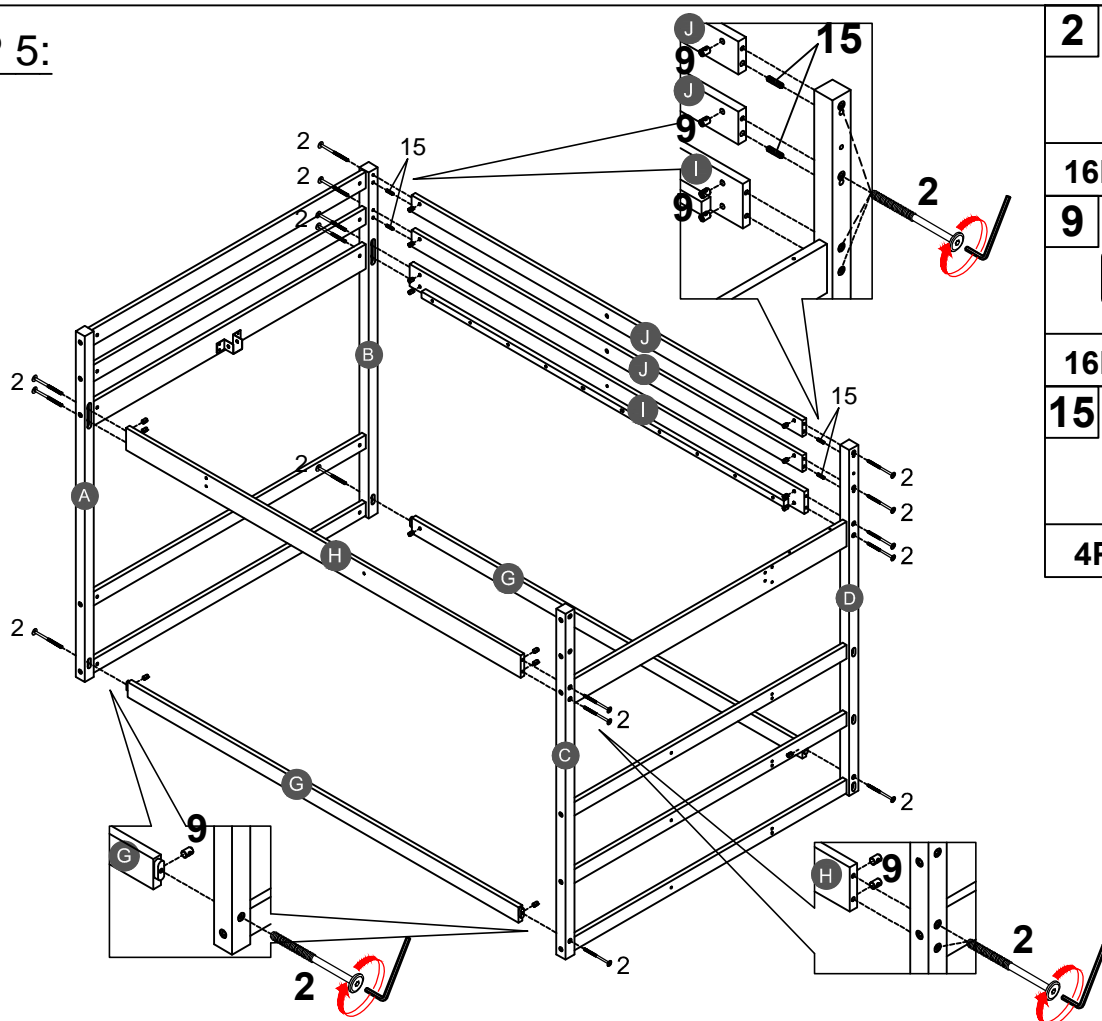


2	
16PCS	
9	
16PCS	
15	
4PCS	

STEP 6:

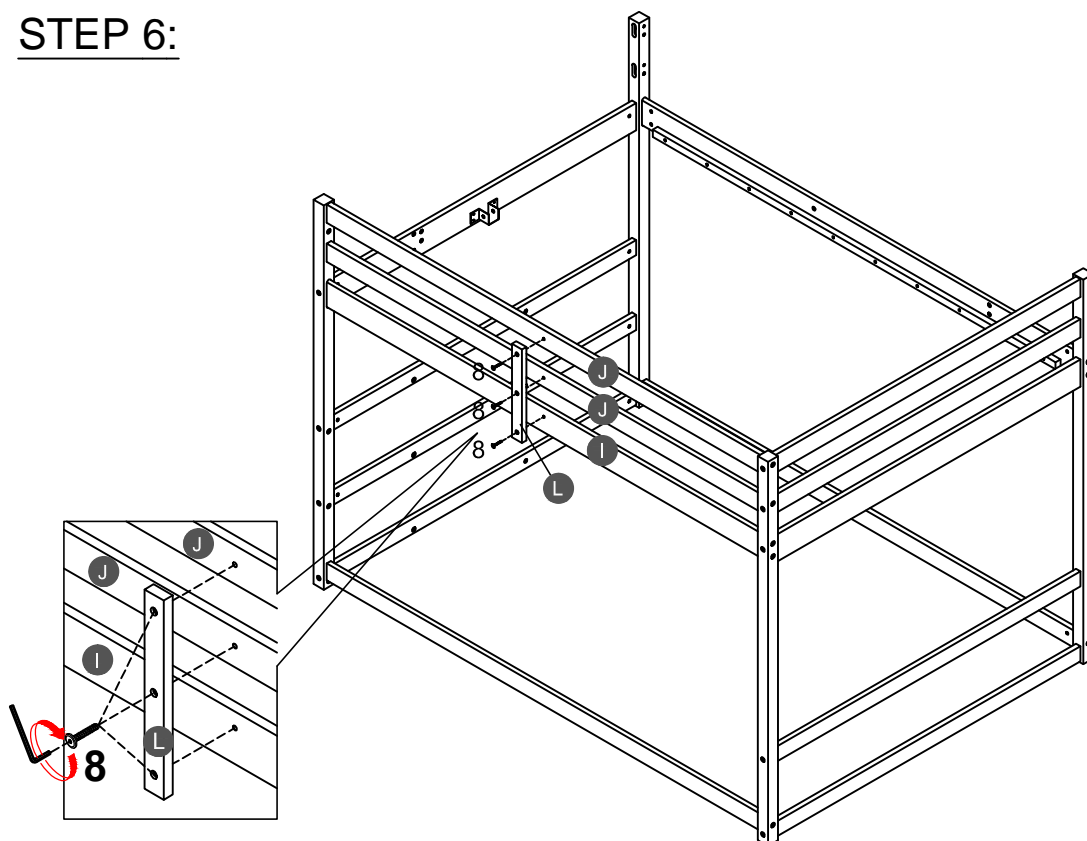


8	
3PCS	


STEP 7:

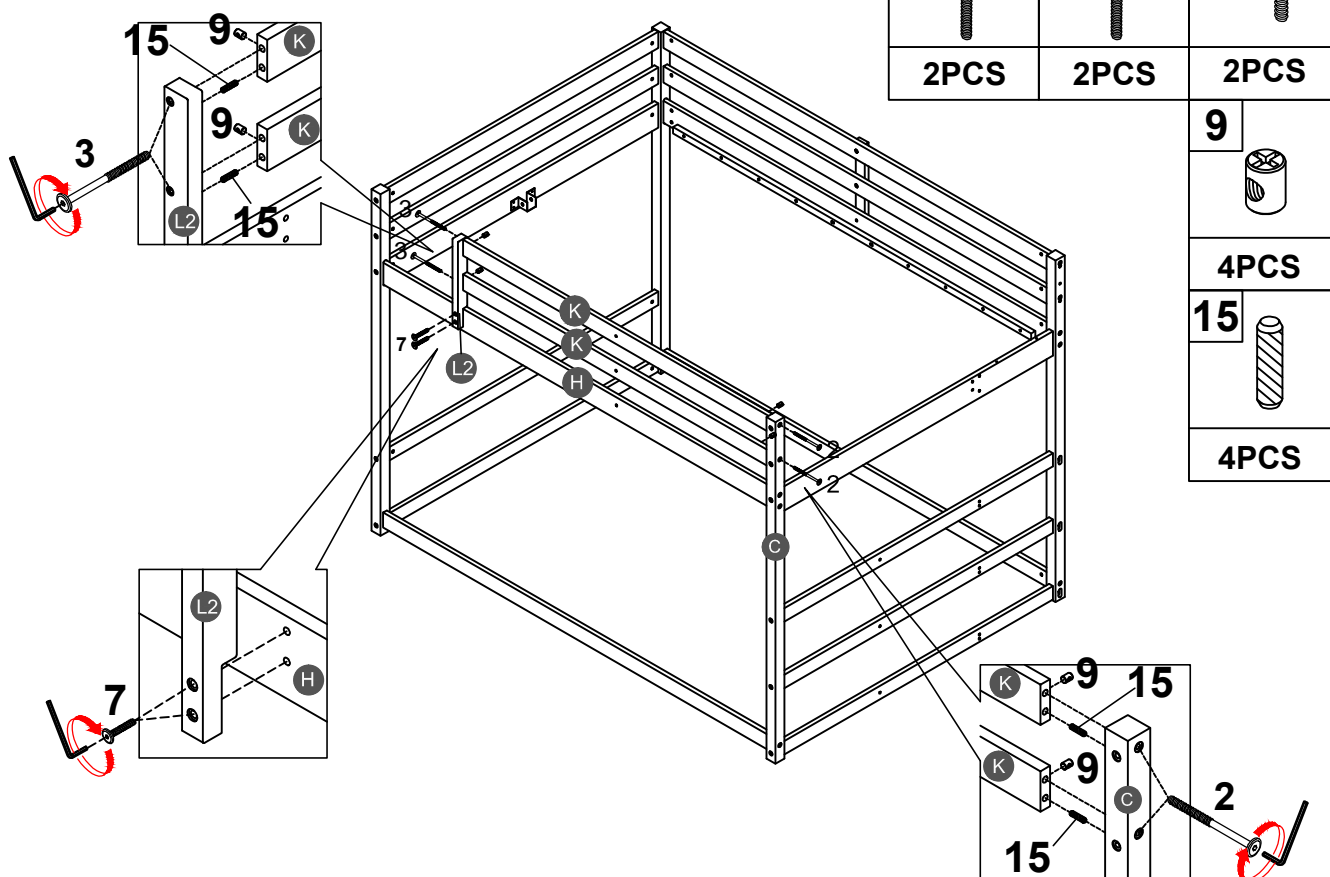


STEP 8:

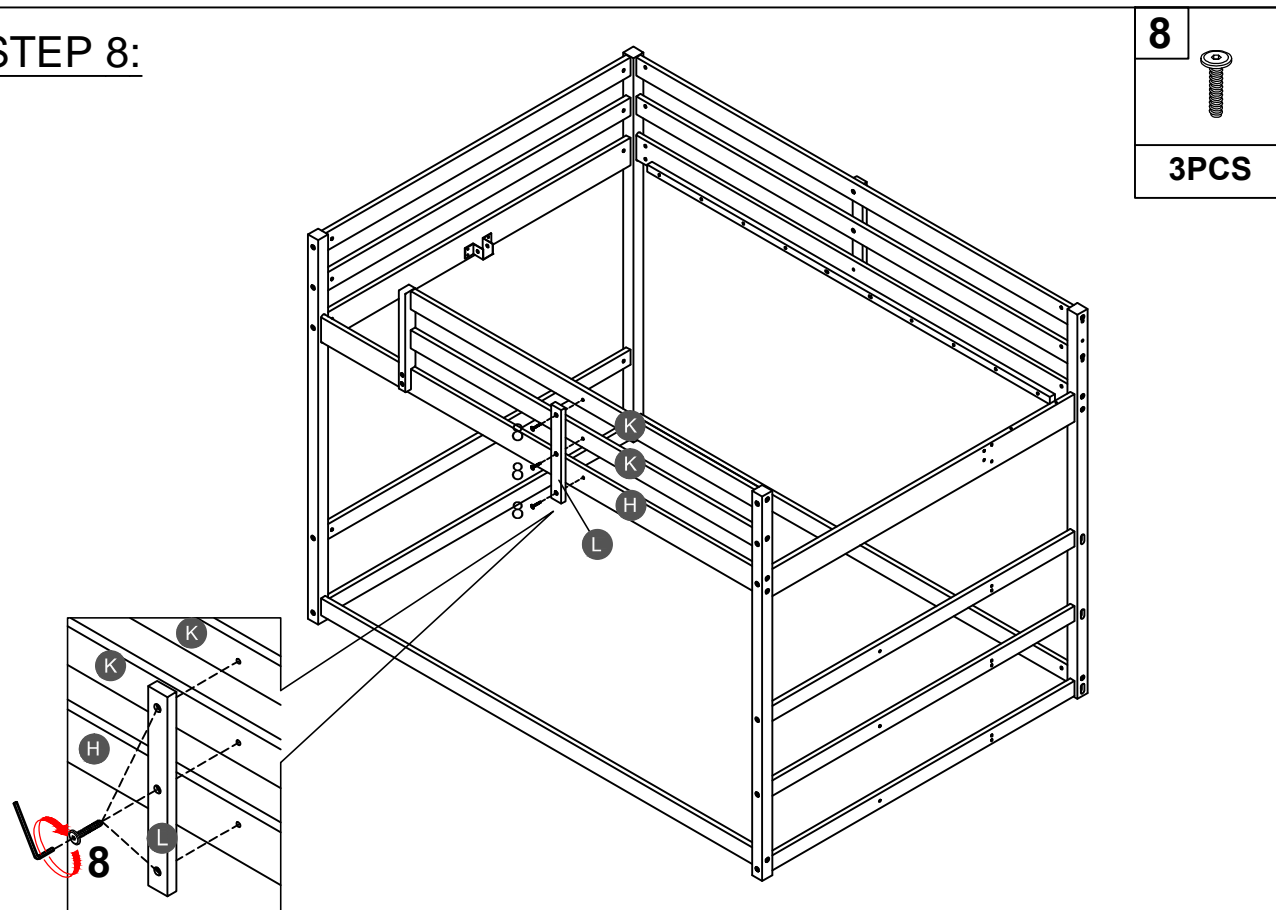


STEP 9:

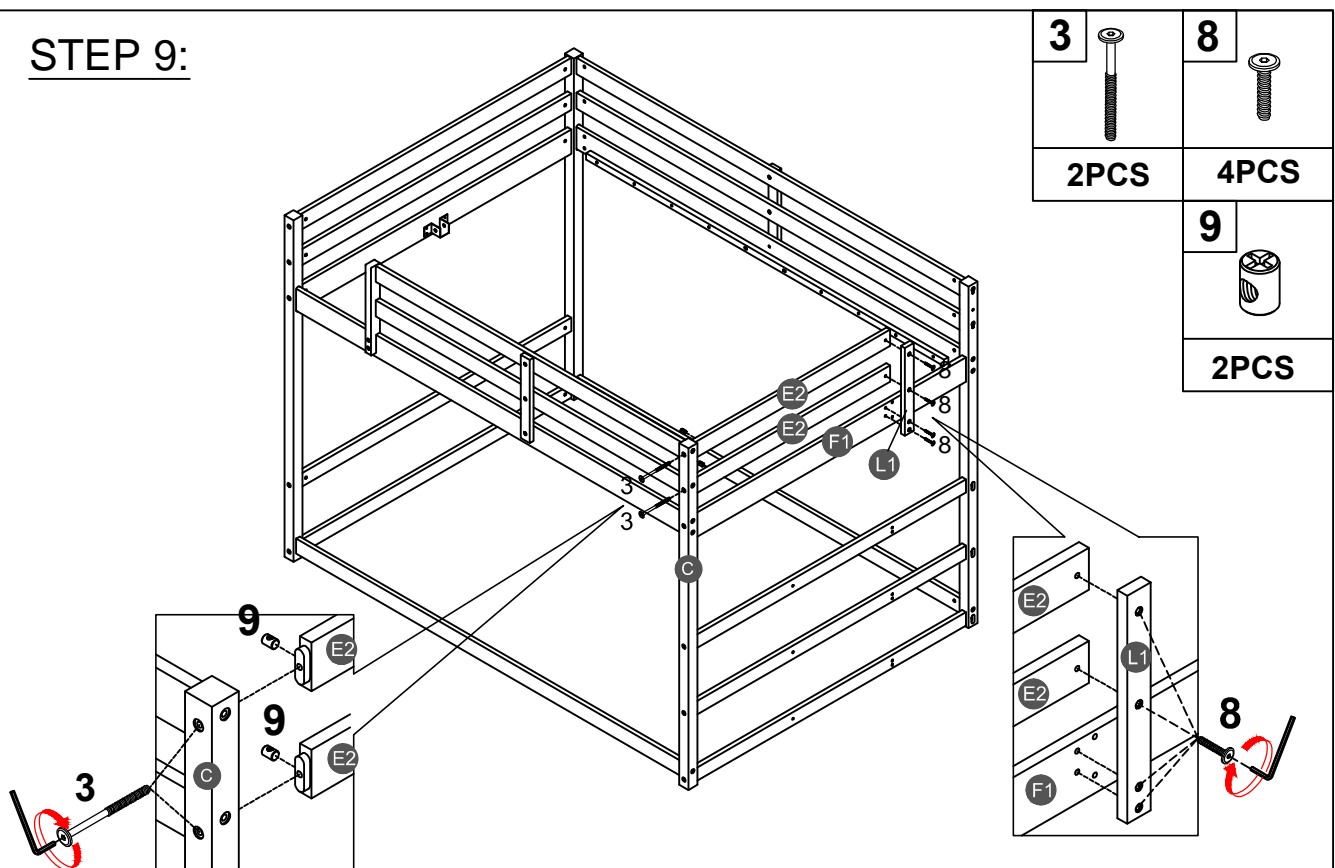

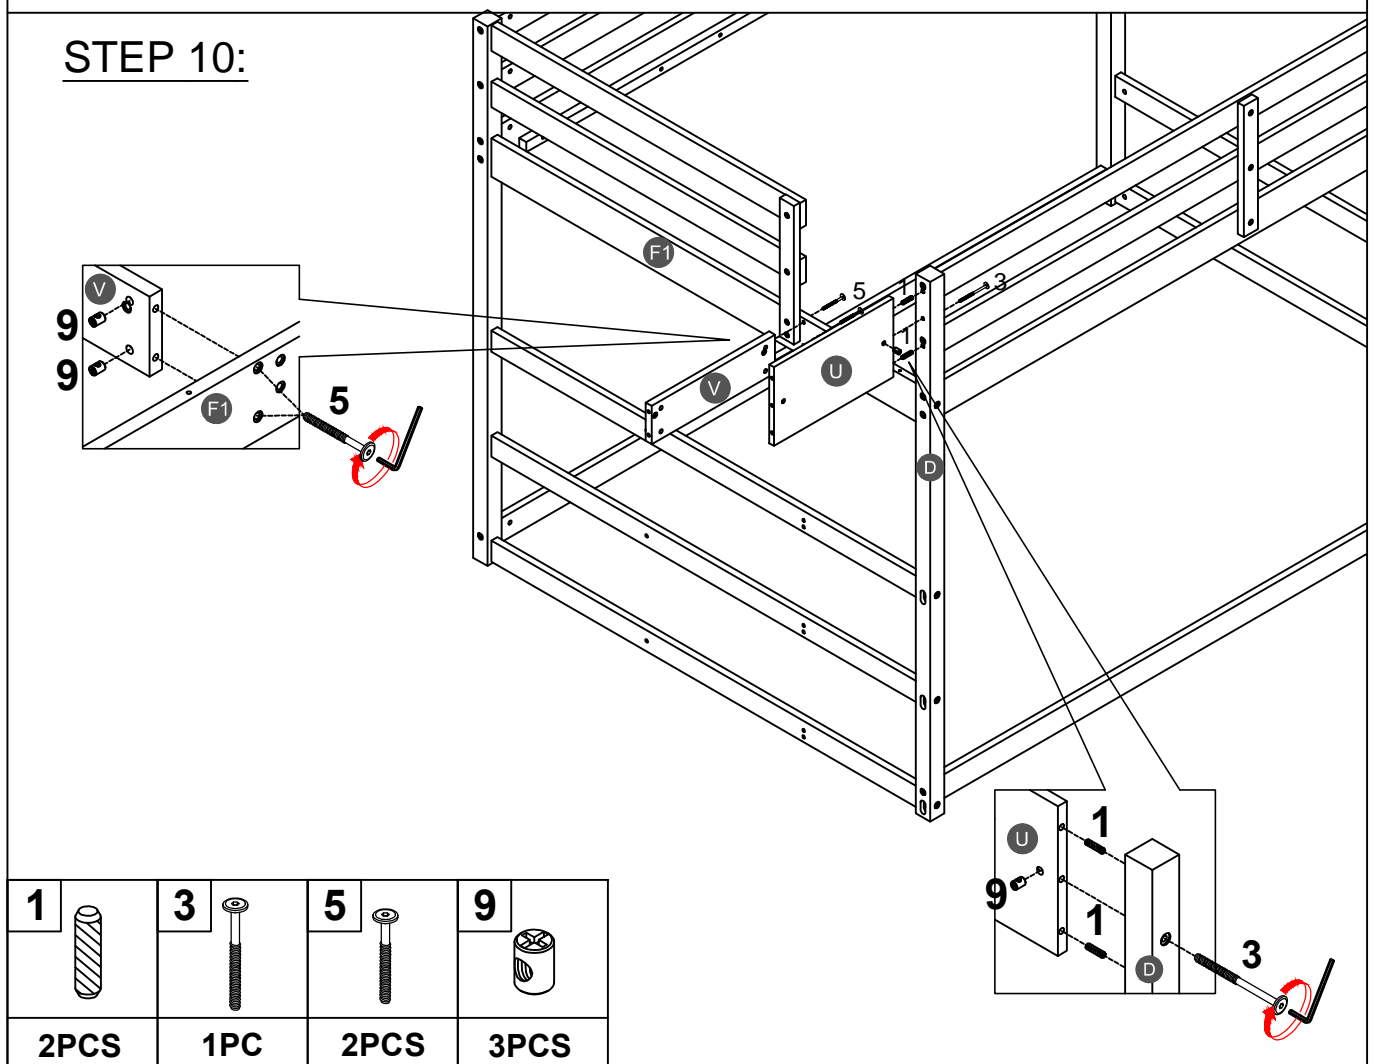

STEP 10:




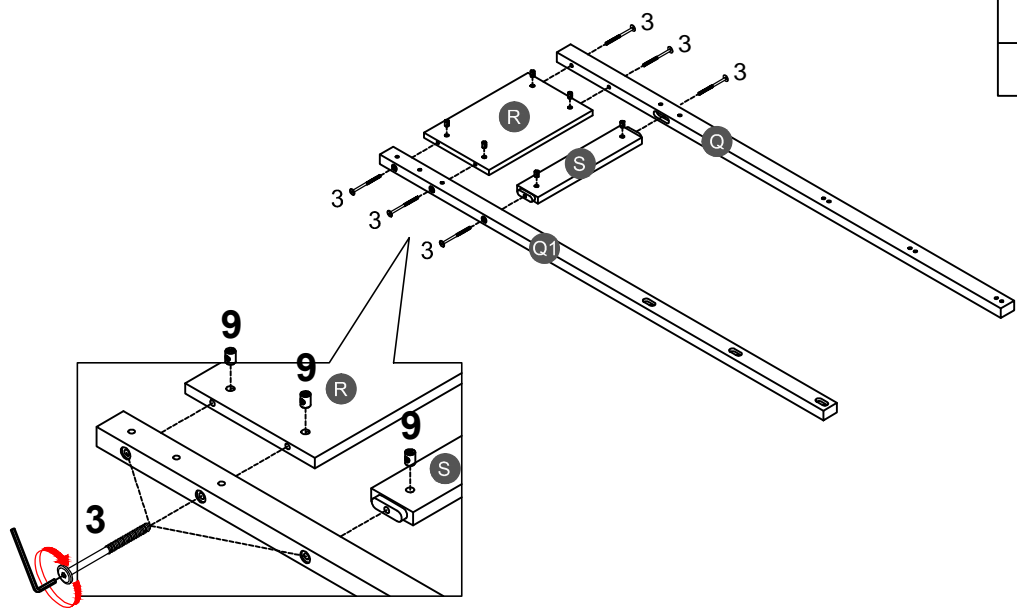




STEP 11:

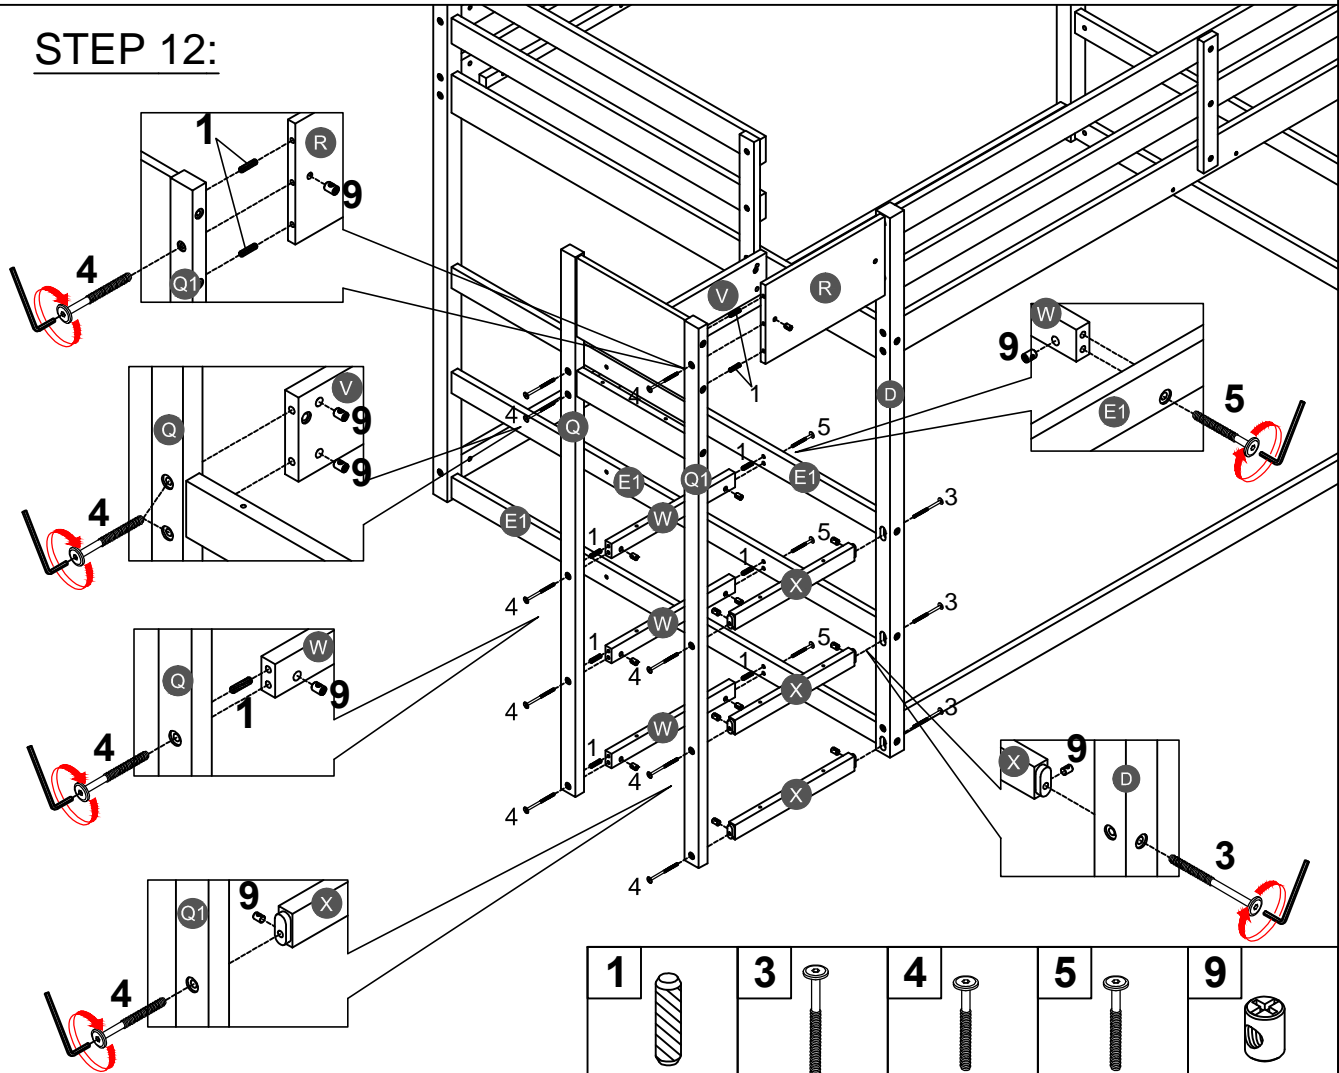


3		9	
6PCS		6PCS	

STEP 12:




1		3		4		5		9	
8PCS		3PCS		9PCS		3PCS		15PCS	


STEP 13:

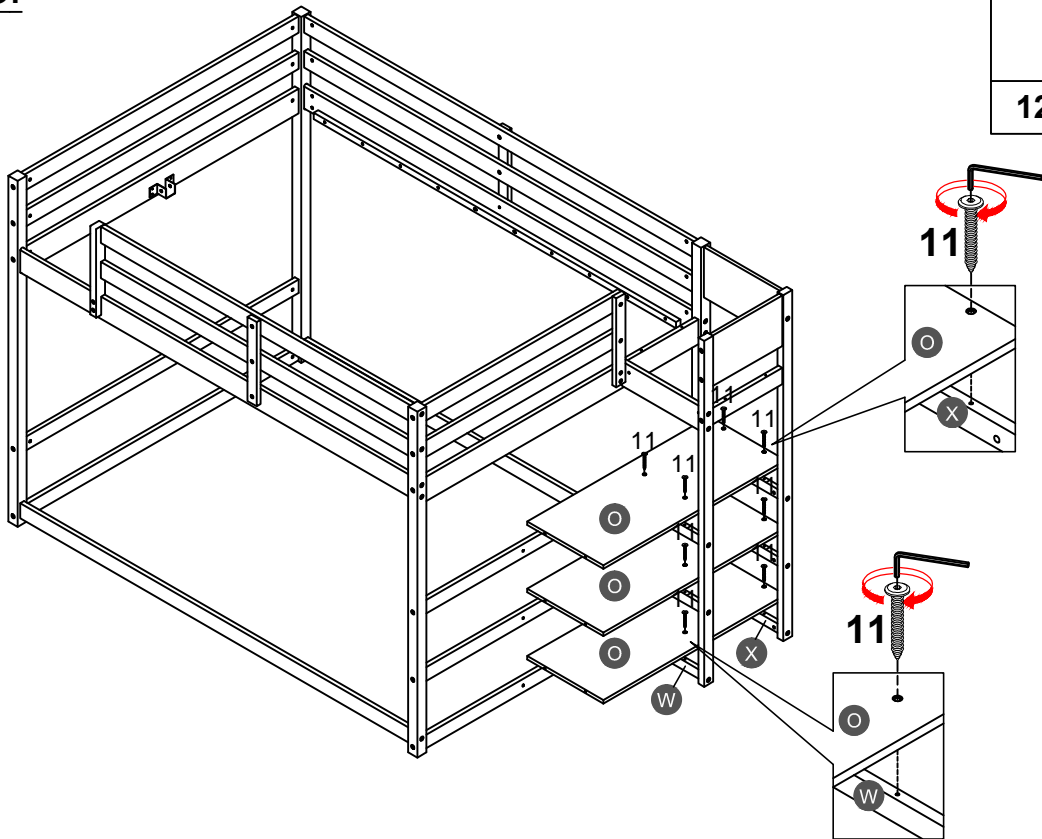

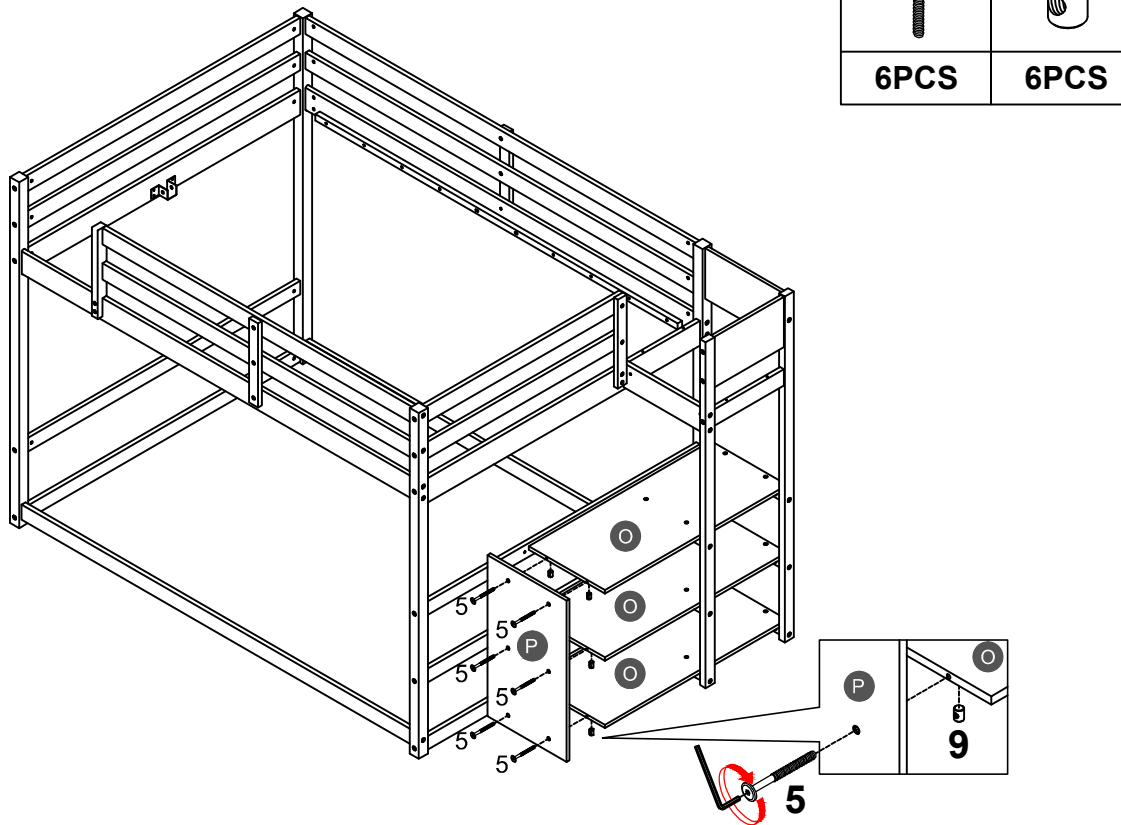


STEP 14:

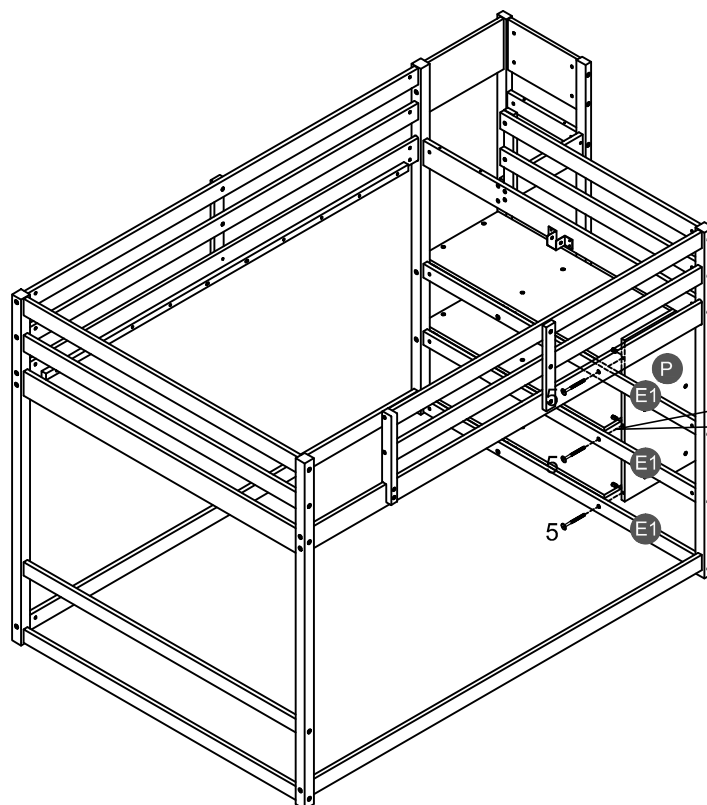


STEP 15:




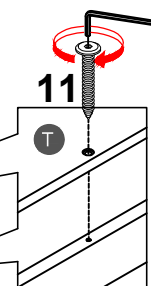
5		9	
3PCS		3PCS	

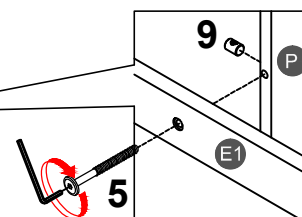


STEP 16:

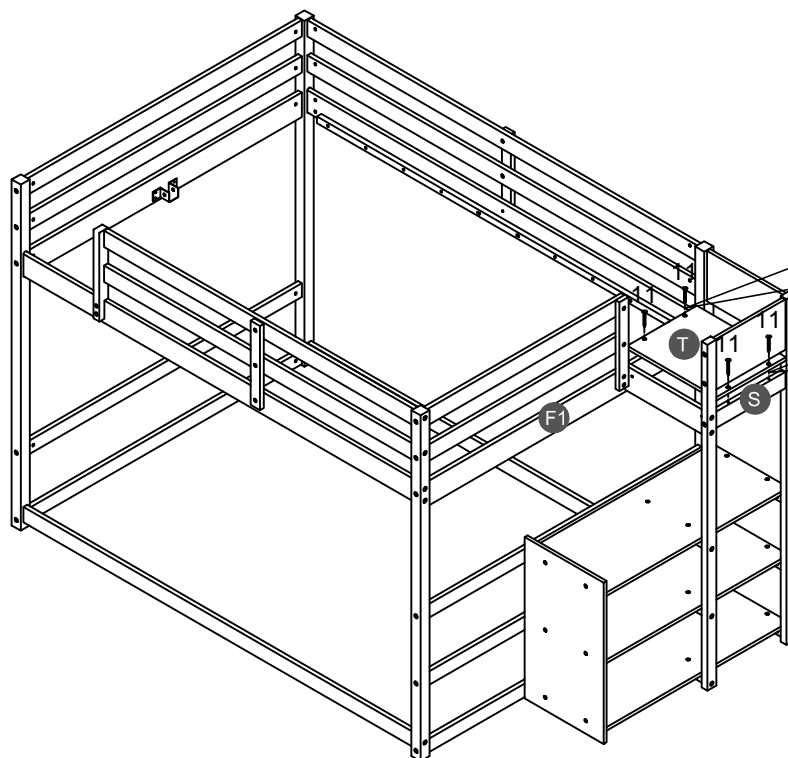






11	
4PCS	

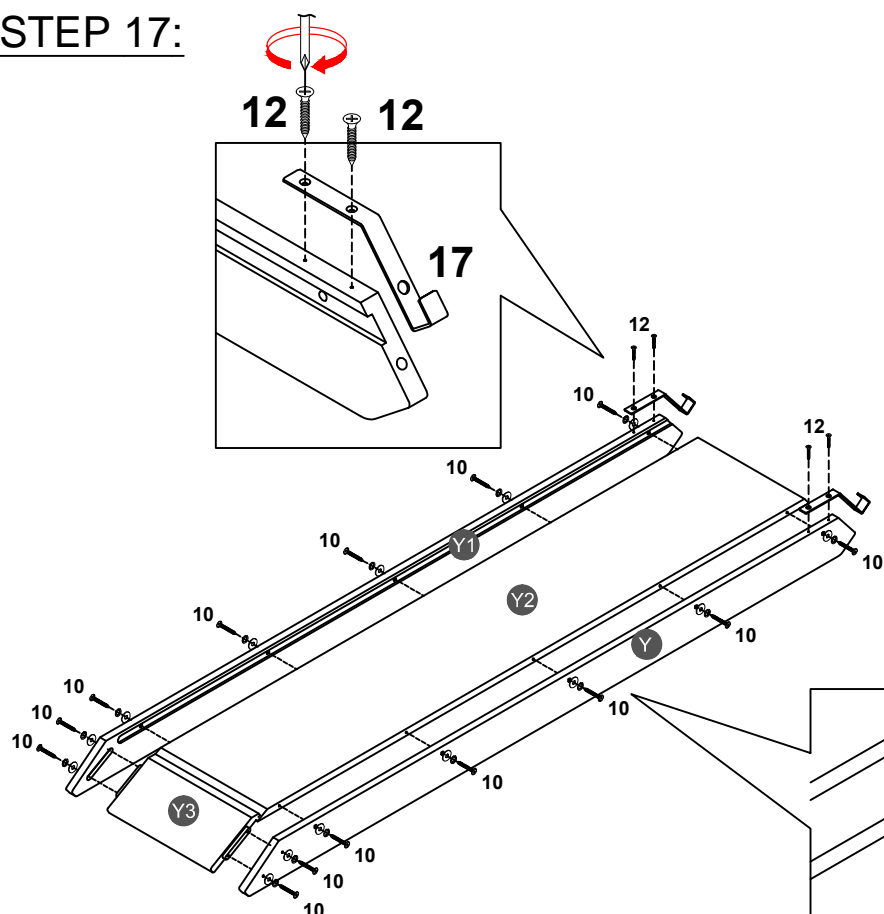



STEP 17:







10		17	
14PCS		2PCS	
18		19	
14PCS		14PCS	
		12	
		4PCS	

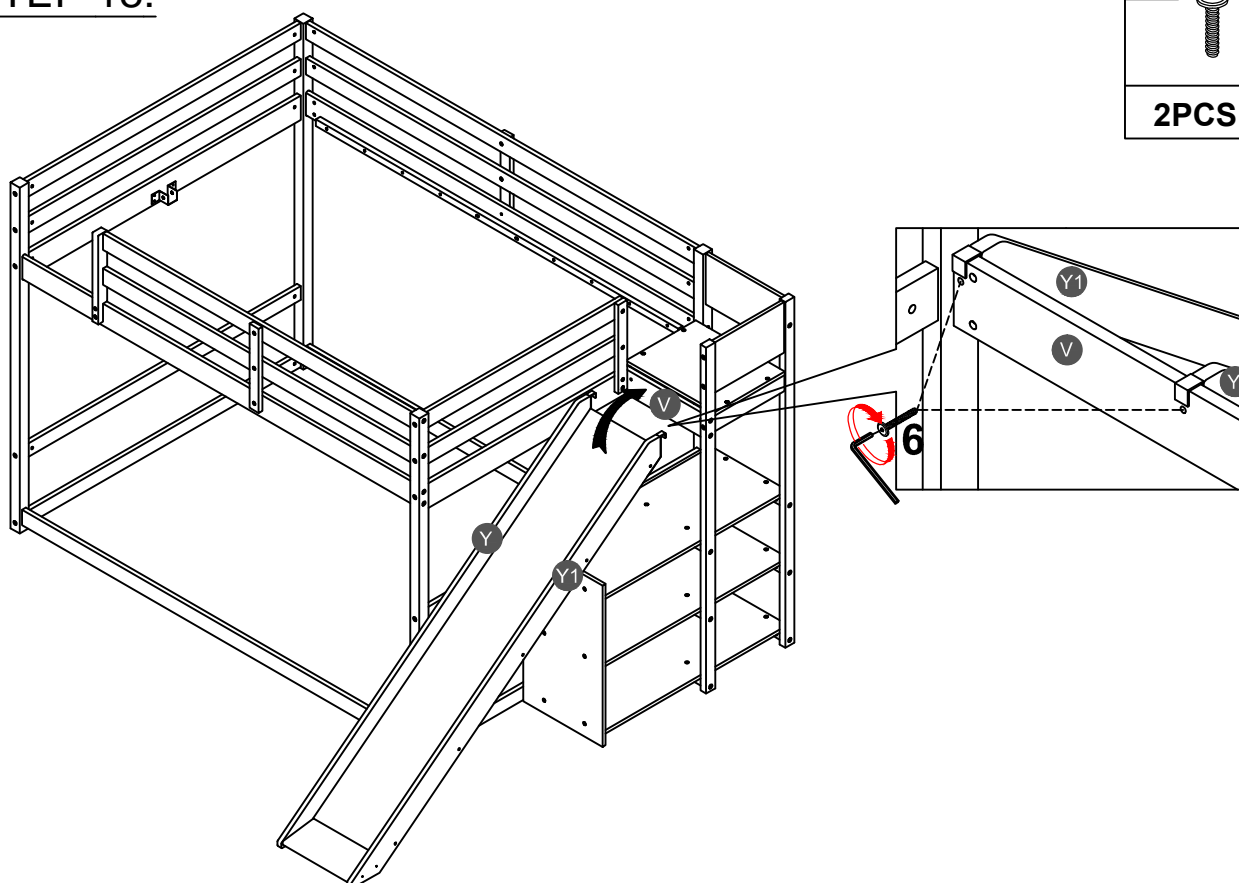
STEP 18:




6	
2PCS	


STEP 19:

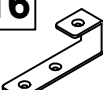5		9		16		20	
8PCS		8PCS		2PCS		4PCS	

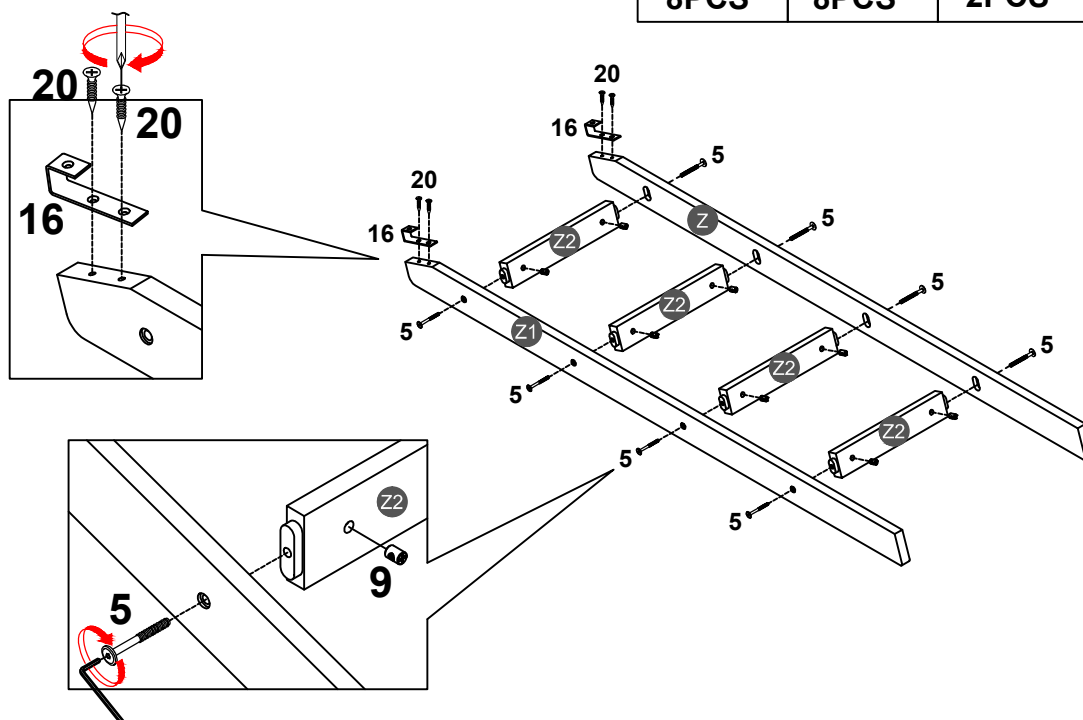






STEP 20:

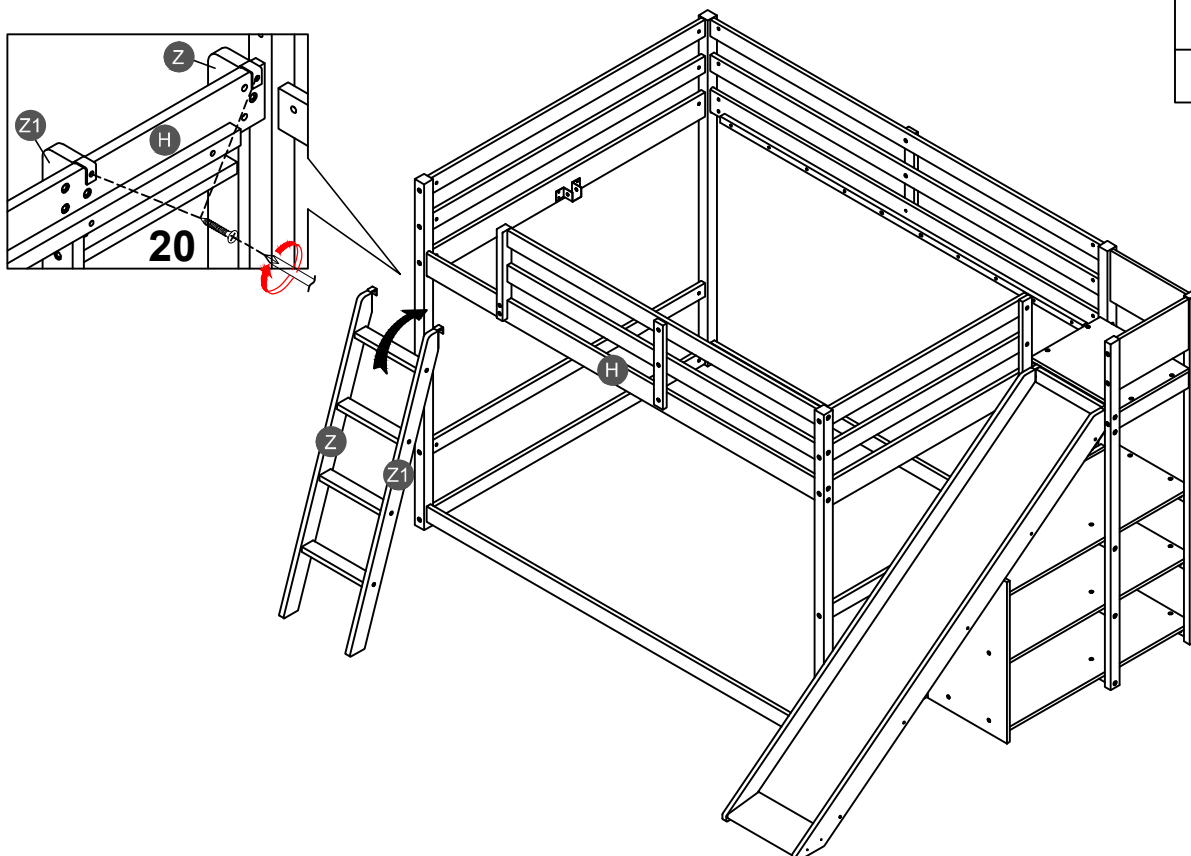20	
2PCS	



STEP 21:

6		14		21		23	
2PCS		2PCS		4PCS		2PCS	

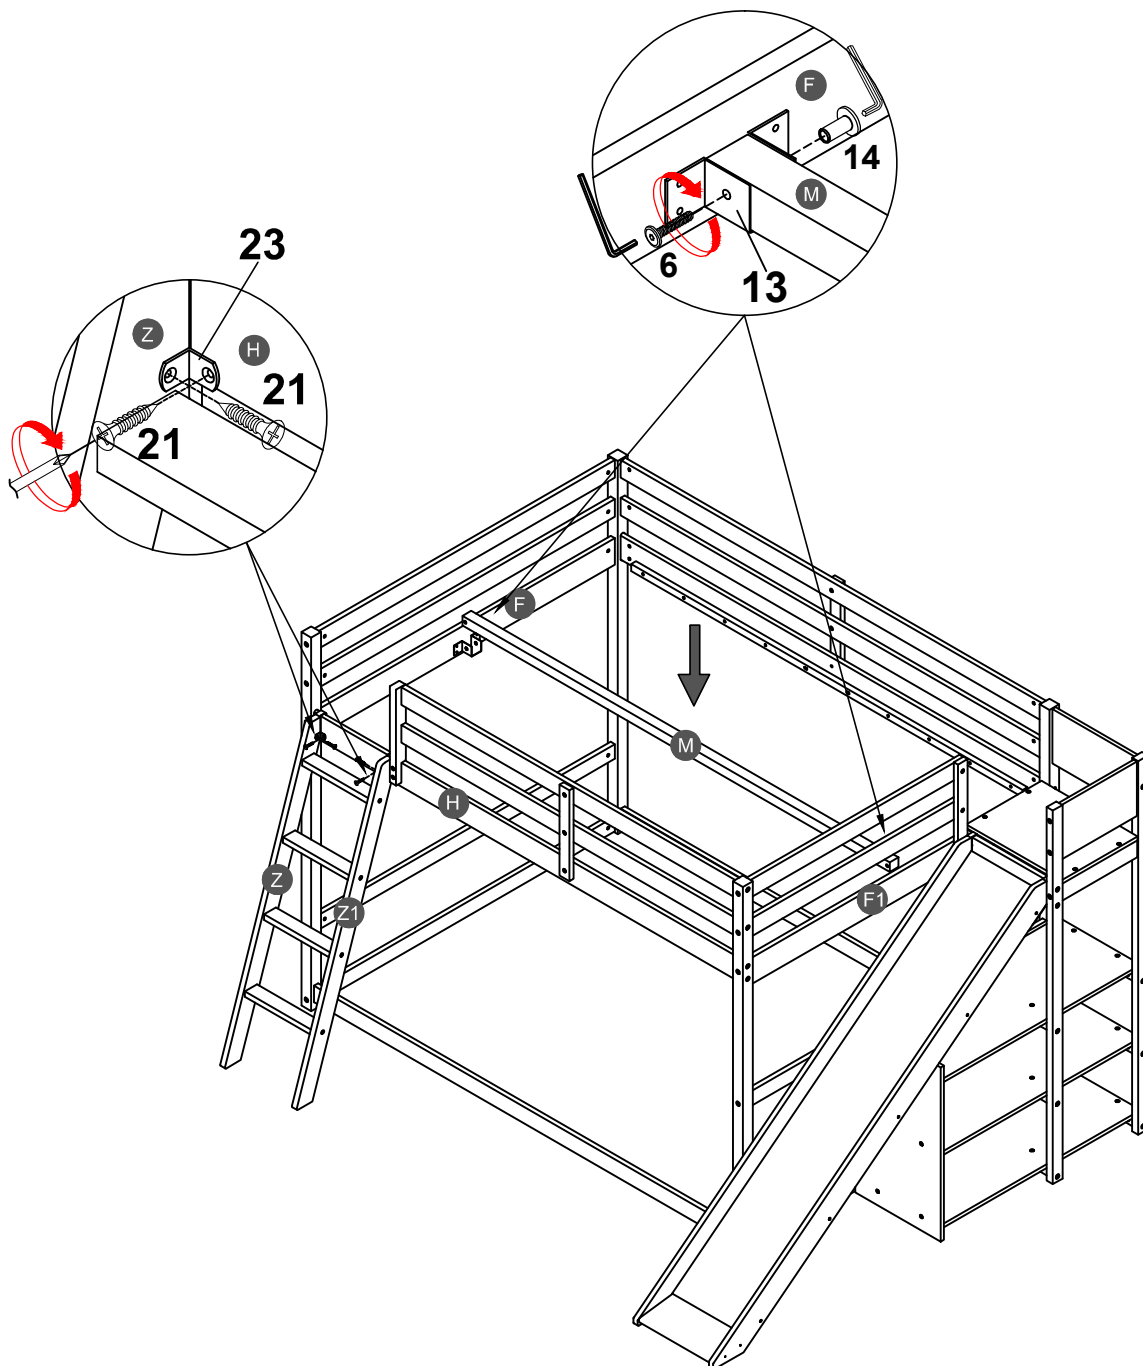


STEP 22:

12



32PCS

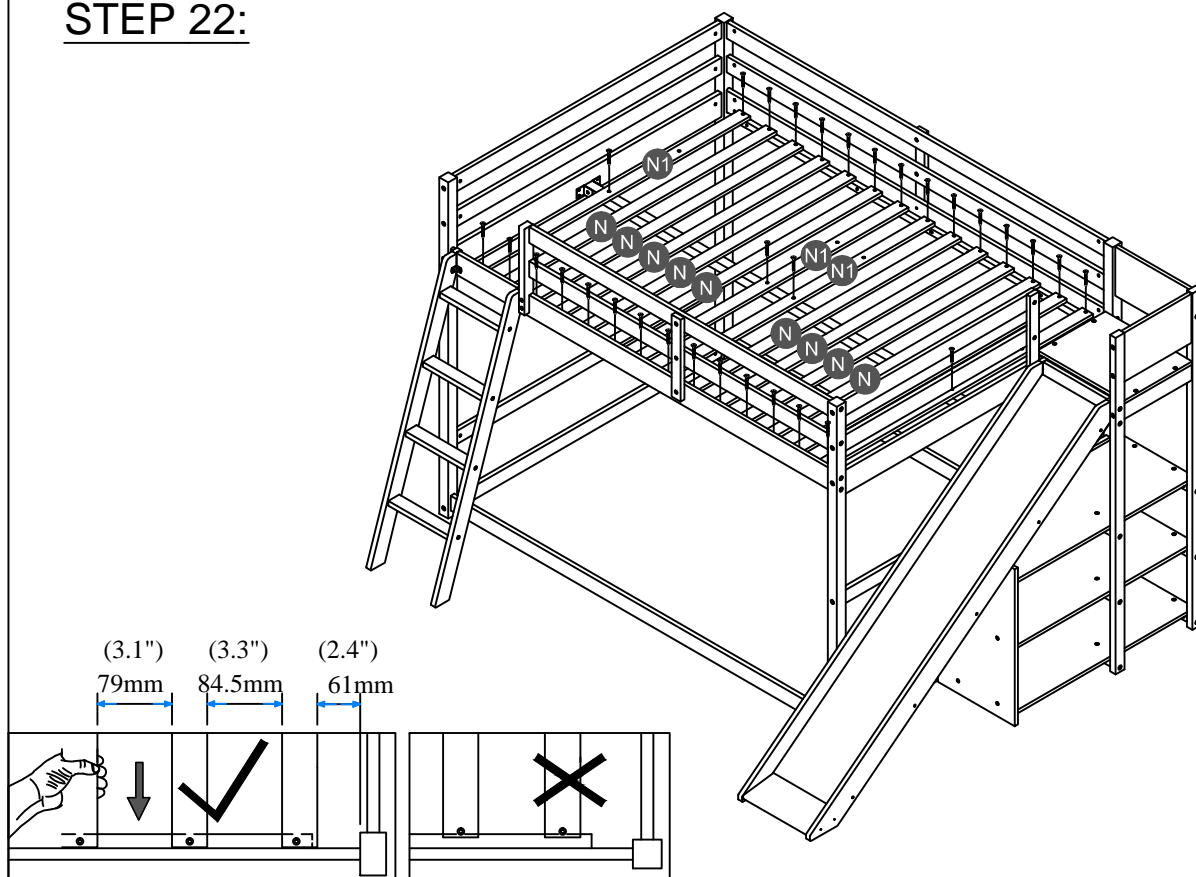

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

