




SHOWER STOOL ASSEMBLY INSTRUCTIONS

Please keep for future reference

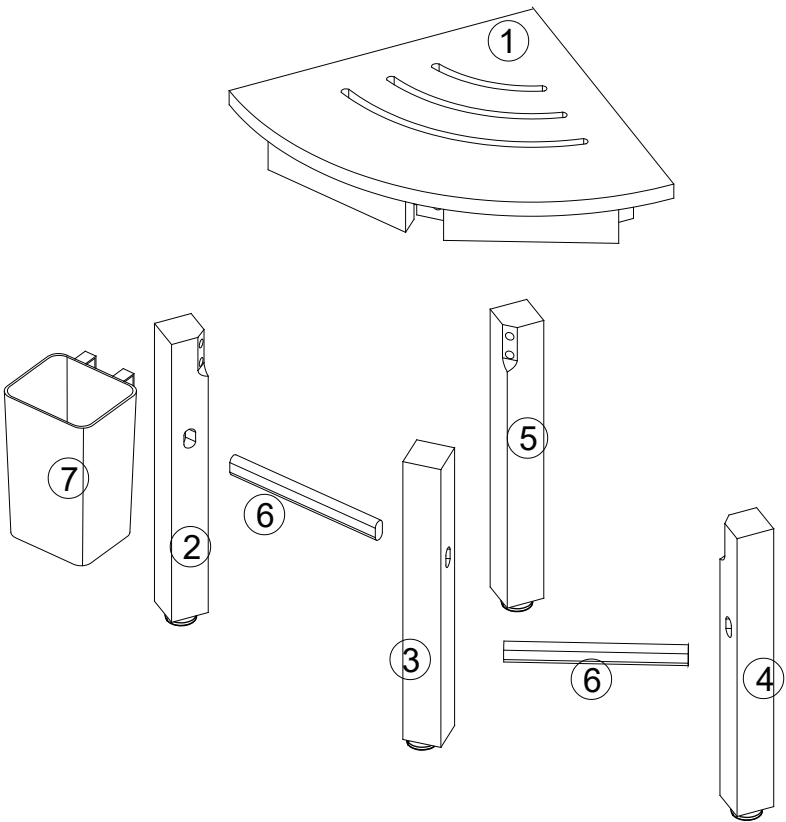




HARDWARE LIST

A	 M6X50	8 pcs
B	 M4X110	1pc


We recommend air-drying the wet teak shower bench and NOT leaving in the sun.

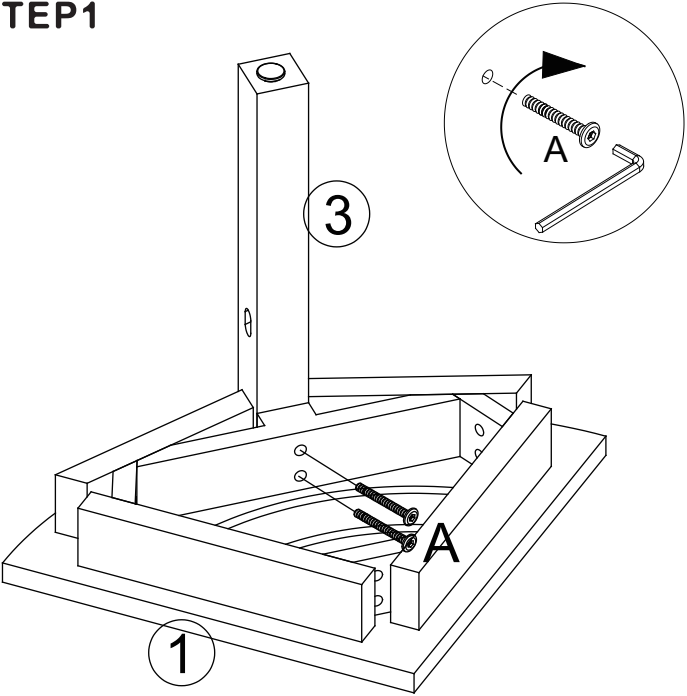STEP1





B		1 pc
A		2 pcs

STEP2


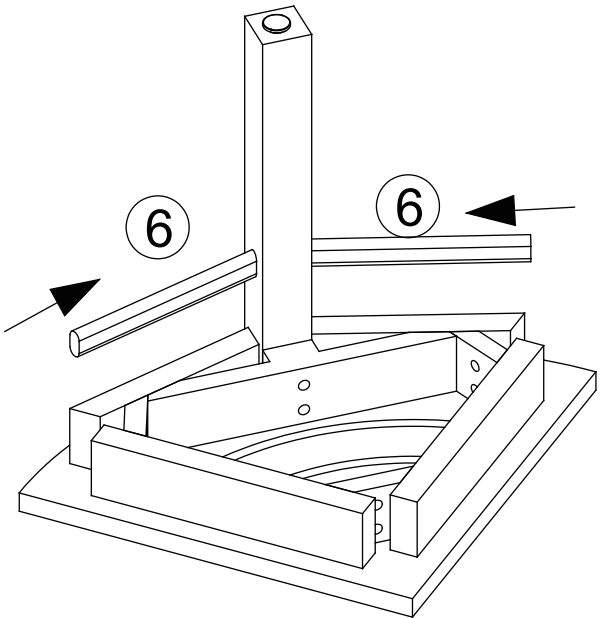


ASSEMBLY INSTRUCTIONS

STEP3

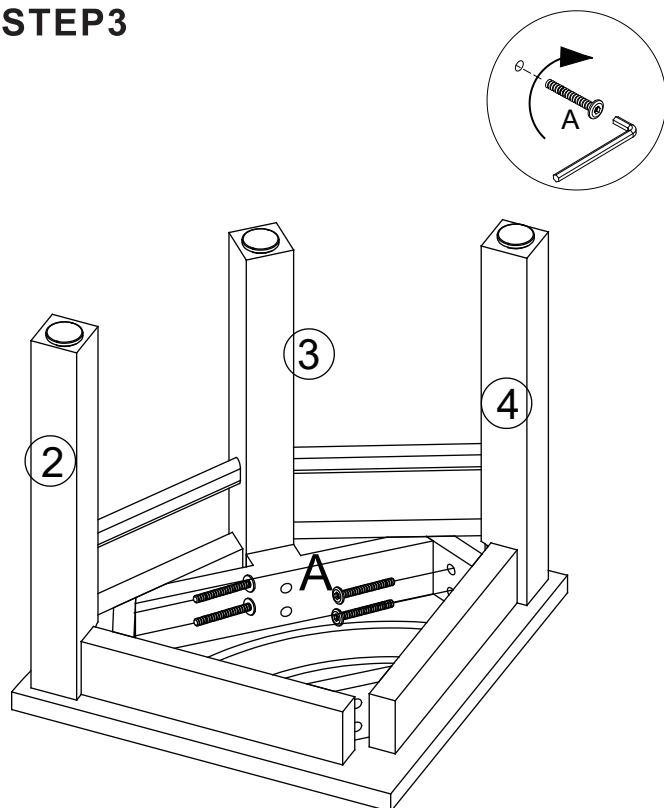

STEP4

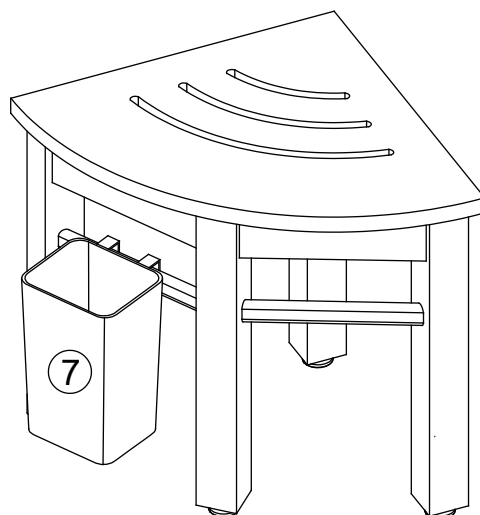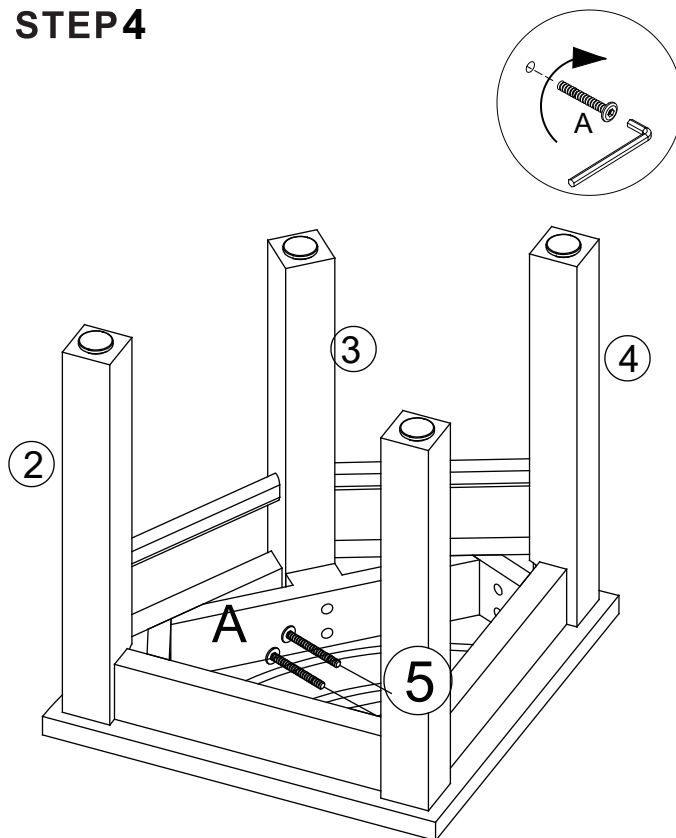

We value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us at email cs@lovitgoshop.com. Please provide your name and order no. so that we can better assist you. To help expedite the service, please have the assembly instructions available along with your order receipt.