CARE AND MAINTENANCE

The vinyl headrail and bottom rail can be wiped clean with a damp sponge. To clean the shade fabric, use a feather duster or vacuum lightly using the soft brush attachment.

WARRANTY

For a period of one (1) year from the date of purchase, the manufacturer will replace this window covering with one of equal or superior value, if this window covering is found to be defective in material or workmanship. To obtain warranty service contact our customer service department at **866-439-9800**. This warranty does not cover damage or defects caused by or resulting from improper maintenance, negligent or improper use, abuse, misuse, neglect, accidents, act of God, alteration, commercial use, installation, removal or reinstallation. This warranty is restricted to normal consumer use within the United States and Canada.
MANUFACTURER WILL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

REPLACEMENT PARTS LIST

For replacement parts, call our customer service department at **866-439-9800**, 8 a.m. - 8 p.m., EST, Monday - Sunday.

PART	DESCRIPTION	PART #	COVERED UNDER WARRANTY
A	Hardware Box	68366	NO

Printed in Taiwan

allen + roth®


ITEM #9577595-9577636
MODEL #ARSLBO070720WT - ARSLBO120720WT
& ARSLLF070720WT - ARSLLF120720WT

ALLEN+ROTH and logo design are trademarks or registered trademarks of LF, LLC. All rights reserved.

1-1/2 INCH SIDELIGHT CELLULAR SHADE

Español p. 7

ATTACH YOUR RECEIPT HERE

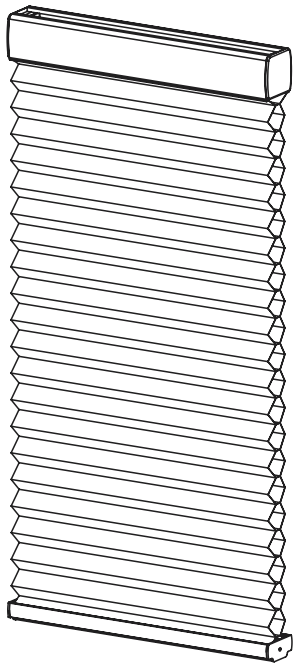

Serial Number _____

Purchase Date _____

Thank you for purchasing this ALLEN+ROTH product.
Questions, problems or missing parts?
Before returning, contact us on:
866-439-9800, 8 a.m. - 8 p.m., EST, Monday - Sunday.

DF26461

TABLE OF CONTENTS

Package Contents..... 2

Hardware Contents..... 3

Preparation..... 3


Assembly Instructions..... 4

Care and Maintenance 6

Warranty..... 6


Replacement Parts List..... 6

PACKAGE CONTENTS

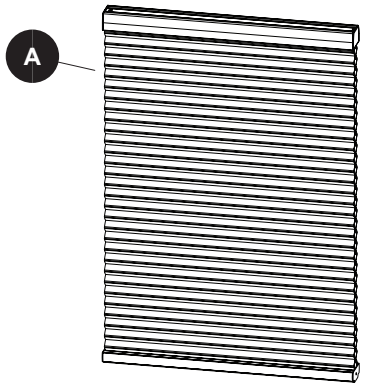


PART	DESCRIPTION	QUANTITY
A	Shade	1

HARDWARE CONTENTS

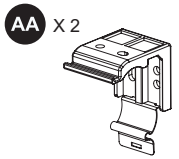


Mounting Bracket

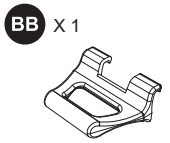


Handle




Wood Screw

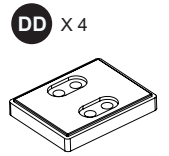

Spacer

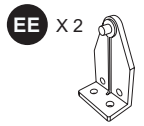

Hold Down Bracket

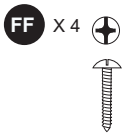

Medium Screw

PREPARATION


Before beginning installation of product, make sure all parts are present. Compare parts with package contents list and hardware contents list. If any part is missing or damaged, do not attempt to assemble, install or operate product. Contact customer service for replacement parts.

Estimated Assembly Time: 30 minutes


Tools Required for Assembly (not included): Measuring tape, drill with a 3/32-in. bit, screwdriver and pencil.

Bracket Location and Installation:
The shade may be installed either inside or outside the window frame. A mounting bracket should be positioned at each end of the headrail.
Always position the brackets such that there is no interference with cords and mechanisms inside the headrail. The procedure outlined below will assure proper bracket placement.


1a. For outside mounting, clip the mounting bracket (AA) onto the headrail of shade (A). Hold the shade (A) level at the height desired and center it over the window opening. Mark the exact location of each mounting bracket (AA) with a pencil. Remove the mounting brackets (AA) from the headrail of shade (A). Predrill the screw holes and then secure the bracket (AA) to the wall or window molding with wood screws (CC).

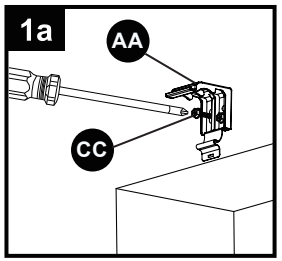


1b. For inside mounting, clip the mounting brackets (AA) onto the headrail of the shade (A). Hold the shade (A) in place and make a pencil mark at the rear of each mounting bracket (AA). Remove the mounting brackets (AA) from the headrail. Predrill the screw holes and then secure the mounting bracket (AA) to the wall or window molding with wood screws (CC).

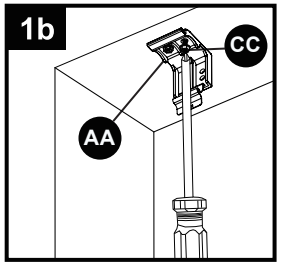


2. Lift the headrail of the shade (A) into position such that the inner front edge of the headrail slides into the slot at the front of each mounting bracket (AA). Push the headrail upward until the flexible tab at the bottom of each mounting bracket (AA) snaps onto the back of the headrail. Check carefully to assure each mounting bracket (AA) is properly snapped into place.

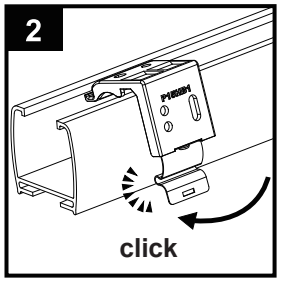


3. Attach the handle (BB) to the center of the bottom rail of the shade (A). Check carefully to assure that the handle (BB) is properly snapped into place.

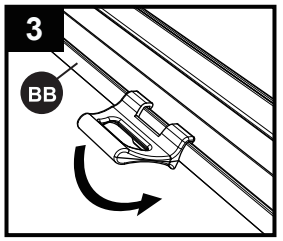


4. **OPTIONAL:** To install hold down brackets (EE), lower the shade (A) to the desired position. Screw the hold down brackets (EE) into the wall or sill using medium screws (FF) and attach the shade (A) through the hole in the cap on the bottom rail.

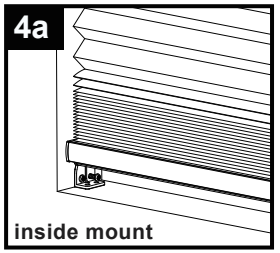

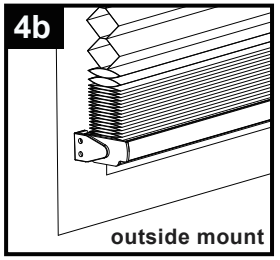

To remove brackets from headrail
Use a flathead screwdriver and insert into the mounting bracket tab (AA). Push back the tab with screwdriver to release the bracket (AA) from the headrail.

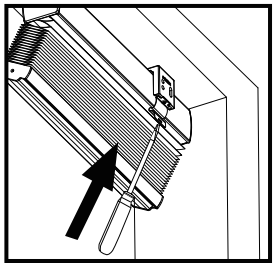

Optional
You can install spacers (DD) behind mounting brackets (AA) if more clearance is needed behind the shade (A). To do so, place spacer behind mounting bracket (AA), aligning it against the inside edge of the top and side trim. This allows the mounting bracket (AA) to be spaced up to 1/2 in. (when using two spacers on each bracket) further apart on each side of the headrail of the shade (A).

