
## JONATHAN Y

Model# VAN1008

Product Dimensions: 19"Wx18"Dx33"H

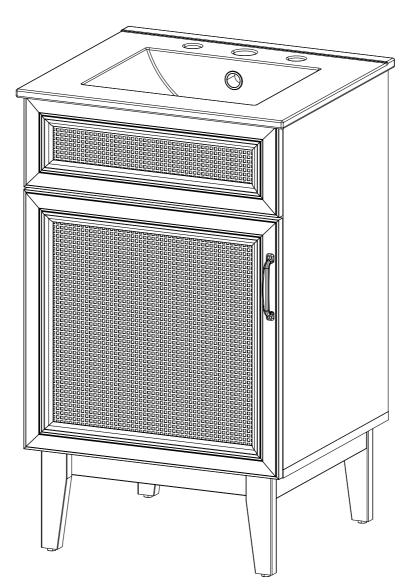



WEIGHT CAPACITY: 29 LBS SHELF LOAD CAPACITY: 15 LBS Warning: Do not stand on Vanity. Warning: Do not over torque bolts.

## WARNING

Inspect item carefully before attempting to install if there is any damage or obvious defect, do not install item may not be returned once it has been installed.


## CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a reguler basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

## **NOTICE & IMPORTANT SAFETY INSTRUCTIONS**


Please make sure that you have all parts indicated before you begin assembly of this item


- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If there are any questions relating to defects, missing parts, assembly issues, replacements, etc, please send a detailed email to cs@jonathany.com

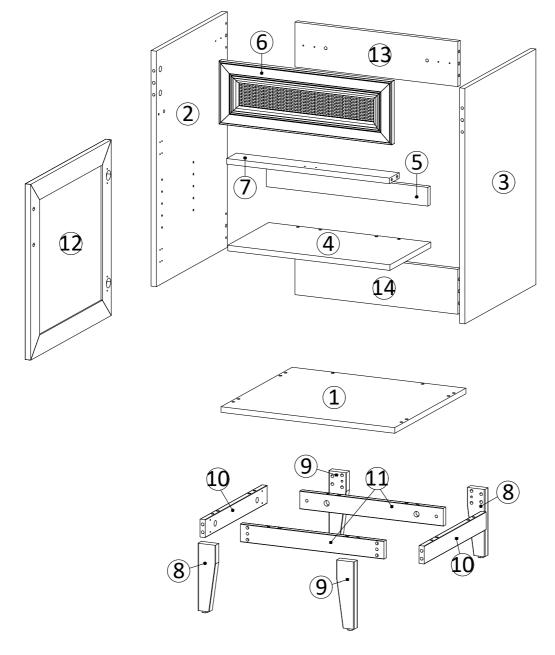


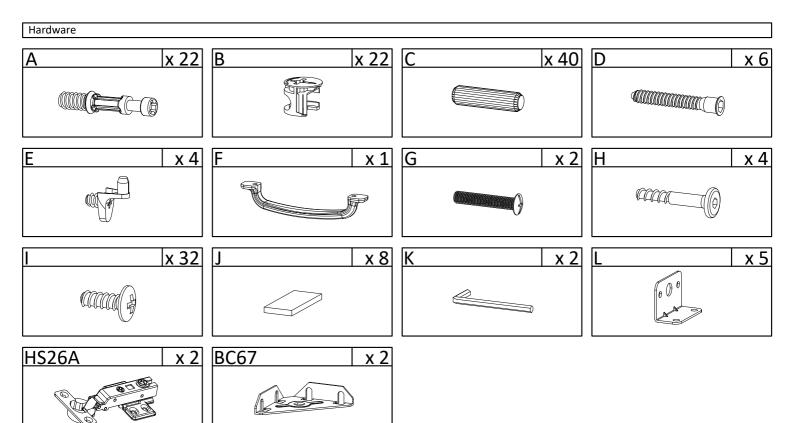





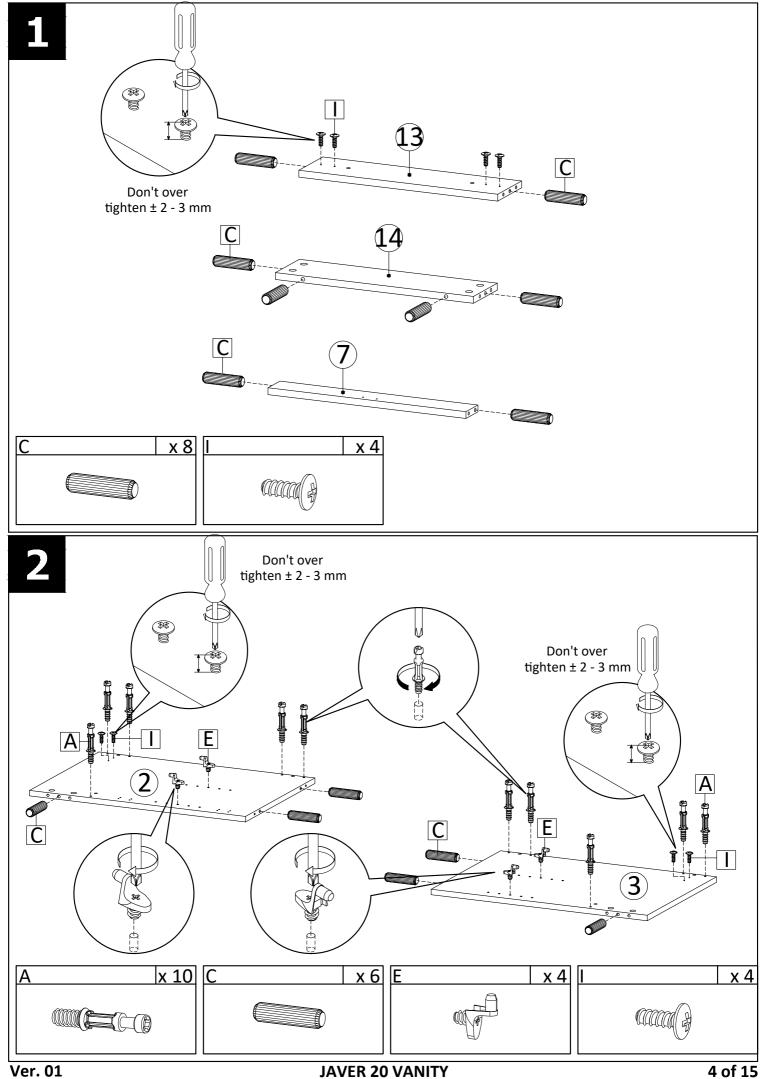


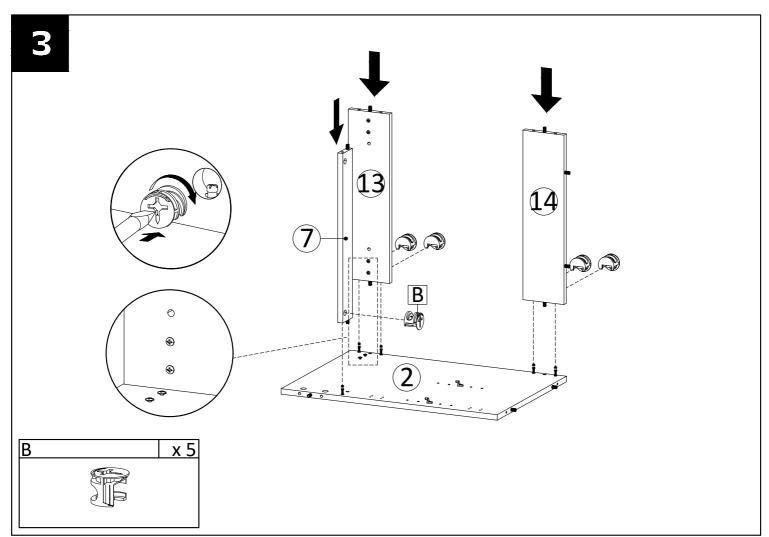


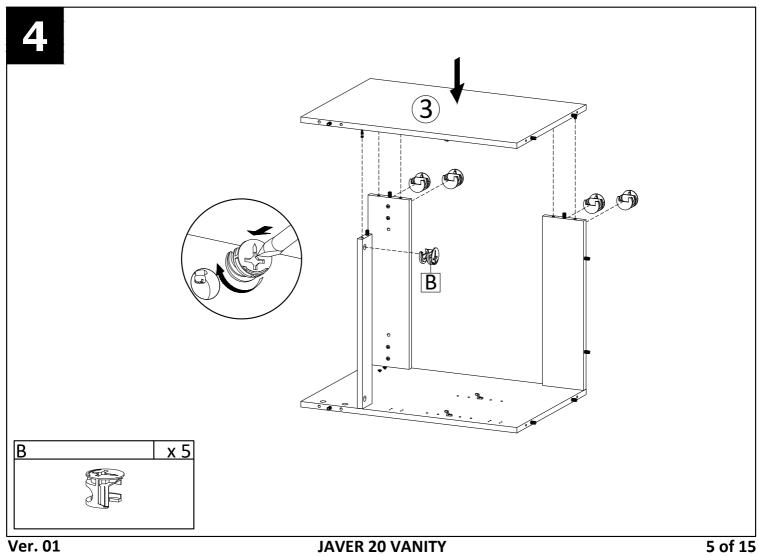


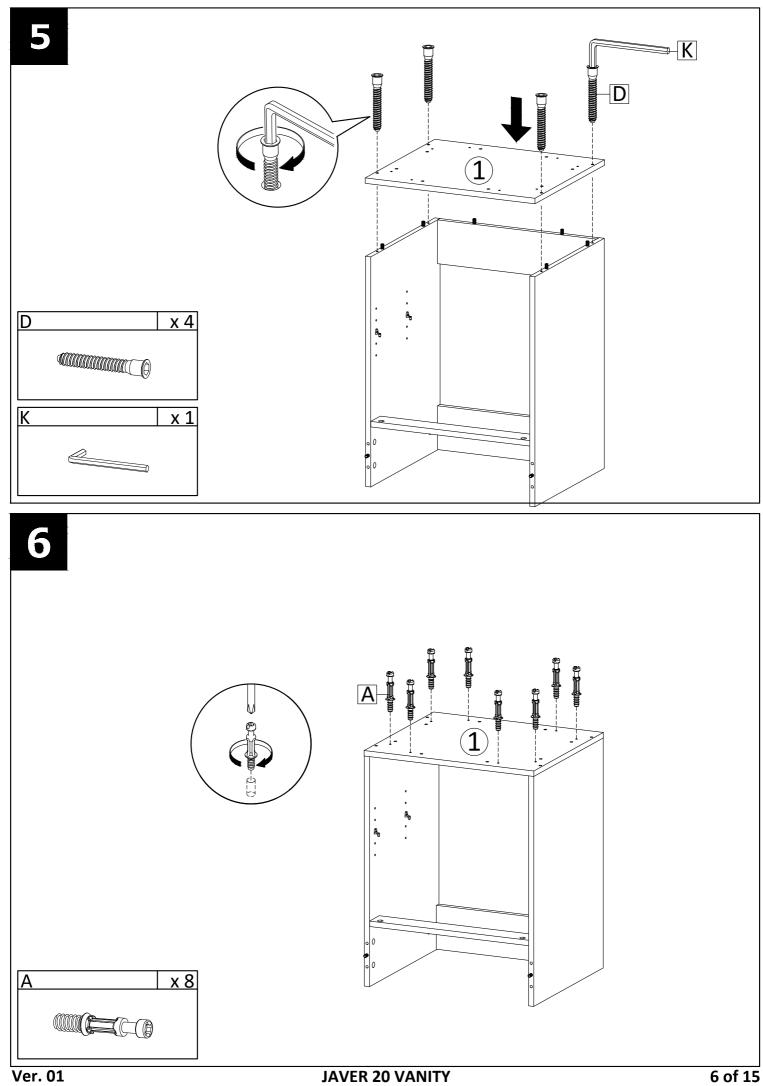


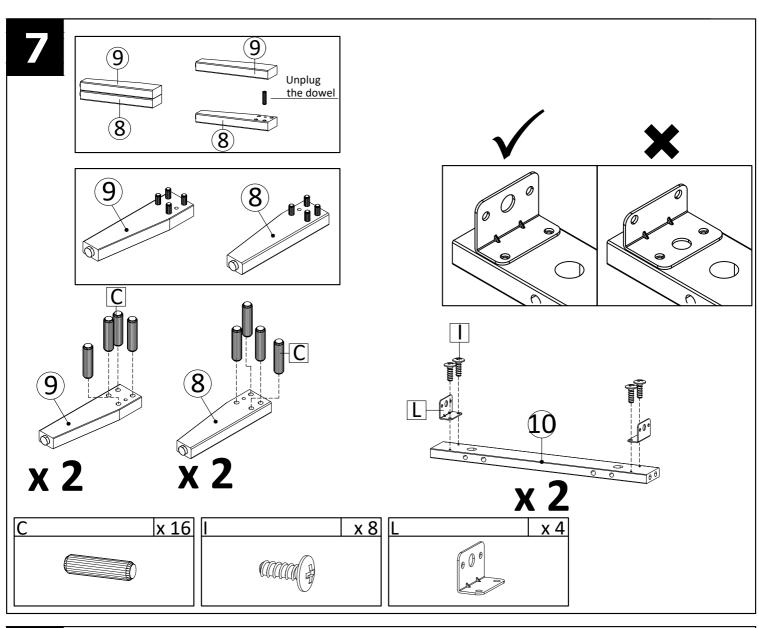


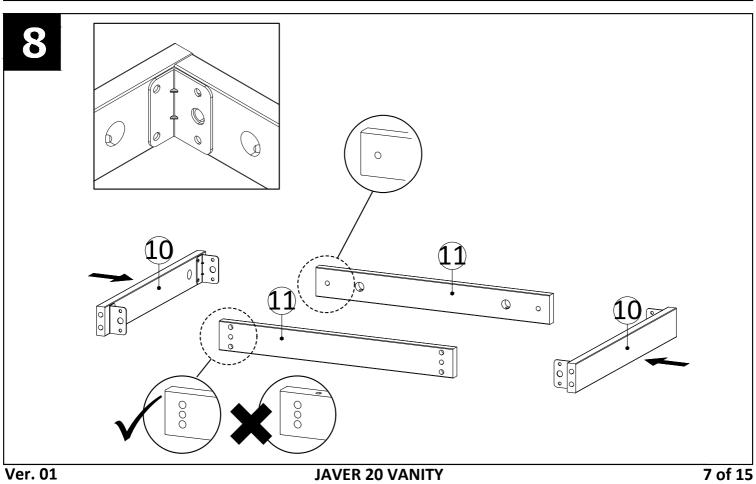


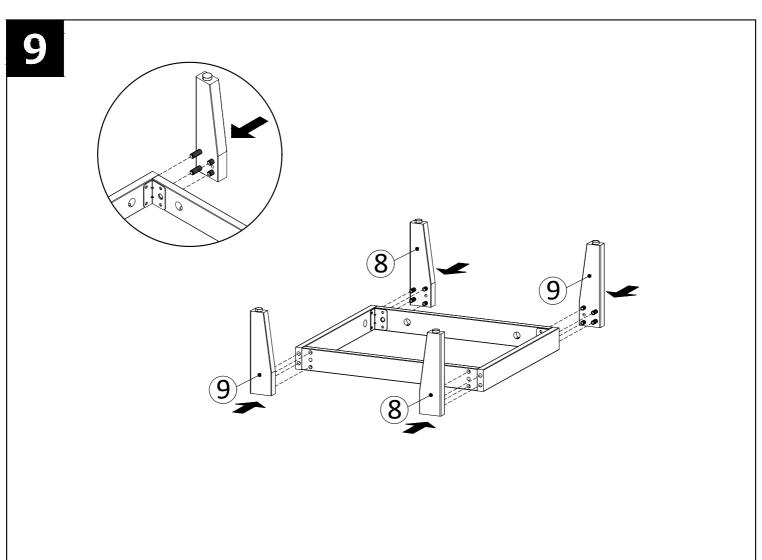


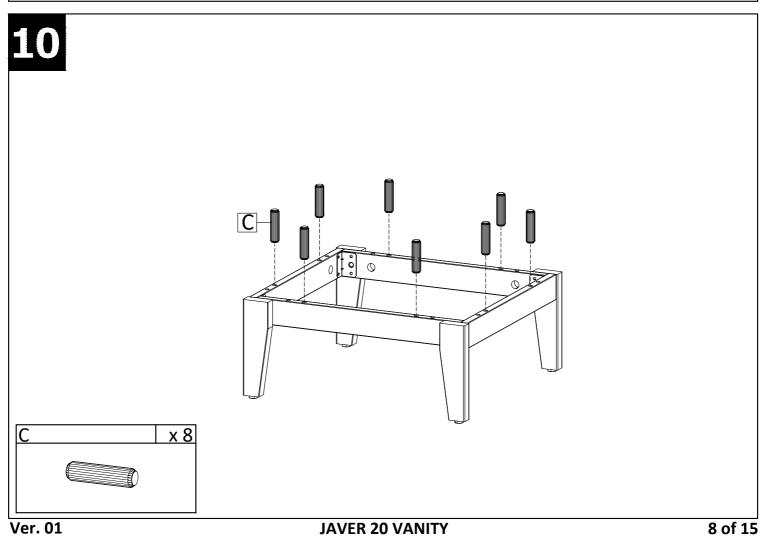


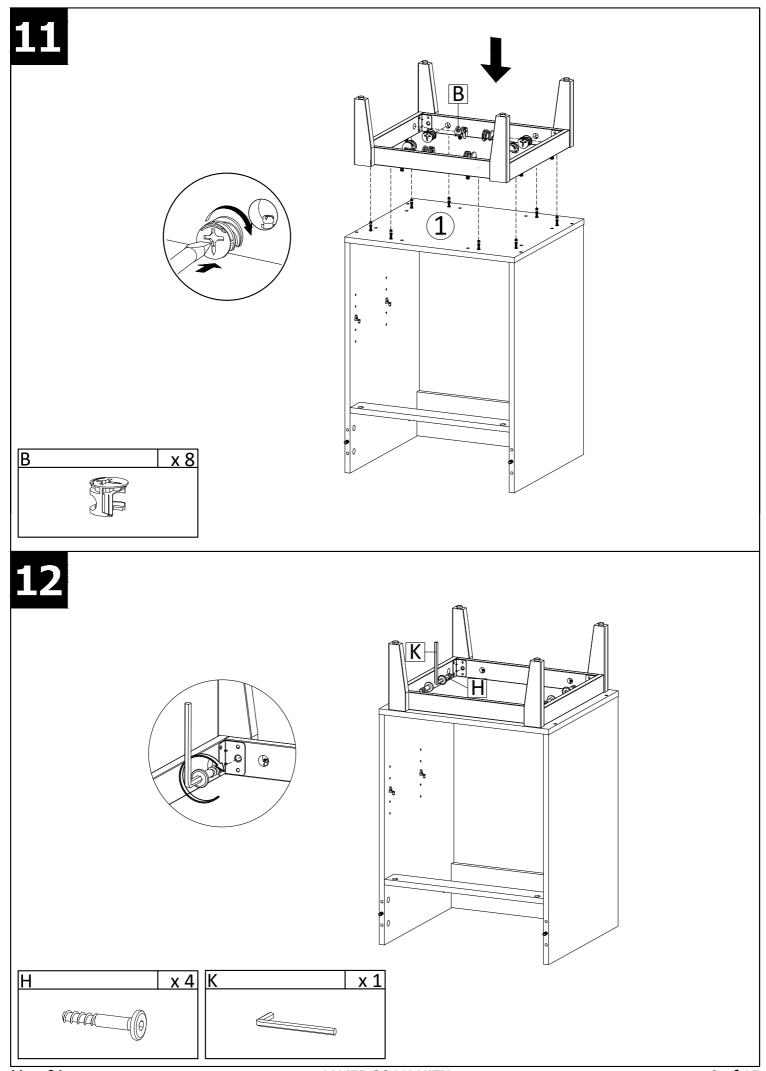


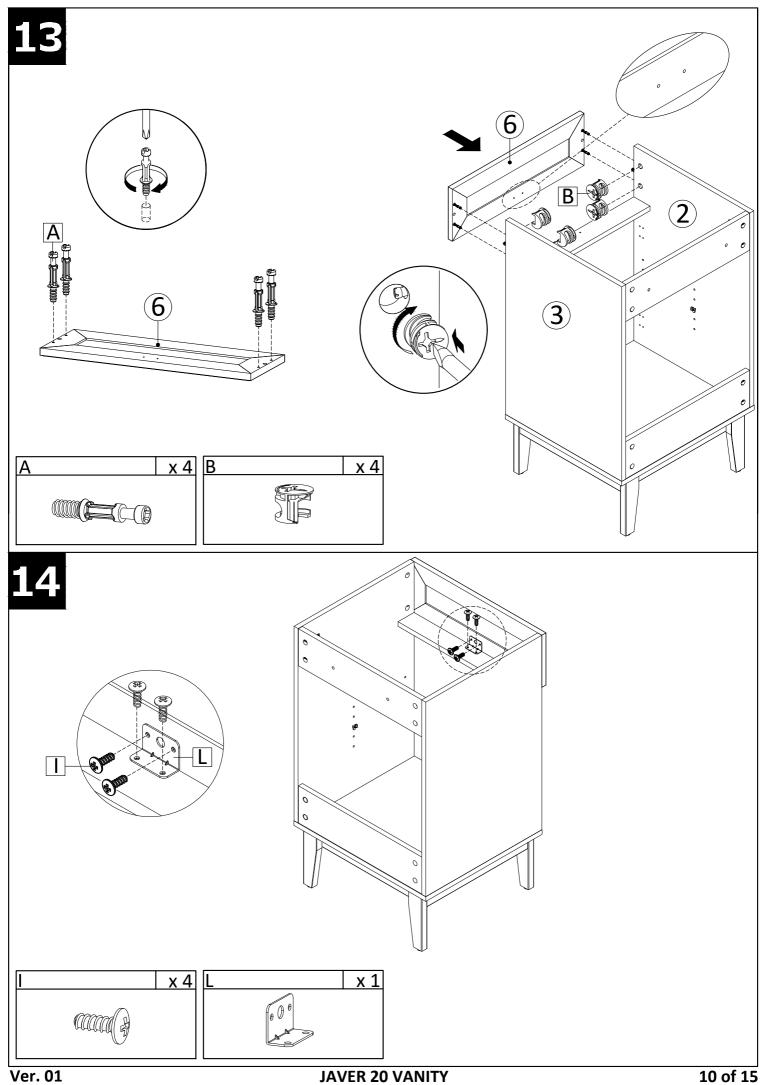

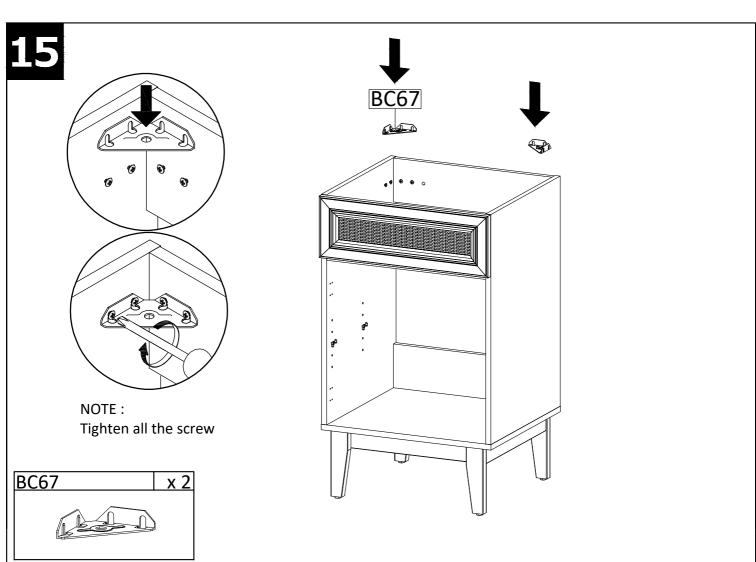

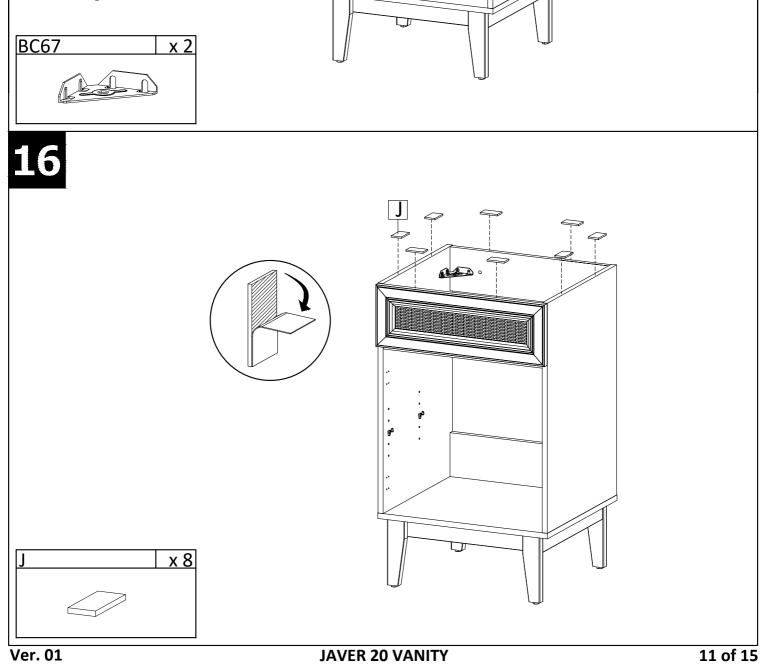


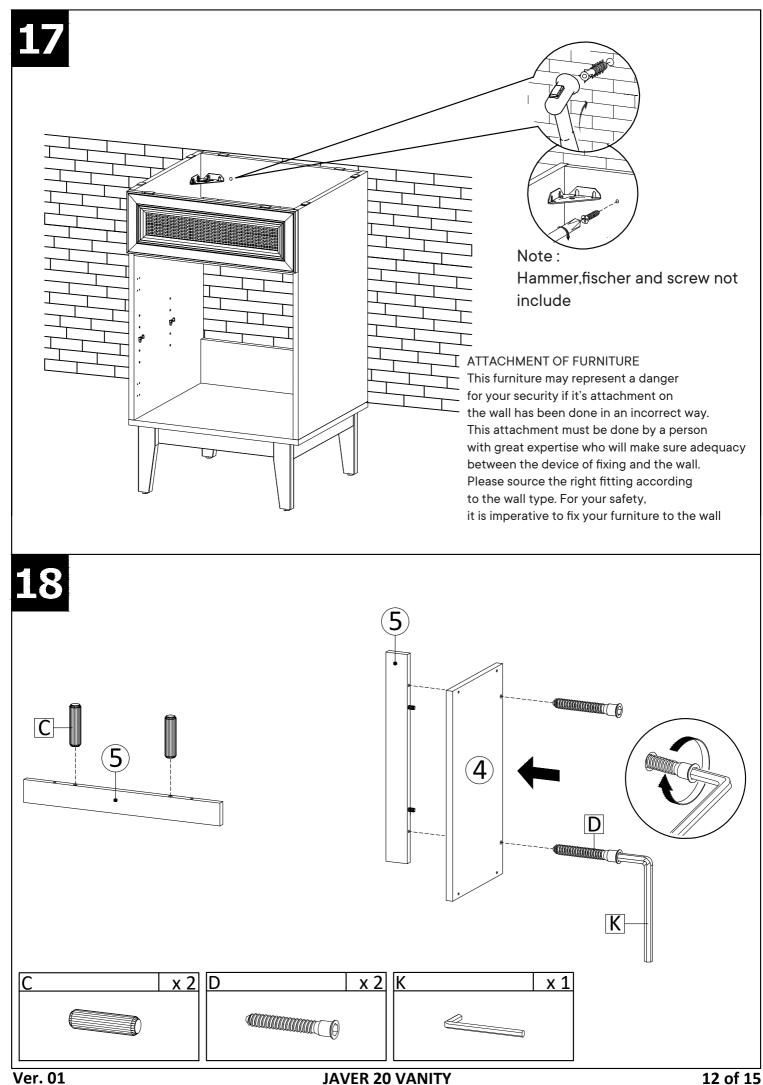


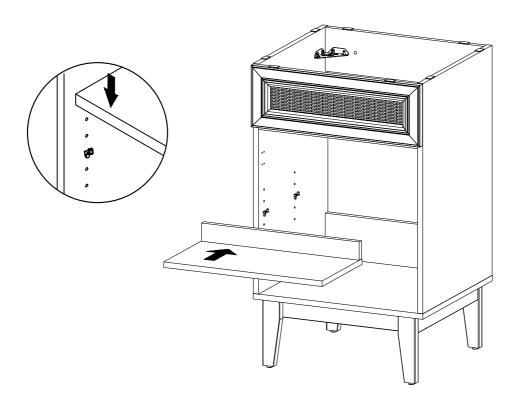

20

Apply a thin bead of silicone compound around the vanity base and set the vanity top carefully in place. Remove any excess silicone compound with a wet rag

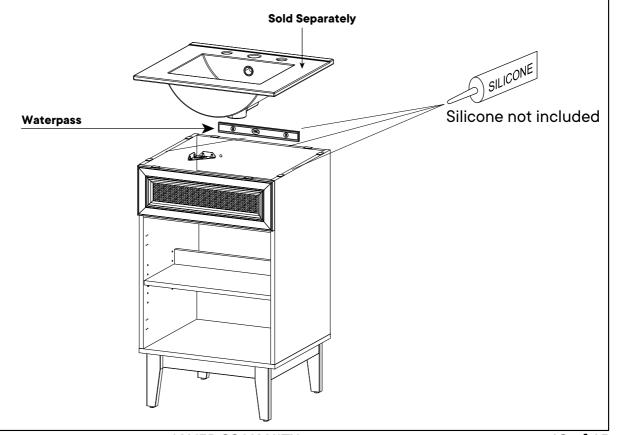

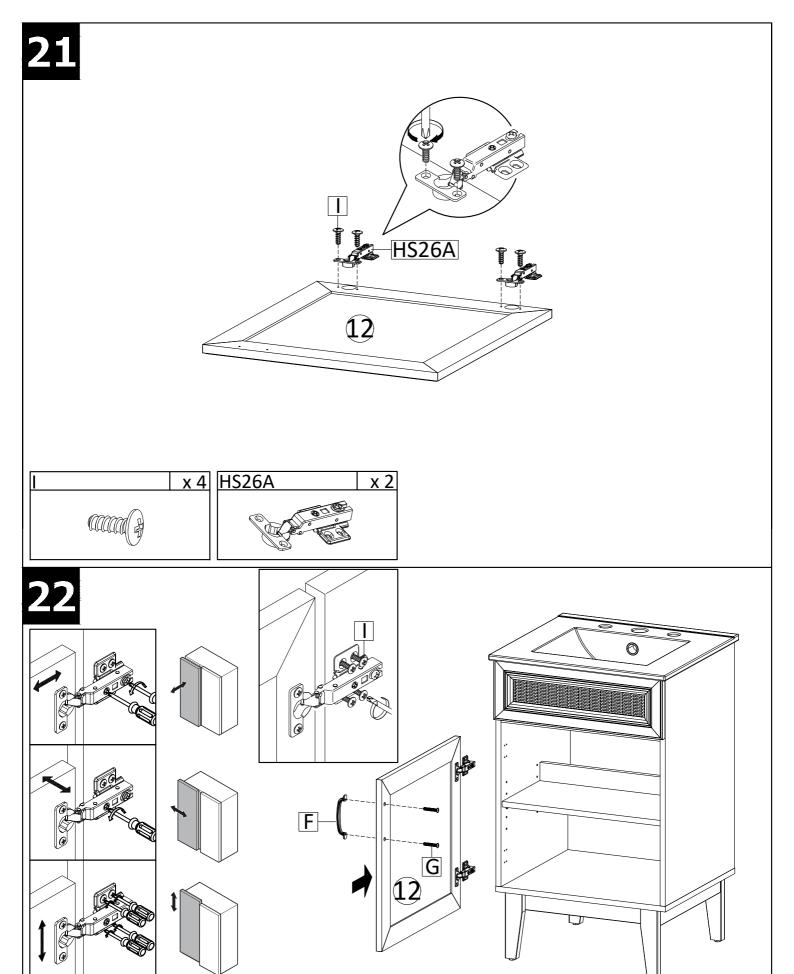

x 8

x 1 G

