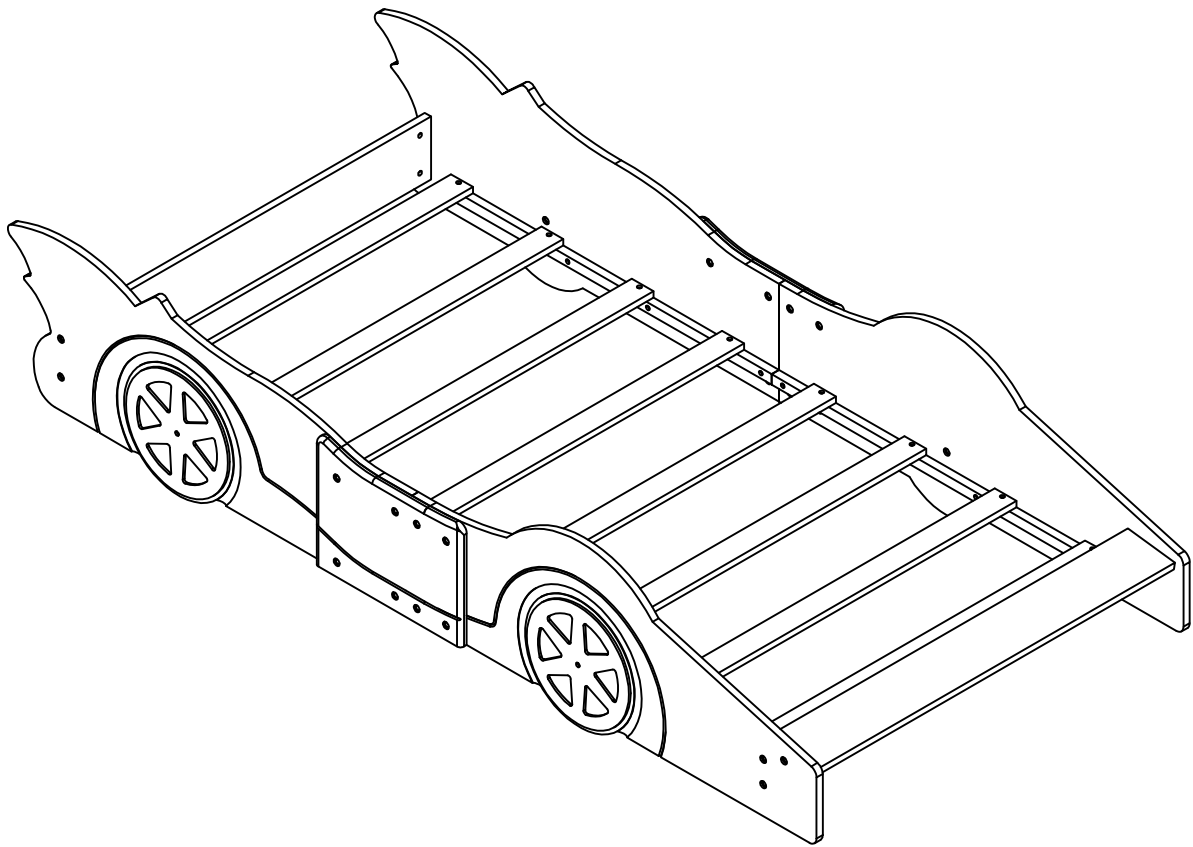



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF298789











If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net






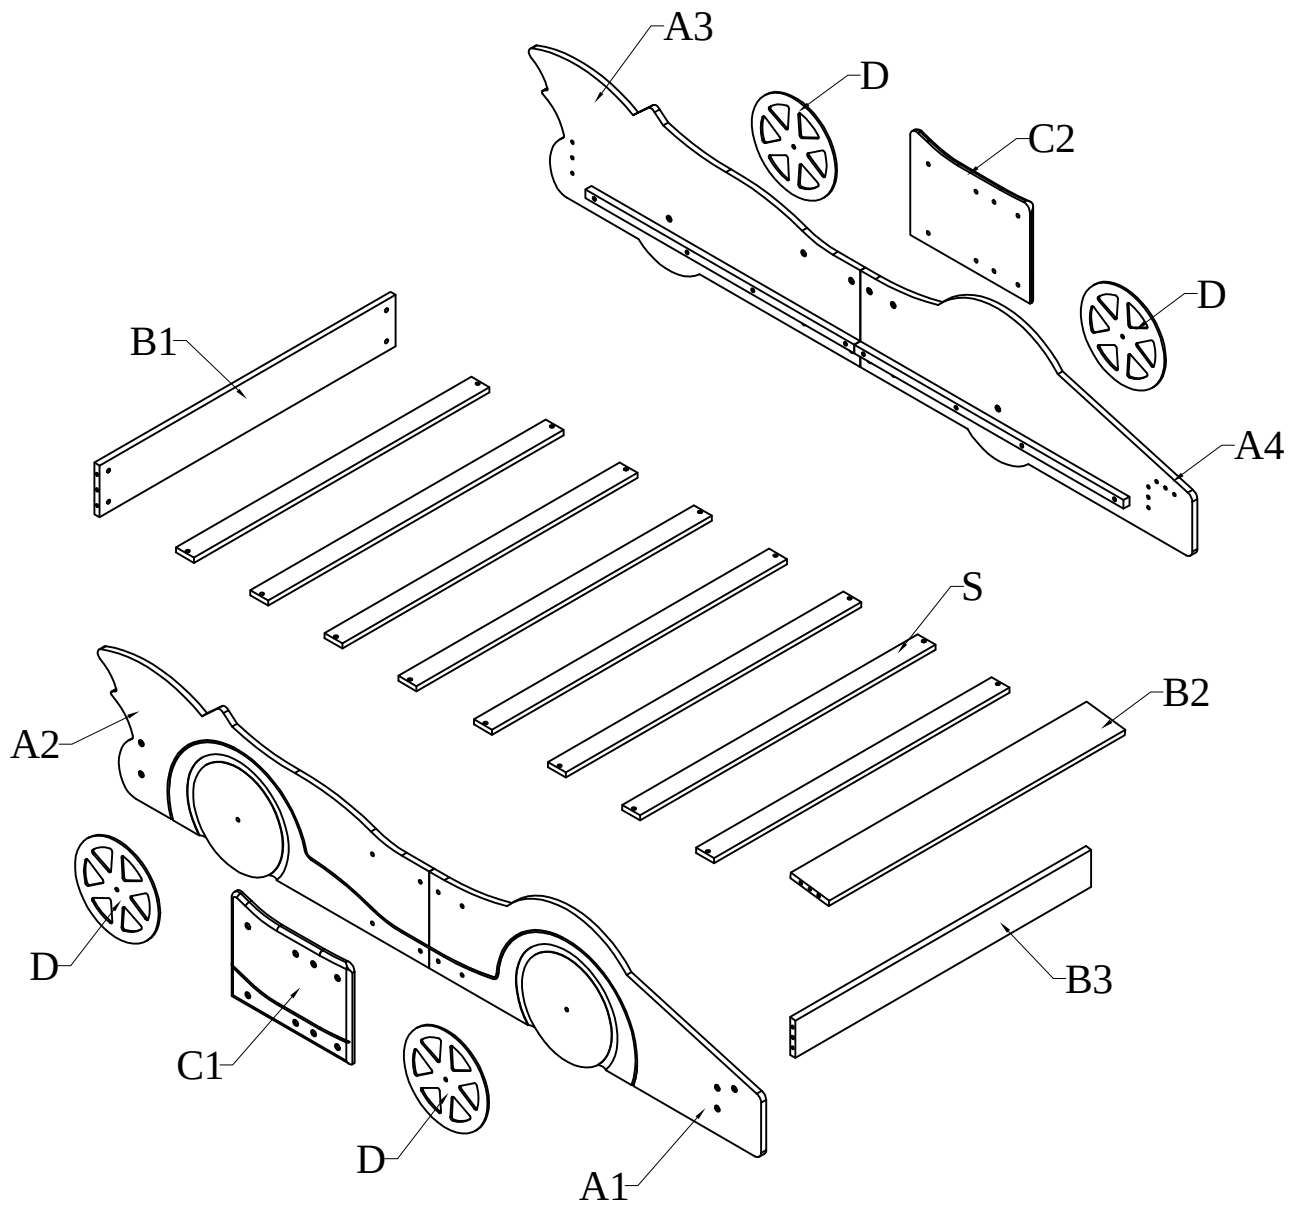
DETAIL VIEW




BOX: WF298789

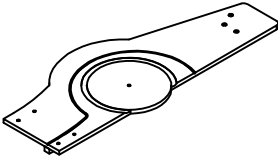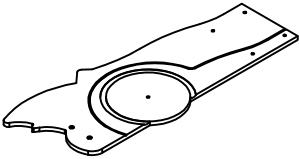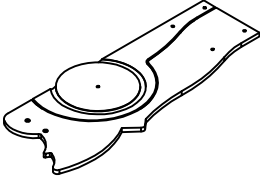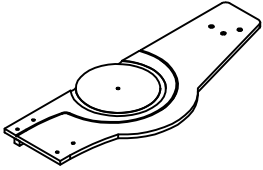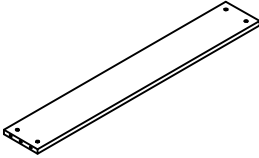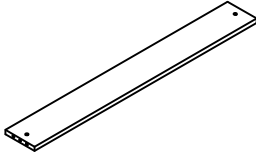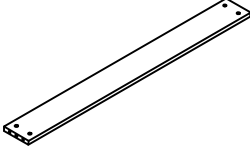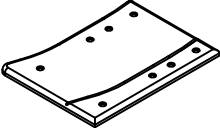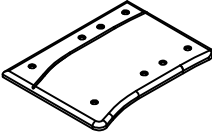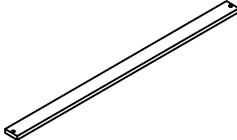A1  Left side rail - front (1pc)	A2  Left side rail - back (1pc)	A3  Right side rail - back (1pc)	A4  Right side rail - front (1pc)
B1  Horizontal rail - back (1pc)	B2  Car headboard (1pc)	B3  Horizontal rail - front (1pc)	C1  Support side rail - left (1pc)
C2  Support side rail - right (1pc)	D  Wheel car - right (4pcs)	S  Slats (8pcs)	

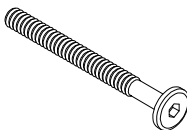
HARDWARE LIST: WF298789

1		2		3		4	
Hex - Head bolts Ø1/4" * 60 - 10pcs		Hex - Head bolts Ø1/4" * 25 - 16pcs		Hex - Head bolts Ø1/4" * 15 - 4pcs		Horizontal - Hold bolts Ø1/4" - 10pcs	
5		9		7		8	
Canopy head though Ø1/4" - 20pcs		Wood dowel Ø8 * 30 - 8pcs		Wood crews M4 * 25 - 16pcs		Allen key K4 - 2pc	



Asembly Tools Required (Not Included)

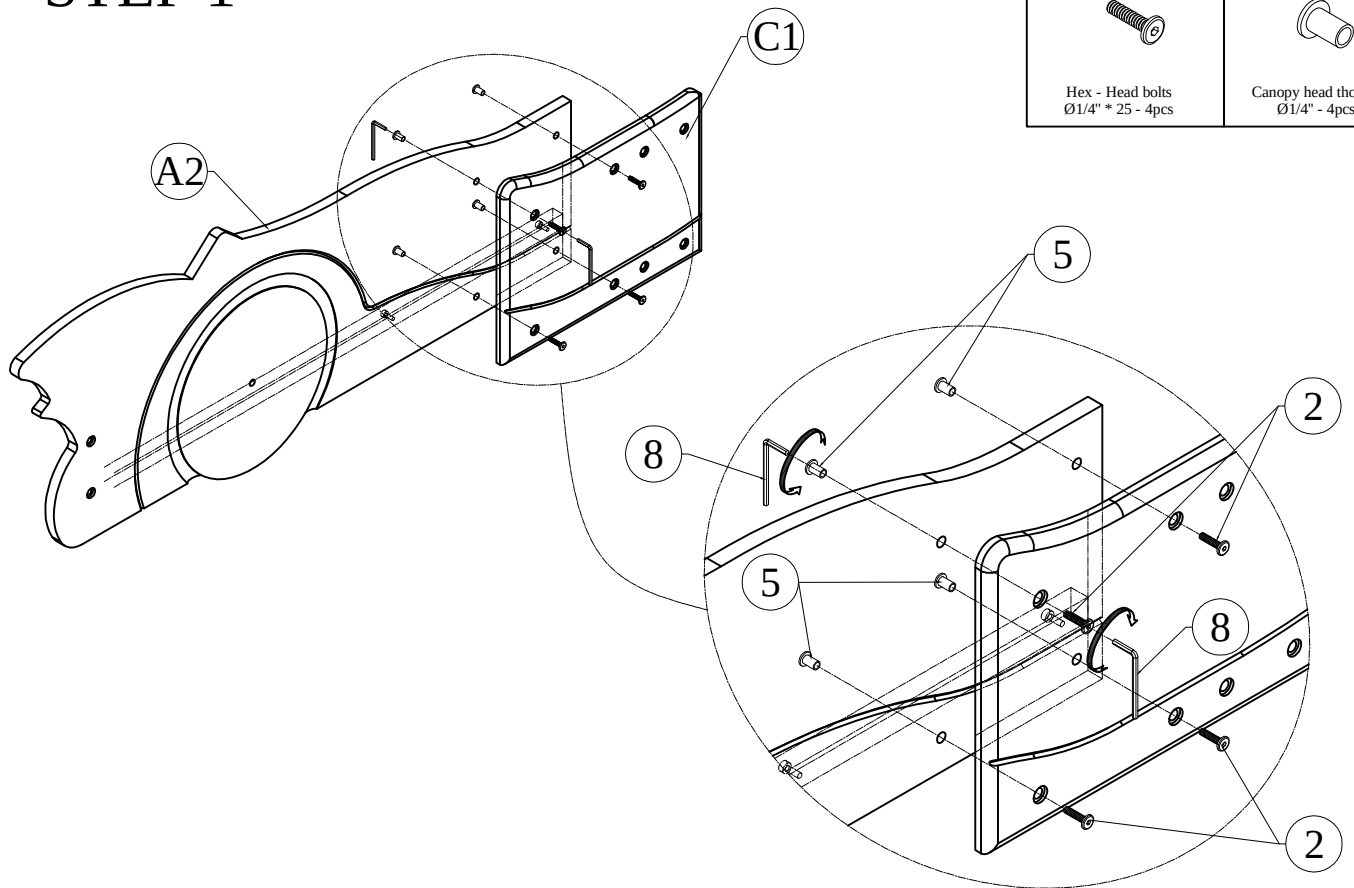STEP 1



2



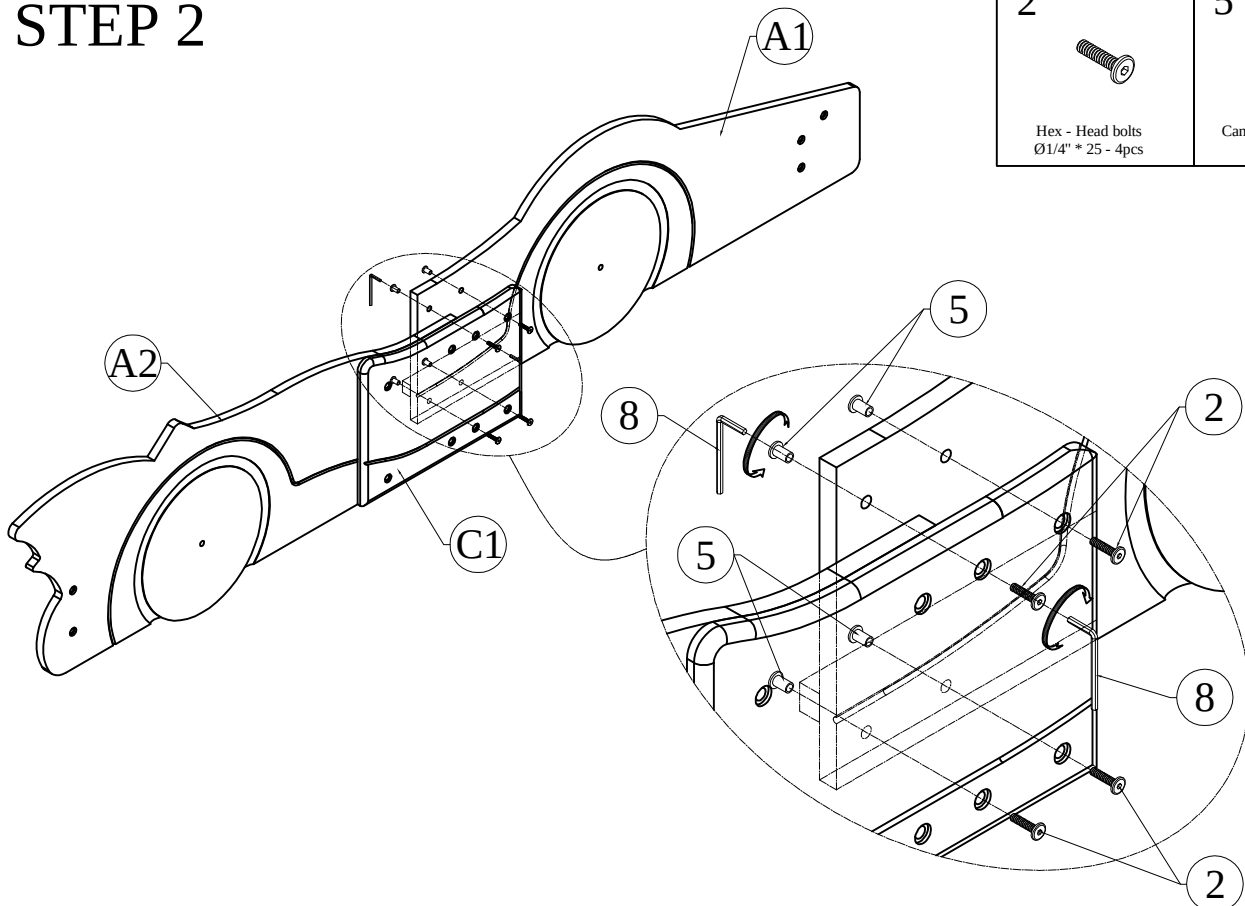
Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

STEP 2



2



Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs

STEP 3

2

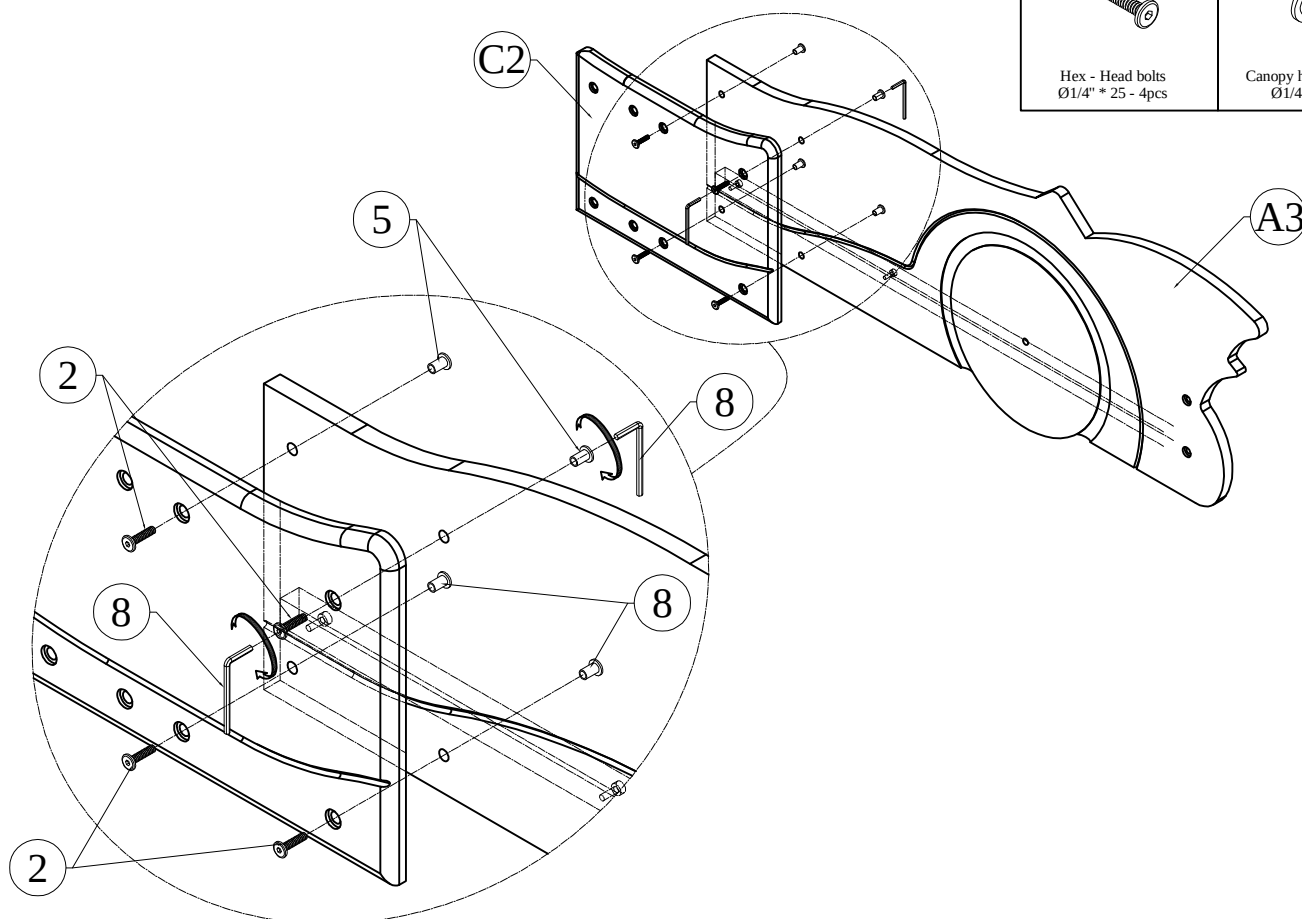


Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs



STEP 4

2

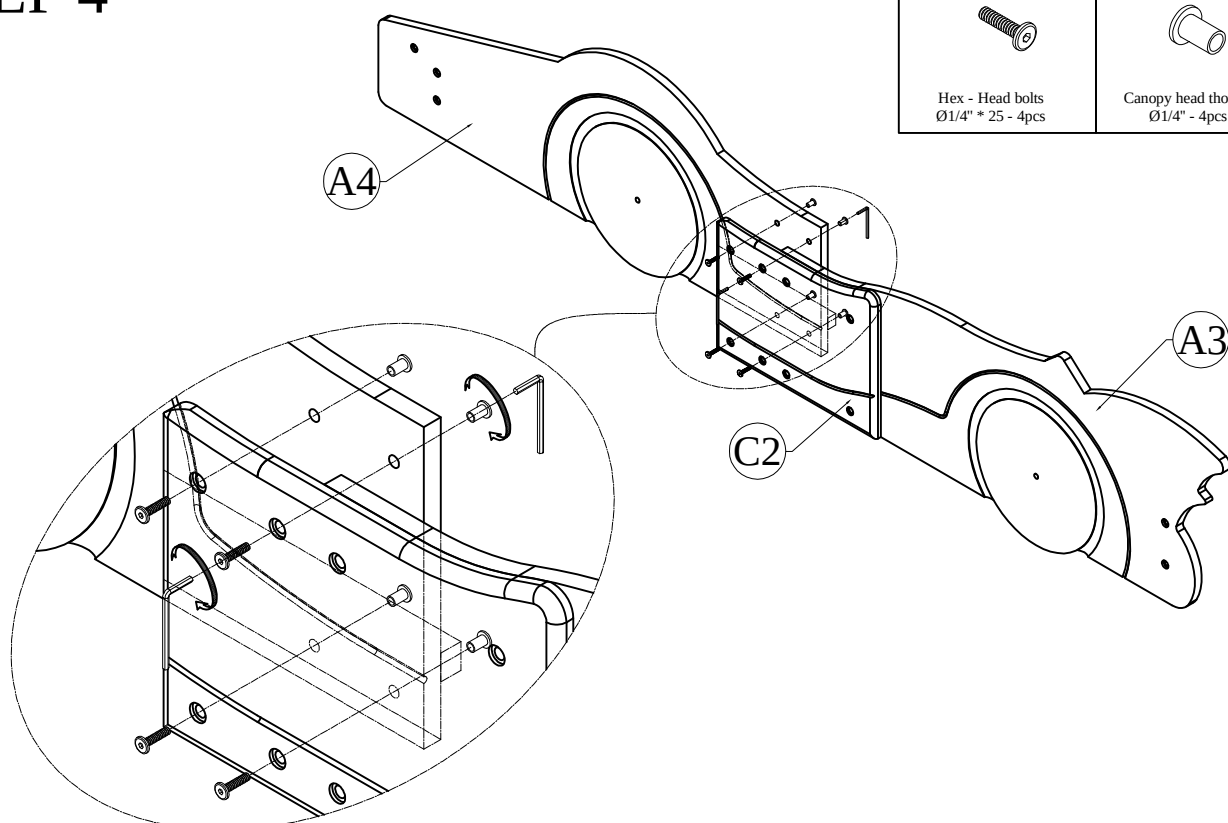


Hex - Head bolts
Ø1/4" * 25 - 4pcs

5



Canopy head though
Ø1/4" - 4pcs



STEP 5

1



Hex - Head bolts
Ø1/4" * 60- 10pcs

4

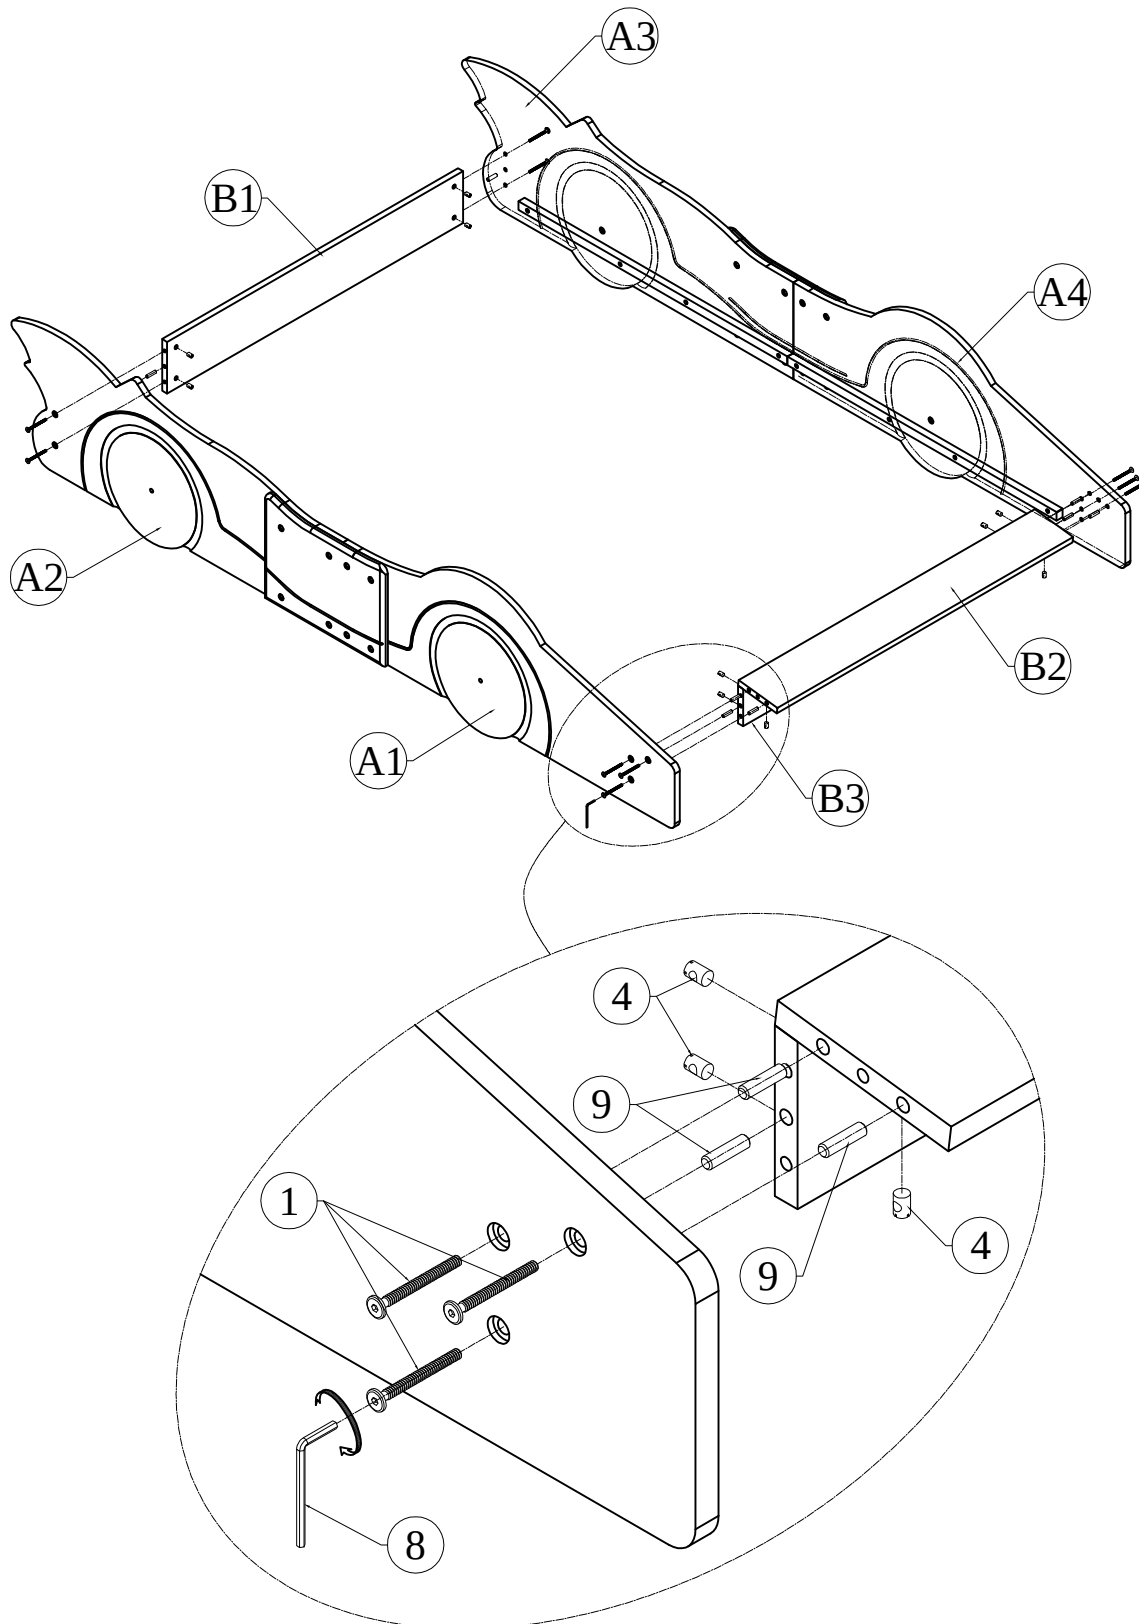


Horizontal - Hold bolts
Ø1/4" - 10pcs

9



Wood dowel
Ø8 * 30 - 8pcs



STEP 6

3

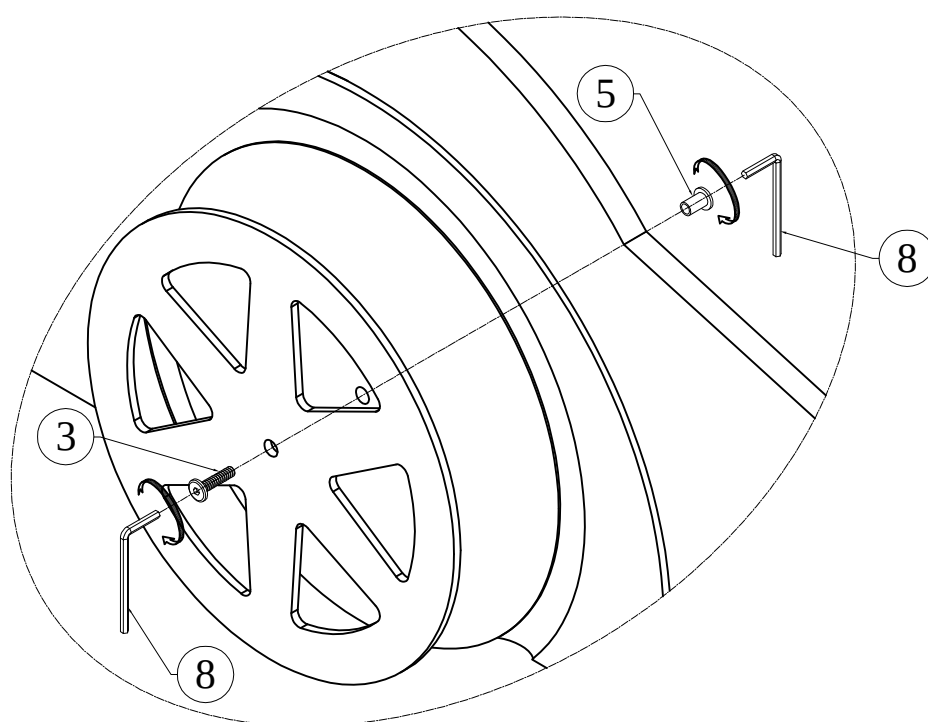
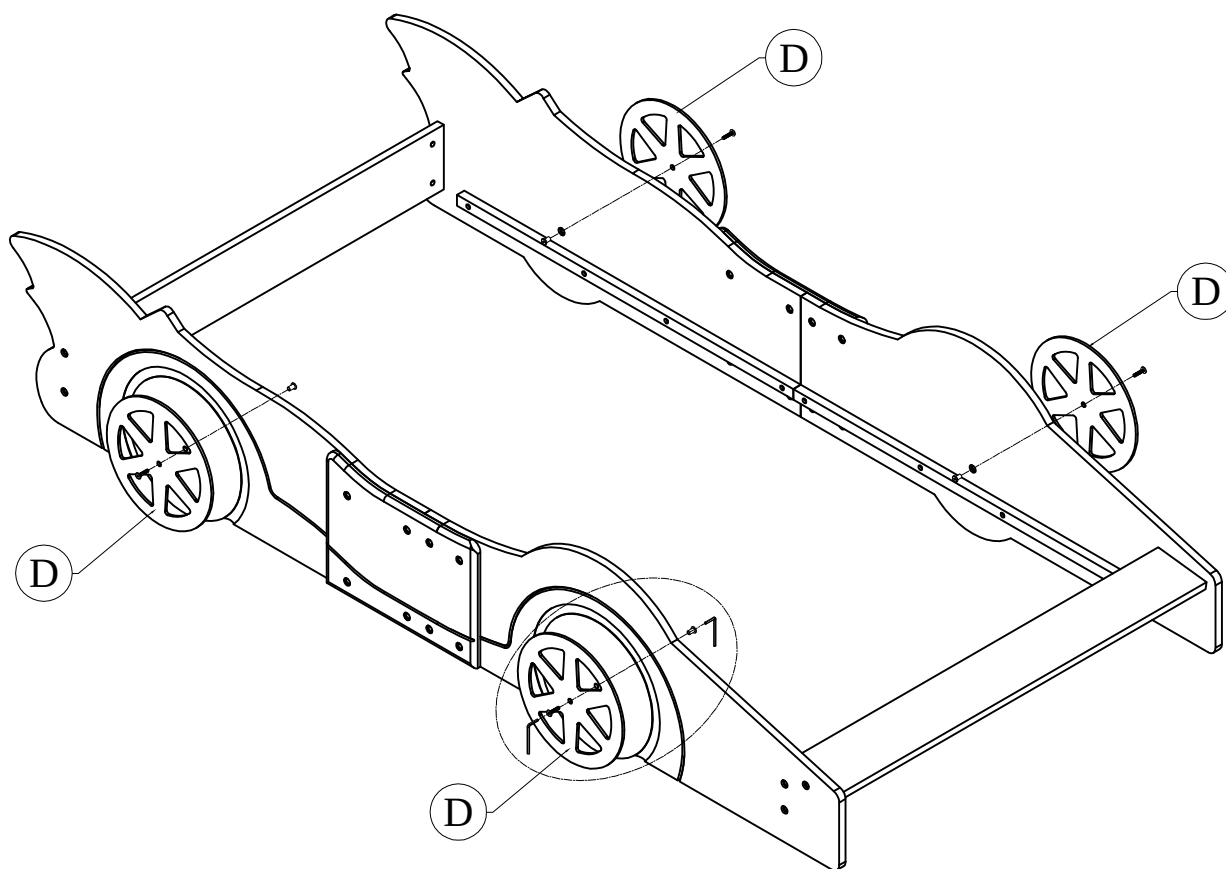


Hex - Head bolts
Ø1/4" * 15 - 4pcs

5



Canopy head through
Ø1/4" - 4pcs




STEP 10

7



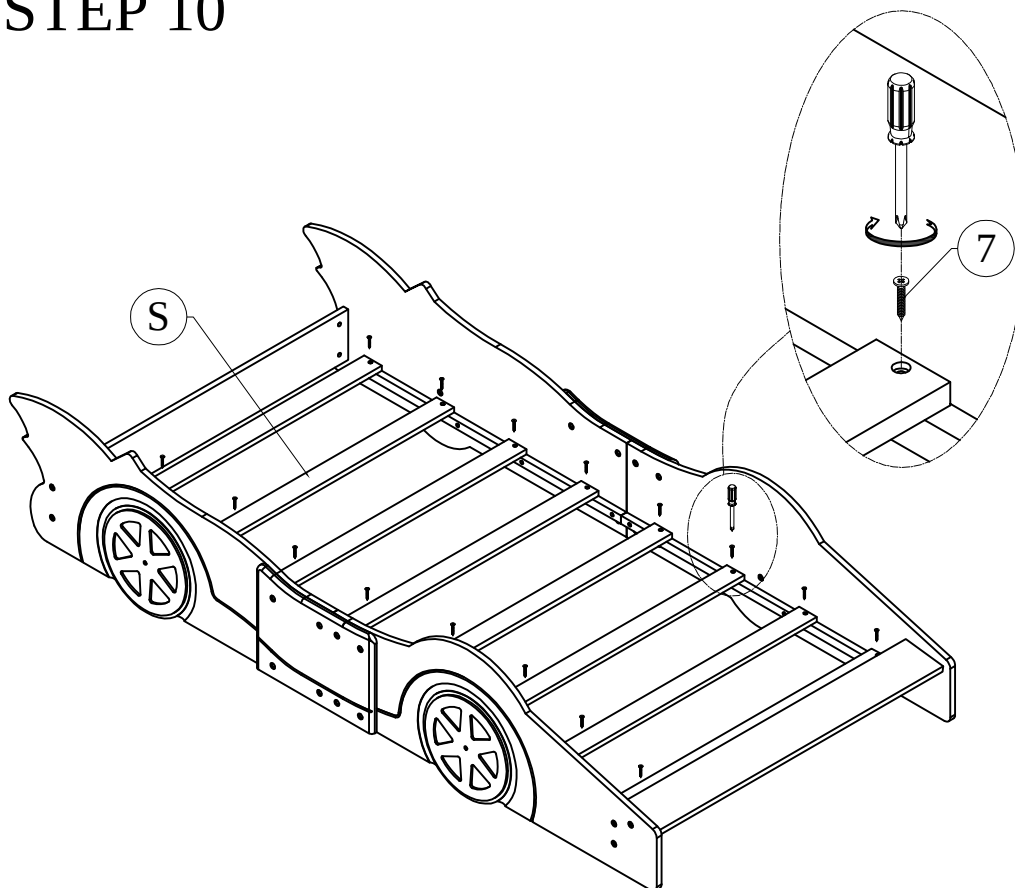Wood crews
M4 * 25 - 16pcs



COMPLETED

