





BOTTOM-LOCKING FENCE SLATS

Lock-in Privacy Decorative Slating Installation Instructions

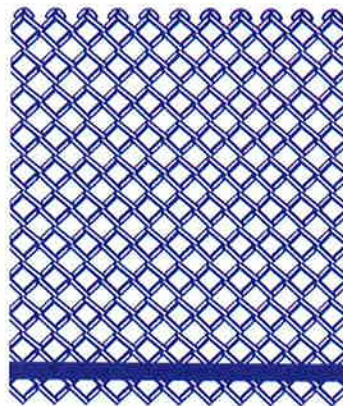

STEP 1 - Insert bottom horizontal channel open side up. Leading end of channel may be trimmed to a 45° angle to make installation easier.

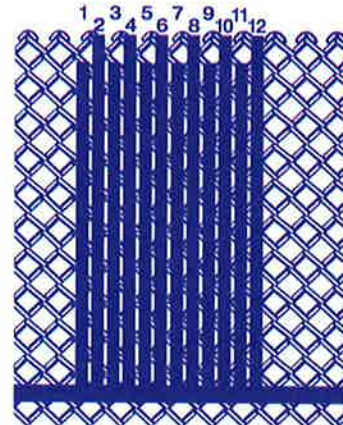

STEP 2 - Insert vertical slate with the angled and notched end down.



STEP 3 - Push the vertical slat into the horizontal channel to Lock-in place.



www.pexco.com