




INSTALLATION INSTRUCTIONS

TUCH Recirculating Kit

TRC3618

TRC4818

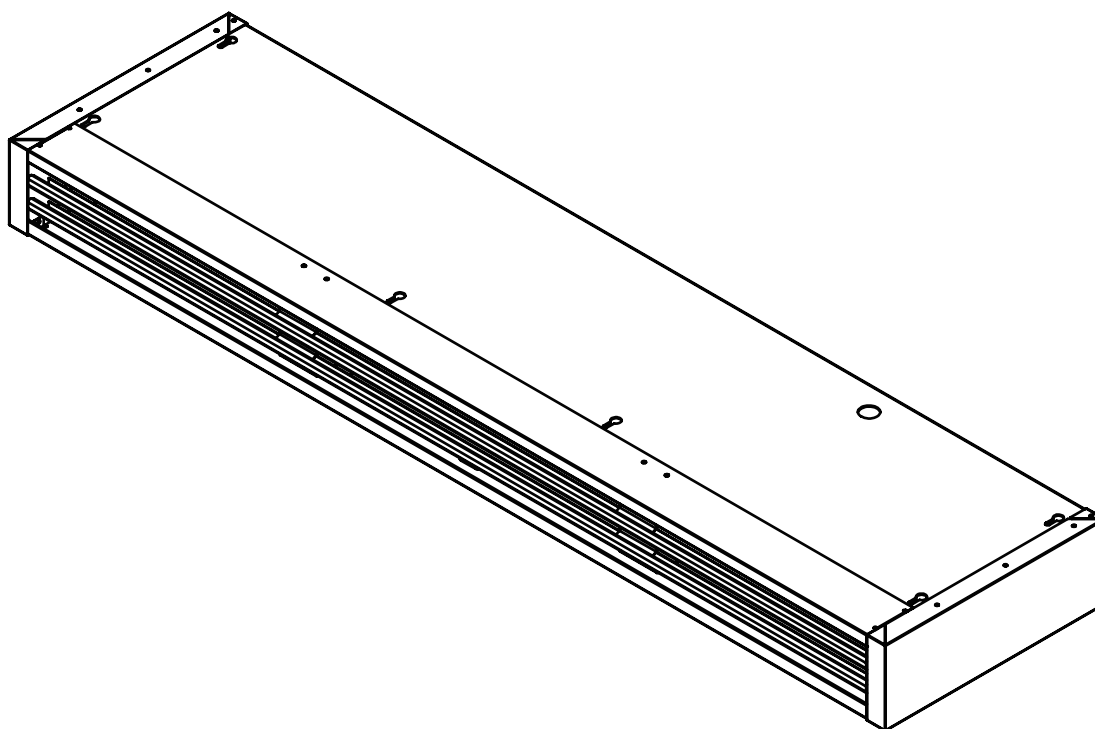

COMPATIBILITY




TUCH3618, TUCH4818

TABLE OF CONTENTS



LIST OF MATERIALS	4
INSTALLATION	5
SPECIFICATION	6
1.1 Mounting the Diverter Box	7
1.2 Charcoal Filters and Brackets	8

LIST OF MATERIALS

MODELS: TRC3618

PARTS SUPPLIED		HARDWARE PACKAGE CONTENT		
Air diverter box	1	3/16 x 3/8" screw		4
Carbon filter cartridges	2	M4 x 8 screw		4
Carbon filter adapters	2	#6 x 1" screw		4
Hardware Package	1			

MODELS: TRC4818

PARTS SUPPLIED		HARDWARE PACKAGE CONTENT		
Air diverter box	1	3/16 x 3/8" screw		4
Carbon filter cartridges	3	M4 x 8 screw		4
Carbon filter adapters	3	#6 x 1" screw		6
Hardware Package	1			

PARTS NOT SUPPLIED

- Ducting, conduit and all installation tools
- Cable connector (if required by local codes)


REPLACEMENT PARTS

Description	Part Number
Charcoal Filter	FT3648TU


SPECIFICATION

COMPATIBILITY

TUCH3618, TUCH4818

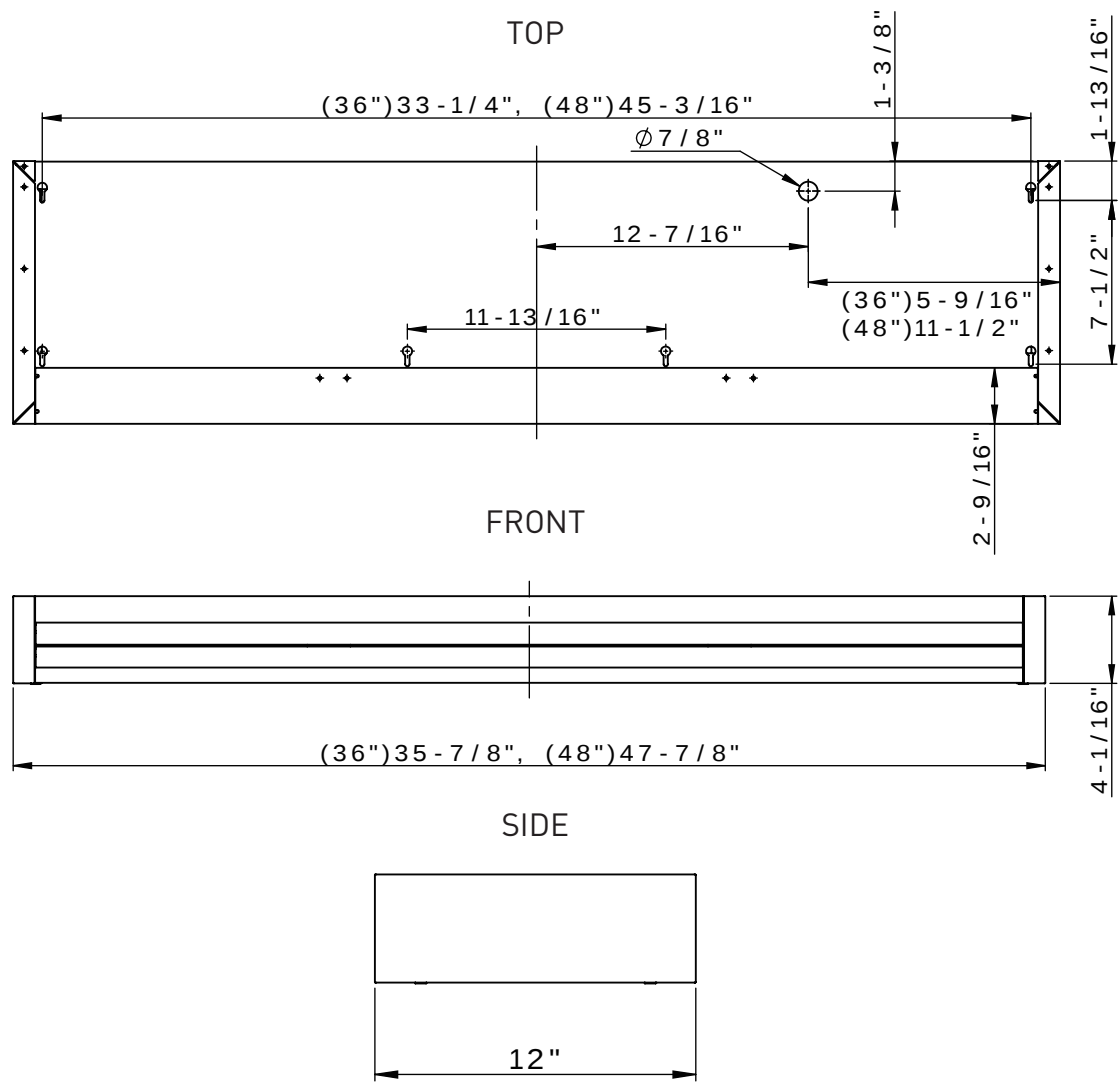

SPECIFICATION

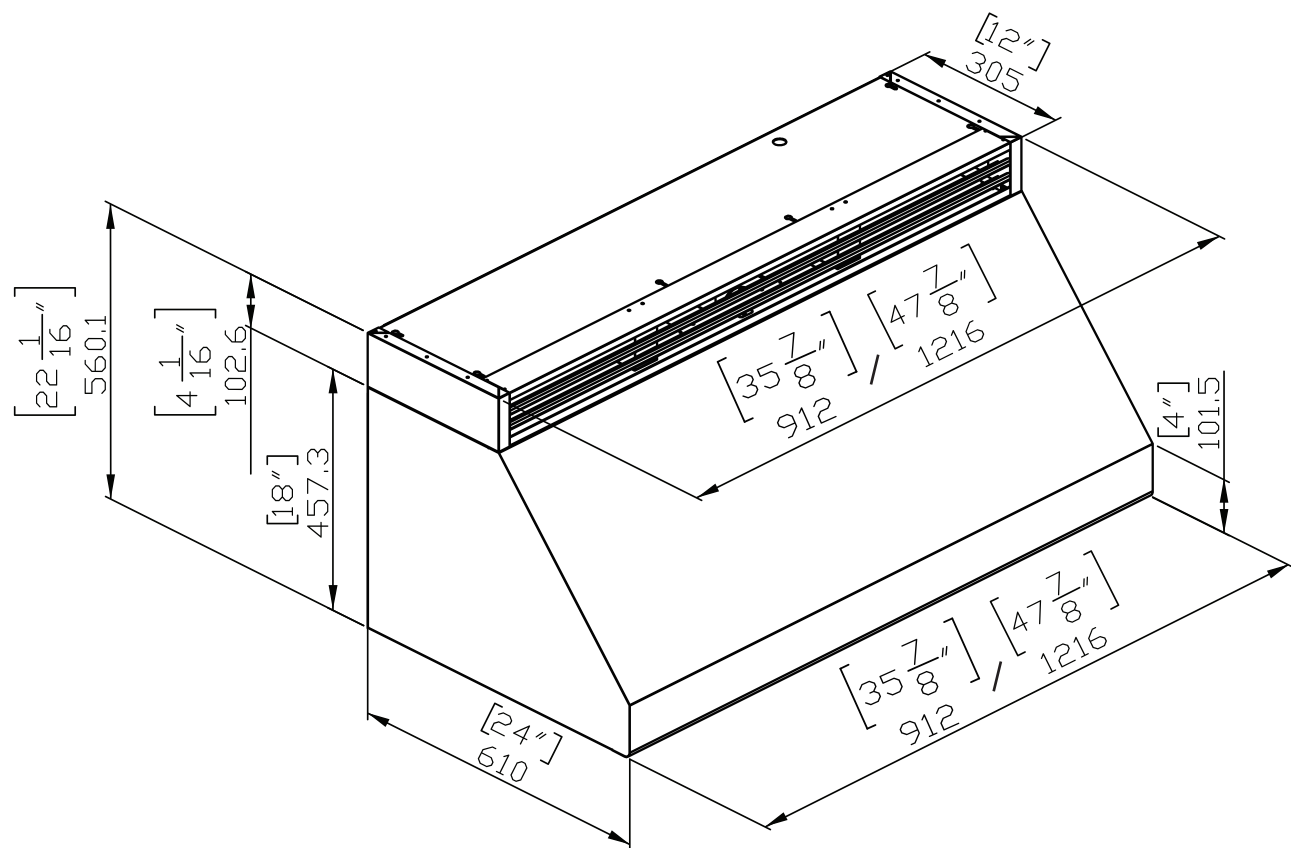

INSTALLATION

1.1 Mounting the Diverter Box

1. Position the air diverter box under cabinet. Using a pencil, mark the keyhole locations for the #6 x 1" screws (4 keyholes for 36" models, 6 for 48" models), as well as the location for the electrical knockout opening.
Remove air diverter box and install the (4 or 6) #6x 1" screws. Do not tighten screws completely. Drill out the electrical knockout opening.
Note: Reinforce cabinet with 1" x 2" wood strips if additional strengthening is required or if cabinets are framed.
2. Lift air diverter box and align the holes on top of the air diverter box with the screws that were recently installed. Slide the air diverter box towards the wall to temporarily secure it in place. Hand-tighten the (4 or 6) screws. (Fig. A)
3. Lift the range hood and align the keyholes on top of the hood with the screws protruding from the bottom of the air diverter box. Slide hood towards wall to temporarily secure it in place. Hand-tighten the (4) screws. (Fig. A)
4. To further secure the hood to the air diverter box by, fasten M4 x 8 screws and 3/16 x 3/8" screws to each of the (8) holes on the bottom of the air diverter box. These screw holes can be accessed from within the hood. The holes on top of the TUCH will align with the holes on the bottom of the air diverter box. (Fig. B)

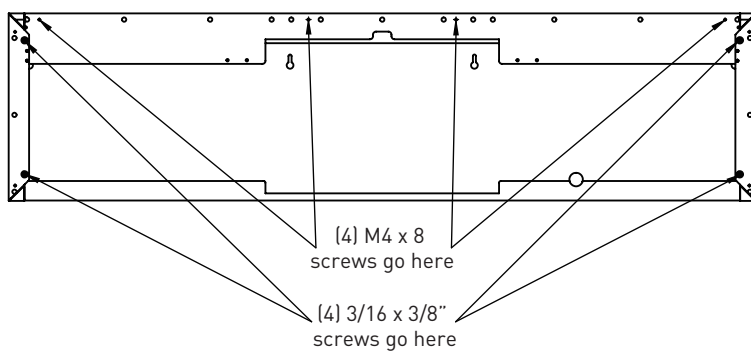


Fig. B

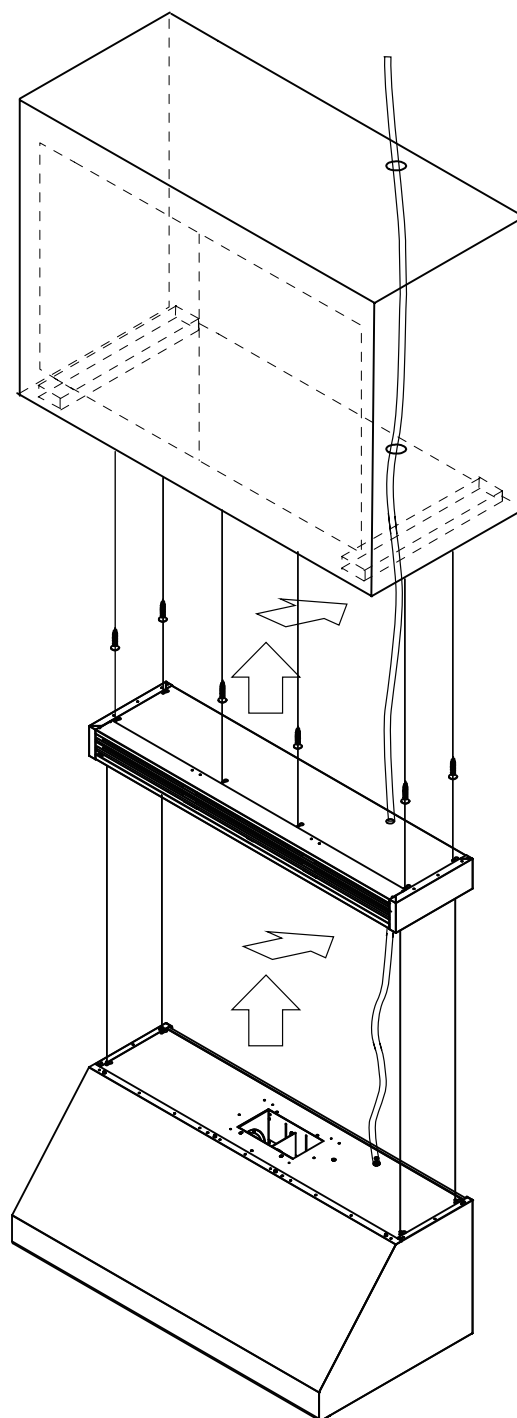


Fig. A

INSTALLATION

1.2 Charcoal Filters and Brackets

Mounting the Bracket and Baffle Filter

1. Insert the charcoal filter bracket into back side of baffle filter (the side without handles). The (2) tabs on the bottom of the bracket should be inserted into the baffle filter first. Push the bracket towards the baffle filter to lock it in place. There is a clip on top of the bracket that will secure it to the baffle filter. (Fig. C) Repeat this step for each bracket.

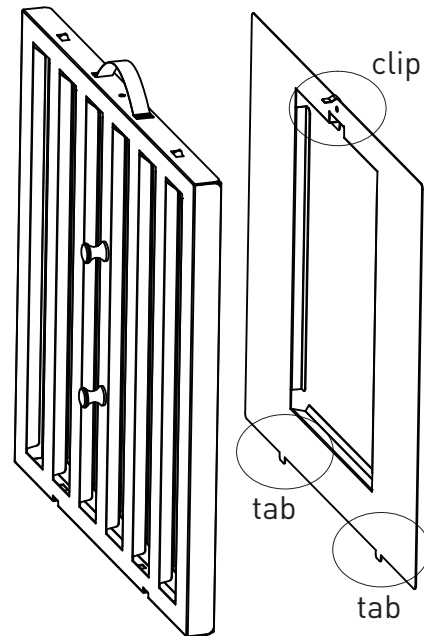


Fig. C

Mounting the Bracket and Charcoal Filter

1. First insert the tab cut out on the charcoal filter onto either side of the tab insert on the bracket. Then, clip the self-locking tabs onto the bracket to secure the filter.
2. Insert the charcoal filter into the bracket, ensuring the tab cut-out side of the filter is positioned first. Then, press down on the filter to lock in place. (Fig. D)

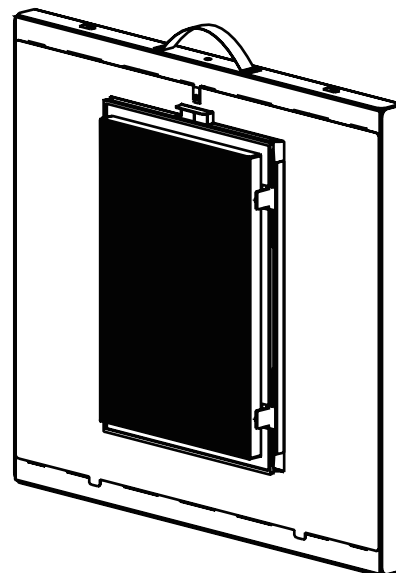


Fig. D