



Assembly Instructions

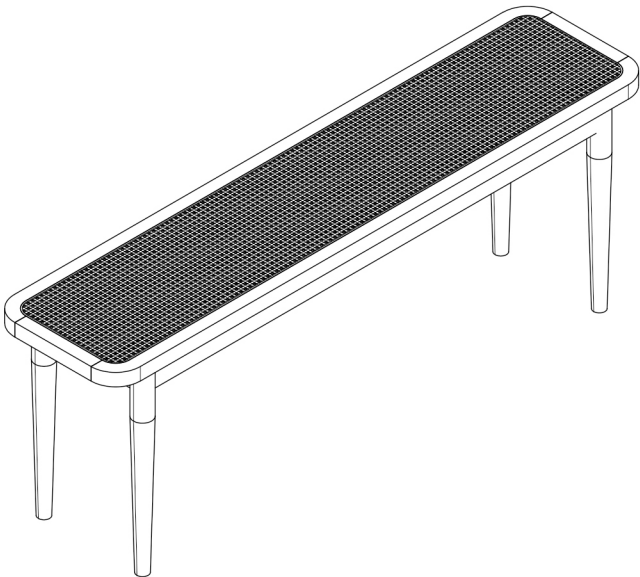

Step: Turn the stool upside down, then place the legs of the stool in the specified position in the picture in turn, put part C, part B and part D into the screw, and then use a spanner to tighten to the right.

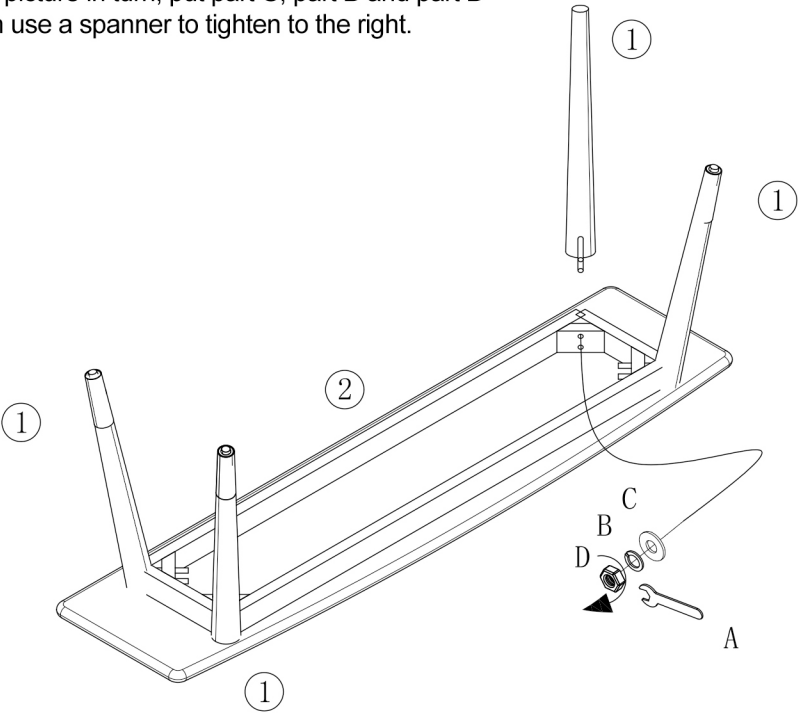

A:Open-ended Spanner=1	B:Springboard ø6=8	C:Flat mat ø6=8	D:Nut=8