




# VINYL STAIR ACCESSORIES

## STAIR TREADS - Vinyl



- Durable vinyl withstands high-foot traffic areas
- Protects stairs from wear & tear
- Safety tread design helps prevent slipping

### How-To Install

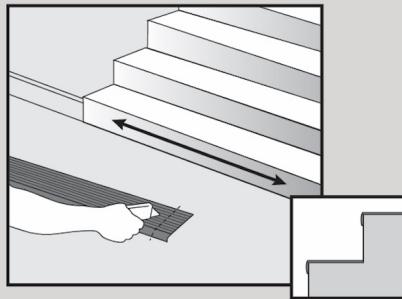

#### Measure & Cut


Dry fit the Stair Tread in the center of the step and ensure the rounded stair nose fits securely to the front of the step to avoid tripping hazard. If necessary, trim the Stair Tread to the required size with a utility knife.

**NOTE:** If using adhesive, mark the edges of the Stair Tread (with pencil) on the step to identify placement during adhesive application. Remove Stair Tread once placement is confirmed and marked.

#### Medición y corte

Ajuste en seco la huella de escalón en el centro del escalón y asegúrese de que la nariz de escalón redondeada se ajusta firmemente a la parte frontal del escalón para evitar tropiezos. Si es necesario, recorte la huella de escalón a la medida requerida con una cuchilla utilitaria.


**NOTA:** Si utiliza adhesivo, marque los bordes de la huella de escalón (con lápiz) sobre el escalón para identificar la colocación durante la aplicación del adhesivo. Retire la huella de escalón una vez que la colocación esté confirmada y marcada.

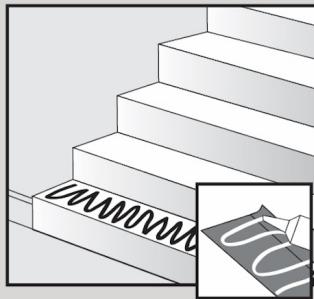

#### Apply

**Concrete or Tile Surfaces:** With Stair Tread removed from step, apply non-solvent based adhesive (sold separately) to the back of the Stair Tread or directly to the step within the marked lines. Re-install the Stair Tread ensuring it is pressed firmly and evenly onto the step. Clean any excess adhesive from the edges immediately.

OR

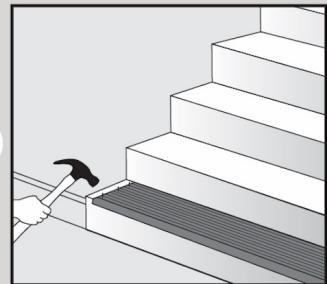

#### Apply

**Carpeted or Wooden Surfaces:** With Stair Tread suitably placed, fasten to the step with staples or tacks (sold separately).

**NOTE:** If installing with tacks or nails, protect the heads with tape or a cloth while hammering to avoid damaging finish.

#### Aplicación

**Superficies de concreto o baldosas:** Una vez retirada la huella de escalón, aplique adhesivo sin disolventes (se vende por separado) en la parte posterior de la huella de escalón o directamente en el escalón dentro de las líneas marcadas. Vuelva a instalar la huella de escalón asegurándose de presionarla firme y uniformemente sobre el escalón. Limpie inmediatamente cualquier exceso de adhesivo de los bordes.

#### Aplicación

**Superficies de moqueta o madera:** Con la huella de escalón debidamente colocada, fíjela al escalón con grapas o tachuelas (se venden por separado).

**NOTA:** Si se instala con tachuelas o clavos, proteja las cabezas con cinta adhesiva o un paño mientras martilla para no dañar el acabado.