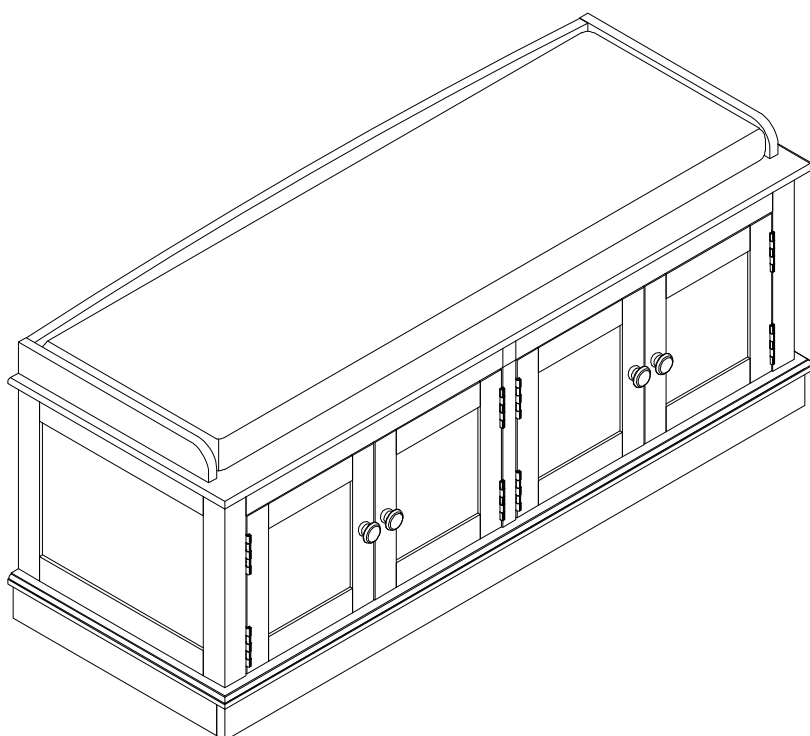


# ASSEMBLY INSTRUCTIONS

## CABINET

If you have any questions, please feel free to contact us.

Email: [service@qualfurn.net](mailto:service@qualfurn.net)

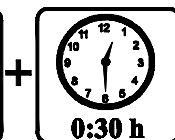
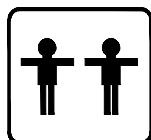
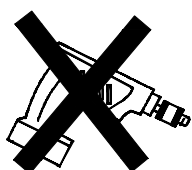


**Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.**


**Compare with the parts list to be sure all parts are present.**

**"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"**


- Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
- Please assemble on a clean soft surface to avoid damage.



### Tools Required



(Not included)



(Not included)

**IMPORTANT:**

**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

**Thank you for buying our products.**

**Please read the installation manual carefully before installation,**

**we need you to follow the instructions on the accessories and hardware**

**step by step assembly complete, our instructions are very detailed.**

**Products are environmentally friendly products,**

**Please rest assured that you do not soak in water, do not place very heavy items,**

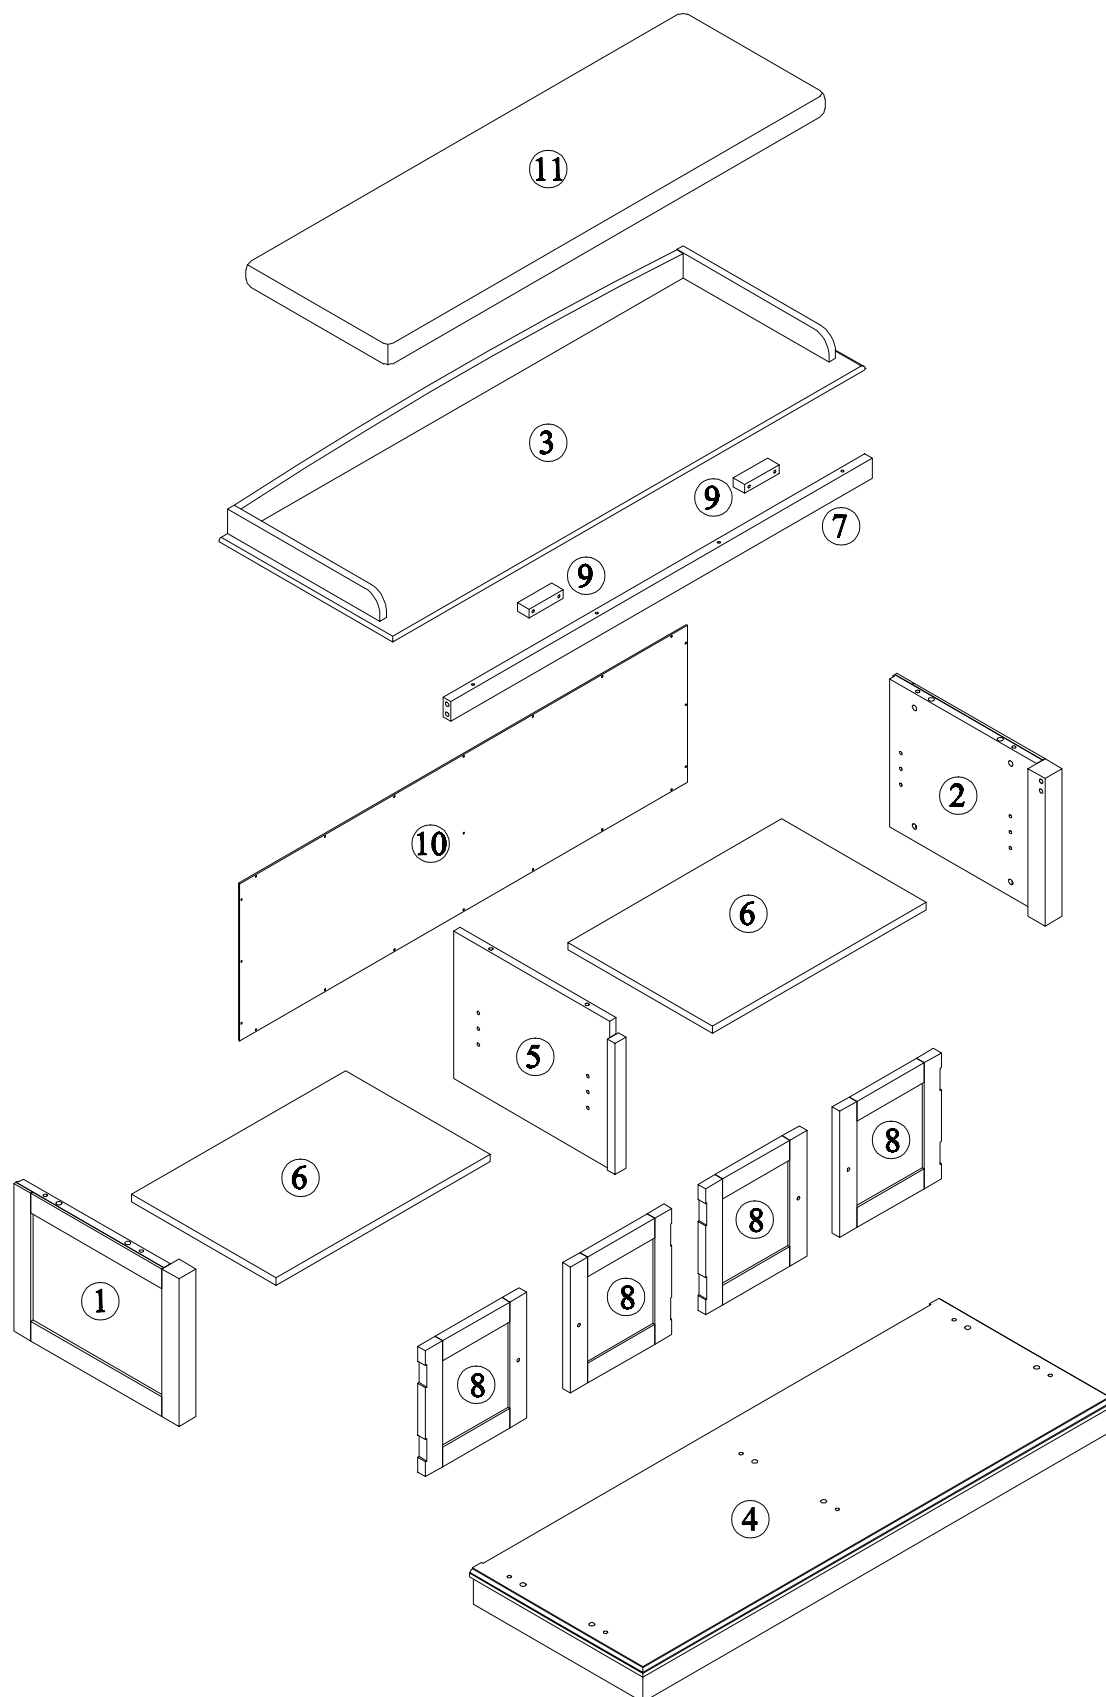
**do not malicious push and pull,**

**if you have any problems in the process of assembly and use, please contact us.**

**Thank you again for your purchase of our products,**



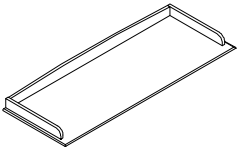
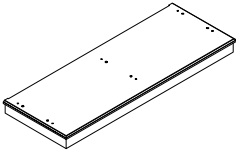

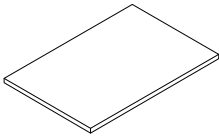
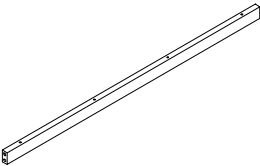


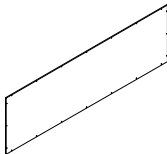
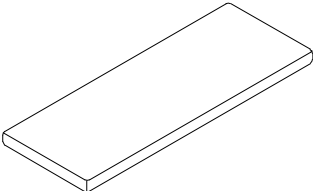
**I wish you a happy life.**

## Detail View - CABINET






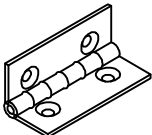










**Identifying the Hardware**-Identify the hardware using the illustrations below.

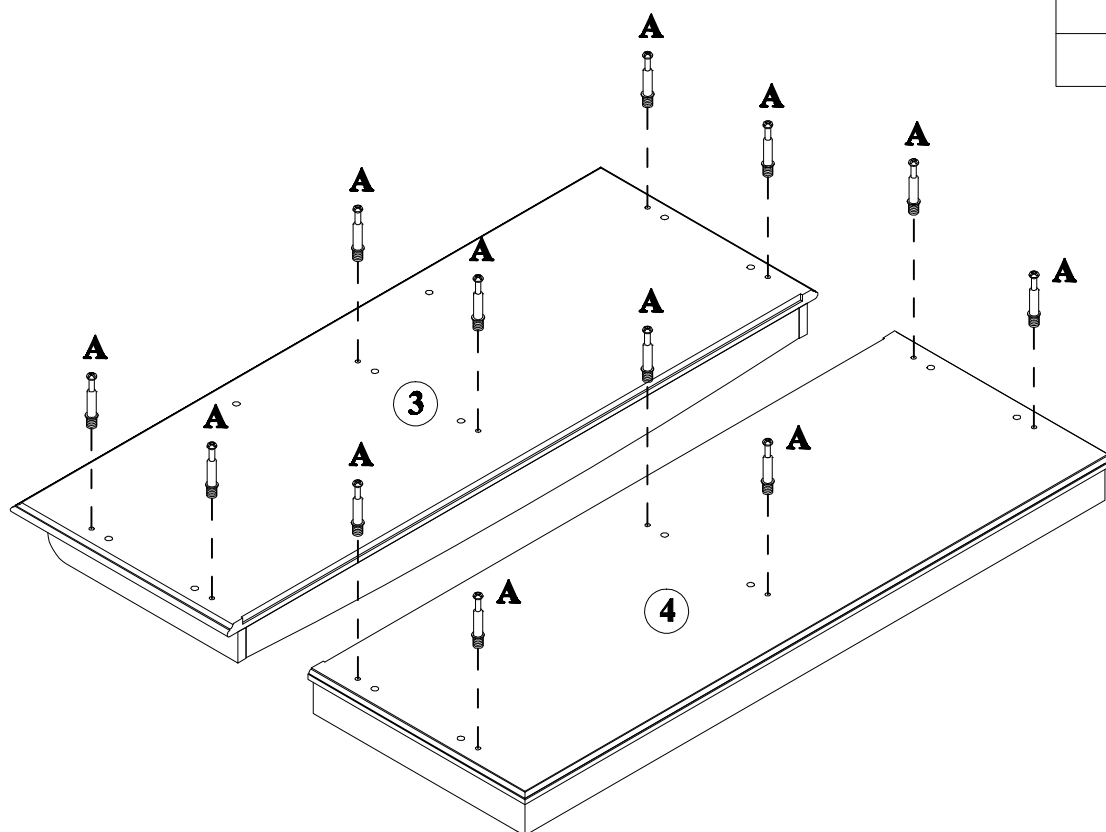
## Part List—WF284227

<div data-bbox="113 331 207 387">1</div> <div data-bbox="368 371 485 521">  </div> <div data-bbox="323 539 545 577"> <p>Left side - 1pc</p> </div>	<div data-bbox="761 331 855 387">2</div> <div data-bbox="1018 365 1126 517">  </div> <div data-bbox="951 539 1189 577"> <p>Right side - 1pc</p> </div>
<div data-bbox="113 584 207 640">3</div> <div data-bbox="316 622 553 768">  </div> <div data-bbox="306 795 568 833"> <p>Top frames - 1pc</p> </div>	<div data-bbox="761 584 855 640">4</div> <div data-bbox="986 618 1222 768">  </div> <div data-bbox="951 795 1259 833"> <p>Bottom frames - 1pc</p> </div>
<div data-bbox="113 837 207 896">5</div> <div data-bbox="376 880 485 1030">  </div> <div data-bbox="258 1048 659 1086"> <p>Middle vertical panel - 1pc</p> </div>	<div data-bbox="761 837 855 896">6</div> <div data-bbox="976 880 1195 1008">  </div> <div data-bbox="951 1048 1204 1086"> <p>Mid panel - 2pcs</p> </div>
<div data-bbox="113 1090 207 1149">7</div> <div data-bbox="316 1115 577 1279">  </div> <div data-bbox="301 1308 617 1346"> <p>Horizontal board - 1pc</p> </div>	<div data-bbox="761 1090 855 1149">8</div> <div data-bbox="1034 1137 1104 1254">  </div> <div data-bbox="935 1299 1238 1337"> <p>Cabinet door - 4pcs</p> </div>
<div data-bbox="113 1344 207 1402">9</div> <div data-bbox="347 1406 488 1516">  </div> <div data-bbox="303 1561 534 1599"> <p>Support - 2pcs</p> </div>	<div data-bbox="761 1344 855 1402">10</div> <div data-bbox="999 1379 1166 1532">  </div> <div data-bbox="951 1561 1209 1599"> <p>Back panel - 1pc</p> </div>
<div data-bbox="113 1597 207 1655">11</div> <div data-bbox="295 1619 609 1809">  </div> <div data-bbox="303 1818 541 1856"> <p>Cushions - 1pc</p> </div>	

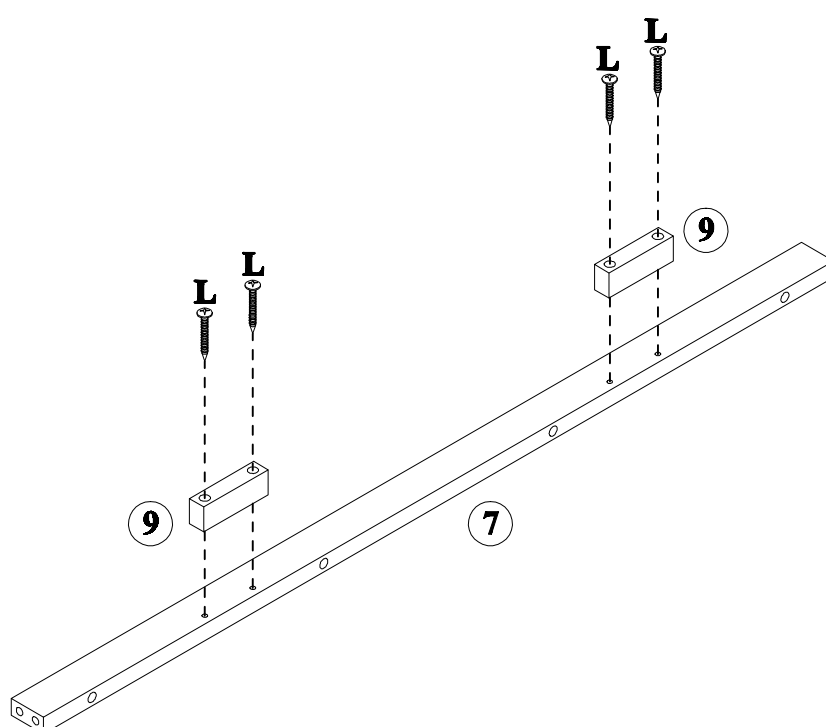
## Hardware List—WF284227

<b>A</b>  <b>ø6x35mm</b> <b>Three in one bolts(12pcs)</b>	<b>B</b>  <b>ø14.5x12mm</b> <b>Three in one lock(12pcs)</b>	<b>C</b>  <b>45x16x14mm</b> <b>Door magnet(2pcs)</b>
<b>D</b>  <b>ø6xø3x12mm</b> <b>Round head screw(4pcs)</b>	<b>E</b>  <b>35x12x1mm</b> <b>Magnetic iron sheet(4pcs)</b>	<b>F</b>  <b>Hinges(8pcs)</b>
<b>G</b>  <b>ø7xø3.5x12mm</b> <b>Flat head screw(36pcs)</b>	<b>H</b>  <b>Laminate pad(8pcs)</b>	<b>I</b>  <b>Handle(4pcs)</b>
<b>J</b>  <b>ø5/32"x25mm</b> <b>Handle screw(4pcs)</b>	<b>K</b>  <b>ø7xø3x12mm</b> <b>Round head screw(21pcs)</b>	<b>L</b>  <b>ø8xø4x30mm</b> <b>Round head screw(8pcs)</b>
<b>M</b>  <b>ø8x30mm</b> <b>Wood dowel(18pcs)</b>	<b>N</b>  <b>4mm</b> <b>Allen key(1pc)</b>	

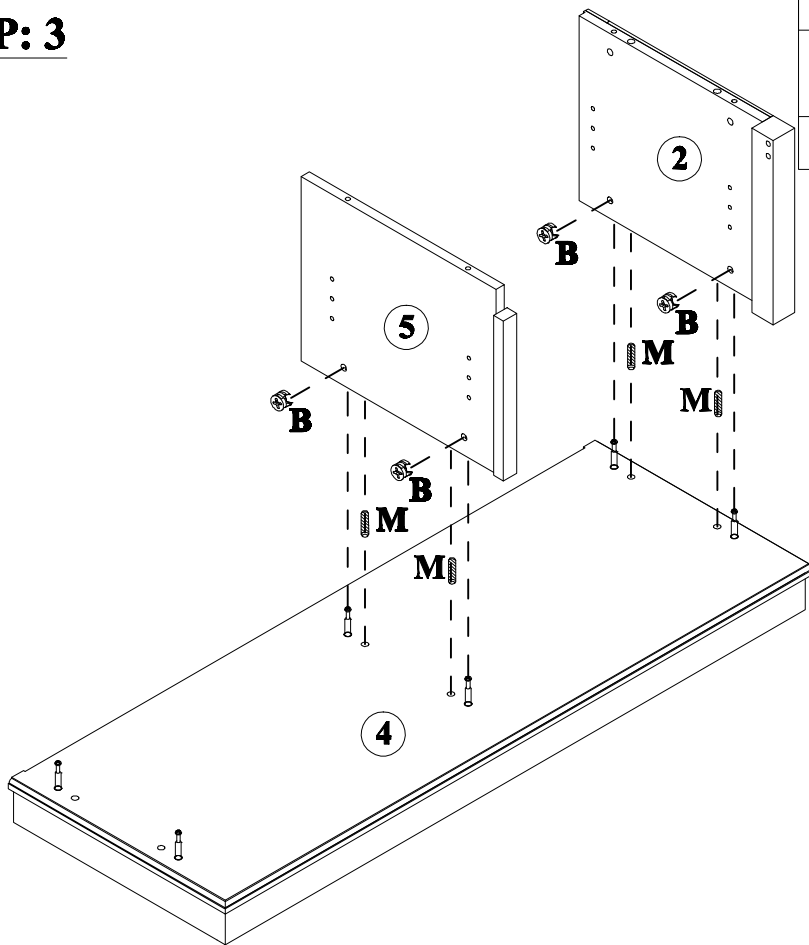
## **STEP: 1**



**A****12PCS**

## **STEP: 2**

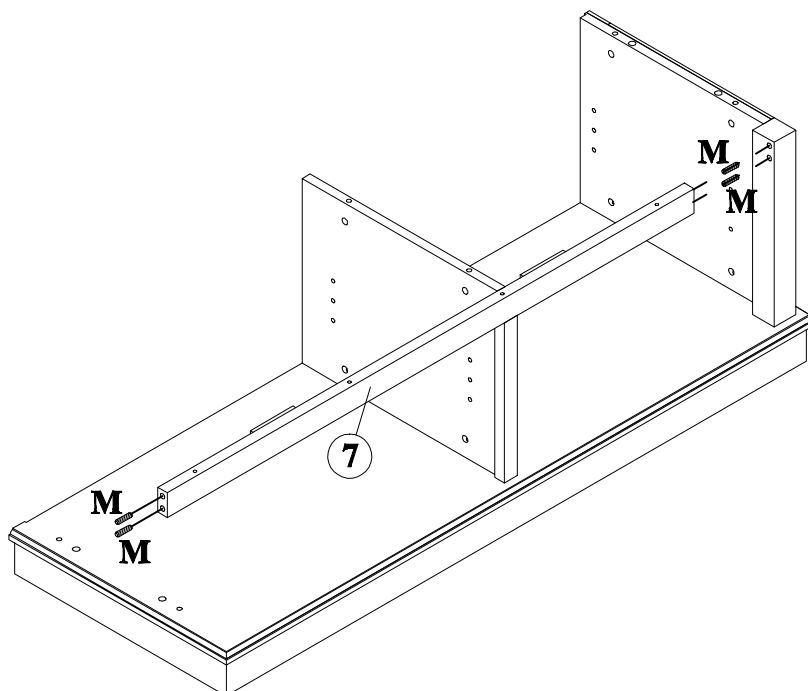
**L****4PCS**


**STEP: 3**





<b>B</b>		<b>M</b>	
<b>4PCS</b>		<b>4PCS</b>	

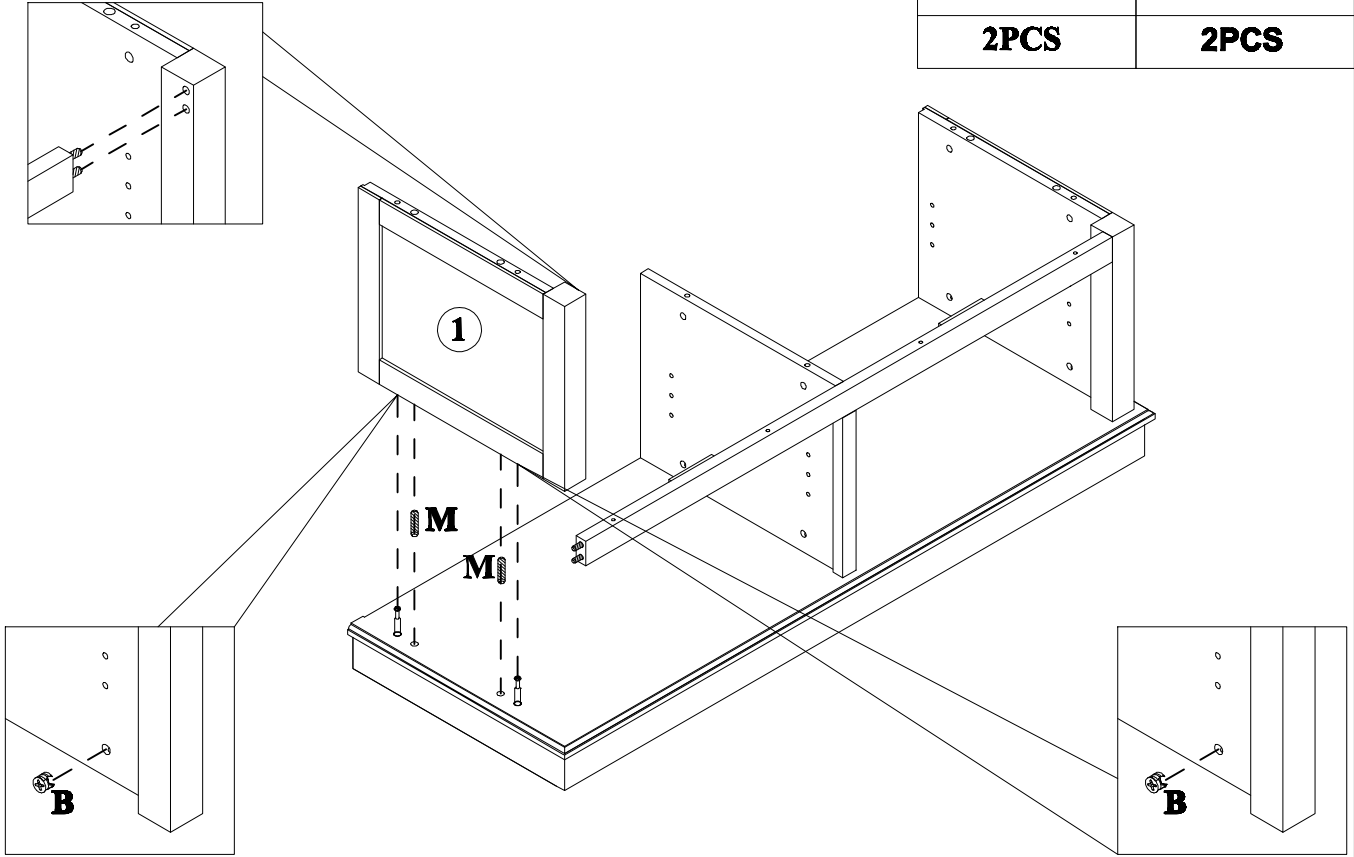
**STEP: 4**





<b>M</b>	
<b>4PCS</b>	

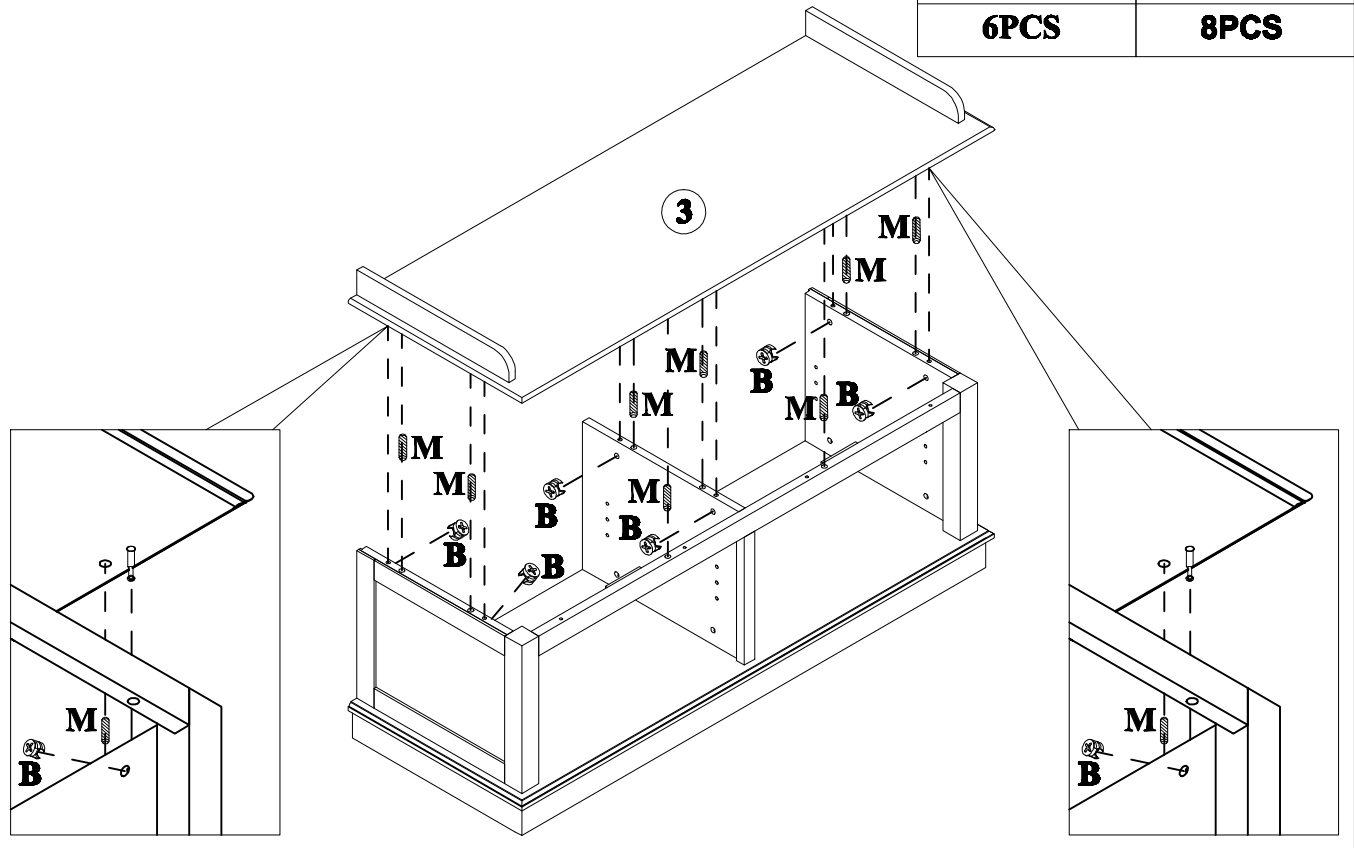
**STEP: 5**

<b>B</b>		<b>M</b>	
<b>2PCS</b>		<b>2PCS</b>	






**STEP: 6**

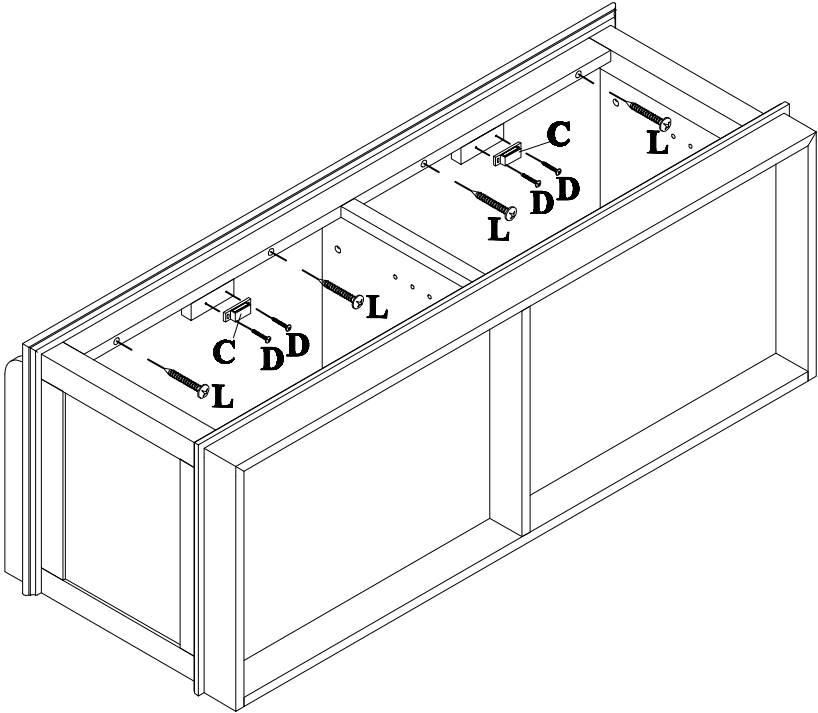
<b>B</b>		<b>M</b>	
<b>6PCS</b>		<b>8PCS</b>	







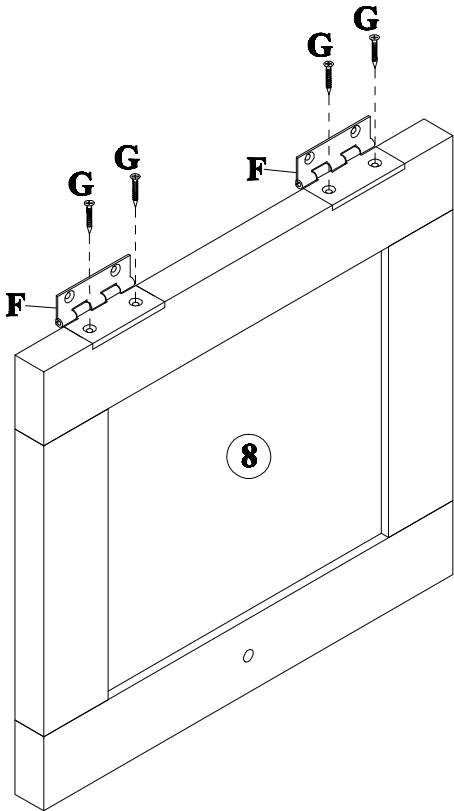
**STEP: 7**

C	D	L
		
2PCS	4PCS	4PCS



**STEP: 8**

F	G
	
8PCS	16PCS



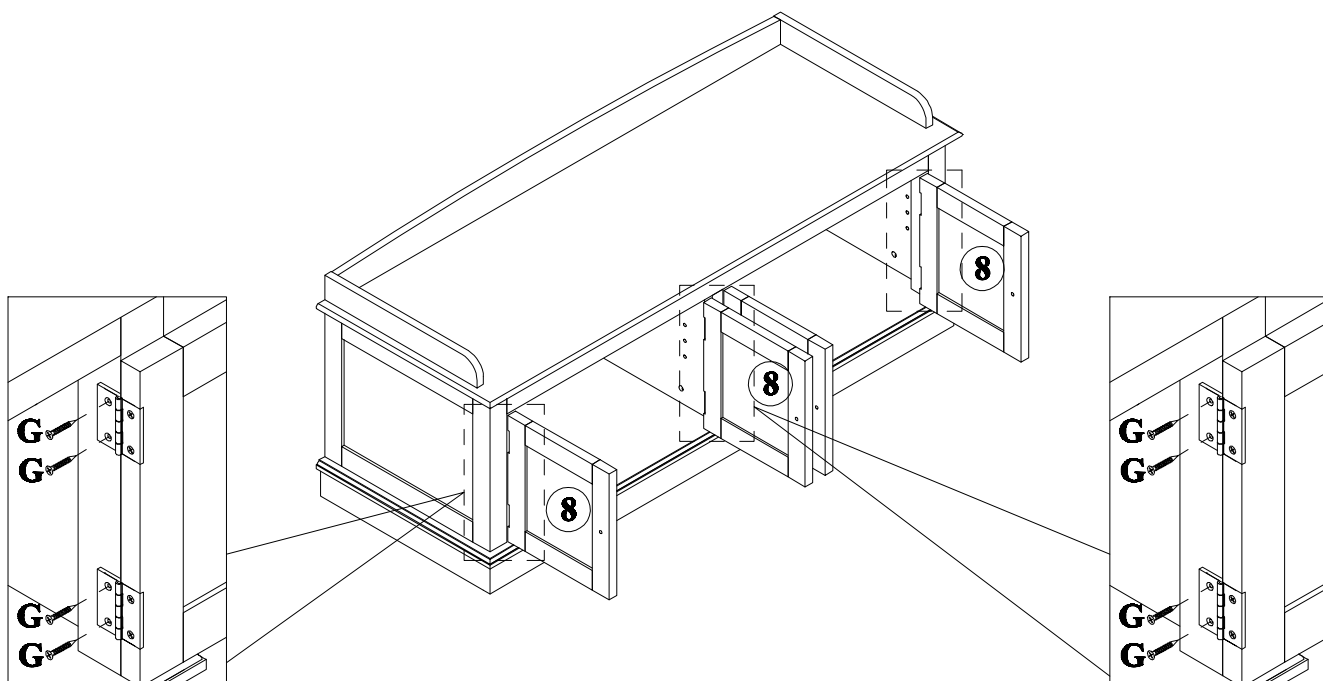
**X 4**

## STEP: 9

**G**



**16PCS**



## STEP: 10

**E**



**4PCS**

**G**



**4PCS**

**I**

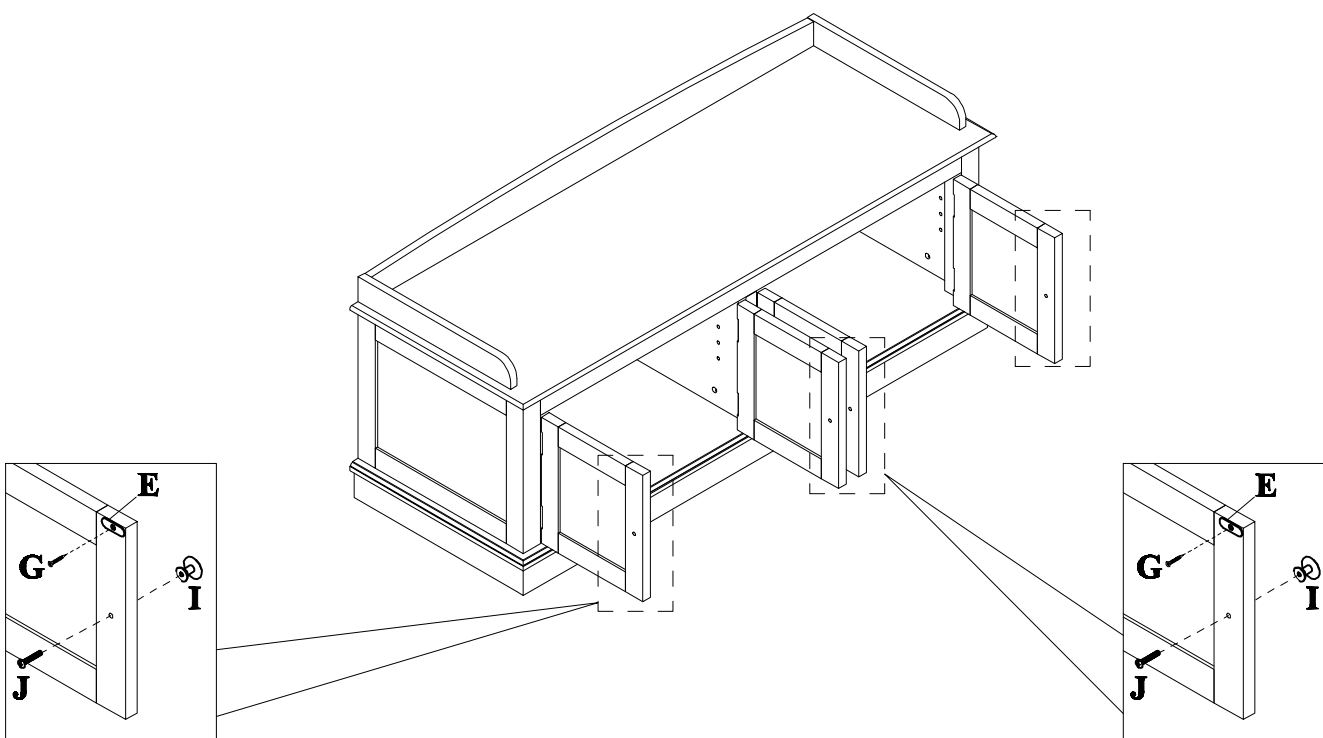


**4PCS**

**J**



**4PCS**

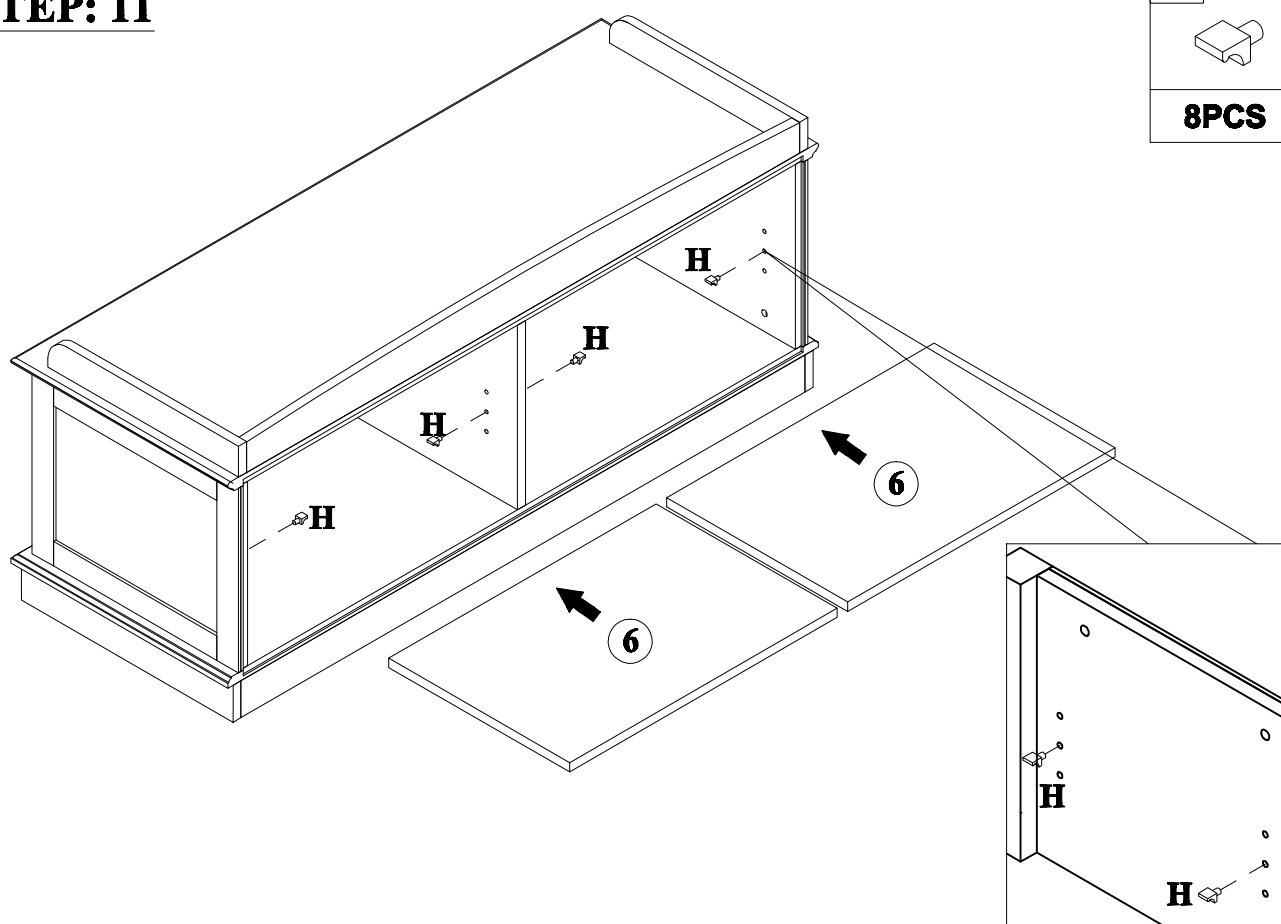


## STEP: 11

**H**




**8PCS**

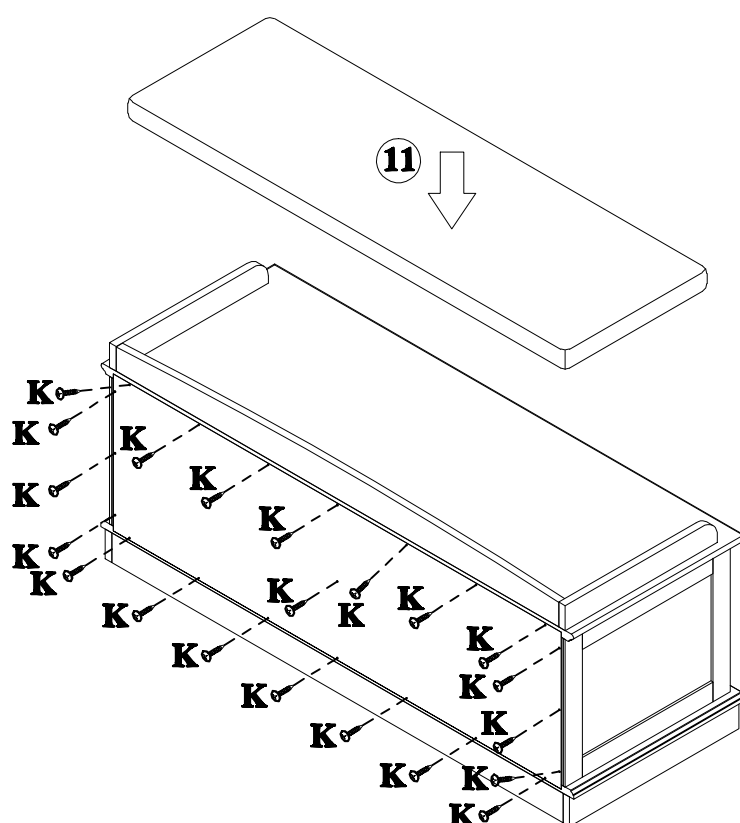


## STEP: 12

**K**



**21PCS**



**STEP: 13**

