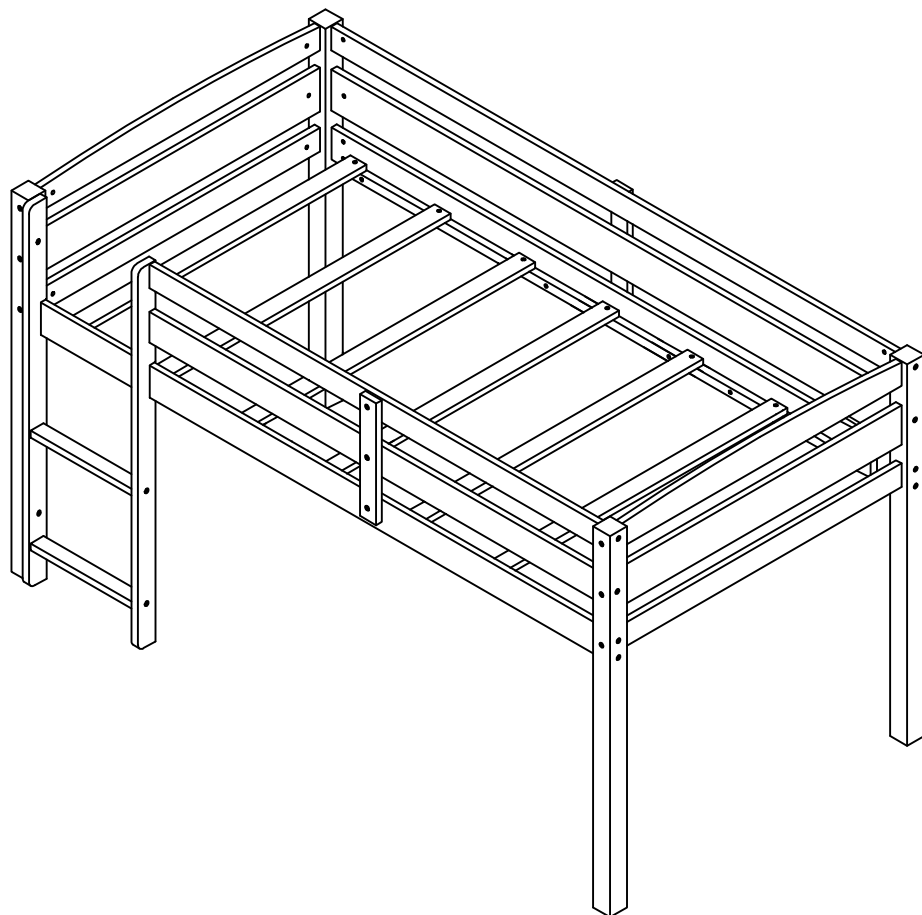



ASSEMBLY INSTRUCTIONS

LOFT BED



WF286816













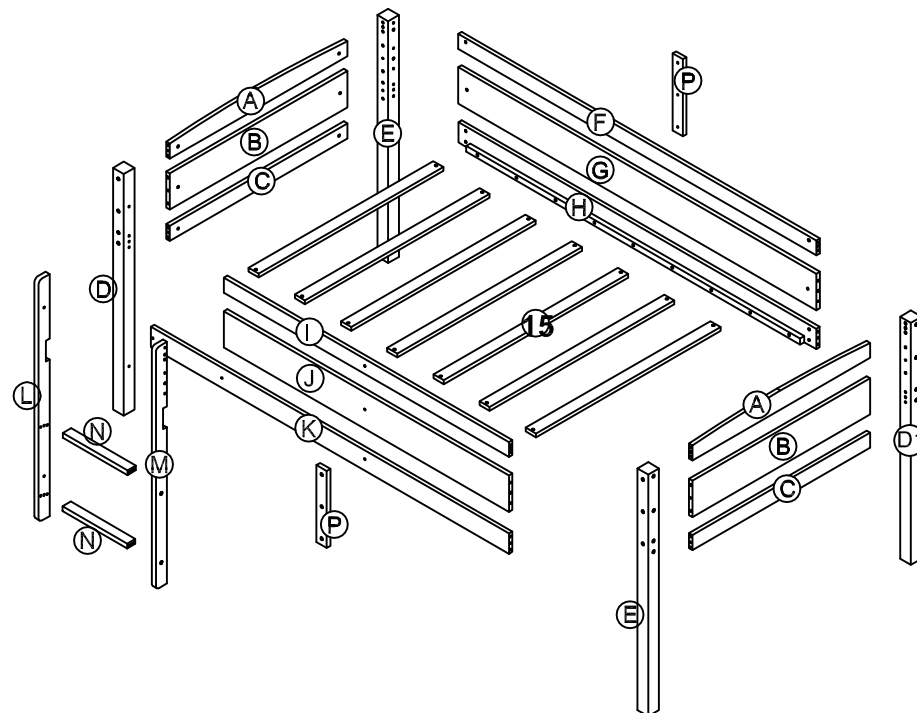
Detail View



If you have any questions, please
feel free to contact us.

Email: service@qualfurn.net


Part List

A 	B 	C 
Horizontal bar - 2pcs	Horizontal bar - 2pcs	Horizontal bar - 2pcs
D1 	D 	E 
Leg HB (Left) - 1pc	Leg FB (Left) - 1pc	Leg HB & FB (Right) - 2pcs
F 	G 	H 
Upper long guard rail - 1pc	Lower long guard rail - 1pc	Side rail (Back) - 1pc
I 	J 	K 
Upper short guard rail - 1pc	Lower short guard rail - 1pc	Side rail (Front) - 1pc
L 	M 	N 
Left side ladder -1pc	Right side ladder -1pc	Step ladder -2pcs
15 	P 	
Slat - 7pcs	Support side rail -2pcs	

Hardware List


1  Ø10*30mm Wood dowel (48pcs)	2  (Ø15)1/4"*110mm Bolts screw (12pcs)	3  (Ø15)1/4"*85mm Hex-Head bolts (14pcs)
4  (Ø15)1/4"*65mm Hex-Head bolts (2pcs)	5  (Ø15)1/4"*30mm Bolts screw (6pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(16pcs)
7  Ø4*30mm Wood screws (14pcs)	8  (1/4")4.5*58mm Allen key (1pcs)	9  (Ø15)1/4"*50mm Bolts screw (7pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

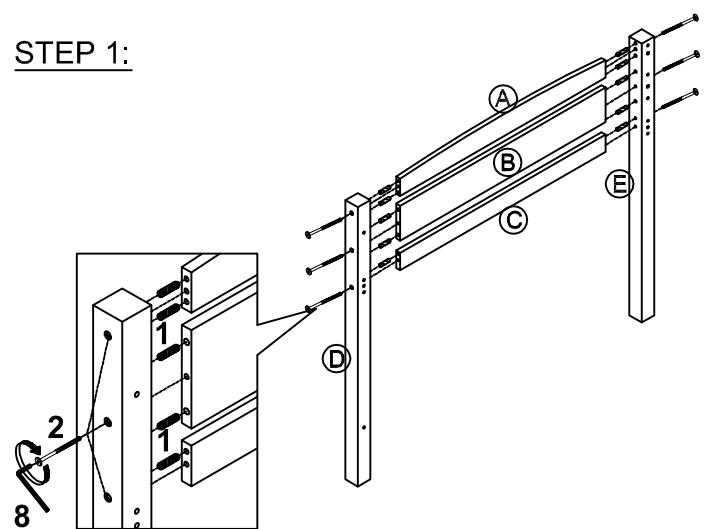
STEP 1:



1	2
	
20PCS	12PCS

2 PCS

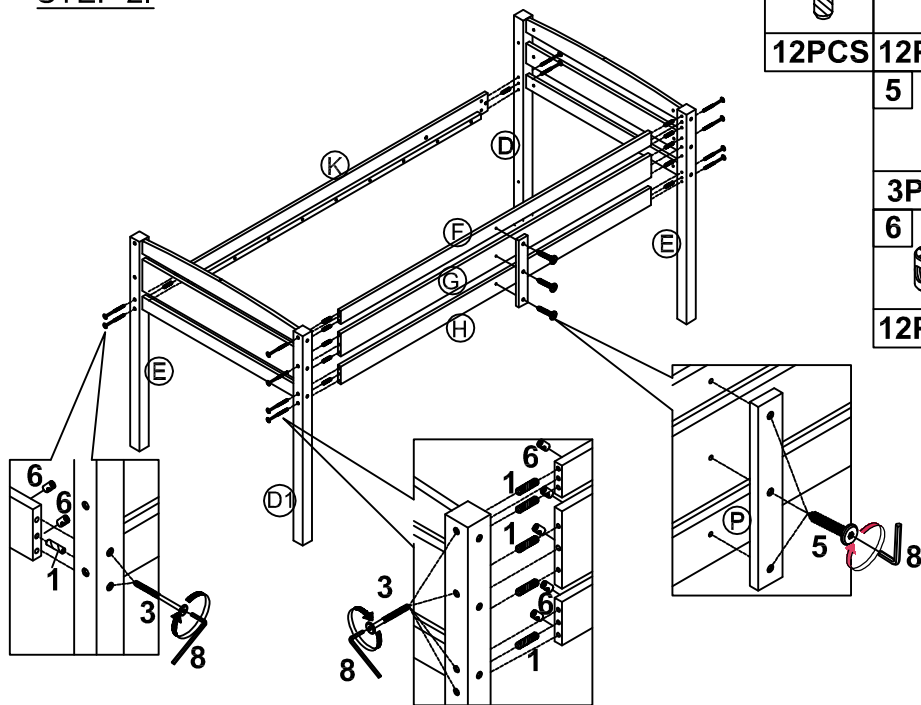
STEP 2:



1	3
	
12PCS	12PCS
	5
	
	3PCS
	6
	
	12PCS


5

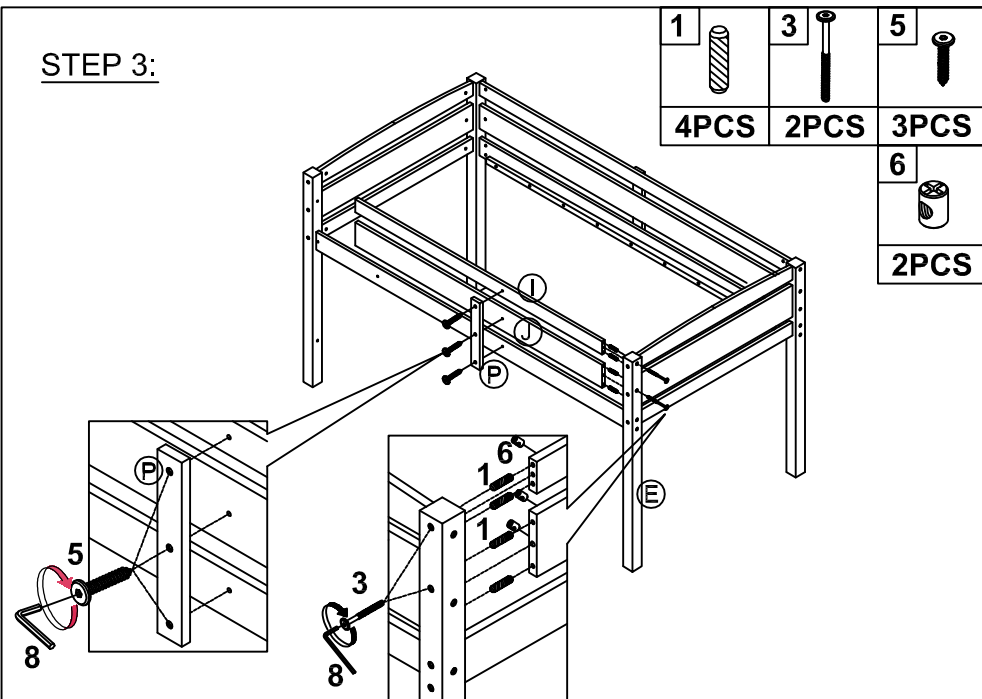STEP 3:



1	3	5
		
4PCS	2PCS	3PCS
		6
		
		2PCS

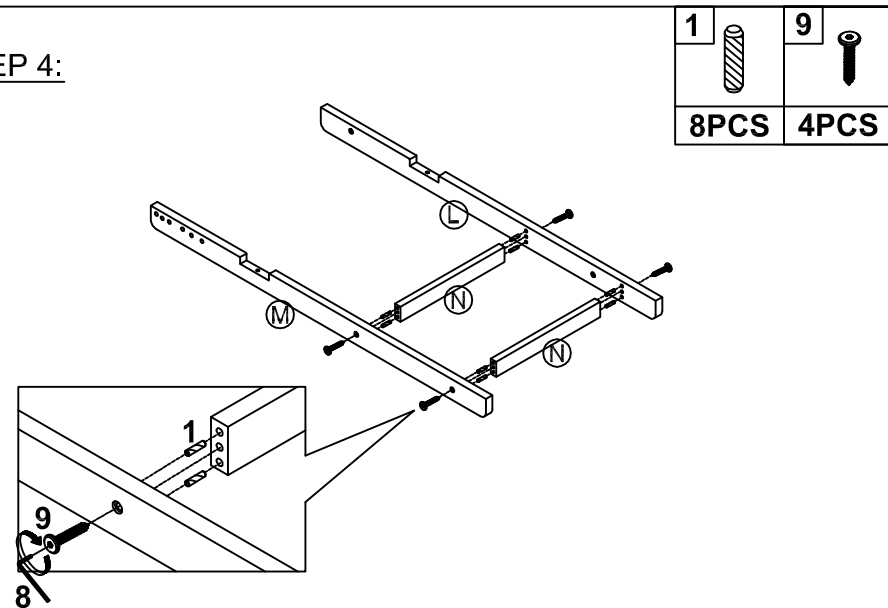
STEP 4:



1	9
	
8PCS	4PCS


6

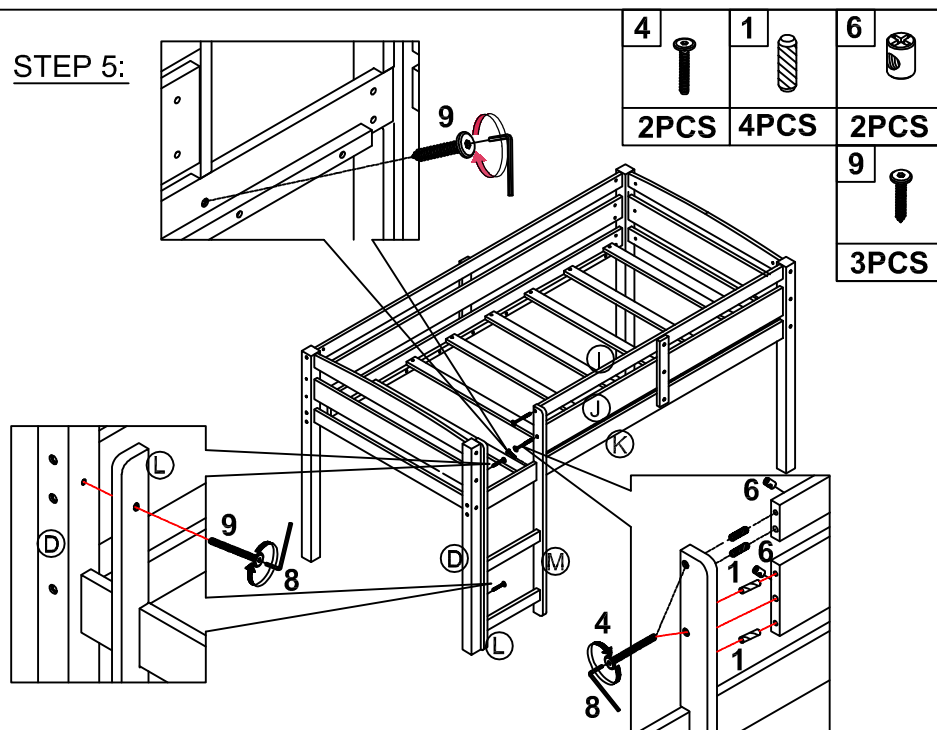STEP 5:



STEP 6:

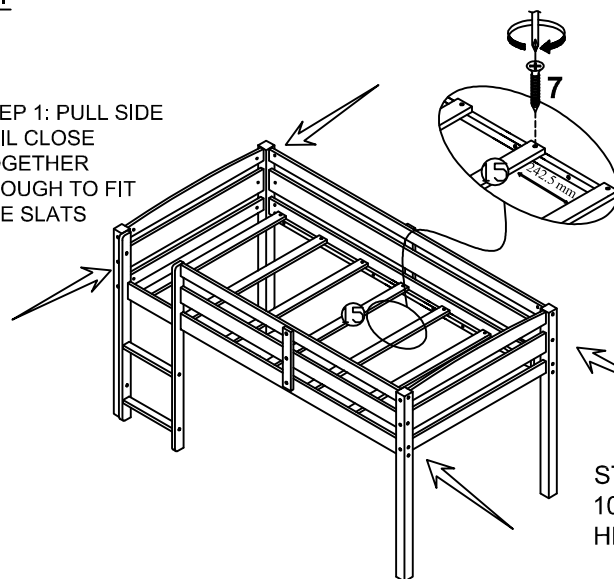STEP 1: PULL SIDE
RAIL CLOSE
TOGETHER
ENOUGH TO FIT
THE SLATS



STEP 2:
SCREW ALL
SLATS

STEP 3: TIGHTEN
100% ALL
HEXAGON BOLTS

COMPLETED

