



DIG-FREE®

Woodgrain Edging Kit



INSTALL GUIDE

Always wear safety glasses when cutting, staking and installing landscape edging.



1

Place edging in sunlight for at least 30 minutes prior to installation, with a weight on each end. This allows for thermal expansion and straightens edging.



2

Using a rubber mallet, anchor edging with Dig-Free Spikes every 4 feet. Pull edging tight between spikes in straight areas to prevent unwanted waves.



3


Add dirt, mulch, rock, or preferred landscape material.

HELPFUL TIPS

If desired, additional Dig-Free® Spikes can be purchased separately.

Connecting Edging:

Cut 2 pieces of edging (like example below) and anchor with one spike through both tabs.

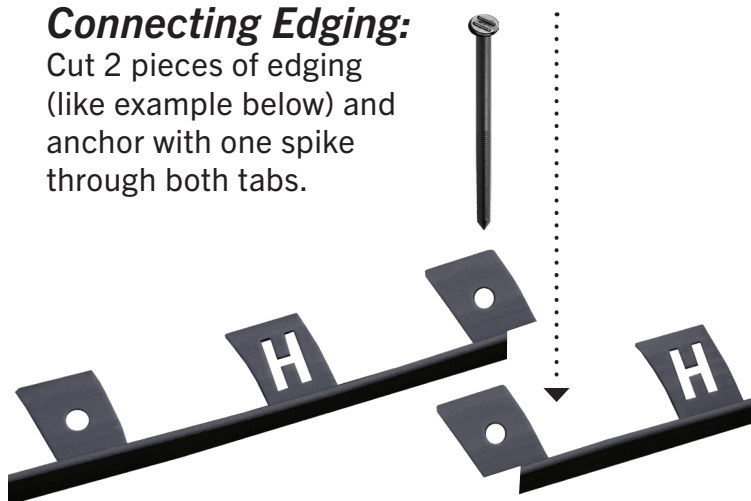

Cutting Edging:

Use a garden shears, snips, or fine-tooth saw to cut edging.



MADE IN USA
FROM RECYCLED MATERIALS

Questions/Comments? Email us at:
CustomerService@AvonPlastics.com

