## 16589-GEN



## Call Us First! DO NOT RETURN TO STORE.

For questions on assembly or for general inquiries, you may contact us in the following ways:

Call customer service: 1-877-743-3400

### **AVOID THE WAIT!**

# visit us online at help.backyardproducts.com

- → Submit a help request
- → Answers to frequently asked questions
- → Live chat with an agent



Did you enjoy building your shed?

# JOIN OUR TEAM

AND MAKE UP TO \$1,500/WEEK\*

#### Call a Recruiter Today! 734-365-7000



Flexible schedule




No selling, just building



Bonus incentives available



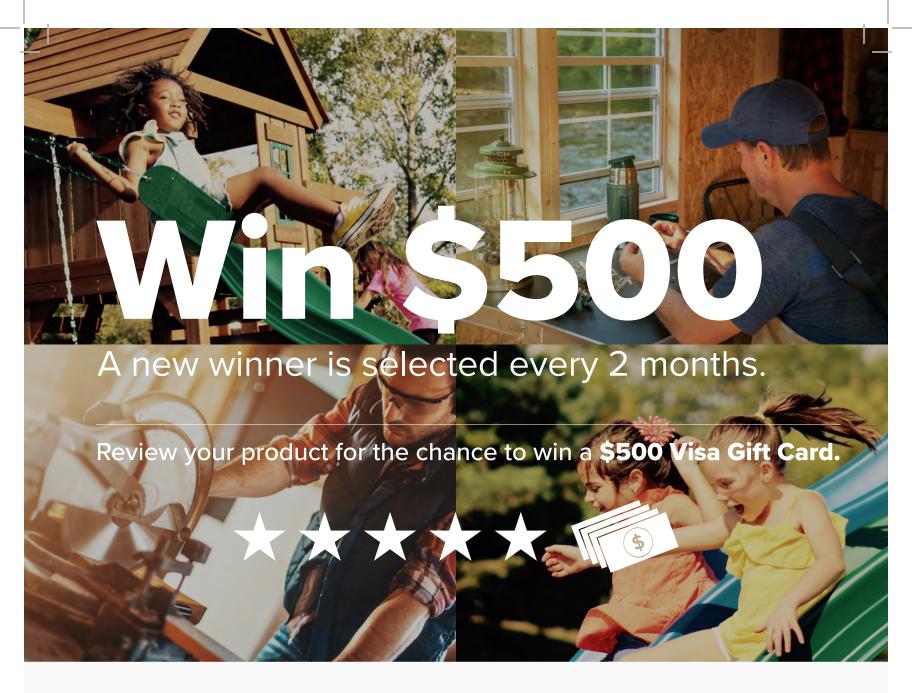

**How to Enter:** 



Open camera. Aim. Tap.





**Scan** QR code above.



**Click** 'write a review'



**Find your product.** Tell us what you think.



**Submit your review.**You'll be notified by e-mail if you've won the \$500 gift card.

Write a Backyard Products, LLC. product review at backyardreviews.net for a chance to win a \$500 Visa gift card. No purchase necessary to enter. Must be legal U.S. resident (including DC & Puerto Rico), 18 or older to participate. Taxes on prize are responsibility of winner. Odds of winning depend on the number of eligible reviews received. Void where prohibited. For complete details and official rules, visit https://backyardreviews.net/sweepstakes-rules.


#### ASSEMBLY MANUAL

16589-GEN 07/21/2021

#### GABLE 8' x 8' (244 x 244 cm)

ACTUAL FLOOR SIZE IS: 96 x 92-1/2" (243,8 x 235 cm)

#### **KEEP THIS MANUAL FOR FUTURE REFERENCE**

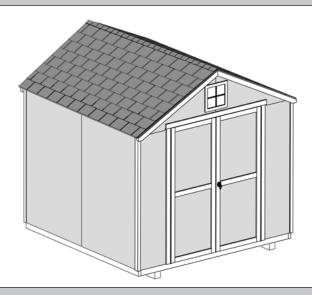

## ⚠ IMPORTANT! ⚠ READ INSTRUCTIONS THOROUGHLY PRIOR TO BEGINNING ASSEMBLY.

#### **BEFORE YOU BEGIN**

#### • BUILDING RESTRICTIONS AND APPROVALS

Be sure to check with local building department and homeowners association for specific restrictions and/ or requirements before building.

#### ENGINEERED DRAWINGS

Contact our Customer Service Team if engineered drawings are needed to pull local permits.

#### SURFACE PREPARATION

To ensure proper assembly you must build your shed on a level surface. Recommended methods and materials to level your shed are listed on page 7.

#### • CHECK ALL PARTS

Inventory all parts listed on pages 5 - 6. Contact our Customer Service Team if any parts are missing or damaged.

#### ADDITIONAL MATERIALS

You will need additional materials to complete your shed. See page 4 for required and optional materials and quantities.



#### - CUSTOMER SERVICE -




Call: 1-888-827-9056 email: customerservice@backyardproductsllc.com

#### **TOOLS**



#### HELPFUL REMINDER SYMBOLS


Look for these symbols for helpful reminders throughout this manual.

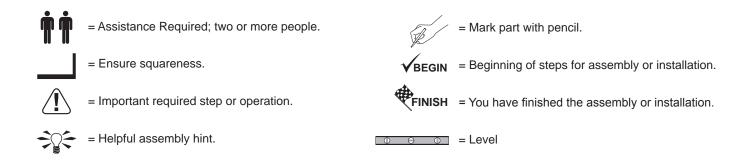


#### ORIENT LUMBER AND TRIM FOR BEST APPEARANCE

Framing lumber is graded for structural strength and not appearance. Exterior trim is graded for one good side.

Always install the material leaving the best edge and best surface visible. Please remember that these blemishes in no way negatively affect the strength or integrity of our product. (See Fig. A, B, C.)

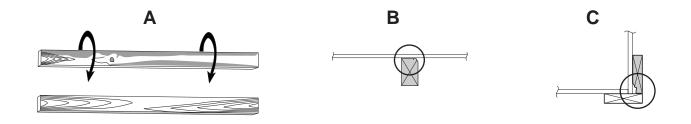

#### **WOOD FLOOR FRAME** (NOT INCLUDED)

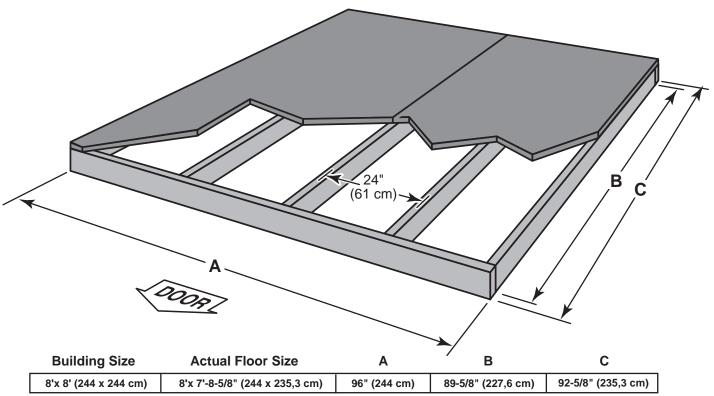

Required Floor materials on following page.

	NOTES
_	
_	
_	
_	
_	

#### **ADDITIONAL MATERIALS**

#### FOUNDATION OR FLOOR MATERIALS

- This shed kit includes a wood floor frame, it does not include floor panels.
- This shed does not include any leveling materials.
- See the FLOOR LEVELING section on page 7 for recommended methods and suggested materials to properly level your floor, as this will vary depending on your specific site.

#### REINFORCED WOOD FLOOR FRAME (OPTIONAL)


**IMPORTANT!** The included floor has been designed for general use. Depending on your specific use you may want to construct a heavy duty floor frame by adding additional floor joists (shown below as shaded). Below is a list of additional materials (not included):

heavy duty floor frame by adding add	ditional floor joists (shown bel	ow as shaded	d). Below is a list of addition	onal materials (not included):
<b>x4</b> 2 x 4 x 8' (5,1 x 10,2 x 24) Cut to 2 x 4 x 93" (5,1 x 2) (5,1 x 2) <b>x16</b> ea. 3" (7,6 cm) Hot Dippe	10,2 x 236,2 cm)			Optional 12" (30,5 cm) spacing  Standard 24" (61 cm) spacing
I	FLOOR PANELS	(NOT II	NCLUDED)	
x1	3/4 x 44-1/2 x 96" (1,9 x 113 x 243,8 cm) Floor panels 3/4" (1,9 cm)	s are	<b>c1</b>	3/4 x 48 x 96" (1,1 x 121,9 x 243,8 cm)
	COMPLETING You will need these		_	
3-TAB SHINGLES	4 Bundles		1" GALVANIZED RO	OFING NAILS 2 Lbs
PAINT FOR SIDING			PAINT FOR TRIM Use 100% acrylic latex exte	1 Quart erior paint.
Use acrylic latex exterior caulk that is				
	OPTIONAL	MATER	RIALS	
DRIP EDGE 4	0 Feet		#15 ROOFING FELT To cover 75 Sq. Ft. of roof: 1" GALVANIZED RO For roofing felt.	area. OFING NAILS1/4 Lb

REFER TO THE BACK OF THIS MANUAL AND THE MANUFACTURER'S INSTRUCTIONS FOR INSTALLATION OF SHINGLES, DRIP EDGE AND FELT.

#### PARTS IDENTIFICATION AND SIZES

		ntification is on some parts.	Treated lumber is stamped:	WOOD SIZE CONVERSION CHART  Nominal Board Size Actual Size
			TREATED	2" x 4"1-1/2" x 3-1/2" (3,8 x 8,9 cm
	RS	RS		1" x 4"3/4" x 3-1/2" (1,9 x 8,9 cm )
• 0		ocations for part stamp		2" x 3"1-1/2" x 2-1/2" (3,8 x 6,3 cm ) 1" x 3"3/4" x 2-1/2" (3,8 x 6,3 cm )
• 0	neck these it	ocations for part stamp	PARTS LIST	
	N IN	VENTORY YOU	UR PARTS before you begin.	
			gest sorting parts by the catego	ry they are listed in.
0				Treated lumber is stamped:
FLOOR	x2	TREATED		2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm) <b>TREATED</b>
07	x5	TREATED		2 x 4 x 93" (5,1 x 10,2 x 236,2 cm)
H.	x <sub>2</sub>	IKLAILD		
	x1	GAA 1 x 3 x 5" (2,5	5 x 7,6 x 12,7 cm) <b>GAUGE BLOCK FOR 3/4</b> "	" <b>(1,9 cm) MEASUREMENT</b> (1,9 cm)
	x2	<b>DQ</b> 2 x 3 x 11-	-7/8" (5,1 x 7,6 x 30,2 cm)	
	x2	<b>RD</b> 2 x 4	x 16-1/2" (5,1 x 10,2 x 43,9 cm)	
_	x2	XWA	2 x 4 x 23-7/8" (5,1 x 10,2 x 60,6 cm)	
WALL	☐ x11	ВВА	2 x 4 x 66-1	/2" (5,1 x 10,2 x 168,9 cm)
<b>×</b>				
	x5	UM		(5,1 x 10,2 x 172,7 cm)
	x1	SZ		2 x 4 x 89" (5,1 x 10,2 x 226,1 cm)
	<b>□</b> x4	TJ		2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)
	x2	TP		2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)
	^_			2 X 4 X 90 (3,1 X 10,2 X 243,0 CIII)
SS	□ x6		24" (15,2 x 61 cm)	
TRUSS			, ,	
TR	x6	WI	2 x 4 x 54-1/1	6" (5,1 x 10,2 x 129,8 cm)
	x2	<b>□WQ</b> □ 1 x 2 x 11	" (2,5 x 5,1 x 7,9 cm)	
	x2	<b>□ 1</b> x 2 x 1	14" (2,5 x 5,1 x 35,6 cm)	
<u></u>	Пх4	⟨wx		4" (5,1 x 7,6 x 141,6 cm)
TRIM	<b>□</b> ^ ¹	(W)		,
F	x1	WR	19/32 x 3 x 63" (	(1,5 x 7,6 x 160 cm)
	x4		3/8	3 x 1-3/4 x 71-1/4" (1 x 4,4 x 181 cm)
	□x4			/8 x 1-3/4 x 71-3/4" (1 x 4,4 x 182,2 cm)
				10 A 1 0 B A 11 0 B A 1 A 10 A 10 A 10 A
OOR				
ŏ		00	1-1/2 x 2-1/2	2 x 69" (3,8 x 7,6 x 175,3 cm)

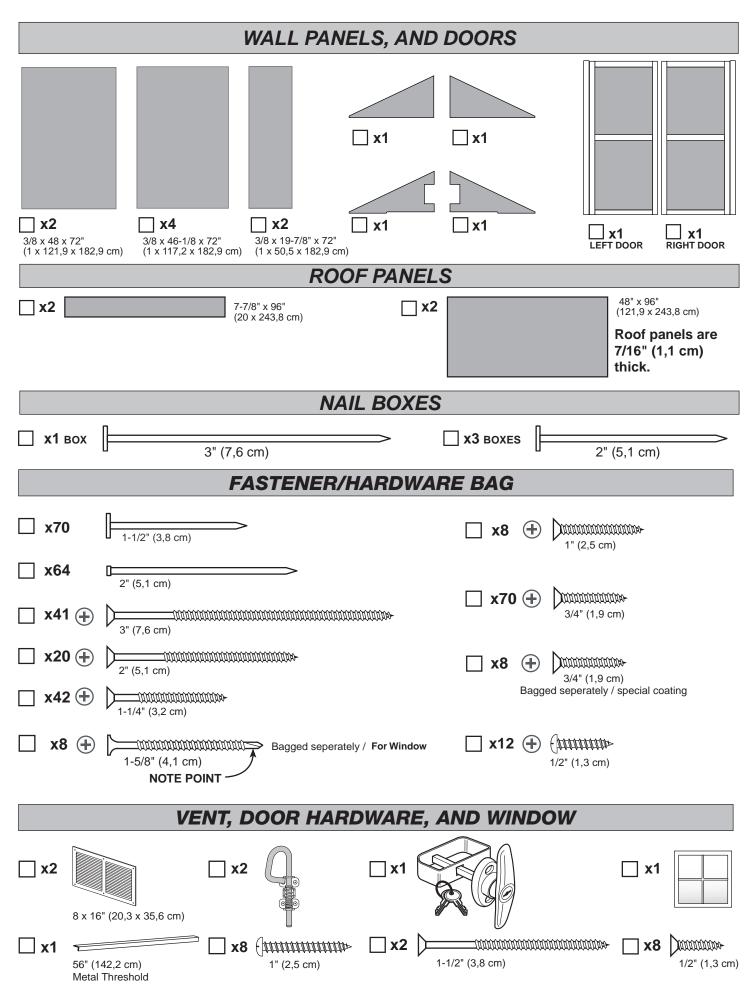


#### FLOOR LEVELING OPTIONS

There are multiple ways to level your floor frame. Our recommended leveling method is shown below.

Leveling materials are not included in this kit.

#### PREFERRED METHOD - 4x4 TREATED RUNNERS

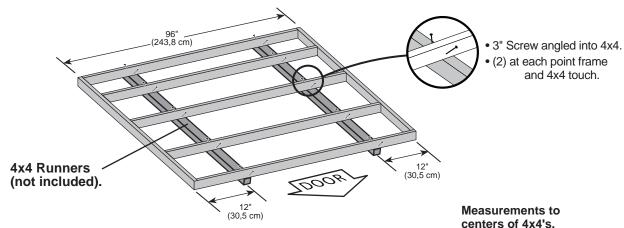

#### MATERIAL REQUIRED


**x2** 4" x 4" x 8' (10,2 x 10,2 x 243,8 cm) Treated Lumber

Fasteners for Frame to 4"x 4".

(3" Screws shown as one option.) Minimum (20) 3" screws / exterior grade.

✓ Use only wood treated for ground contact and fasteners approved for use with treated wood.

🚺 Always support frame seams.

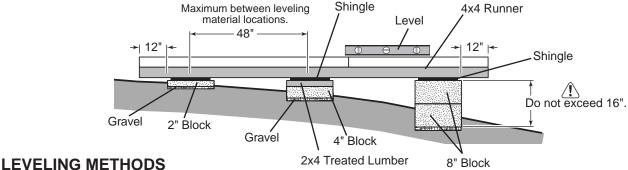

#### LLVLLING MILTHODG

- Level under 4x4 runners only.
- Locate leveling material 12" from ends of runners and no more than 48" apart.
- Asphalt shingles should be used between 4x4 runners and blocks or treated lumber. Never use shingles in direct contact with ground.
- For best results and aiding in water drainage use gravel under each concrete block.

#### I EVELING MATERIALS

Gravel
Solid Masonry Blocks in 1", 2", 4" or 8" thickness
2x4 Treated Lumber
Asphalt Shingles


Leveling higher than 16" not recommended.

#### **CONCRETE**

• If you are building your shed on a concrete foundation see the following page.

#### **CONCRETE FOUNDATION**

If you choose to install your kit on a concrete slab refer to the diagram below.

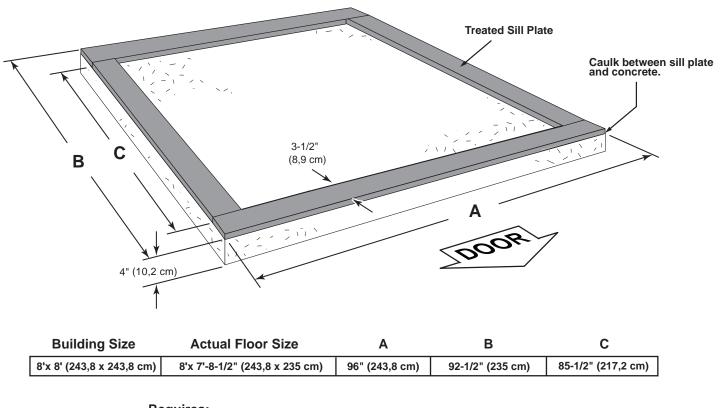

Requires:

<b>x4</b>	2 x 4 x 8' (5,1 x 10,2 x 243,8 cm)	MUST be treated lumber.
<b>x</b> 1	Caulk	

Allow new concrete slabs to cure for at least seven (7) days.

- A treated 2 x 4" (5,1 x 10,2 cm) sill plate is required when installing your shed on concrete. **Hint: Use treated lumber in your kit or purchase full length treated lumber.**
- Use a high quality exterior grade caulk beneath all sill plates.
- Fasten 2 x 4" (5,1 x 10,2 cm) sill plates to slab using approved concrete anchors (fasteners not included).
- Check local code for concrete foundation requirements.

NOTES

#### STANDARD FLOOR FRAME

PARTS REQUIRED: NOTE: Look for TREATED Stamp. x20 3" (7,6 cm)

2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)

#### **V**BEGIN

**x2** 

TREATED


Orient parts as shown on flat surface. Measure and mark each dimension from end of boards.

2 Use two 3" nails at each mark.

FINISH

You have finished your floor frame. Proceed to level and square frame.



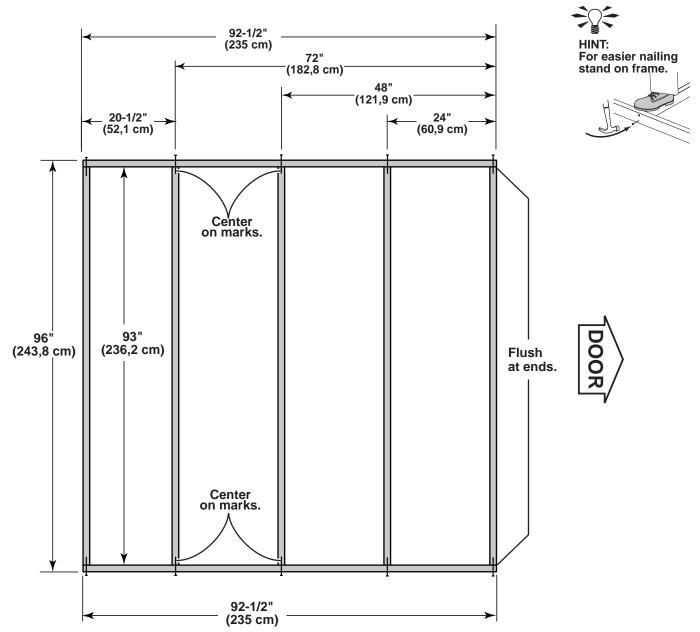



#### LEVEL AND SQUARE FLOOR FRAME



oor frame.


Before attaching floor decking, it is important to level and square the floor frame. A level and square floor frame is required to correctly construct your shed.

#### **V**BEGIN

- 2 Use level and check the frame is level before applying floor panels.
- 3 Check for frame squareness by measuring diagonally across corners. If the measurements are the same, the frame is square. The diagonal measurement will be approximately 133-5/16" (338,6 cm).
- When the frame is level and square secure one side of frame to the 4x4 runners using one fastener at ends of each runner. At the opposite end of the frame, secure the frame to 4x4 runners with one fastener at ends of each runner making sure the frame remains square (Fig. A).

FINISH

Once the floor frame is level and square fasten the frame at each point the frame contacts the 4x4 runners.

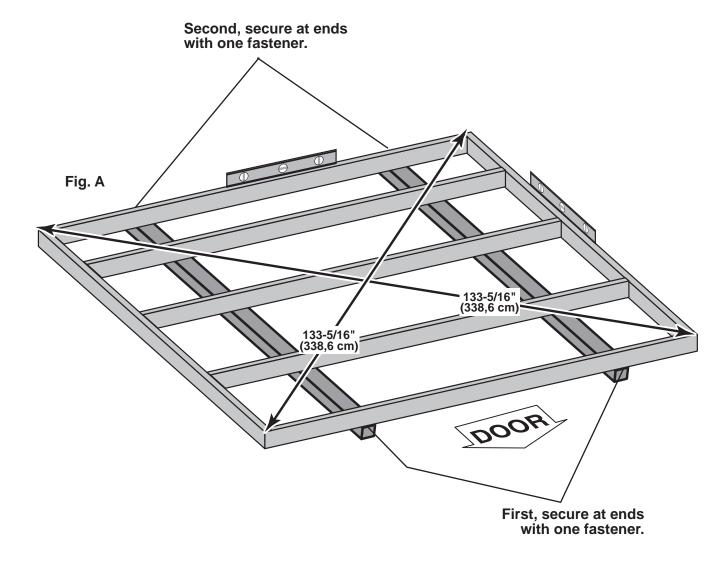


# PARTS REQUIRED: x1 Floor Panels not included See page 4 for panel sizes and quantities. Floor Panels not included See page 4 for panel sizes and quantities.



Ensure your floor frame is square by installing one panel and squaring frame.


#### **V**BEGIN

- Attach the 3/4 x 48 x 96" panel with the rough side up (painted-grid lines side) with the 48" edge and corner flush to the floor frame (Fig A). Secure panel with two 2" nails in the corners.
- Move to the opposite end. Using the long edge of the panel as a lever move the panel side-to-side until the top corner is flush to the floor frame (Fig. B). Secure panel with two 2" nails in the corners.
- Check the floor frame is square by measuring diagonally across the frame corners. If the measurements are the same, your floor frame is square. The measurement will be approximately 133-5/16" (Fig. C).
- Continue attaching the panel using 2" nails 6" apart on edges and 12" apart inside panel. Use a chalk line or use pre-painted grid lines to nail into joists under panel.

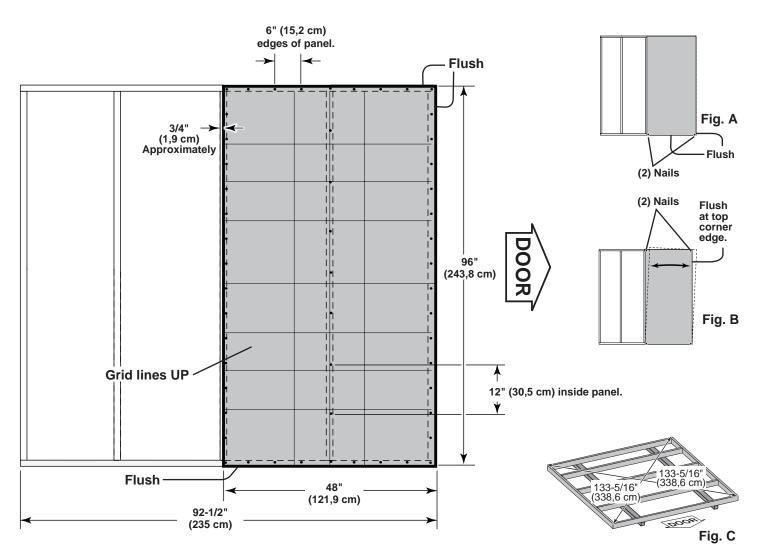

# FLOOR PANELS (NOT INCLUDED) PARTS REQUIRED: x1 3/4 x 44-1/2 x 96" (1,9 x 113 x 243,8 cm)


- 5 Continue by installing 3/4 x 44-1/2 x 96" panel with rough side up (painted grid lines)
- Use a chalk line or grid lines on panels for 2" nails 6" apart on edges and 12" apart inside panel.
- 7 You have finished Installing your floor panels.

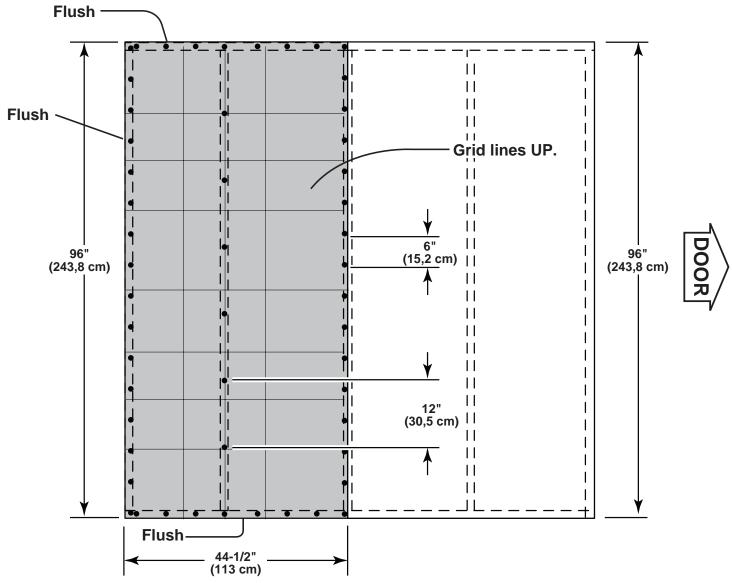

#### **!** IMPORTANT!




Check the floor frame is level after installing floor panels. Re-level if needed.

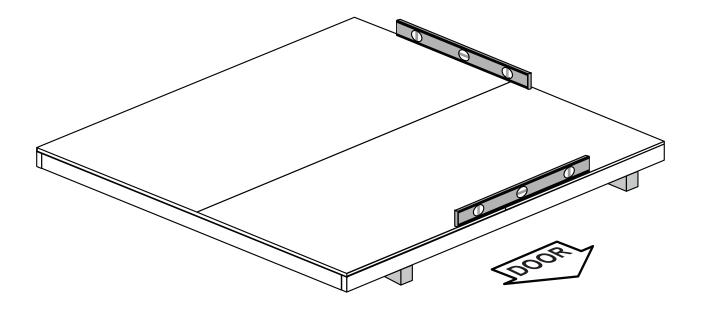



• The floor should be used as a stable work surface for wall construction.

**HINT:** • Organize your assembly procedure during the build process to avoid over-handling of the walls.

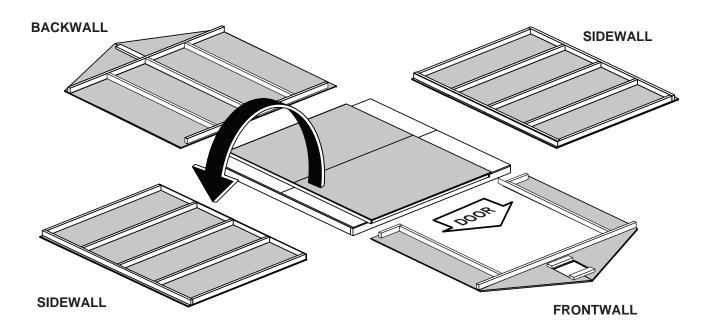

#### SIDE WALL FRAMES

#### **PARTS REQUIRED:**

x40 = 3" (7,6 cm)

x10 BBA

2 x 4 x 66-1/2" (5,1 x 10,2 x 168,9 cm)

x4 TJ

2 x 4 x 92-1/2" (5,1 x 10,2 x 235 cm)

**V**BEGIN


FINISH

Orient parts on edge on floor. Measure and mark from end of boards.

IMPORTANT! You will build two walls the same.


Use two 3" nails at each mark.

You have finished building one side wall frame. Proceed to attach wall panels.

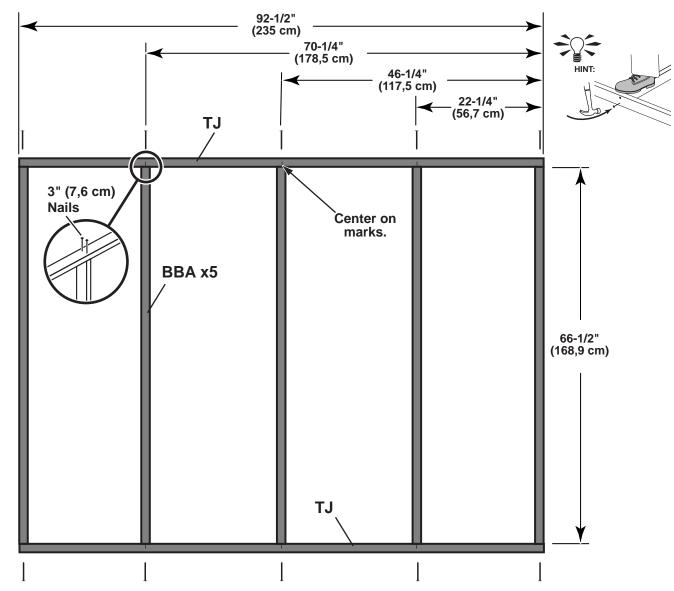

#### SIDE WALL PANELS

#### PARTS REQUIRED:

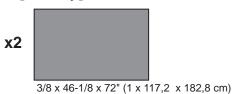







Ensure your wall frame is square by installing one panel and squaring frame.


#### **V**BEGIN

Place a 46-1/8 x 72" panel onto wall frame with primed side up as shown.

Locate the panel 1-1/2" above the top plate. Use a **DQ** as a gauge block for the 1-1/2" top overhang measurement. Use the **GAA** gauge block to mark the 3/4" side measurement on the wall stud. Secure panel with two 2" nails in the corners **(Fig. A)**.

- jour
- Move to the opposite end. Using the long edge of the panel as a lever, move the panel side-to-side until you have a 3/4" measurement on the wall stud. Secure corner with two 2" nails (Fig. B).
- 3 Nail the panel using 2" nails 6" apart on edges and 12" apart inside panel.

For squareness maintain 3/4" and 1-1/2" measurement along panel edge.

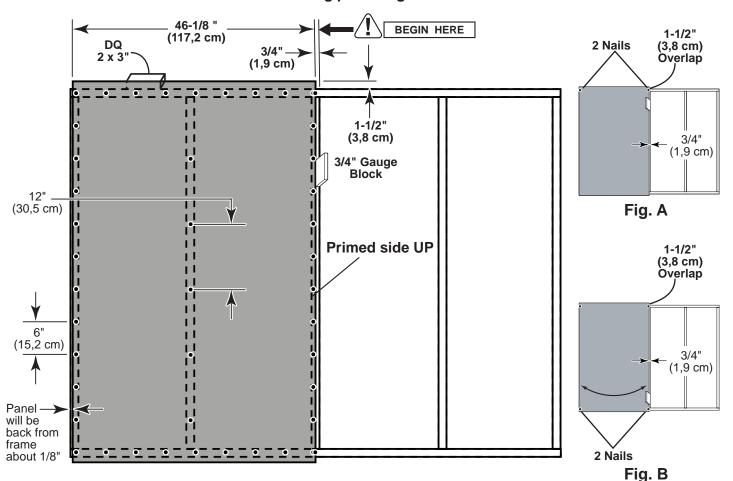


#### SIDE WALL PANELS

#### **PARTS REQUIRED:**

x2

2x3" GAUGE BLOCK

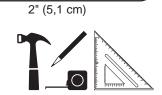

x90


3/8 x 46-1/8 x 72" (1 x 117,2 x 182,8 cm)

Place 46-1/8" panel on frame as shown with primed side facing up flush with first panel. Nail using 2" nails 6" apart on edges and 12" apart inside panel.

Carefully flip your sidewall over.
Repeat **STEPS 1-4** to assemble your second side wall.





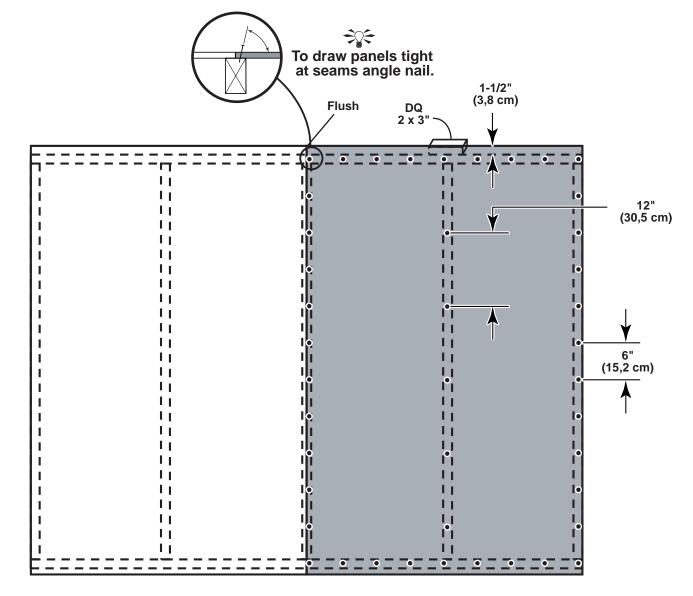

#### **BACK WALL FRAME**

#### **PARTS REQUIRED:**

**x12** 3" (7,6 cm)

x3 UM


2 x 4 x 68" (5,1 x 10,2 x 172,7 cm)

x1 SZ

2 x 4 x 89" (5,1 x 10,2 x 226,1 cm)

x1 TP

2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

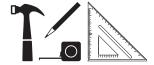


#### BEGIN


- Orient parts on edge on floor. Measure and mark from end of boards.
- 2 Use two 3" nails at each mark.



You have finished building the back wall frame. Proceed to attach wall panels.

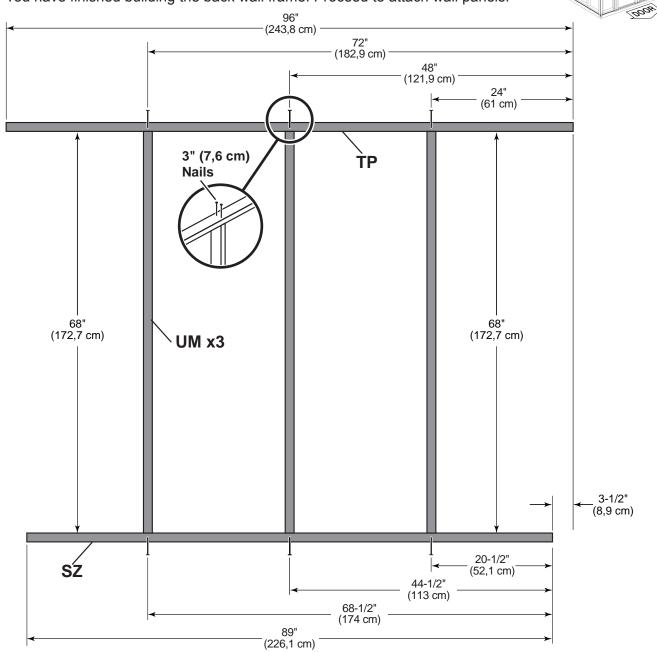

# ## BACK WALL PANELS PARTS REQUIRED: x1 3/8 x 48 x 72" (1 x 121,9 x 182,9 cm) ## GAUGE BLOCK ### BACK WALL PANELS x34 2" (5,1 cm) GAUGE BLOCK

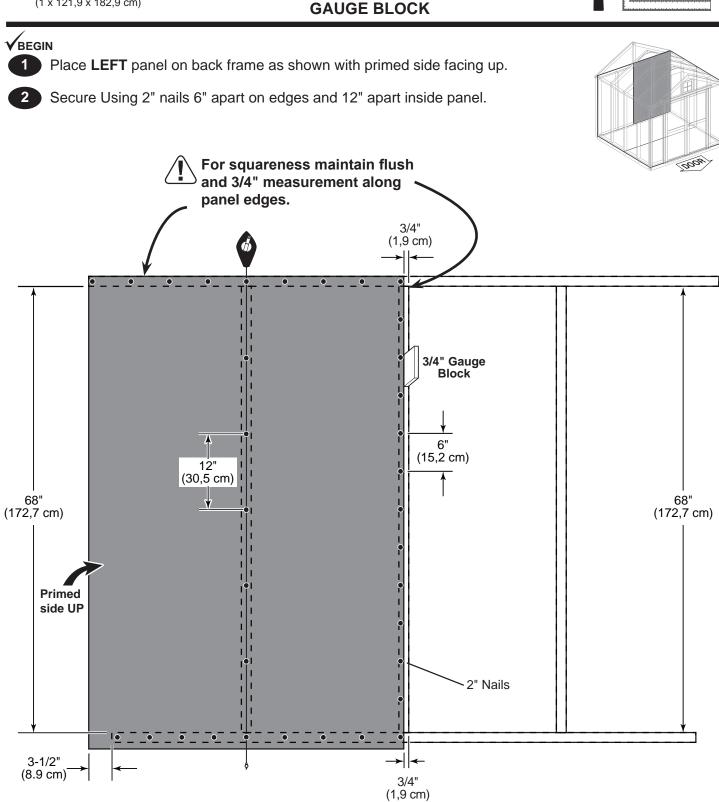


#### **BACK WALL PANELS**


#### **PARTS REQUIRED:**

**x1** 



3/8 x 48 x 72" (1 x 121,9 x 182,9 cm)

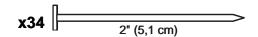

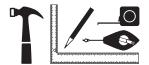


- Place **RIGHT** panel on back frame as shown with primed side facing up and flush to panel.
- 4 Secure Using 2" nails 6" apart on edges and 12" apart inside panel.



You have finished installing your back wall panels.



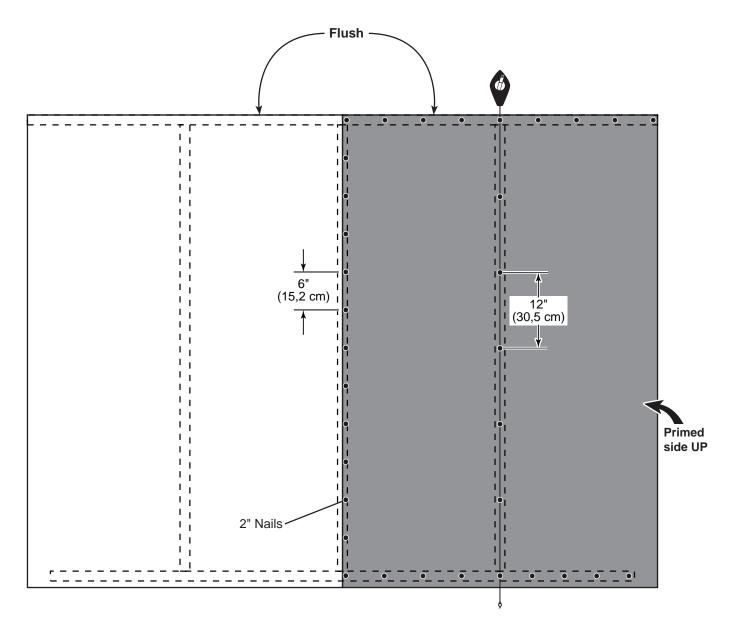

#### FRONT WALL FRAME

#### **PARTS REQUIRED:**

3" (7,6 cm)

x2 RD


2 x 4 x 16-1/2" (5,1 x 10,2 x 43,9 cm)

**x2** UM

2 x 4 x 68" (5,1 x 10,2 x 172,7 cm)

**x1** 

2 x 4 x 96" (5,1 x 10,2 x 243,8 cm)

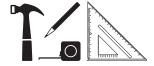


#### BEGIN

- Orient parts on edge on floor. Measure and mark from end of boards.
- Use two 3" nails at each mark.

FINISH

You have finished building the front wall frame. Proceed to attach wall panels.

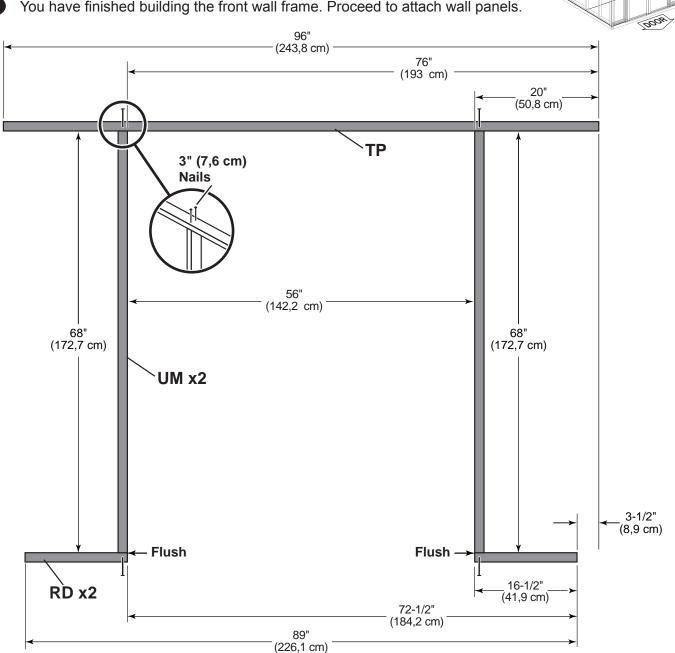

#### FRONT WALL PANELS


#### **PARTS REQUIRED:**

**x38** 2" (5,1 cm)

**x2** 




3/8 x 19-7/8" x 72" (1 x 50,5 x 182,9 cm)

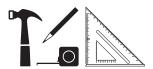


#### BEGIN


FINISH

- Place **LEFT** panel on frame shown with primed side facing up.
- Nail using 2" nails 6" apart.
- 3 Repeat steps 1-2 for RIGHT panel.

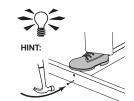

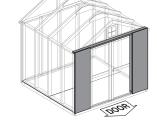

4 You have finished building your front wall.

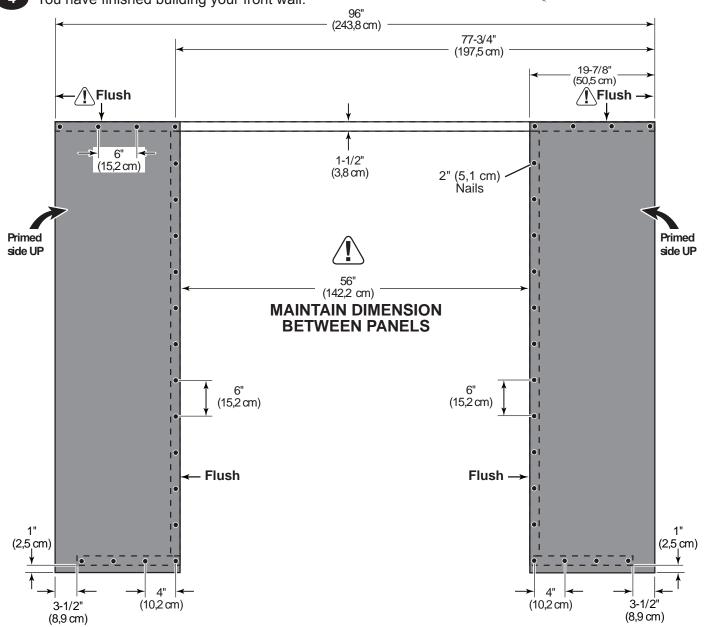

#### FRONT WALL TOP PLATE **PARTS REQUIRED:** 3" (7,6 cm) x1 GUSSET x1 BBA TEMPORARY SPACER 2 x 4 x 66-1/2" (5,1 x 10,2 x 168,9 cm) BEGIN Center BBA on TP on flat, flush to front wall panel (Fig. A). Secure using five 3" screws on angle spaced evenly. Mark center of door opening for later alignment. FINISH You have finished installing your front wall top plate **Flush** Front wall panel **BBA Flush** Fig. A Use to maintain **TP** 3/8" overhang. 5-1/4"\_ 5-1/4" ı (13,3 cm) (13,3 cm) **CENTER CENTER** ı ī. Drive screws at an angle to avoid screw points protruding into the door opening

#### SIDE WALL INSTALLATION


#### 


BEGIN

1 Center side wall assembly on the 92-1/2" (235 cm) floor dimension.

🕦 Ensure 1-1/2" measurement is on top


2 Use **00** as a temporary brace. Secure with two 3" screws.

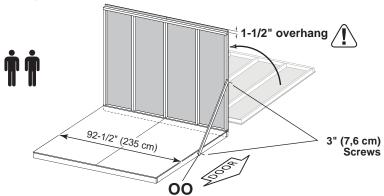

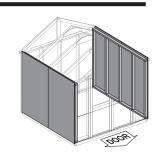


- First, nail lower edge of panel to floor frame using 2" nails 6" apart. Angle nail to hit floor frame (Fig. A).
- Nail side wall bottom plate to floor using eight 3" nails.
  (Nail two 3" nails between each stud through bottom plate)
- FINISH

  5 You have finished standing your side wall.
  Repeat steps 1-4 to stand second wall.

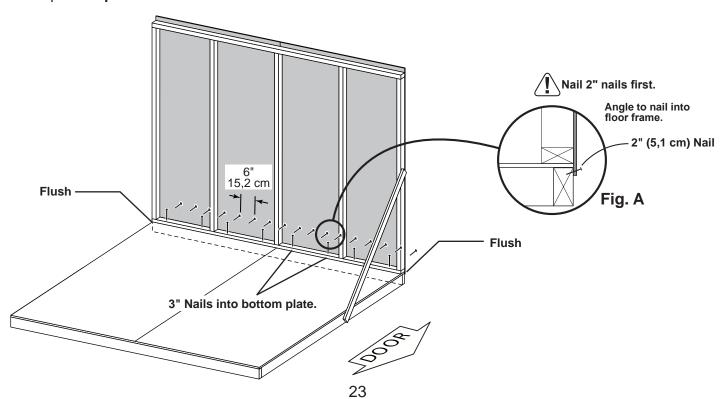


#### **BACKWALL INSTALLATION**

#### **PARTS REQUIRED:**

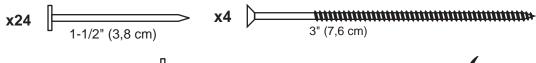




#### **√**BEGIN

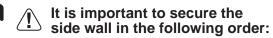


- 1 Set back wall on side wall top plates and secure using two 3" screws on each side (Fig.A).
- Nail lower edge of panel to floor frame using 2" nails 6" apart. Angle nail to hit floor frame (Fig. B).
- 3 Secure back wall plate to floor using two 3" screws between each stud.
- Nail back wall panel to side wall stud using thirteen 1-1/2" nails 6" apart.
- 5 You have finished standing your back wall.

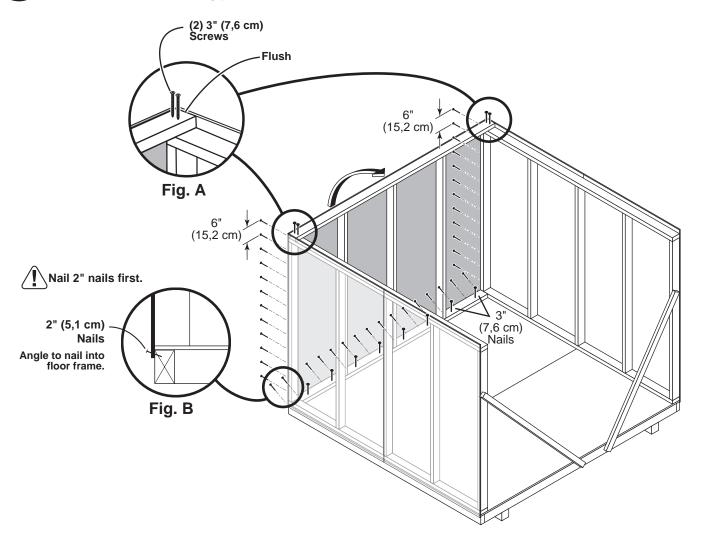




#### FRONT WALL INSTALLATION

#### PARTS REQUIRED:

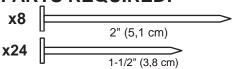

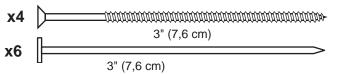



#### BEGIN





It is important to secure the front wall in the following order:


- 1 Center front wall assembly on floor, resting top plate on side walls.
- 2 Secure front wall top plate to side walls using two 3" screws (Fig. A, B).
- 3 Secure lower edge of panel to floor frame using eight 2" nails 6" apart. Angle nail to hit floor frame (Fig. C).
- 4 Secure bottom plates with three 3" nails on each side (Fig. C).
- 5 Nail front wall to side walls using 1-1/2" nails 6" apart (Fig. D).




6 You have finished standing your walls.

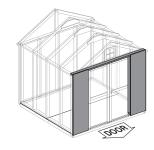

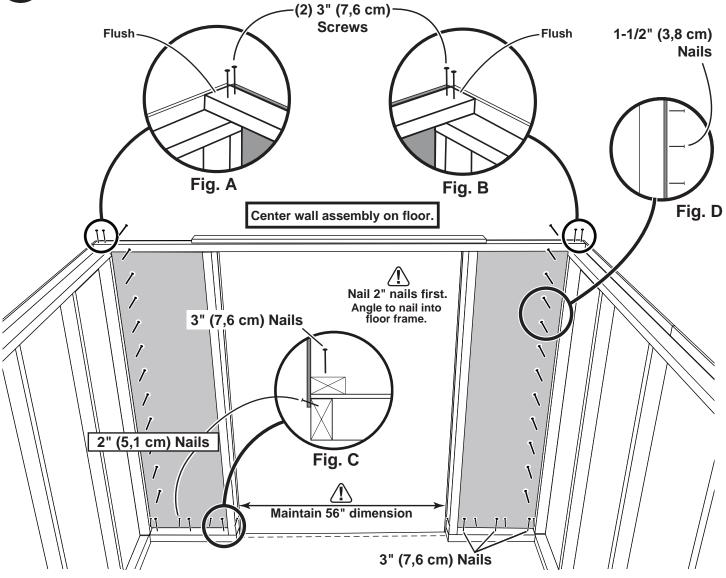

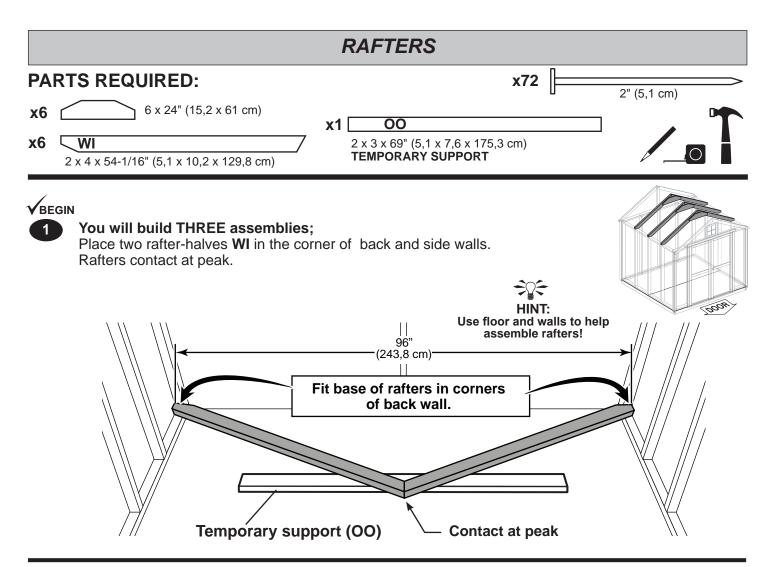

- Nail gusset to rafters using twelve 2" nails in pattern shown.
- 3 Flip over rafter assembly and repeat STEPS 2-3 to attach second gusset to other side.
- Repeat STEPS 1-4 to build TWO additional rafter assemblies.

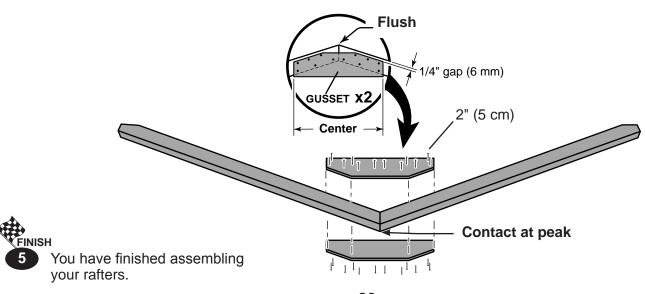

#### 



PARTS REQUIRED:



- Locate rafters directly over the wall studs.


  Ensure you have the measurements shown.
- 2 Screw through panel into end of rafter with 2" screw (Fig. A).
- 3 Secure with two 3" screws angled at each end (Fig. B).




4 You have finished installing your rafters.





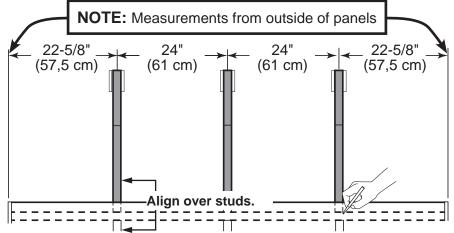

Maintain the measurements between rafters.

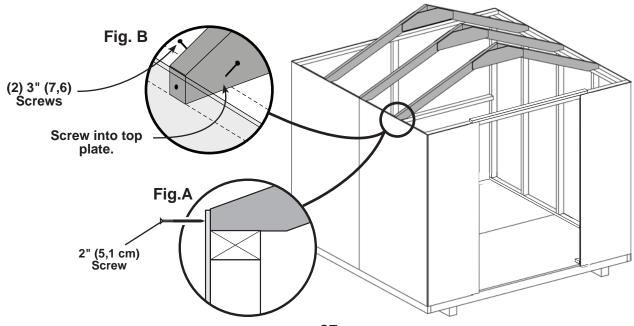

#### **BACK WALL GABLE PANELS**

#### **PARTS REQUIRED:**

**XVA**2 x 4 x 23-7/8" (5,1 x 10,2 x 60,6 cm)

**x2** (WX 2 x 3 x 55-3/4" (5,1 x 7,6 x 141,6 cm)

**x10** 1-1/2" (3,8 cm)








#### **V**BEGIN

- Place XWA on flat on floor. Use WX as temporary supports as shown.
- Place **RIGHT** gable panel primed side up, centered on **XWA** with a 3/4" overhang on bottom. Nail using five 1-1/2" nails, 6" apart.
- Place **LEFT** gable panel primed side up, flush to right panel on **XWA** with a 3/4" overhang on bottom. Nail using five 1-1/2" Nails, 6" apart.






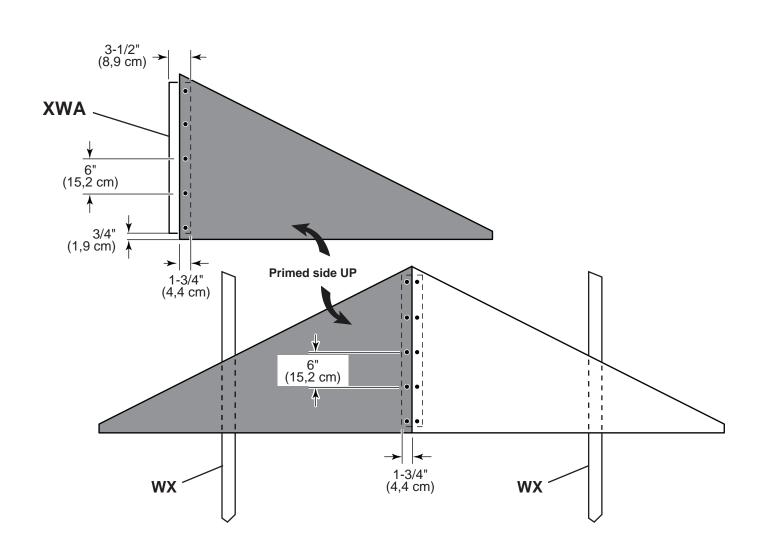

#### **BACK WALL GABLE PANELS**

#### **PARTS REQUIRED:**



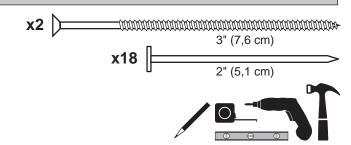


#### BEGIN

- Place gable assembly centered on back wall top plate overlapping the back wall panels 3/4" (Fig. A).
- 2 Nail assembly to back wall panels using 2" nails 6" apart.
- 3 Screw XWA to top plate using two 3" screws (Fig. B).

#### FINISH

4 You have finished installing your back wall gable panels.



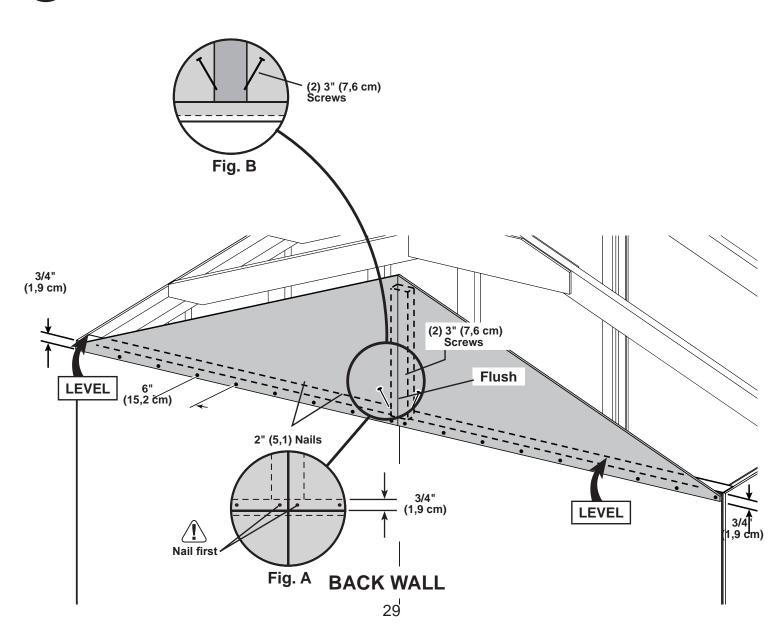

#### FRONT WALL GABLE PANELS

#### **PARTS REQUIRED:**

**X2** DQ 2 x 3 x 11-7/8" (5,1 x 7,6 x 30,2 cm)

 **x8** 1-1/2" (3,8 cm)









#### BEGIN

FINISH


- Place **DQ** on flat on floor. Use **WX** as temporary supports as shown.
- Place **RIGHT** gable panel primed side up, centered on **top DQ** as shown. Secure using two 1-1/2" nails.
- Orient **LEFT** gable panel primed side up, flush to right panel on **DQ's** with a 1-1/2" overhang on bottom. Nail using four 1-1/2" Nails.

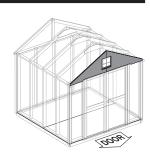


4 You have finished building your Front wall gable panels.

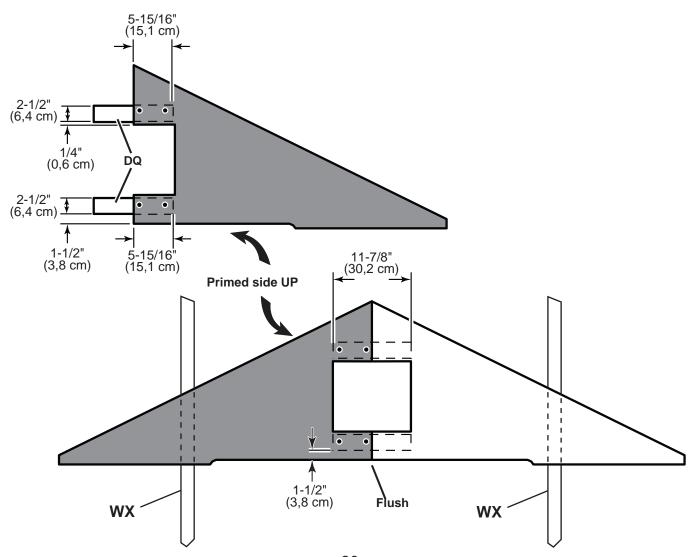


# WINDOW INSTALL X2 1" (2,5 cm) 1/8" (0,3 cm)Drill Bit

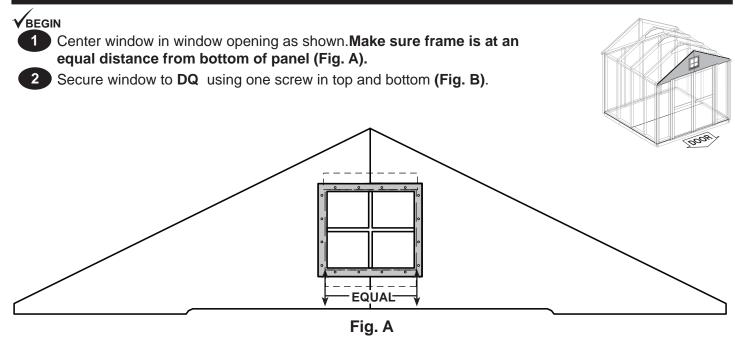

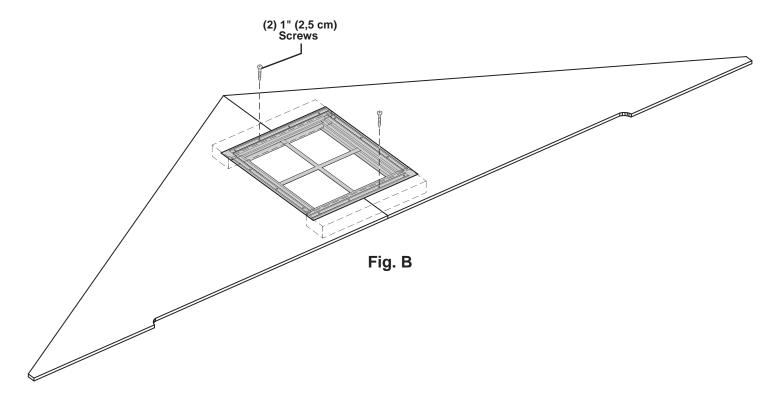

#### WINDOW INSTALL

#### **PARTS REQUIRED:**

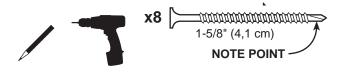


- 3 Center window trim on window.
  NOTE: There will be a slight reveal inside window.
- Secure window trim using self-drilling 1-5/8" screws through window flange (Fig. A)

FINISH

5 You have finished installing your window trim.




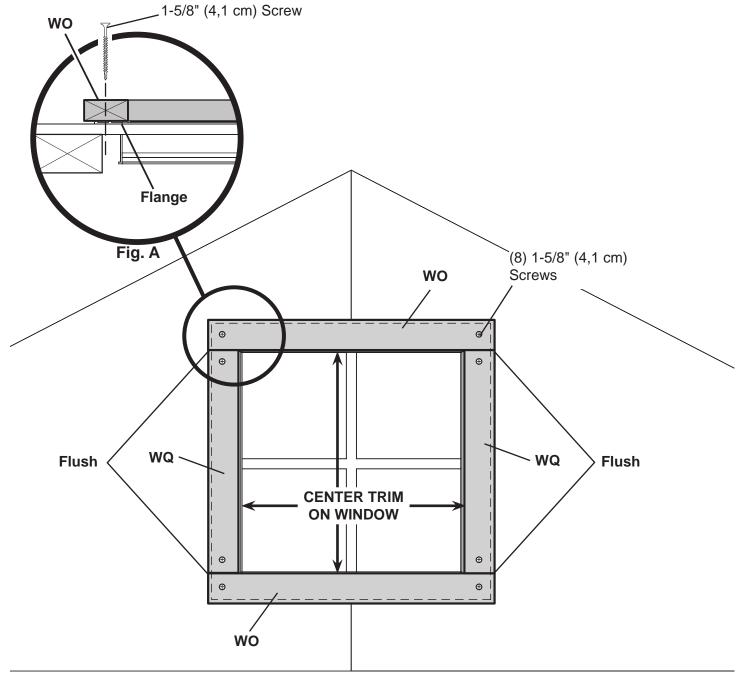


#### FRONT WALL GABLE PANELS

#### **PARTS REQUIRED:**



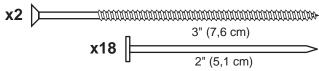

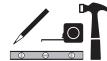


#### **PRE-ASSEMBLED**

#### **V**BEGIN

- 1 Place gable assembly centered on front wall top plate overlapping front wall panels.
- Screw DQ to top plate using two 3" screws (Fig. A).
- 3 Nail gable panels to front wall panels and BBA using 2" nails, 6" apart.



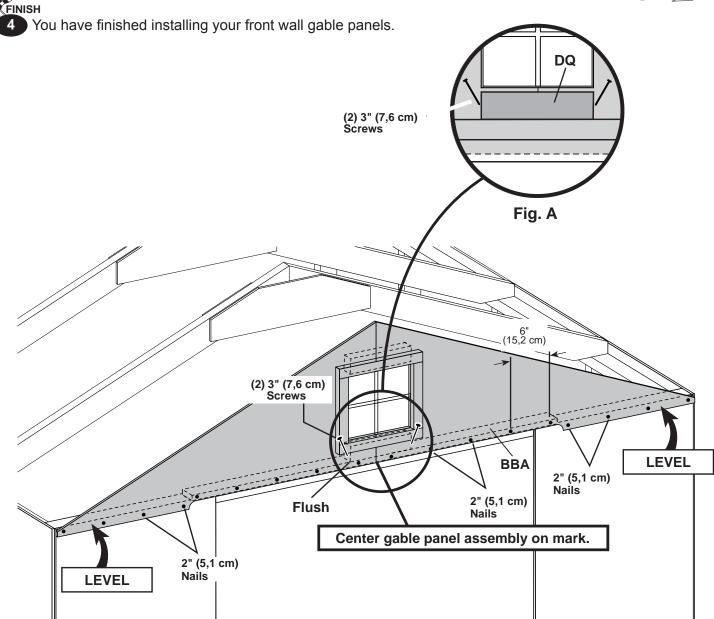

#### **GABLE TRIM**

#### **PARTS REQUIRED:**

x40 1-1/4" (3,2 cm)

x4 WX

2 x 3 x 55-3/4" (5,1 x 7,6 x 141,6 cm)



#### BEGIN

Install front gable trim  $\boldsymbol{W}\boldsymbol{X}$  flush to top edge of panel and flush at peak (Fig. A) as shown.




- Attach trim to wall using 1-1/4" screws 7-1/4" apart. Screw through panels into WX.
- Repeat above steps 1-2 to secure back wall gable trim.



FINISH

You have finished installing your gable trim.

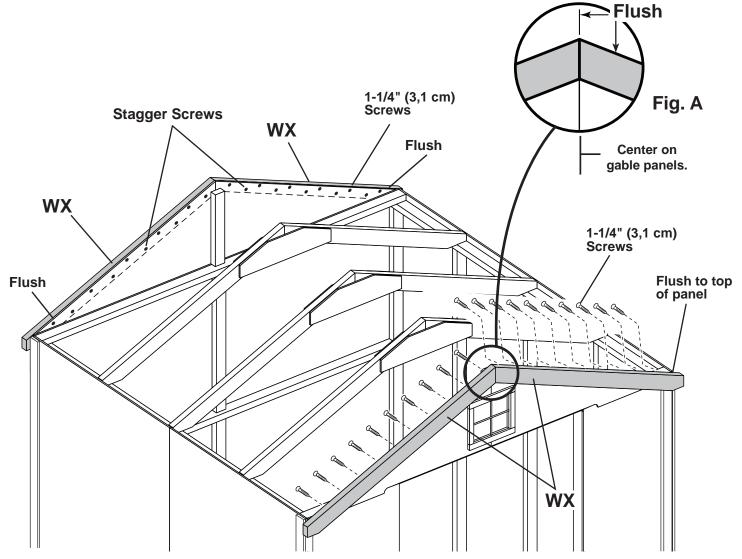


### **ROOF PANELS**

#### **PARTS REQUIRED:**

**x2** 

7/16 x 48 x 96" (1,1 x 121,9 x 243,8 cm)

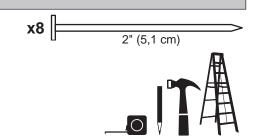

Flush at peak.



Roof panels may cause serious injury until securely fastened.

You must square the roof by attaching one panel first. You will use the panels' long edge as a lever to bring your roof into square. Commonly known as "racking".




# **V**BEGIN




Attach the **48 x 96"** panel with the rough side up (painted-grid lines side) with a 1/2" measurement on the gable trim **(Fig A)** and the panel flush at the peak **(Fig. B)**.

Secure panel with two 2" nails in the corners.

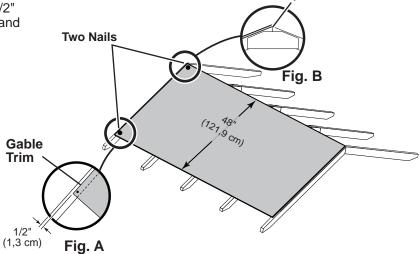

Move to the opposite end. Using the long edge of the panel as a lever move the panel side-to-side until the top corner is flush to the peak (Fig. C) and there is a 1/2" measurement to the gable trim (Fig. D).

You may need to move your backwall to get the 1/2" measurement. Secure panel with two 2" nails in the corners.

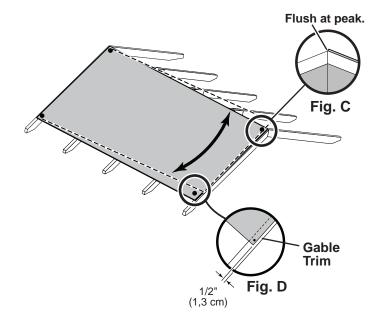


# **ROOF PANELS**

#### PARTS REQUIRED:

**x2** 

7/16 x 7-7/8" x 96" (1,1 x 20 x 243,8 cm)

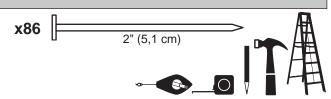

Keep spacing between the center of the rafters at the lower edge of the panel and secure with one 2" nail into each rafter (Fig. E).

> Move to the top of the panel and keep spacing between the center of the rafters. Secure with one 2" nail into each rafter (Fig. E).

Nail the roof panel using 2" nails 6" apart on edges and 12" apart inside panel (Fig. F).


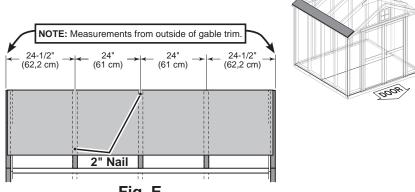


Fig. E

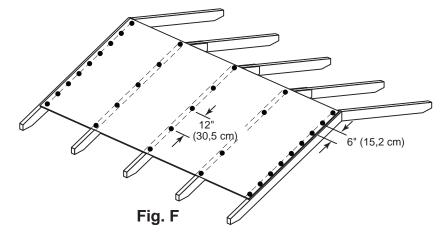


Attach the lower roof panel flush to the upper panels and with a 1/2" measurement at the gable trim (Fig.G).

> Nail the roof panel using 2" nails 6" apart on edges and 12" apart inside panel.

Repeat process to attach roof panels on the opposite side.

You have finished installing your roof panels.



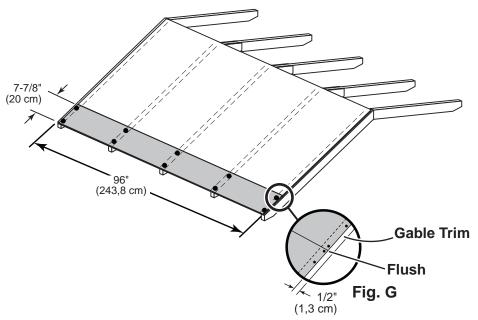


# **TRIM x56** □ 2" (5,1 cm)

# **PARTS REQUIRED:**x4 3/8 x 1-3/4 x 71-1/4" (1 x 4,4 x 181 cm) x4 3/8 x 1-3/4 x 71-3/4" (1 x 4,4 x 182,2 cm)


# 2" (5,1 cm)

#### BEGIN


- Attach 71-3/4" trim flush to back of gable trim and bottom of roof panel and trim (Fig. A) using 2" (5,1 cm) finish nail as shown.
- Attach **71-1/4"** trim flush to bottom of gable panel (**Fig. B**) and flush to edge of 71-3/4" trim using one 2" (5,1 cm) nail as shown.
- Finish attaching trim flush to corners using seven 2" (5,1 cm) finish nails as shown.

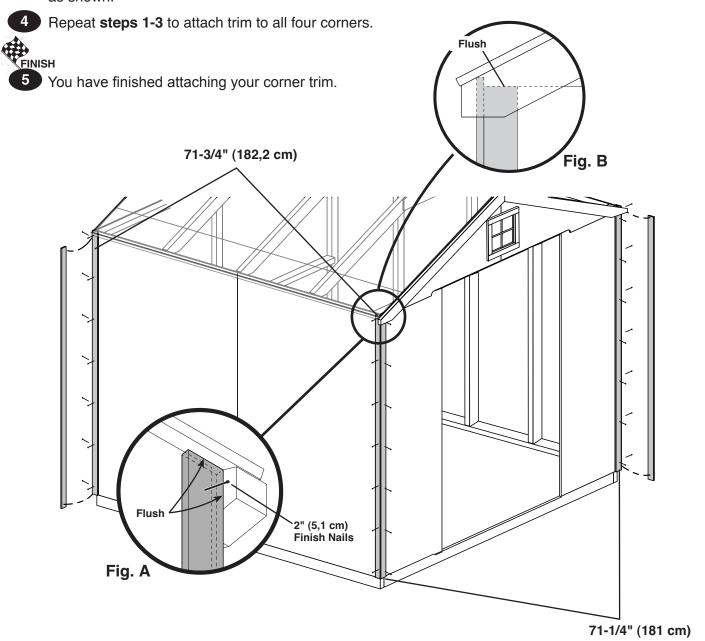

# **DOORS**

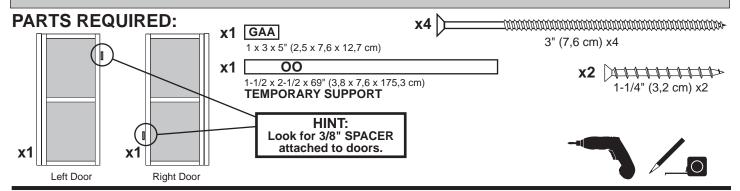

- **V**BEGIN
  - Orient parts as shown on flat surface. 1 3/8" offset is to top. Look for red (right) and green (left) on hinge board.
- Attach temporary support **OO** with 3" screws in middle and at ends. Tighten securely.
- 3 Attach temporary support GAA with 1-1/4" screws. Tighten securely.

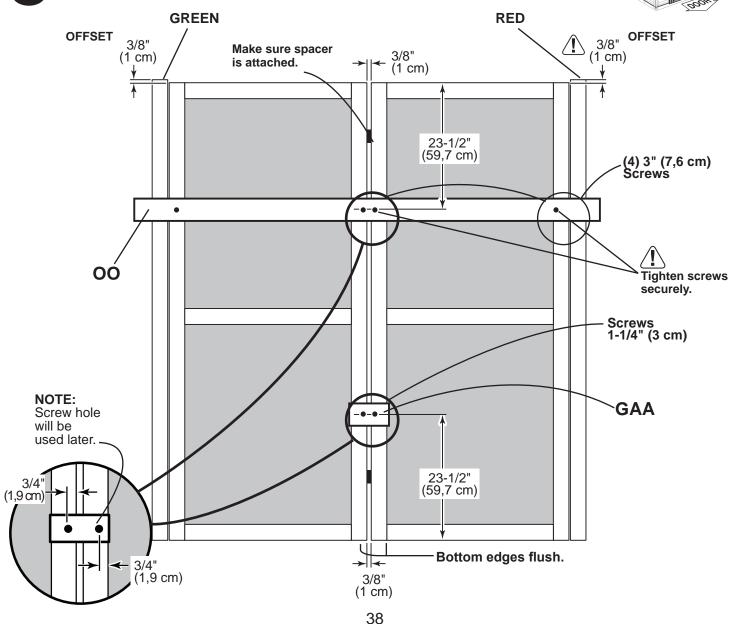


# **DOORS**


#### **PARTS REQUIRED:**

x1 00

1-1/2 x 2-1/2 x 69" (3,8 x 7,6 x 175,3 cm) TEMPORARY SUPPORT

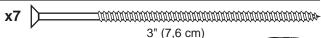

Attach temporary support **OO** as a ledger board flush under wall panels for doors to rest on, using three 3" screws **(Fig. A)**.

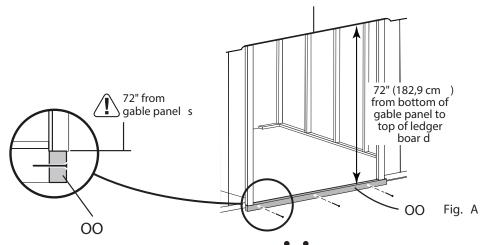




- Center doors on panel seam as shown (Fig. B).

  Property Check ledger board is still flush under panels.
- Screw hinge boards into wall supports and floor using four 3" screws as shown.

  /!\ Make sure screws go into framing and floor (Fig. C, D).
- 7 Remove temporary supports and check doors open properly.

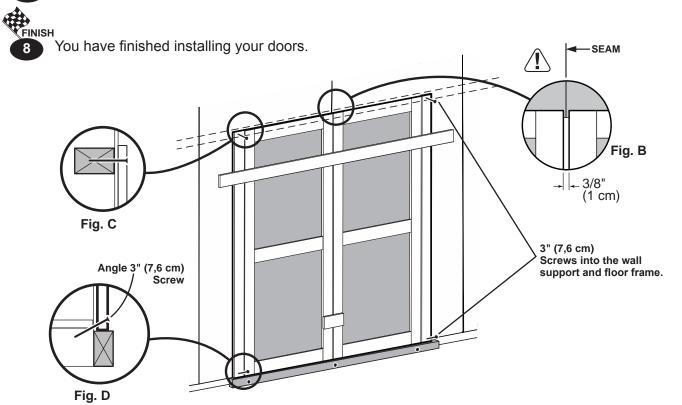

### **DOORS**


#### 

#### BEGIN

- Secure hinge boards from inside using 3/4" screws as shown (Fig. A).
- Reinforce the door trim using 3/4" screws through door panel into trim (Fig. A). Locate screws as shown in Fig. B. Use two screws at seams.
- 3 Center trim **WR** over doors and secure using eight 2" finish nails into framing as shown.
- Center metal threshold between doors and secure using eleven 3/4" special coating screws into floor as shown (Fig, C).

FINISH

5 You have finished securing your door and trim.

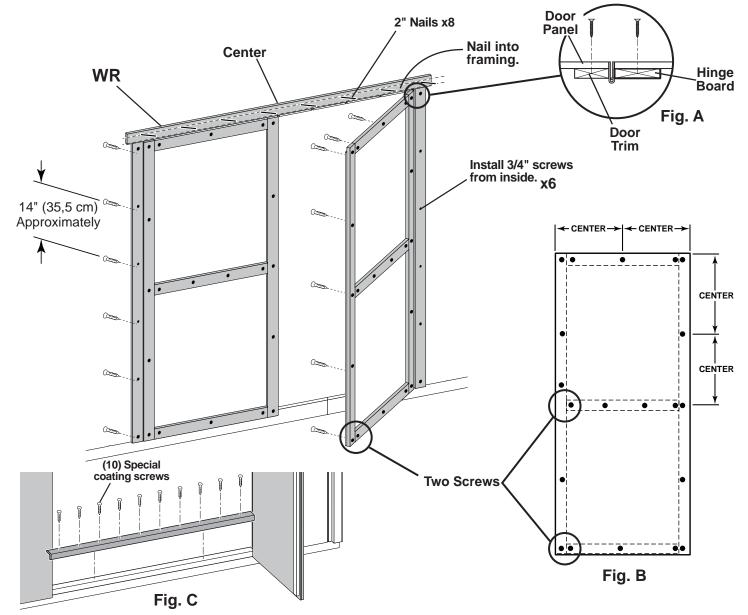


### DOOR WEATHERSTRIP

### **PARTS REQUIRED:**

x2

00

1-1/2 x 2-1/2 x 69" (3,8 x 7,6 x 175,3 cm)

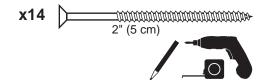


#### BEGIN

- With left door closed, center a weatherstrip **OO** vertically on the left door in the door opening **(Fig. A)**. **OO** will offset the left door 1" OUT past the door trim 1" **(Fig. B)**.
- 2 Secure OO using seven 2" screws through outside trim into OO (Fig. B)
- On right door center **OO** vertically in door opening **(Fig. A)**. **OO** will offset the right door 1" IN from the door trim **(Fig. C)**.
- 4 Secure **OO** using seven 2" screws through outside trim into **OO** (Fig. C).






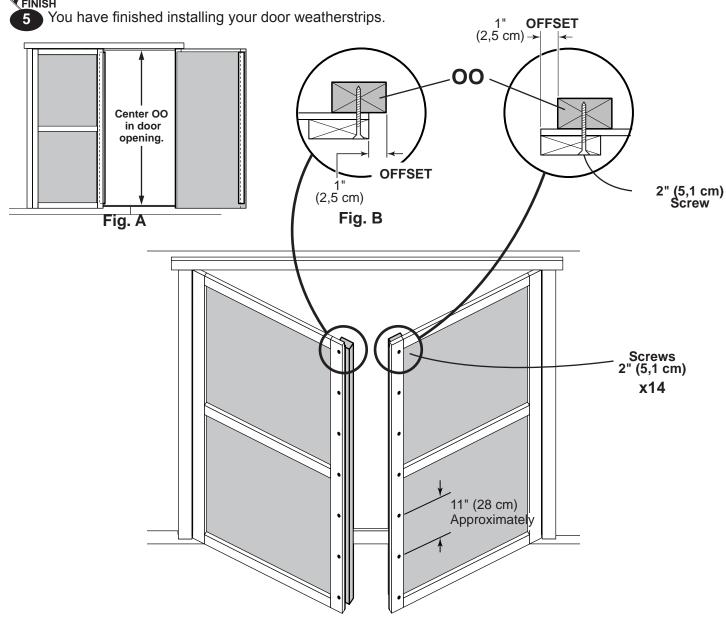

#### DOOR HARDWARE



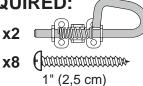



BEGIN

Place bolts onto **OO** in open position with bolt ends 3/8" (1 cm) down from frame. Bolt is open when loop is contacting base (**Fig A**).

Mark and pre-drill holes for screws.

- Install bolt with screws supplied and drill 5/16" (0,8 cm) hole deep enough for bolt to slide into.
- Place bolts onto **OO** in open position with bolt ends 1/2" (1,3 cm) up from floor. Bolt is open when loop is contacting base **(Fig B)**.


Mark and pre-drill holes for screws.

Install bolt with screws supplied and drill 5/16" (0,8 cm) hole deep enough for bolt to slide into.





HINT: With door closed extend bolt and tap with hammer to leave a mark in wood for drilling.

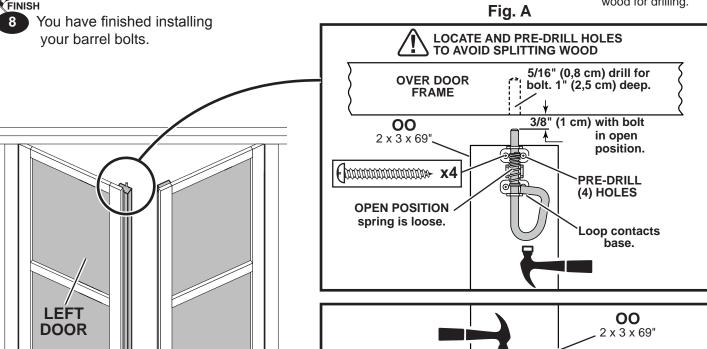



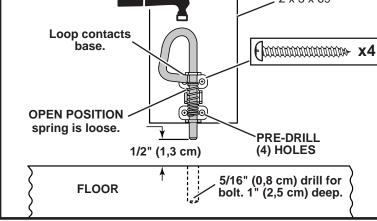


Fig. B

# DOOR HARDWARE



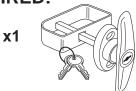


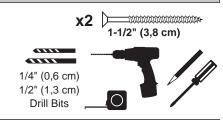


BEGIN

Measure and mark location of hole on outside of right door as shown (Fig.A). Pre-drill pilot hole with 1/4" dril.

Pre-drill through hole with 1/2" drill.

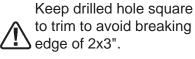


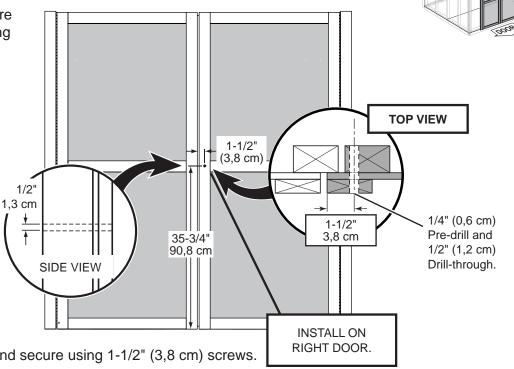

- Insert handle in hole and secure using 1-1/2" (3,8 cm) screws.
- Attach inside handle and secure with set screw as shown.

FINISH


You have finished installing your T-handle.

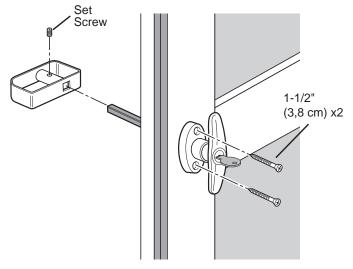

### **VENTS**

#### **PARTS REQUIRED:**

**x12** () (1,3 cm)

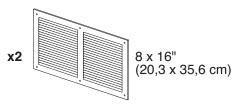





Locate and mark hole cutouts for two vents in walls as shown; (1) at top of back gable and (1) at bottom of side wall


Cut out marked openings.


Caulk behind vent flanges.

2 Secure using six 1/2" (1,3 cm) screws.



You have finished installing your vents.

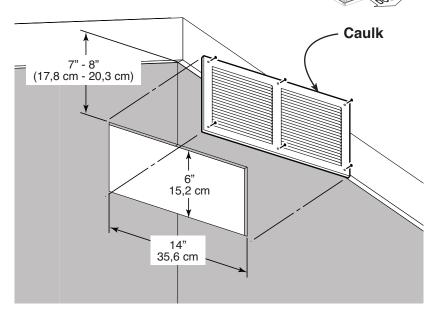

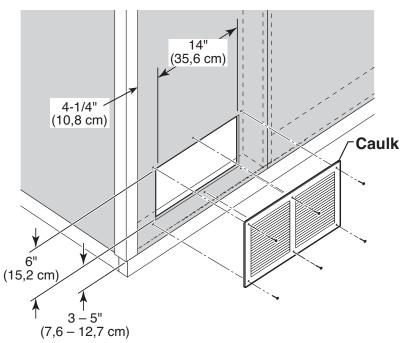

#### **PAINT & CAULK** - NOT INCLUDED -




- Use acrylic latex caulk that is paintable. Caulk at all horizontal and vertical seams, between the trim and walls, and all around the door trim.
- Use a high quality exterior acrylic latex paint. When painting your building, there are a few key areas that can be easily overlooked that must be painted:
  - Bottom edge of all siding and trim
  - Inside of doors and all 4 edges

#### Note:

Prime all un-primed exterior wood before painting. (Follow directions provided by manufacturer.)

#### **ROOF FELT** - NOT INCLUDED -

• Install felt flush to all roof edges overlapping 3". Use minimal amount of roofing nails to hold in place.

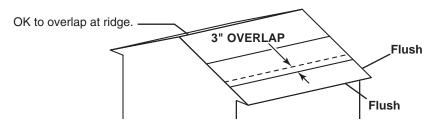


#### **DRIP EDGE** - NOT INCLUDED -



Snip bottom side of drip edge and bend over to other side of roof.

(Follow directions provided by manufacturer.)

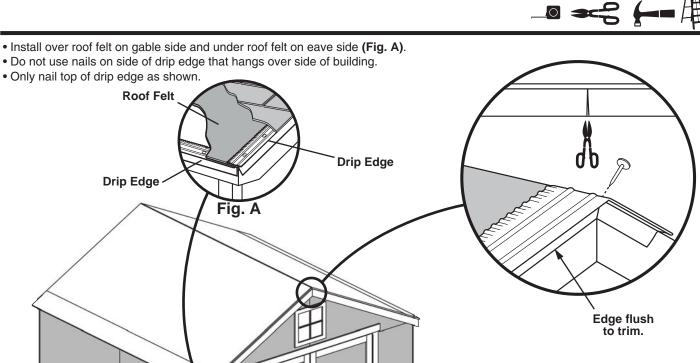

45


# **SHINGLES** - NOT INCLUDED -

• Follow directions provided by manufacturer and these instructions.





Familiarize yourself with a 3-Tab Shingle.

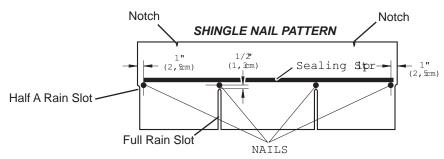


NEVER DRIVE FASTENERS INTO OR ABOVE SEALING STRIPS.

BEGIN


Install first starter row upside down and color up with a 1" overhang at back and bottom of roof panel. Use (4) nails per shingle. Starter row must be straight and level all the way across with lower edge of roof deck.

**NOTE:** If you have installed drip edge install shingles flush to drip edge.

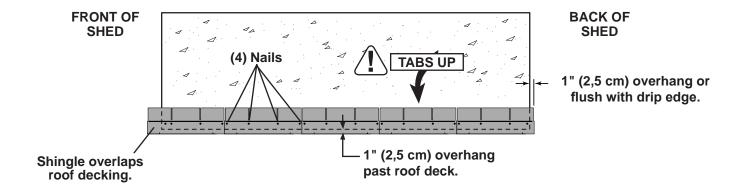



# SHINGLES continued...

2 Beginning at front of shed, install first row of shingles with notch at 1" past roof edge or flush with drip edge.

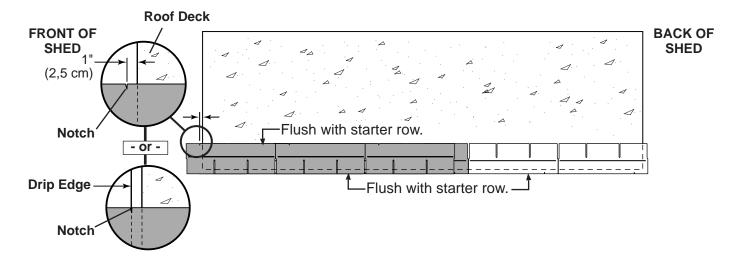


Install second row of shingles flush at top of first row's rain slots. Ensure 1" overhang or flush to drip edge at front, stagger each row.

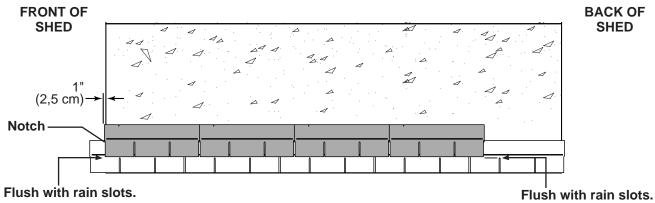

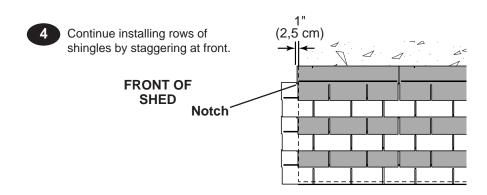


#### **SHINGLES** continued...

Continue installing rows of shingles to the peak. At the peak make sure there is a maximum of 5" or less to the rain slot, as shown below. If shingles overlap at ridge cut to peak with a utility knife.

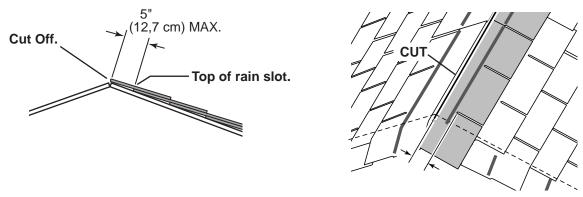

- / If more than 5" to rain slot you must install another row of shingles.

- Repeat steps 1 5 to shingle the opposite side of your roof. Trim shingles at ridge.
- Once both sides are shingled you need to trim ends. Strike a chalk line 1" from edge.
- Using your shingle hooked blade carefully cut shingles along chalk line.

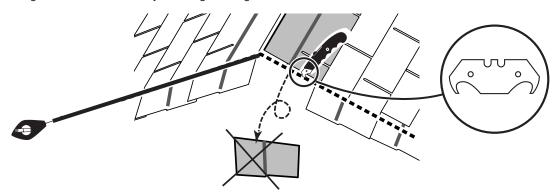



You have finished shingling your roof. Proceed to capping the ridge.


# SHINGLES - RIDGE CAP

• You will finish off the top of the roof with a ridge cap made from shingles.



### BEGIN


1 Cut shingles into THREE pieces. Hint: Use cut-off pieces first.

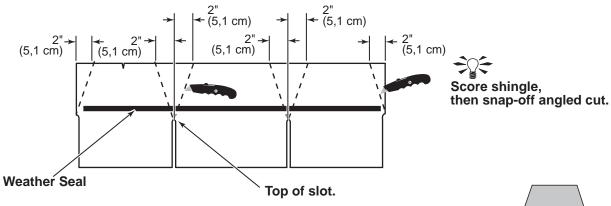


Note: • You will need about 20 - 22 cut pieces.



2 Install first ridge cap flush to shingles at front, as shown.

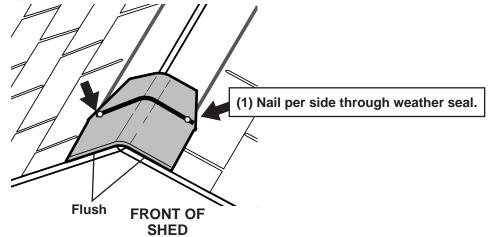


3 Install second ridge cap 5" back, as shown.

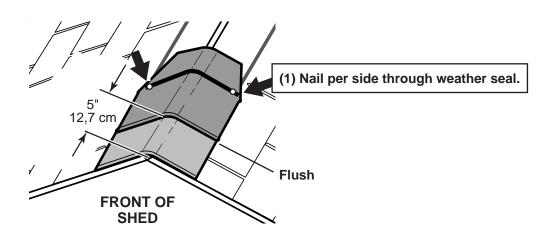


# SHINGLES - RIDGE CAP

continued...


4 Continue installing ridge cap to back of roof.

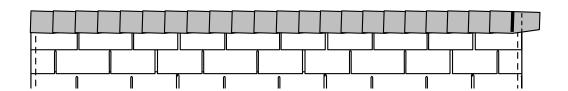


5 Make sure there is 4" between the shingle-color and edge of shingles.

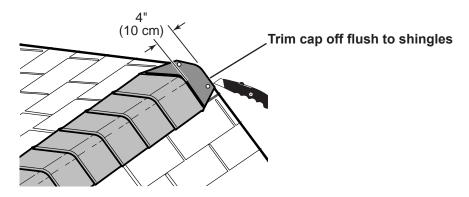

6 When you have 4" minimum of shingle color cut one piece to cap your roof.

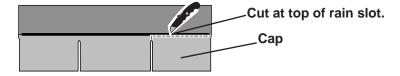

7 Install flush to shingles.

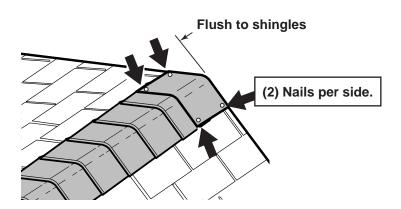

FINISH

You have finished your ridge cap.

#### WARRANTY REGISTRATION

Please complete your warranty registration to properly validate your warranty.

Register your product online at:www.OnlineWarranty.net.

#### **LIMITED CONDITIONAL WARRANTY\***

Backyard Storage Solutions, LLC warrants the following:

- 1. Every product is warranted from defects in workmanship and manufacturing for 1 year.
- 2. All accessories, hardware and metal components are warranted for 2 years.
- 3. All Oriented Strand Board (OSB) is warranted for 2 years
- 4. Siding and Trim is warranted for 10 years.
- 5. Solar Shed windows are warranted for 1 year.
- 6. Cedar lumber is warranted for 15 years.
- 7. Preserved Pine is warranted for 10 years.

Backyard Storage Solutions, LLC will repair, replace or pay for the affected part. In no event shall Backyard Storage Solutions, LLC pay the cost of labor or installation or any other costs related thereto. All warranties are from date of purchase. If a cash refund is paid on an affected part, it will be prorated from the date of purchase.

#### **CONDITIONS**

The warranty is effective only when:

- 1. The unit has been erected in accordance with the assembly instructions.
- 2. The unit has been properly shingled and painted or stained and reasonably and regularly maintained thereafter.
- 3. The failure occurs when the unit is owned by the original purchaser.
- 4. Backyard Storage Solutions, LLC has received the warranty registration card within thirty (30) days of purchase and notification of the failure in writing within the warranty period specified above.
- 5. Backyard Storage Solutions, LLC has had reasonable opportunity during the sixty (60) days following receipt of notification to inspect and verify the failure prior to commencement of any repair work.

#### **REQUIREMENTS**

#### **Storage Buildings**

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit; shingle the roof and paint or solid-colored stain the siding using quality, 100% acrylic latex exterior product with a minimum of two (2) coats within thirty (30) days of assembly; caulk above all doors and all horizontal and vertical trim boards; paint and seal all exposed edges, sides and faces of siding/trim and OSB siding to include all exterior walls and all sides and all edges of doors.

#### Gazebos & Pergolas

To validate your warranty, it is necessary to properly maintain your Backyard Storage Solutions, LLC unit. This includes treating all of the exposed cedar and pine surfaces on your gazebo or pergola structure with an exterior grade wood preservative, an exterior oil-based semi-transparent stain, an acrylic latex exterior paint or an acrylic latex solid color exterior stain within 30 days of assembly and as needed thereafter to maintain your warranty.

Keep vegetation trimmed away from building and make sure siding panels and trim do not come in contact with masonry or cement. The minimum ground clearance for siding must be one half inch (½ inch) from concrete slab or two and one half inches (2 ½") from the ground when building is erected or constructed on a treated wood floor kit. Water from sprinklers must be kept off unit. In no event will Backyard Storage Solutions, LLC be responsible for any indirect, incidental, consequential or special damages nor for failure(s) that are caused by events, acts or omissions beyond our control including, but not limited to, misuse or improper assembly, improper maintenance (which eventually leads to rot or decay) and acts of God. Backyard Storage Solutions, LLC will not be held responsible for any labor costs incurred to construct your unit.

This warranty gives you certain specific rights that vary from state to state.

#### **CLAIM PROCEDURE**

To make a claim under this warranty, you can either call 1-888-827-9056 or email: customerservice@backyardproducts.com. Please have ready the information below when you call or include the information in your email:

- 1. The model and size of the product.
- 2. A list of the part(s) for which the claim is made.
- 3. Proof of purchase of the Backyard Storage Solutions, LLC item, as shown on the original invoice.
- Run code: found on exterior product label or assembly instructions enclosed in the product package.

All other inquiries can be mailed to:

Backyard Storage Solutions, LLC Attn: Customer Service 1000 Ternes Monroe, MI 48162