
ASSEMBLY INSTRUCTION

OUTDOOR SWIVEL CHAIR

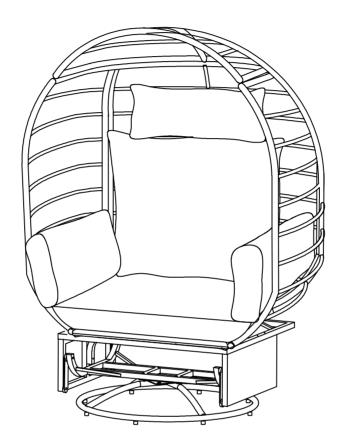


WF318105

Please contact after sales e-mail:customerservice@ahiouhome.com with your Order Number if you need any assistance, we will provide prompt help during working hours.


Please read all instructions carefully:

- 1. Have 2 adults on hand for assembly.
- 2. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
- 3. Place the item on a flat ground to adjust and make sure it remains stable.
- 4. Tighten up all screws with tools gradually.
- 5. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
- 6. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
- 7. Note: If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.


01-12

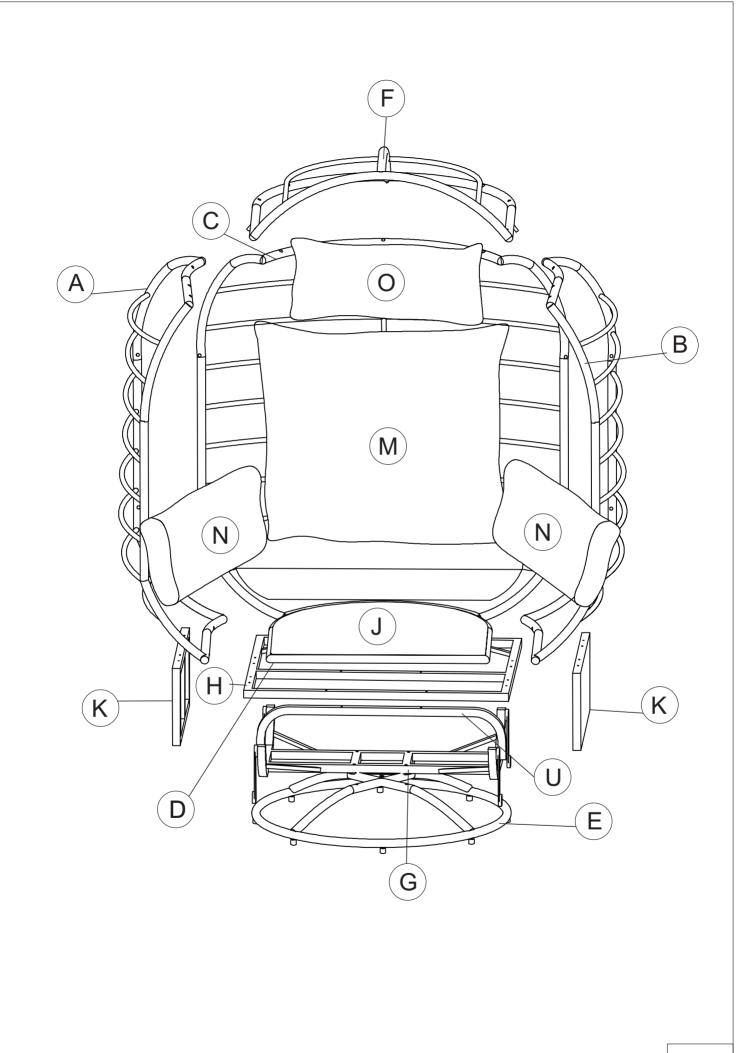


Part List:

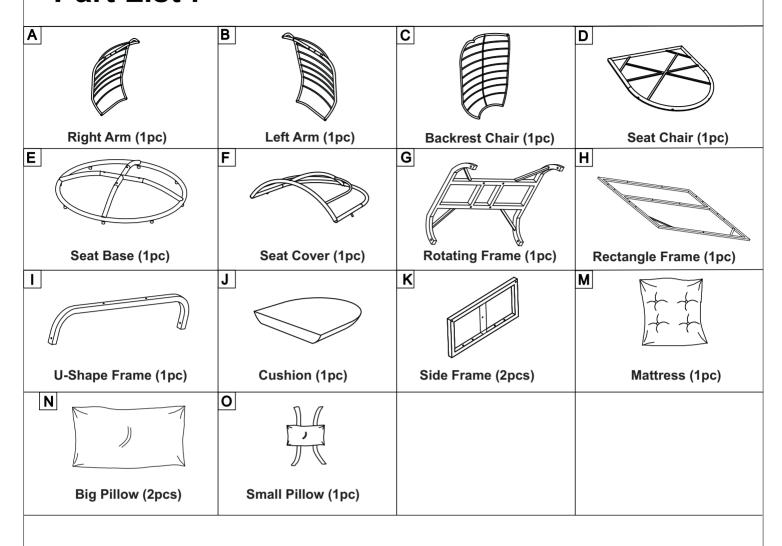


Hardware list:

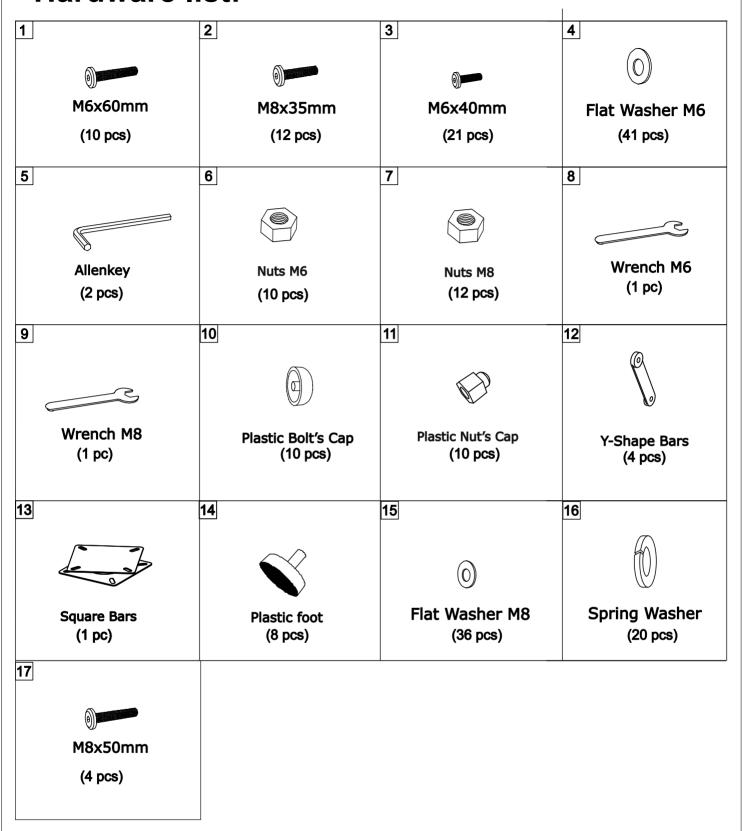


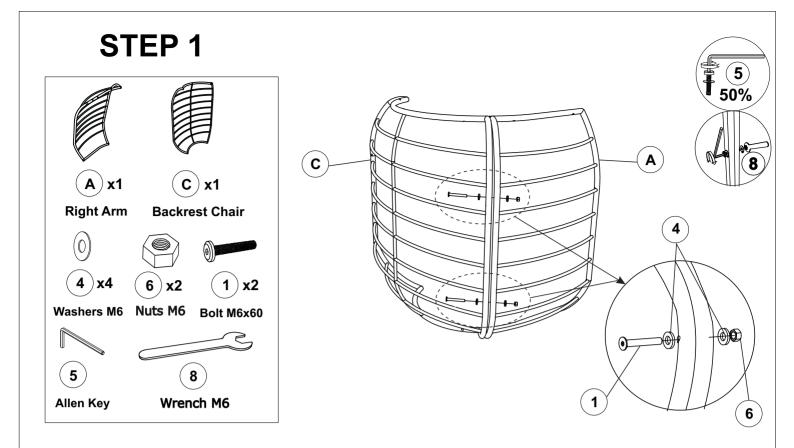


Connect Right Arm (A) & Backrest Chair (C) With Allen Key (5) & Wrench (8)

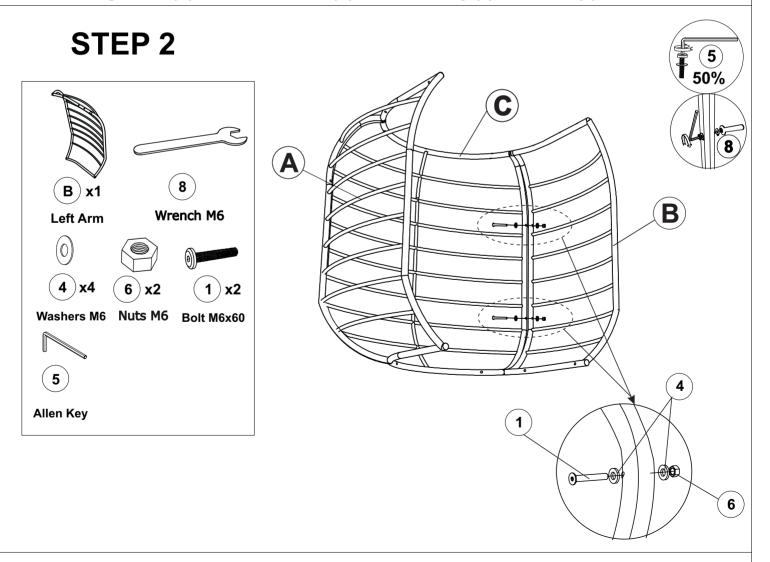


Connect Left Arm (B) & Backrest Chair (C) With Allen Key (5) & Wrench (8)

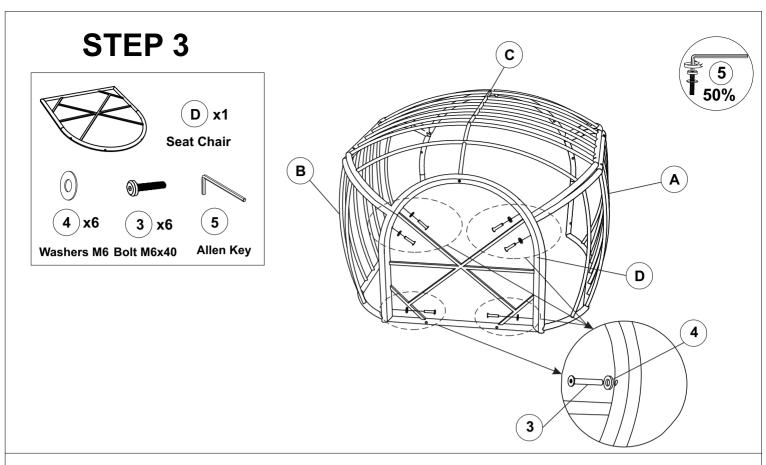


Connect Seat Chair (D), Right Arm (A), Left Arm (B), Backrest Chair (C) With Allen Key (5).

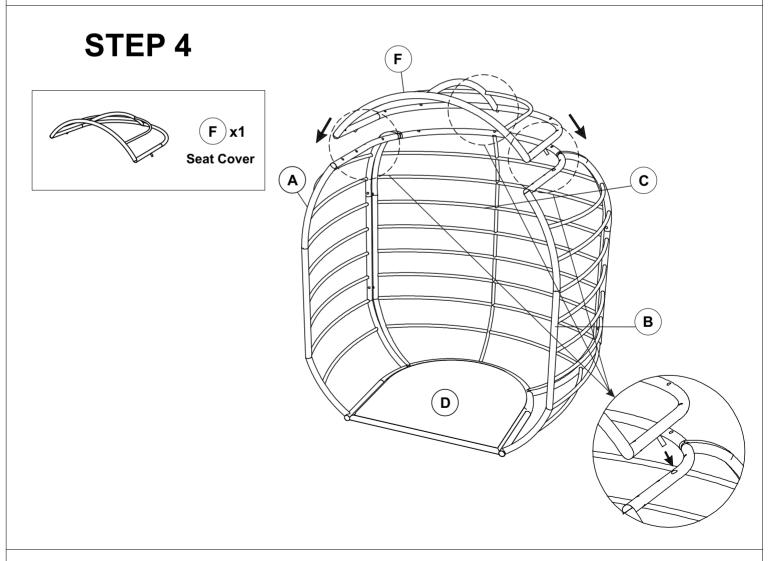


Connect Seat Cover (F) & Right Arm (A), Left Arm (B), Backrest Chair (C).

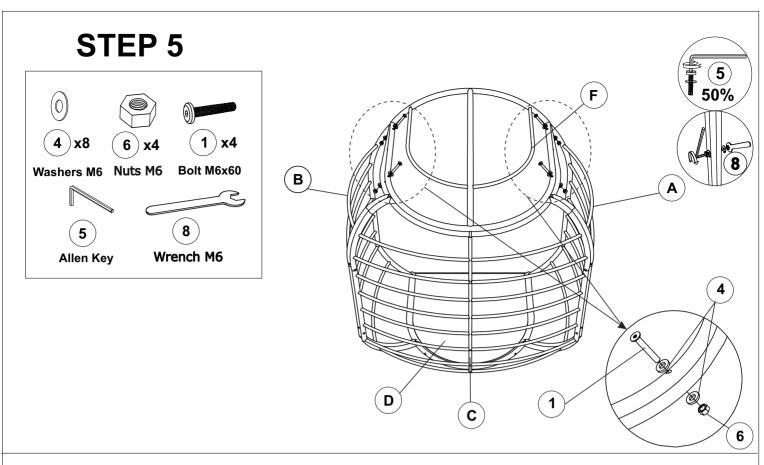


Connect Seat Cover (F) & Right Arm (A), Left Arm(B) With Allen Key (5) & Wrench (8).

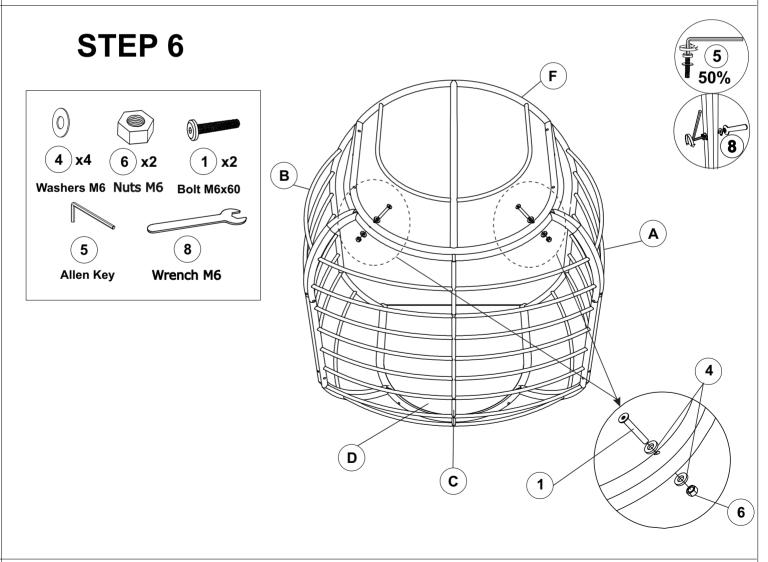


Connect Seat Cover (F) & Backrest Chair (C) With Allen Key (5) & Wrench (8).

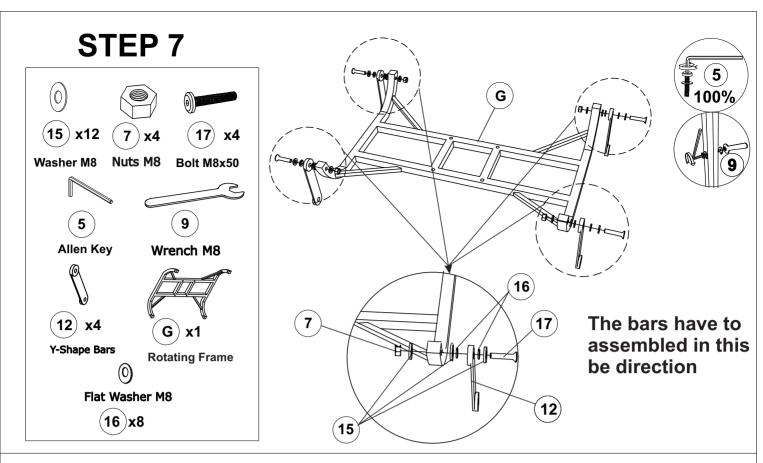


Connect All Bars Y-Shape (13) onto Rotating Frame (G) With Allen key (5) & Wrench (9).

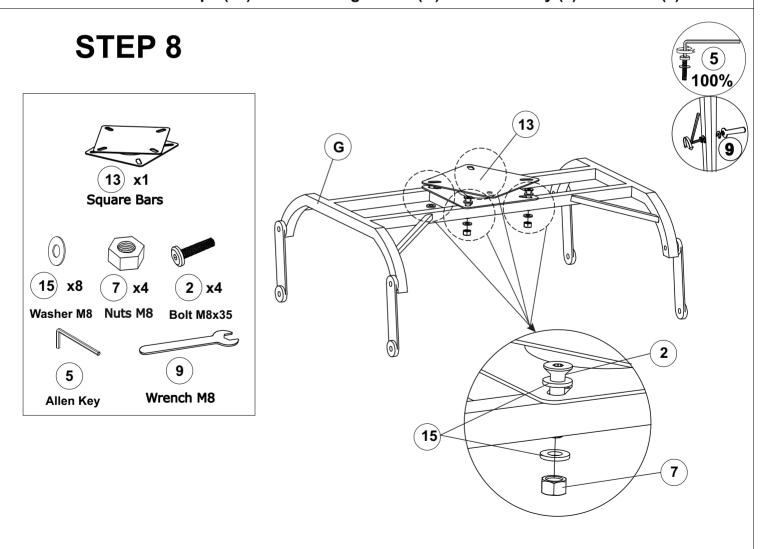

Connect Bars Square (14) & Rotating Frame (G) With Allen Key (5), Wrench (9).

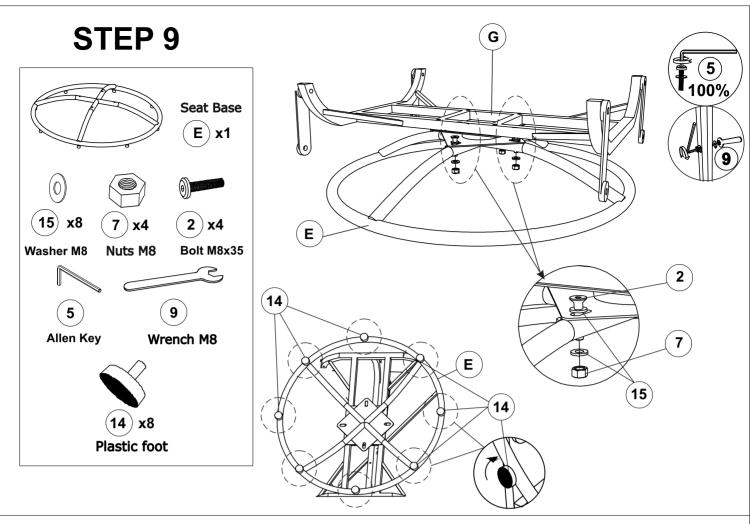



Connect Seat Base (E) & Rotating Frame (G) With Allen key (5) & Wrench (9). Connect Plastic foot (14) with Seat Base (E) by handle.

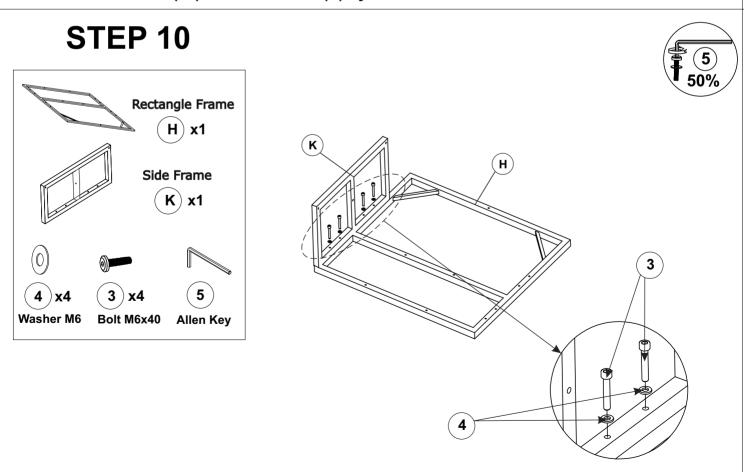

Connect Rectangle Frame (H) & Side Frame (K) With Allen Key (5).


STEP 11

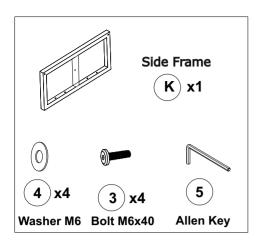


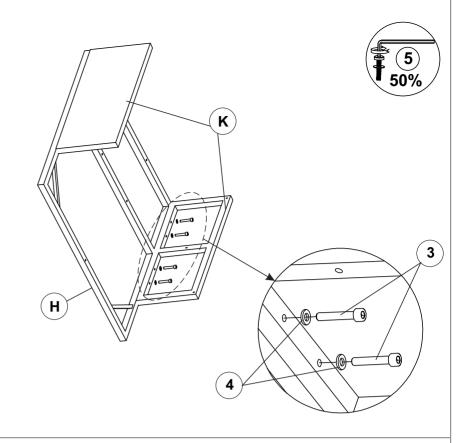


Connect Rectangle Frame (H) & Side Frame (K) With Allen Key (5).

STEP 12

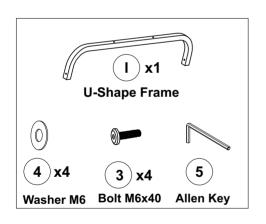


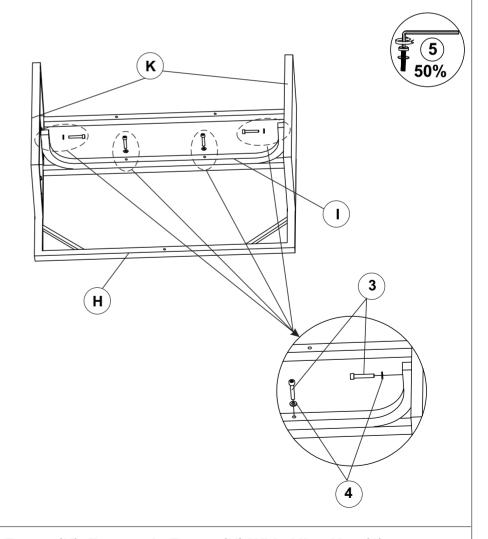

Connect U-Shape Frame (I) & Side Frame (K), Rectangle Frame (H) With Allen Key (5).

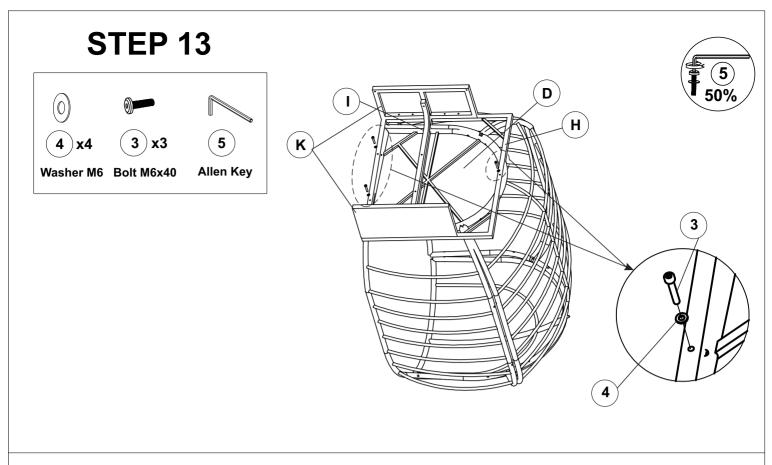



Connect Frame Of Step 12 & Frame Of Step 6 With Allen Key (5).

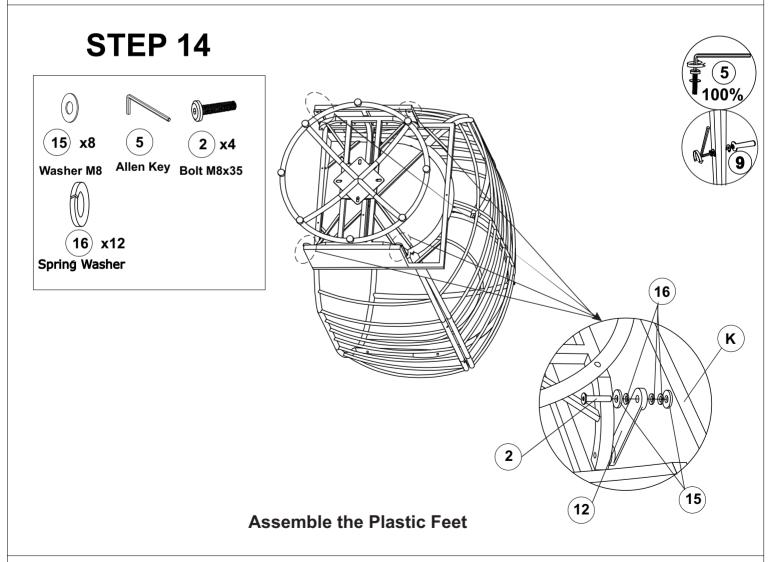


Connect Frame Of Step 13 & Frame Of Step 9 With Allen Key (5)

STEP 15

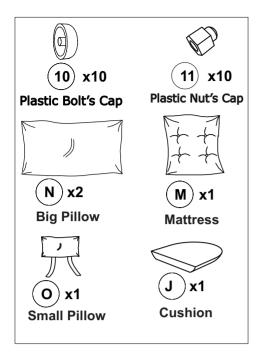

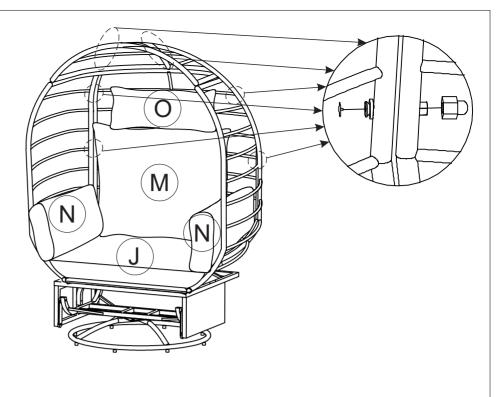

Attach the bolt cover with Plastic Nuts(11) & Plastic Bolt's Cap (10) Put Big Pillow (N), Mattress (M), Small Pillow (O), Cushion (J) on Chair

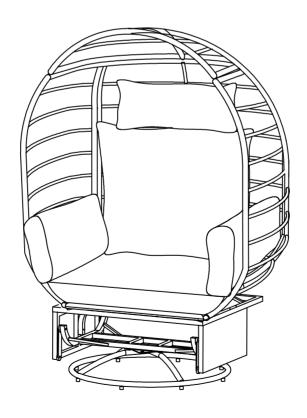

FINISH