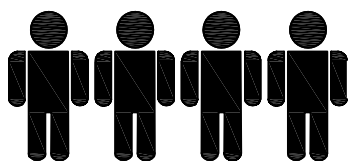
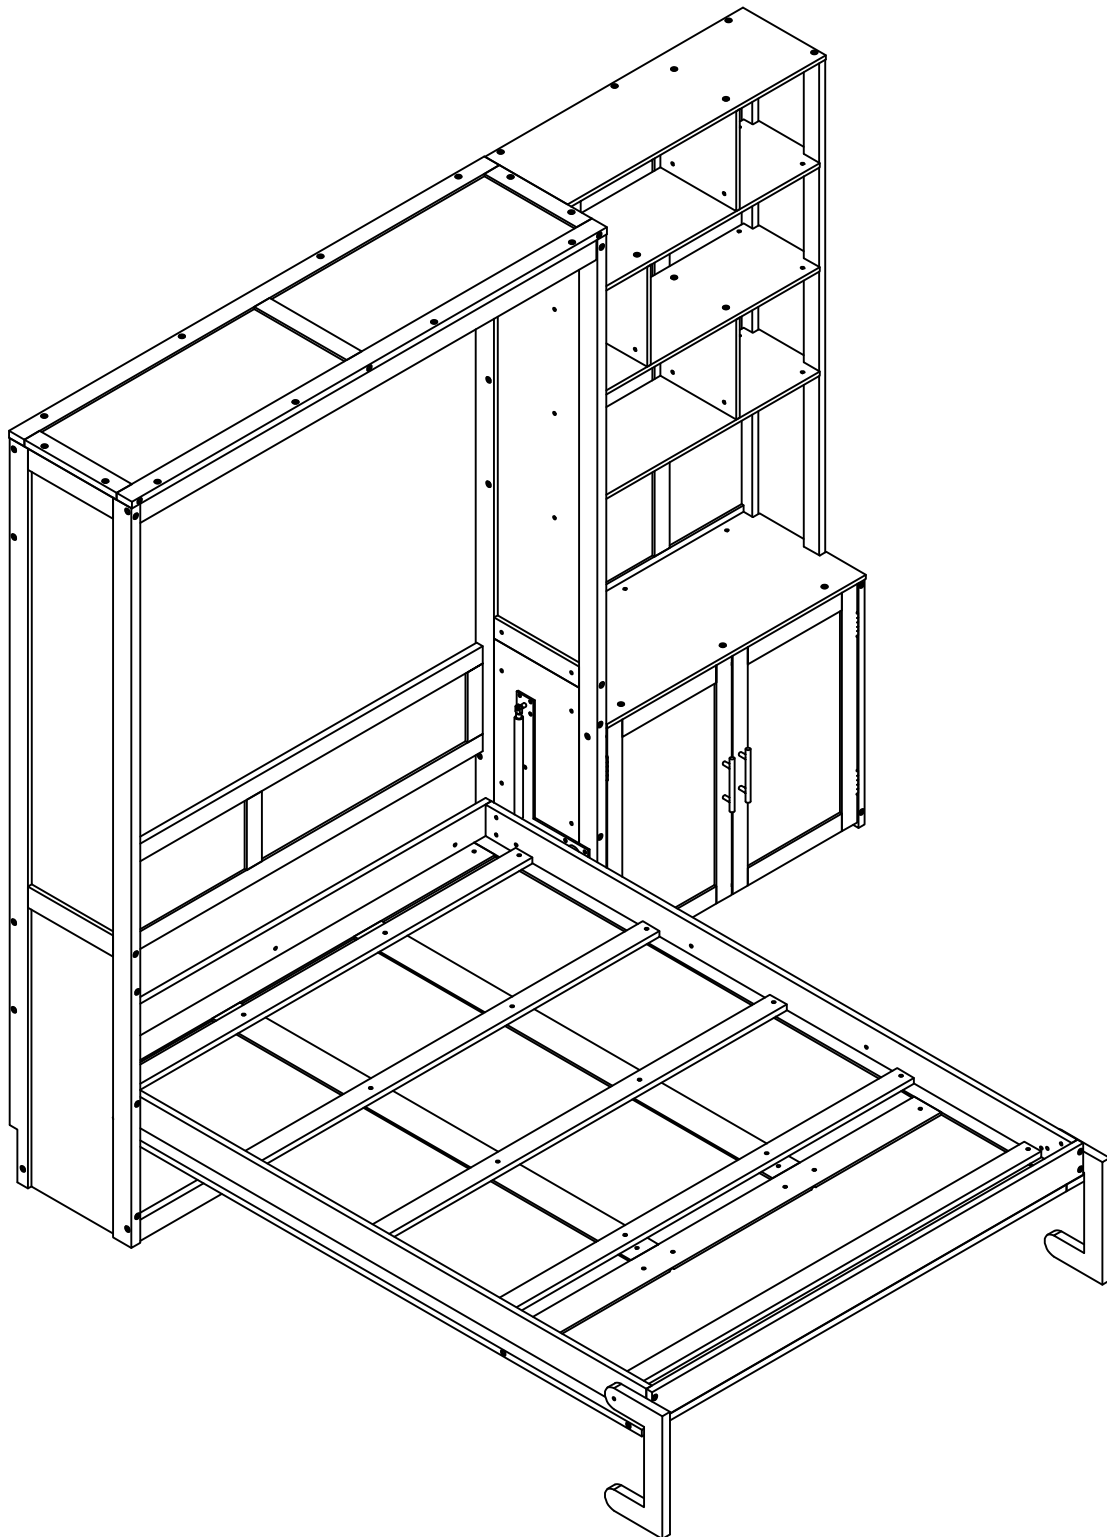


ASSEMBLY INSTRUCTION


SKU CODE: WF324470-WF324471-WF324472




Four people are required to
assemble and move this model.

Note: This bed must be equipped with
a mattress equivalent to 39 lb

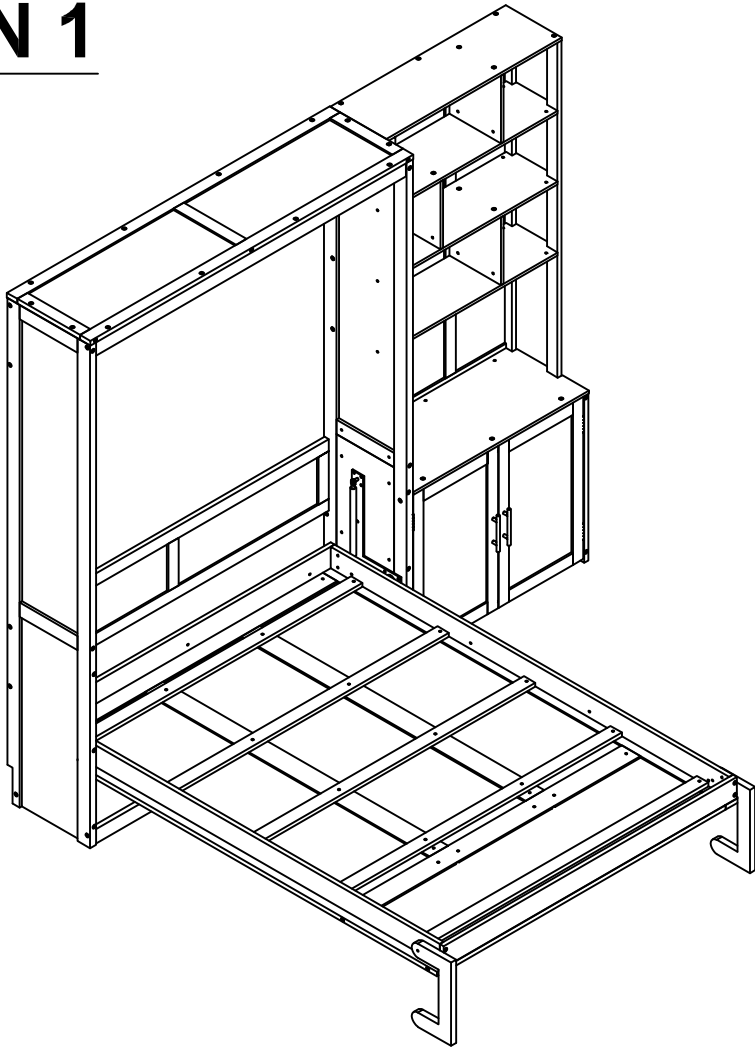
OPTION 1




OPTION 2

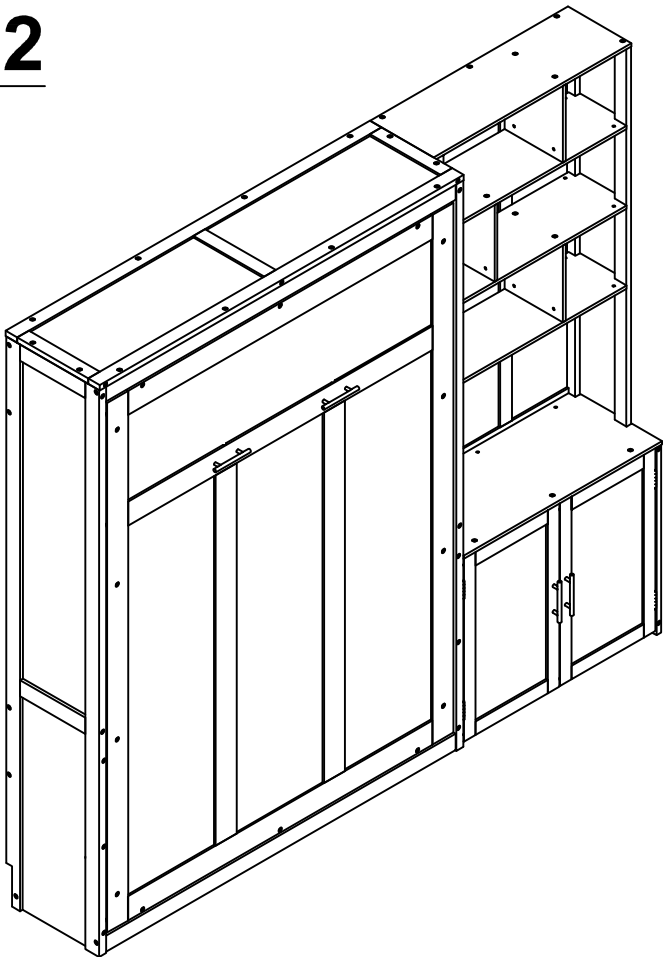






















ASSEMBLY INSTRUCTION

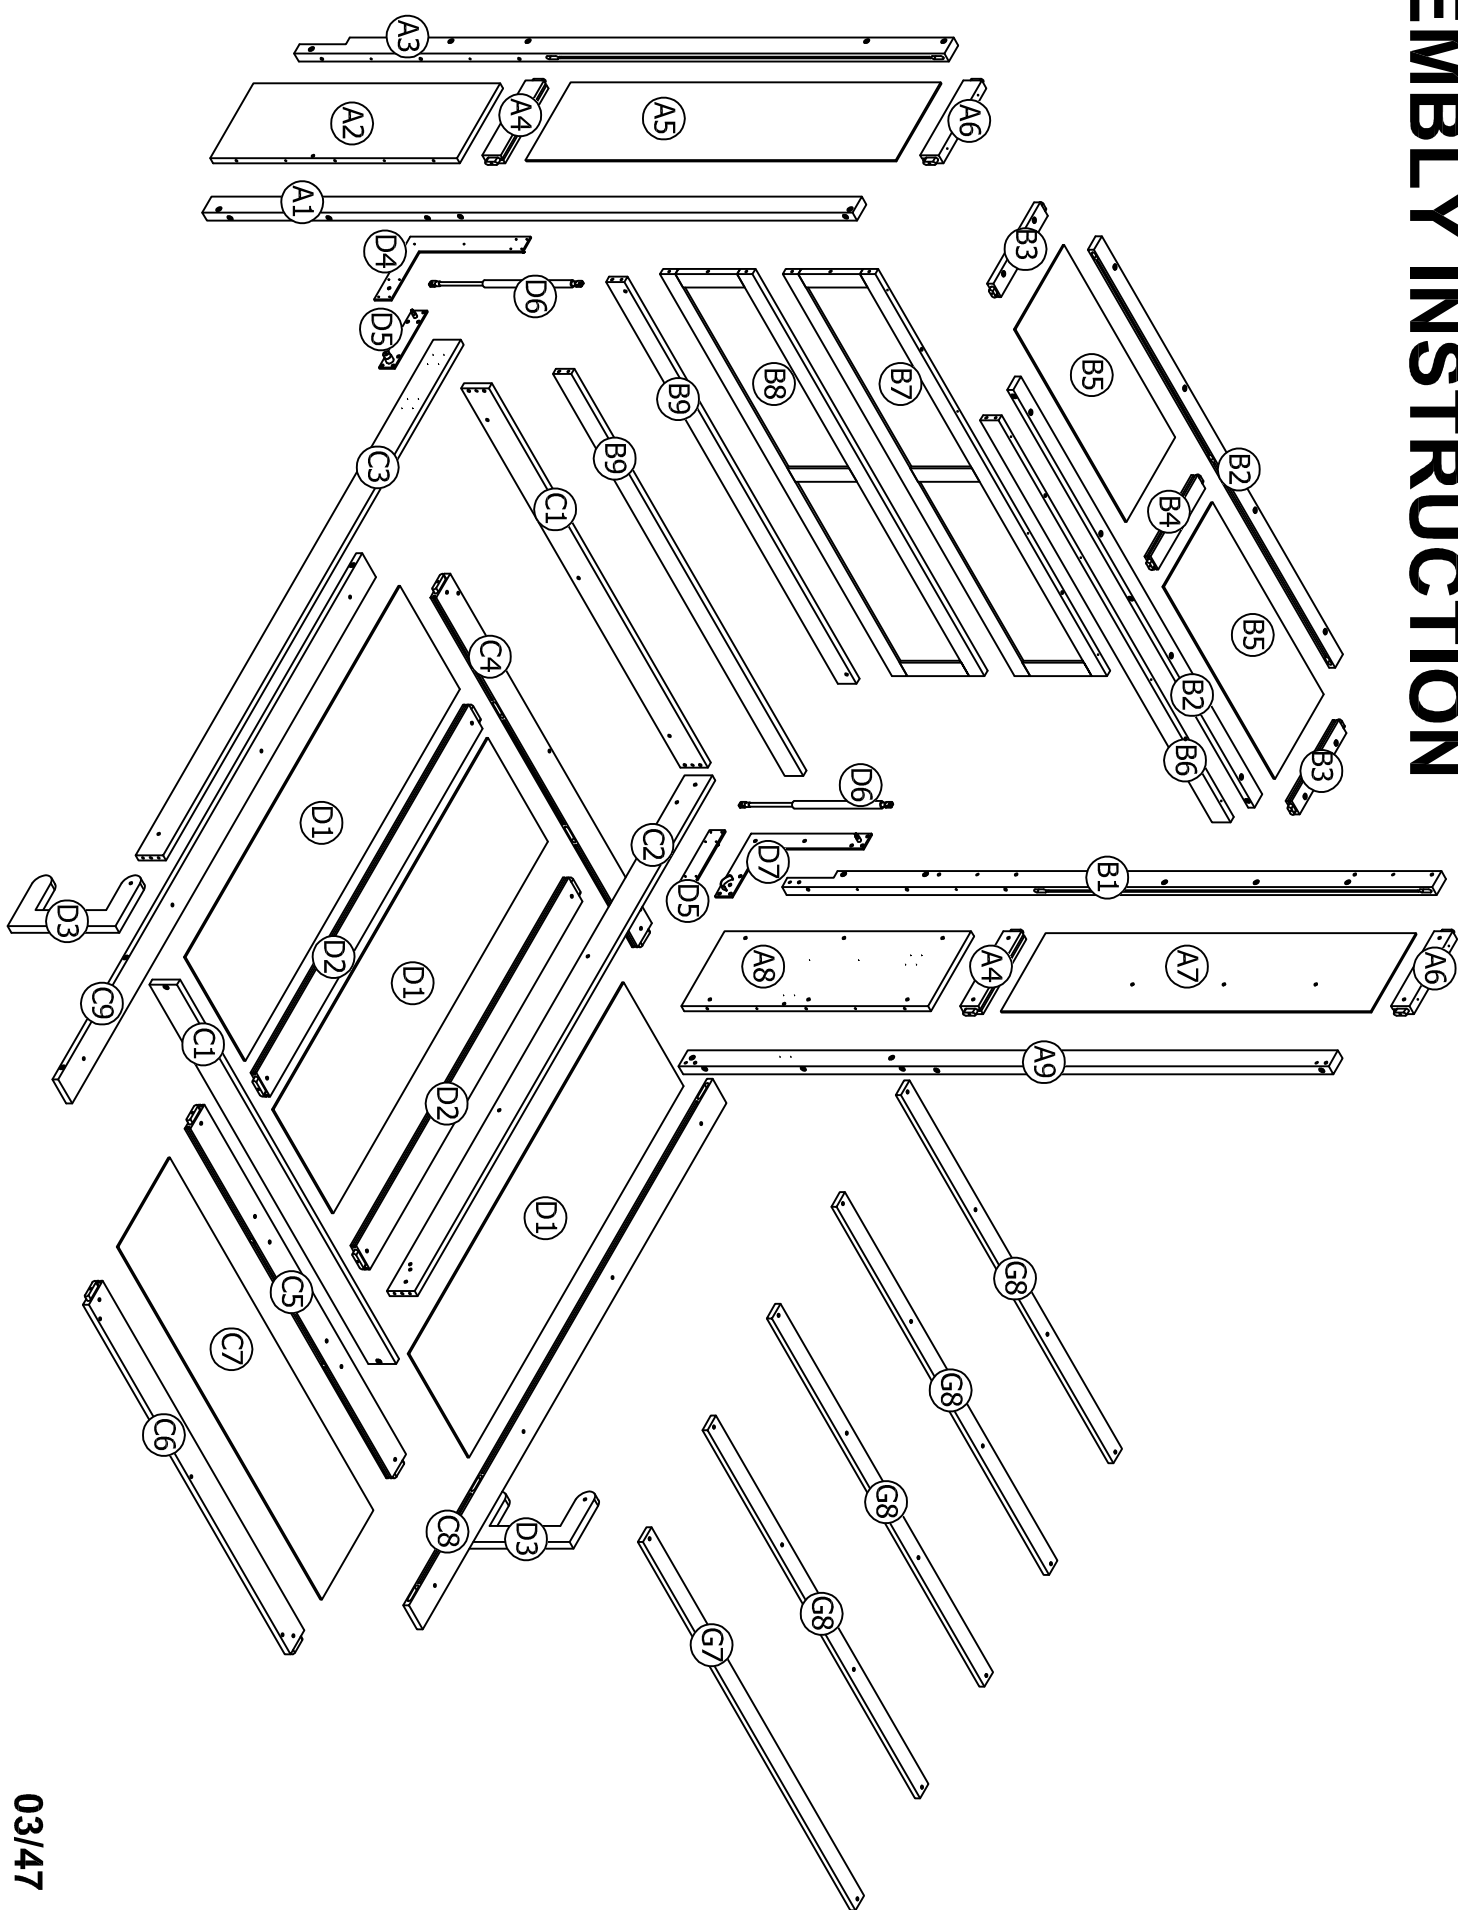










ASSEMBLY INSTRUCTION

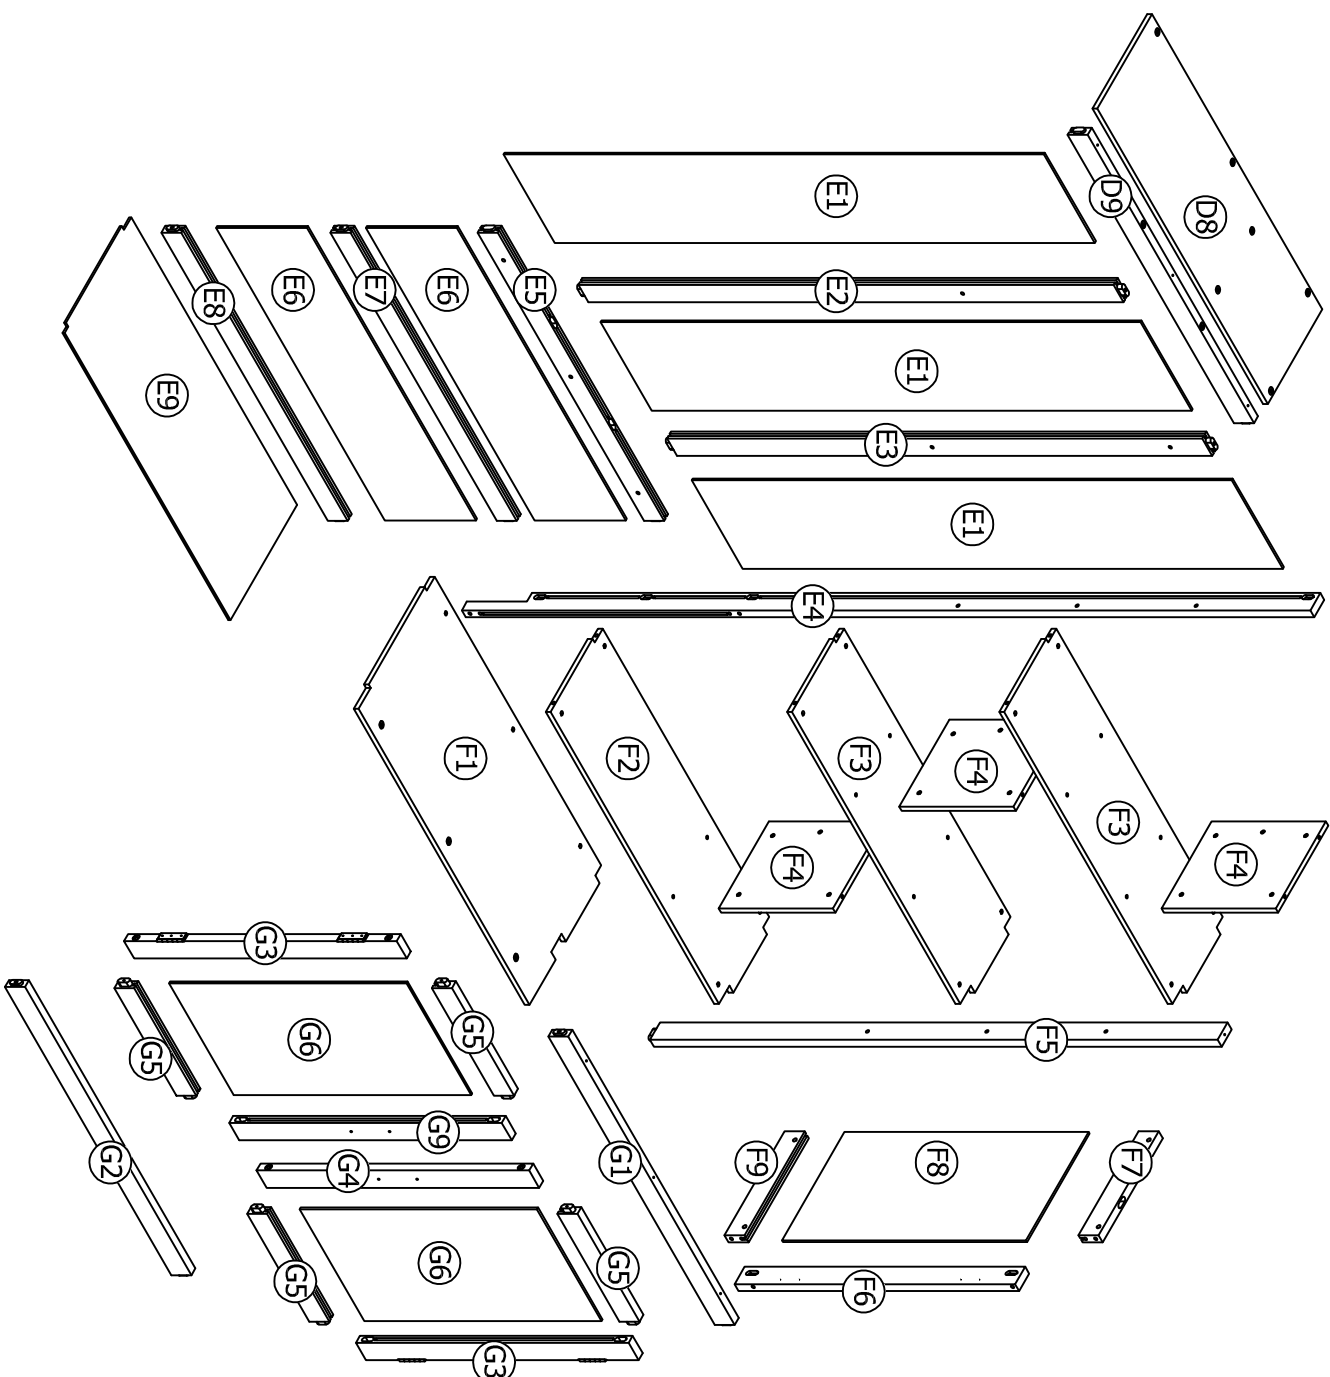

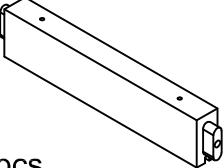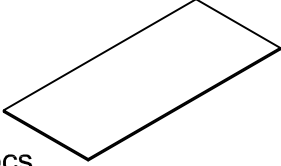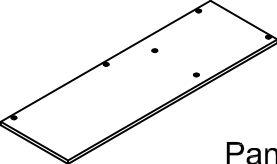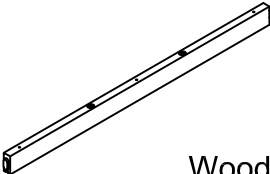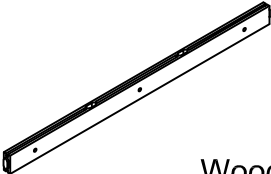
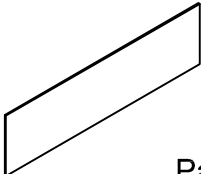
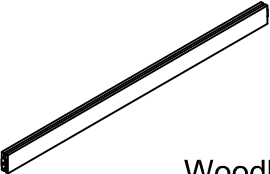
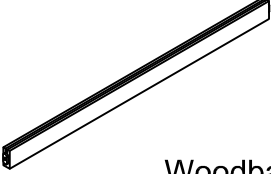
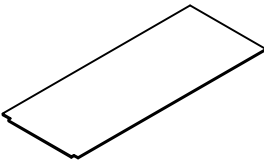
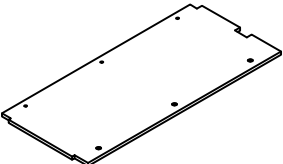
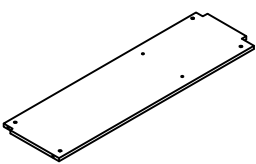
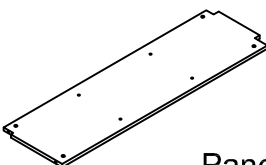



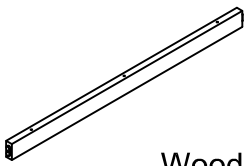
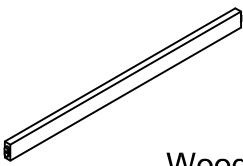
Part List & Hardware List (Box 1- WF324470)

A2  Panel-1pc	A4  Woodbar-2pcs	A6  Woodbar-2pcs
A8  Panel-1pc	B5  Panel-2pcs	D3  Woodbar-2pcs
D4  Metal corner link-1pc	D5  Metal corner link-2pcs	D7  Metal corner link-1pc
D8  Panel-1pc	D9  Woodbar-1pc	E5  Woodbar-1pc
E6  Panel-2pcs	E7  Woodbar-1pc	E8  Woodbar-1pc
E9  Panel-1pc	F1  Panel-1pc	F2  Panel-1pc
F3  Panel-2pcs	F4  Panel-3pcs	
F6  Woodbar-1pc	F8  Panel-1pc	G6  Panel-2pcs
G1  Woodbar-1pc	G2  Woodbar-1pc	









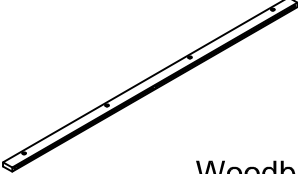
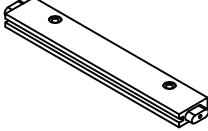
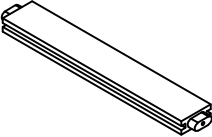
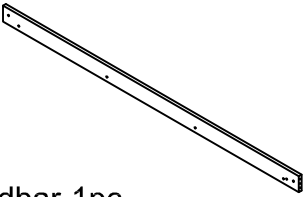
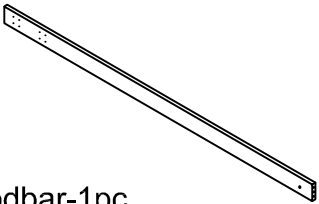
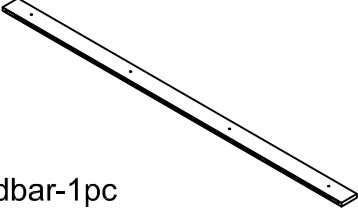
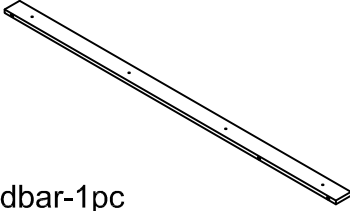
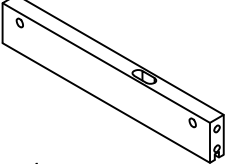
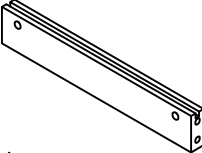
Part List (Box 2- WF324471)

A1  Woodbar-1pc	A3  Woodbar-1pc	A9  Woodbar-1pc
B1  Woodbar-1pc	B2  Woodbar-2pcs	B3  Woodbar-2pcs
B4  Woodbar-1pc	C2  Woodbar-1pc	C3  Woodbar-1pc
C8  Woodbar-1pc	C9  Woodbar-1pc	E4  Woodbar-1pc
F7  Woodbar-1pc	F9  Woodbar-1pc	G3  Woodbar-2pcs
G4  Woodbar-1pc	G5  Woodbar-4pcs	G9  Woodbar-1pc

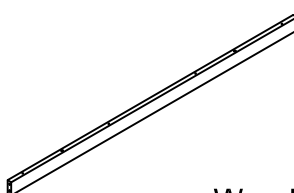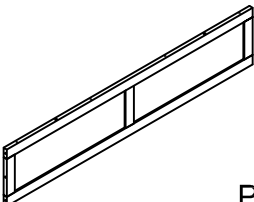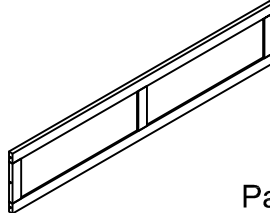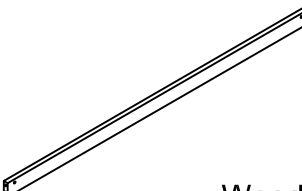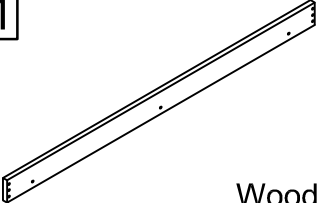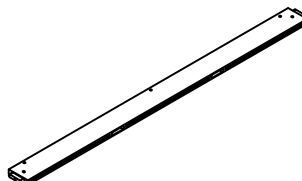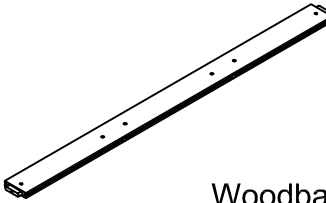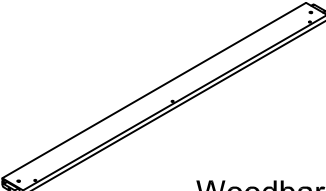
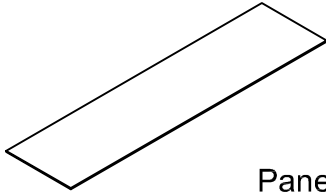
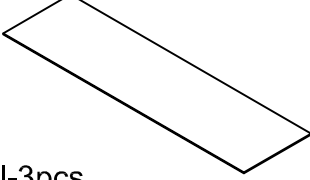
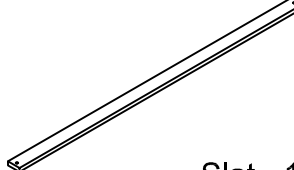
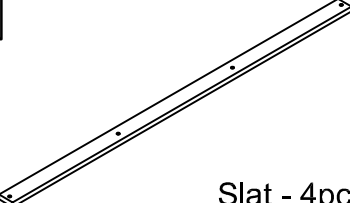
Part List (Box 3- WF324472)


A5  Panel-1pc	A7  Panel-1pc	B6  Woodbar-1pc
B7  Panel-1pc	B8  Panel-1pc	B9  Woodbar-2pcs
C1  Woodbar-2pcs	C4  Woodbar-1pc	C5  Woodbar-1pc
C6  Woodbar-1pc	C7  Panel-1pc	D1  Panel-3pcs
D2  Woodbar-2pcs	D6 800N  Piston Steam-2pcs	E1  Panel-3pcs
E2  Woodbar-1pc	E3  Woodbar-1pc	G7  Slat - 1pc
G8  Slat - 4pcs	F5  Woodbar-1pc	

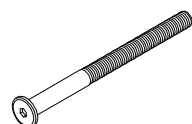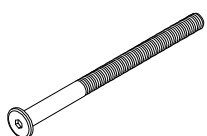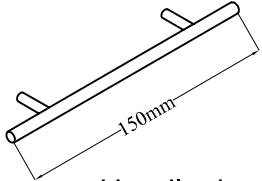Hardware List (Box 1- WF324470)

1	 Ø1/4" x 40 mm Hex-Head bolts 2pcs	2	 Ø1/4" x 50 mm Hex-Head bolts 15pcs	3	 Ø1/4" x 60 mm Hex-Head bolts 36pcs
4	 Ø1/4" x 70 mm Hex-Head bolts 10pcs	5	 Ø1/4" x 80 mm Hex-Head bolts 18pcs	6	 Ø1/4" x 100 mm Hex-Head bolts 21pcs
7	 Ø1/4" x 120 mm Hex-Head bolts 10pcs	8	 L-Bracket 1.2*12*25mm 3pcs	9	 Ø8 x 30 mm Wood dowel 34pcs
10	 Handle 4pcs	11	 M4 x 25mm Wood Screws 8pcs	12	 Allen Key 2pcs
13	 Screws 1/4" x30mm 7pcs	14	 Screws 1/4" x60 15pcs	15	 Screws 1/4" x40 12pcs
16	 M4 x 15 mm Wood Screws 12pcs	17	 M3.5 x 12 mm Wood Screws 2pcs	18	 M3 x 15 mm Wood Screws 16pcs
19	 M4 x 20mm Wood Screws 36pcs	20	 Ø1/4" x 13 mm Horizontal-Hole bolts 110pcs	21	 Angle Metal 4pcs

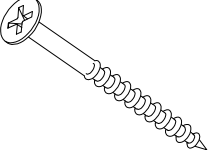Hardware List (Box 1- WF324470)

22	 Bearings 2pcs	23	 Ø20 / Ø6 x 2mm Washer 2pcs	24	 Nut 4pcs
25	 Ø1/3" x 40 mm Hex-Head bolts 2pcs	26	 Ø1/4" x 15mm Hex-Head bolts 2pcs	27	 Magnet Door Catcher 2pcs
28	 M8 x 80mm Plug 4pcs	29	 M5 x 75mm Wood Screws 4pcs	30	 M4 x 30mm Wood Screws 18pcs




Assembly Tools Required (Not Included)

STEP1: Following below illustration.



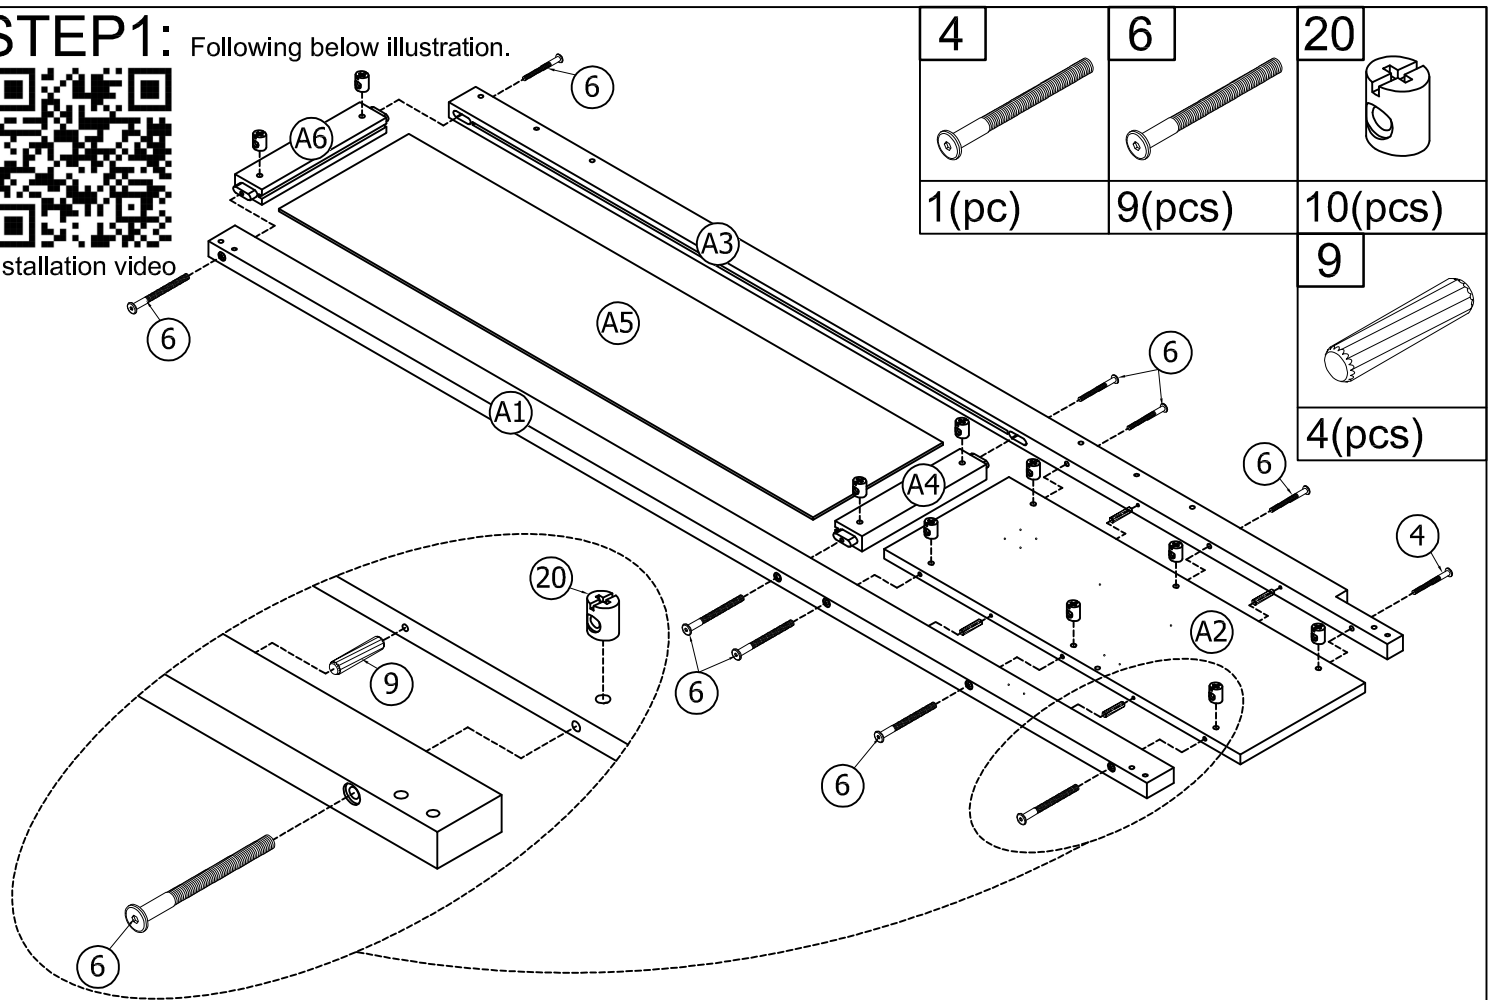
Installation video



STEP2: Following below illustration.



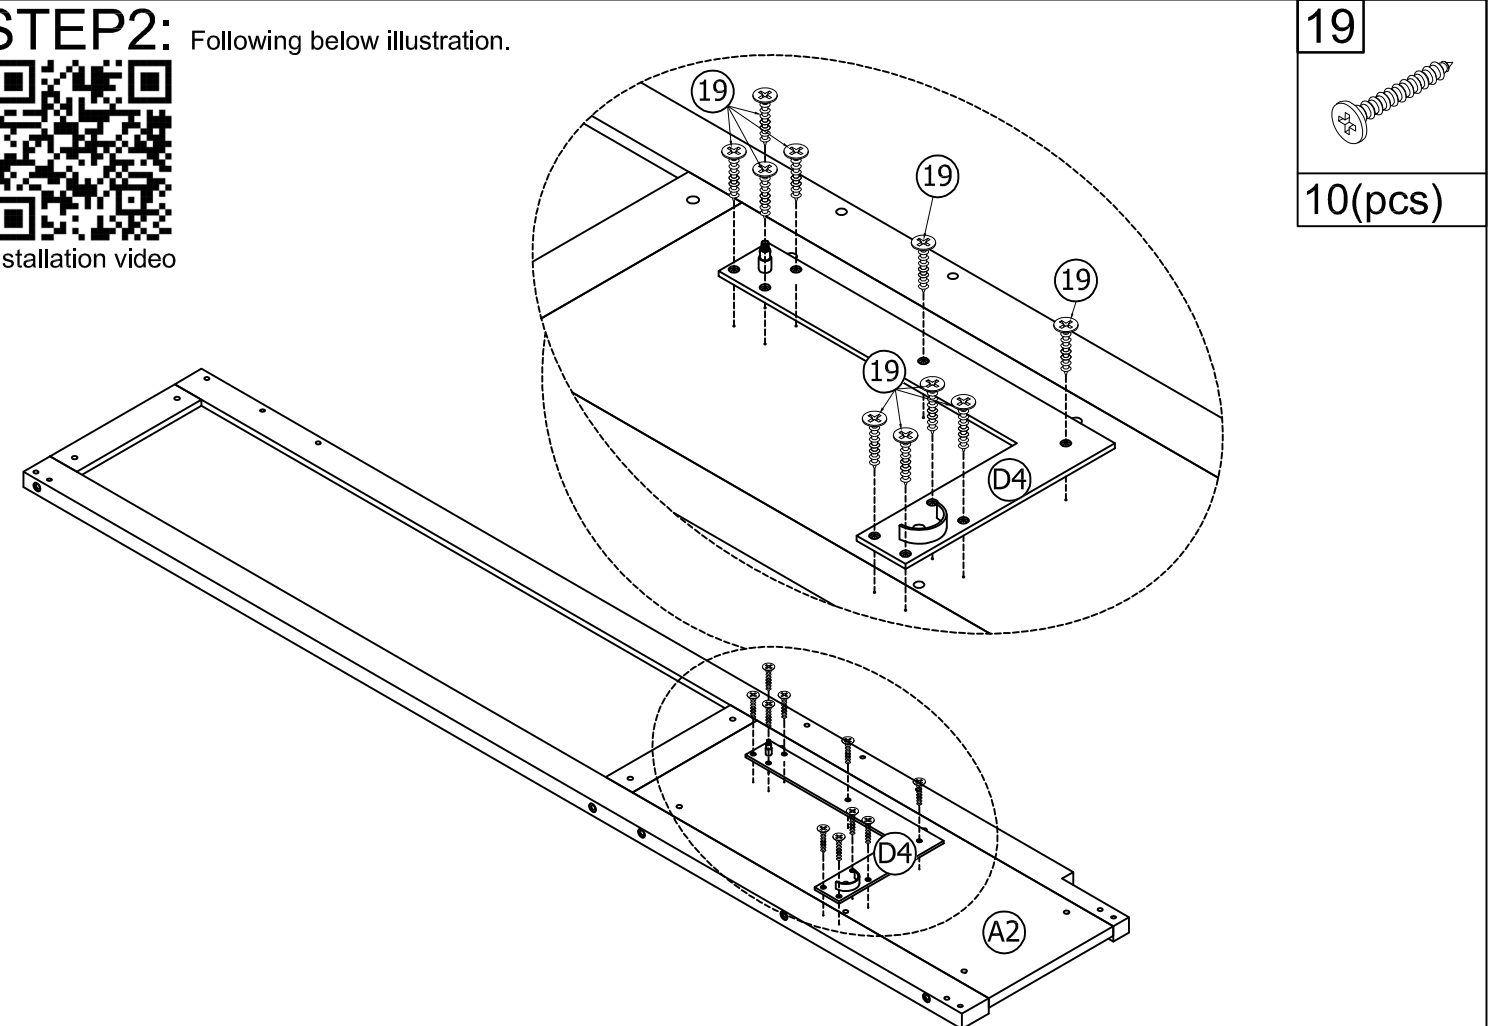
Installation video






STEP3: Following below illustration.



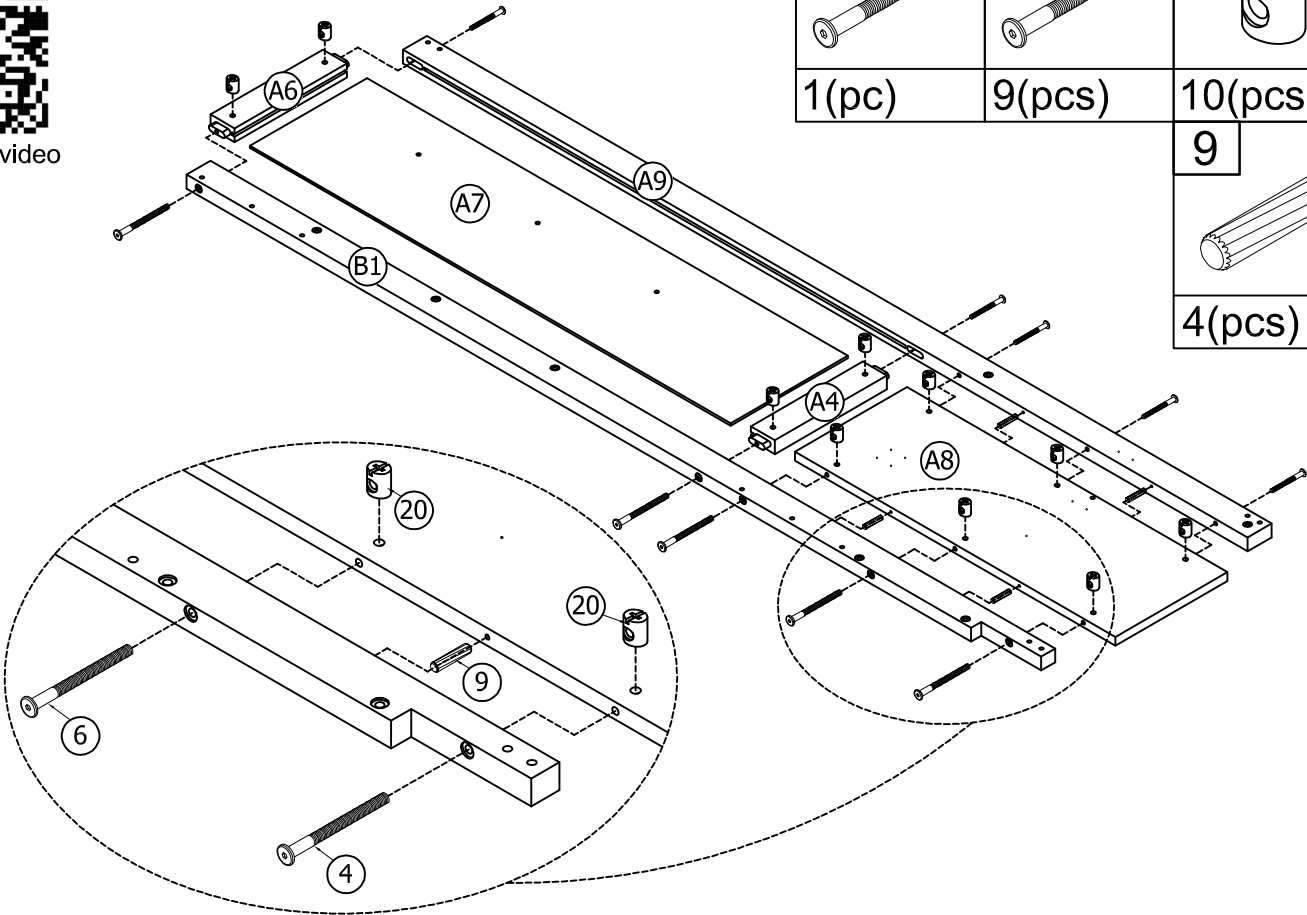Installation video





4	6	20
		
1(pc)	9(pcs)	10(pcs)
		9
		
		4(pcs)

STEP4: Following below illustration.



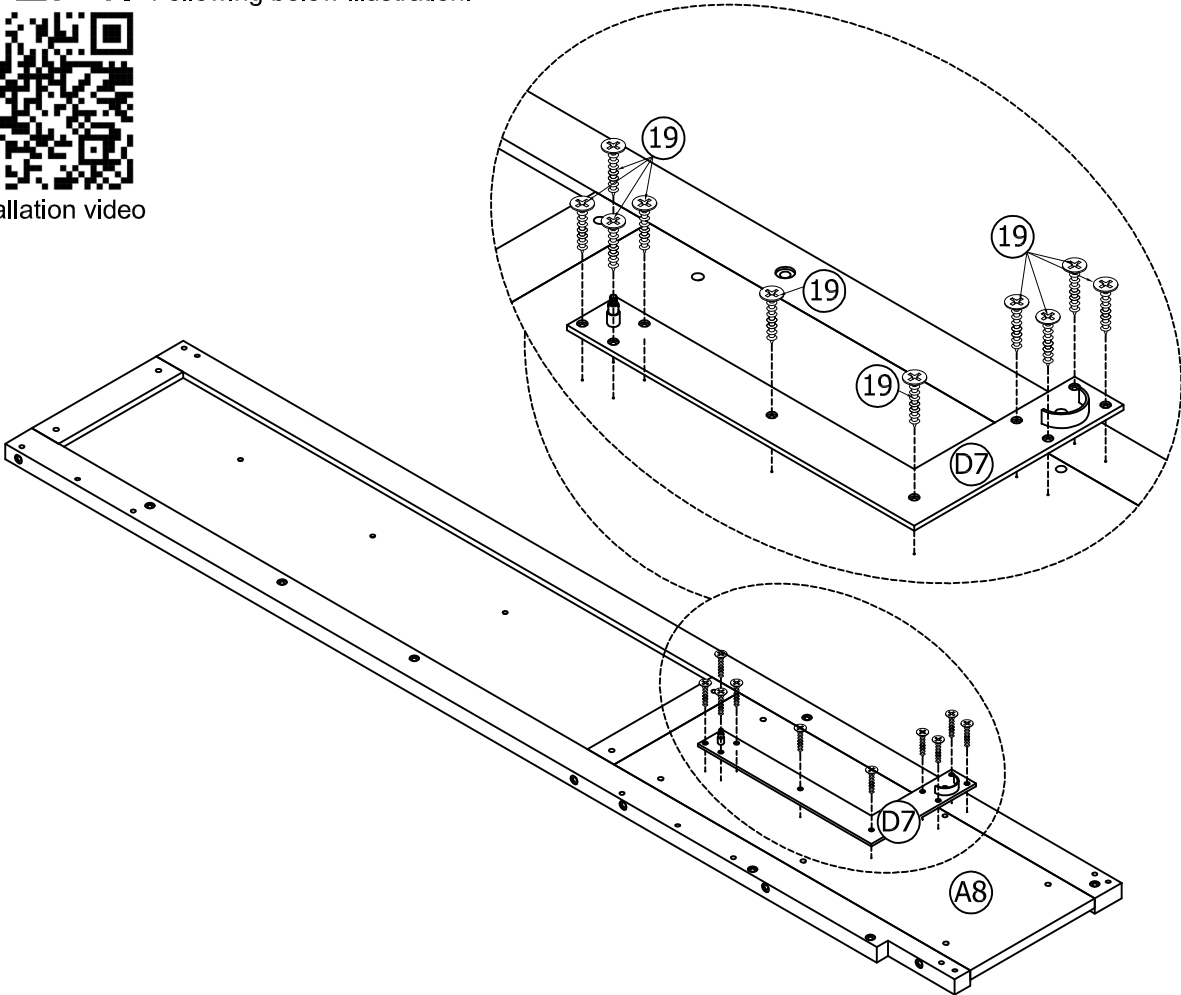Installation video






19

10(pcs)

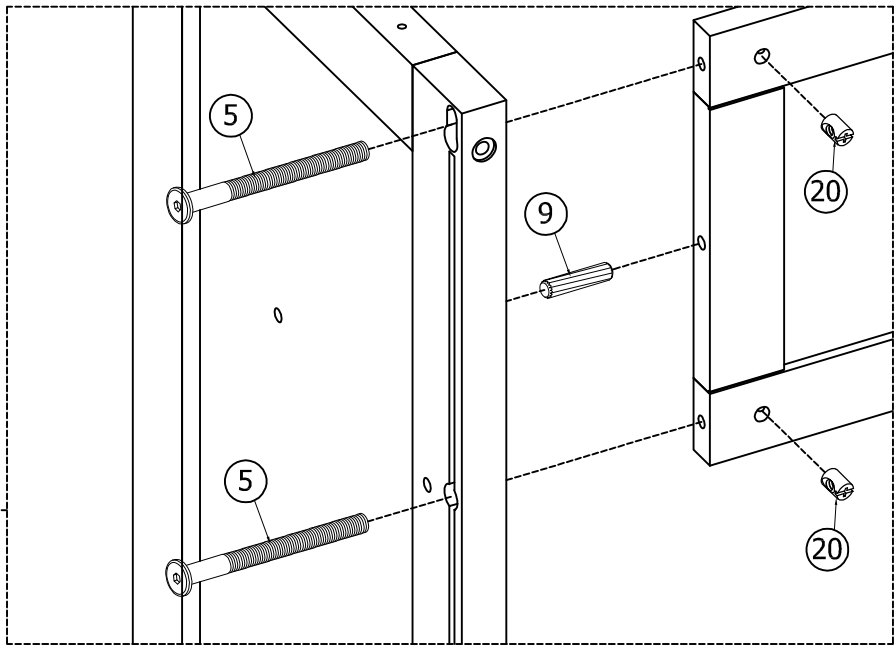
STEP5: Following below illustration.



Installation video




5	20
	
14(pcs)	14(pcs)
	9
	
	10(pcs)

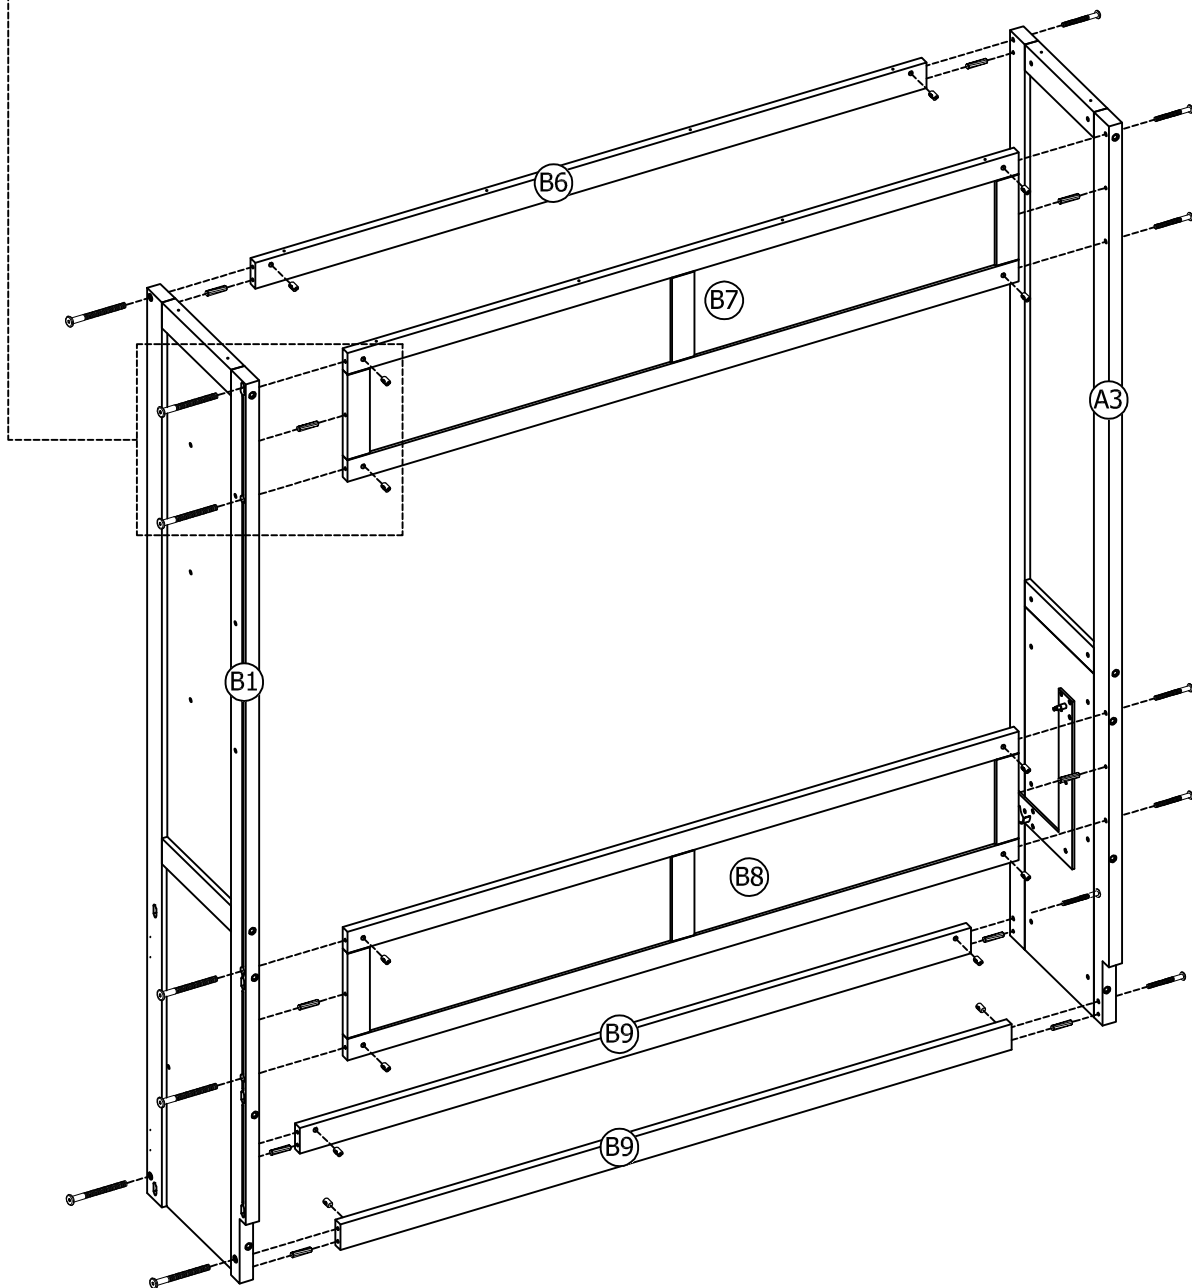


STEP6: Following below illustration.



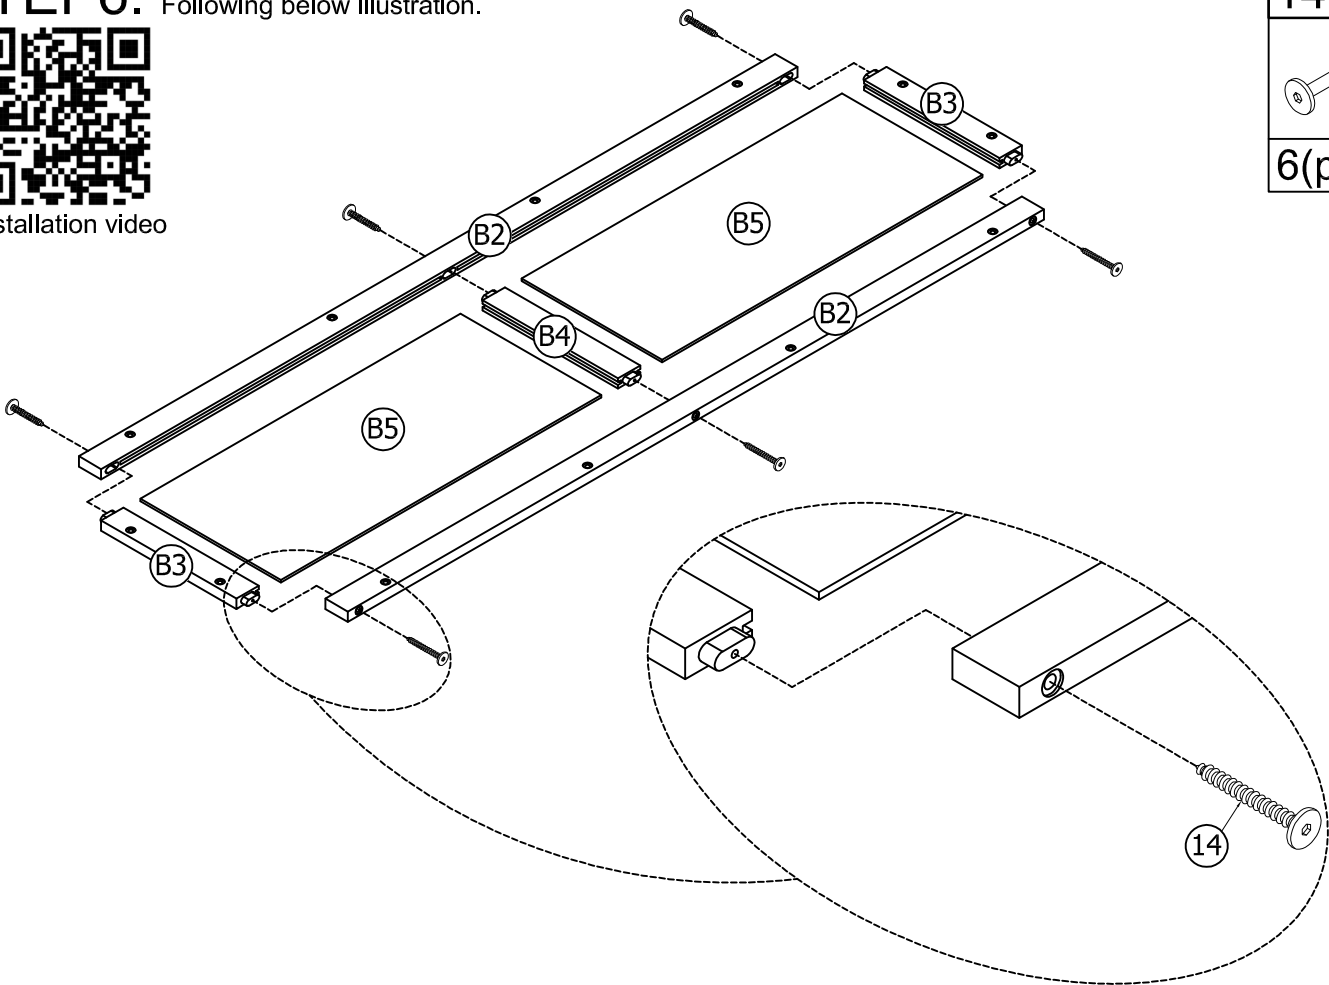Installation video



14




6(pcs)


STEP7: Following below illustration.



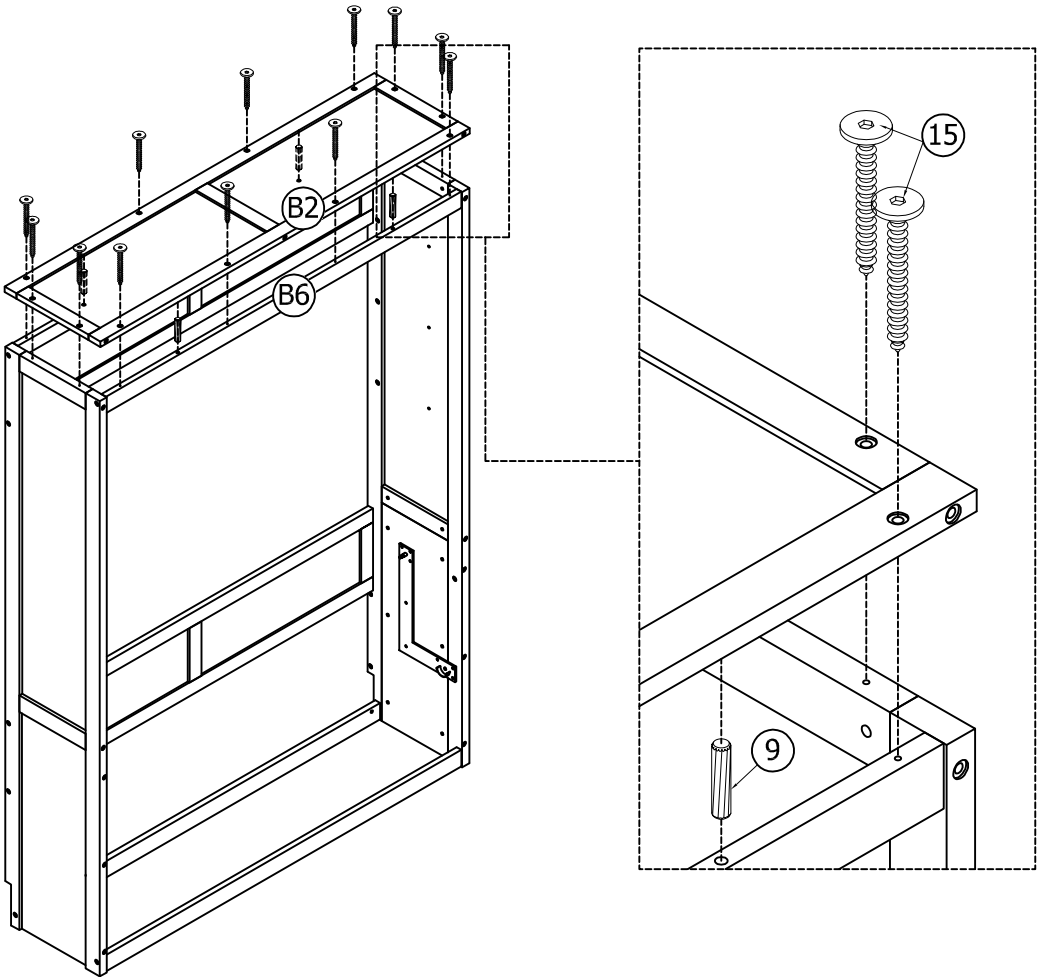Installation video




15



12(pcs)

9





4(pcs)

STEP8: Following below illustration.



Installation video




14

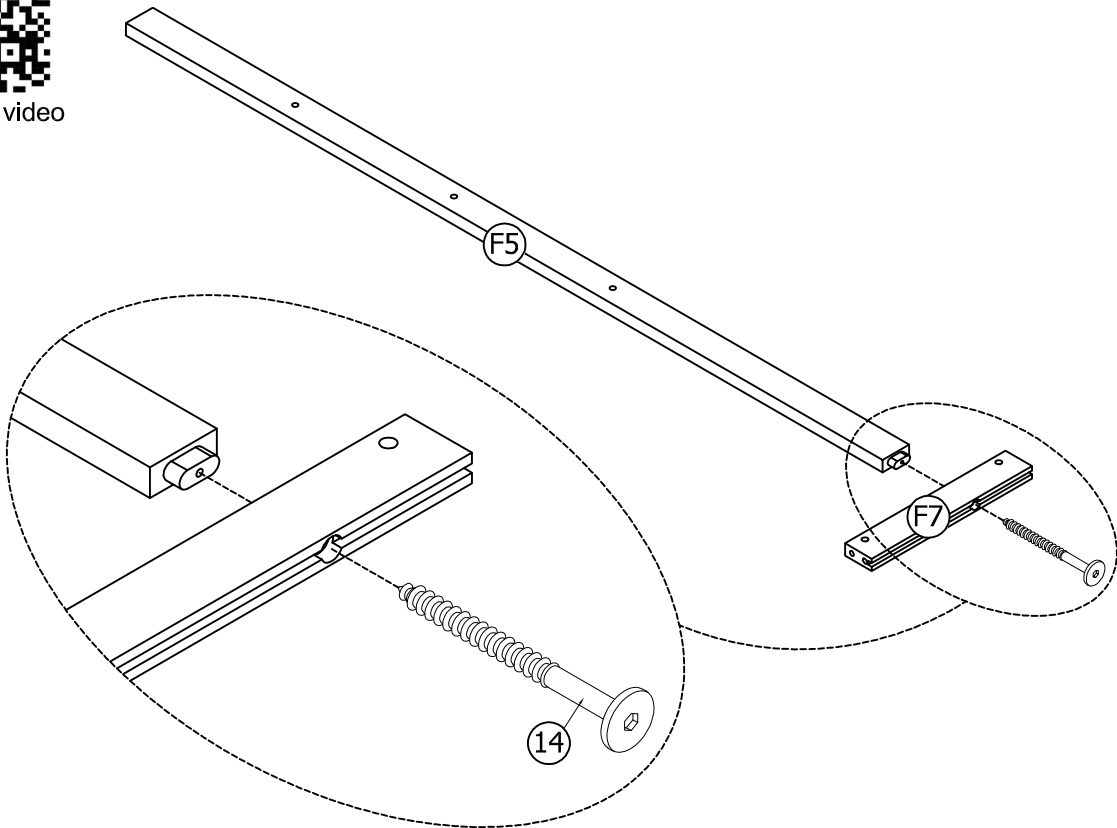1(pc)




STEP9: Following below illustration.



Installation video


4	6	20
		
1(pc)	3(pcs)	4(pcs)
		9
		
		4(pcs)

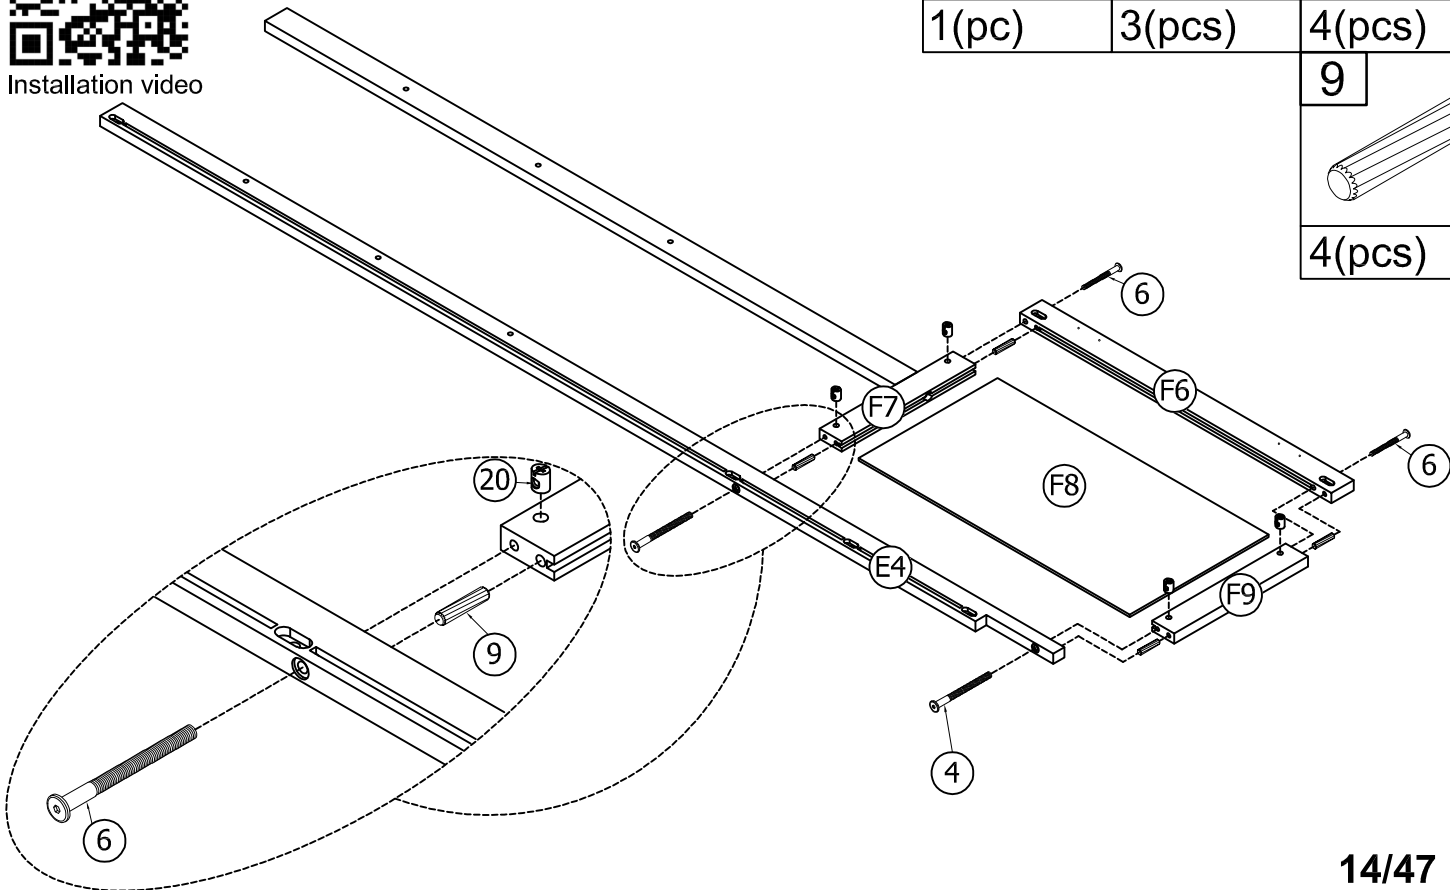


STEP10: Following below illustration.



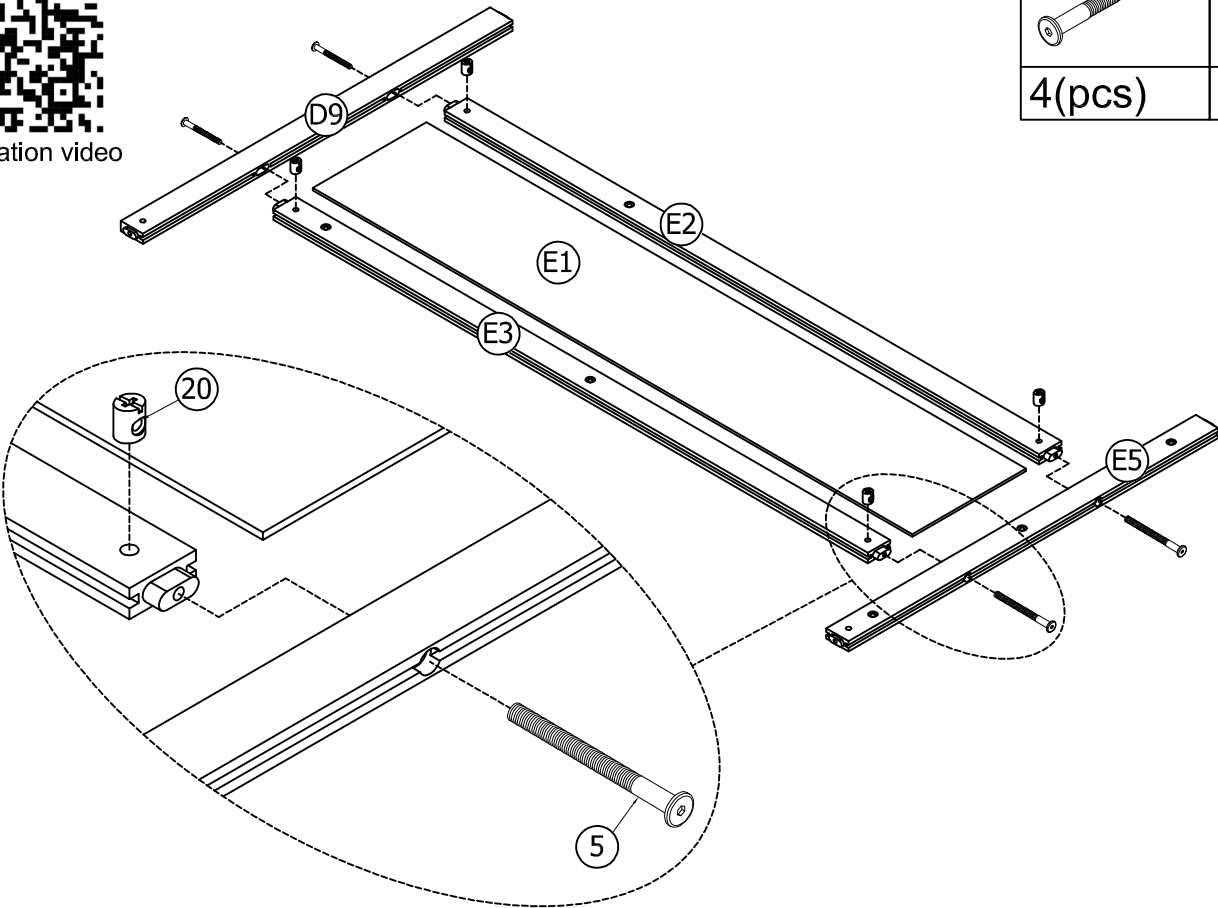Installation video





5	20
	
4(pcs)	4(pcs)

STEP11: Following below illustration.



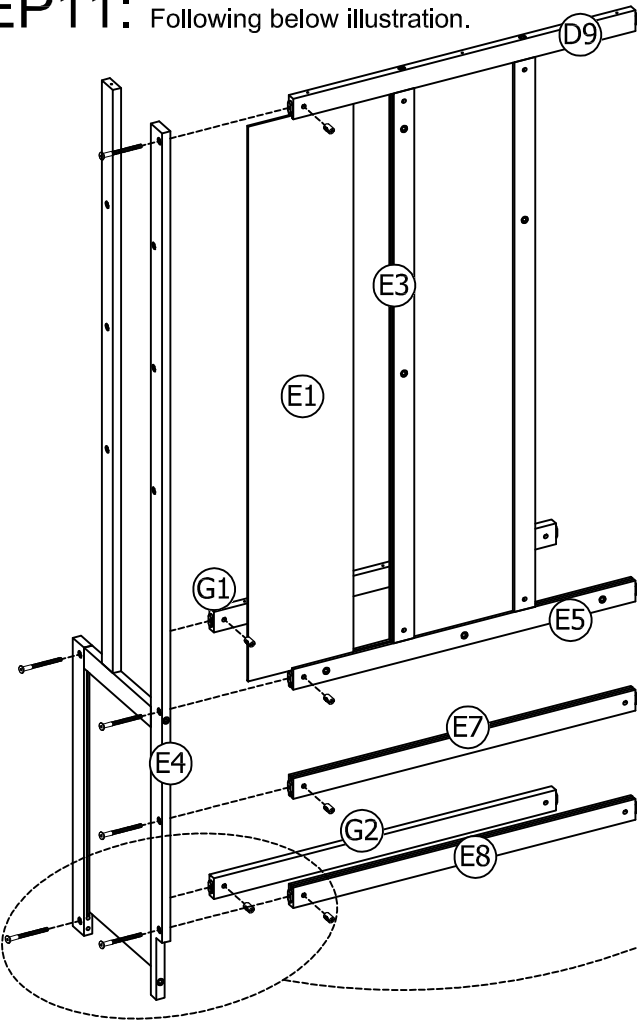Installation video





3	20
	
6(pcs)	6(pcs)

STEP12: Following below illustration.



Installation video


4	20
	
4(pcs)	4(pcs)


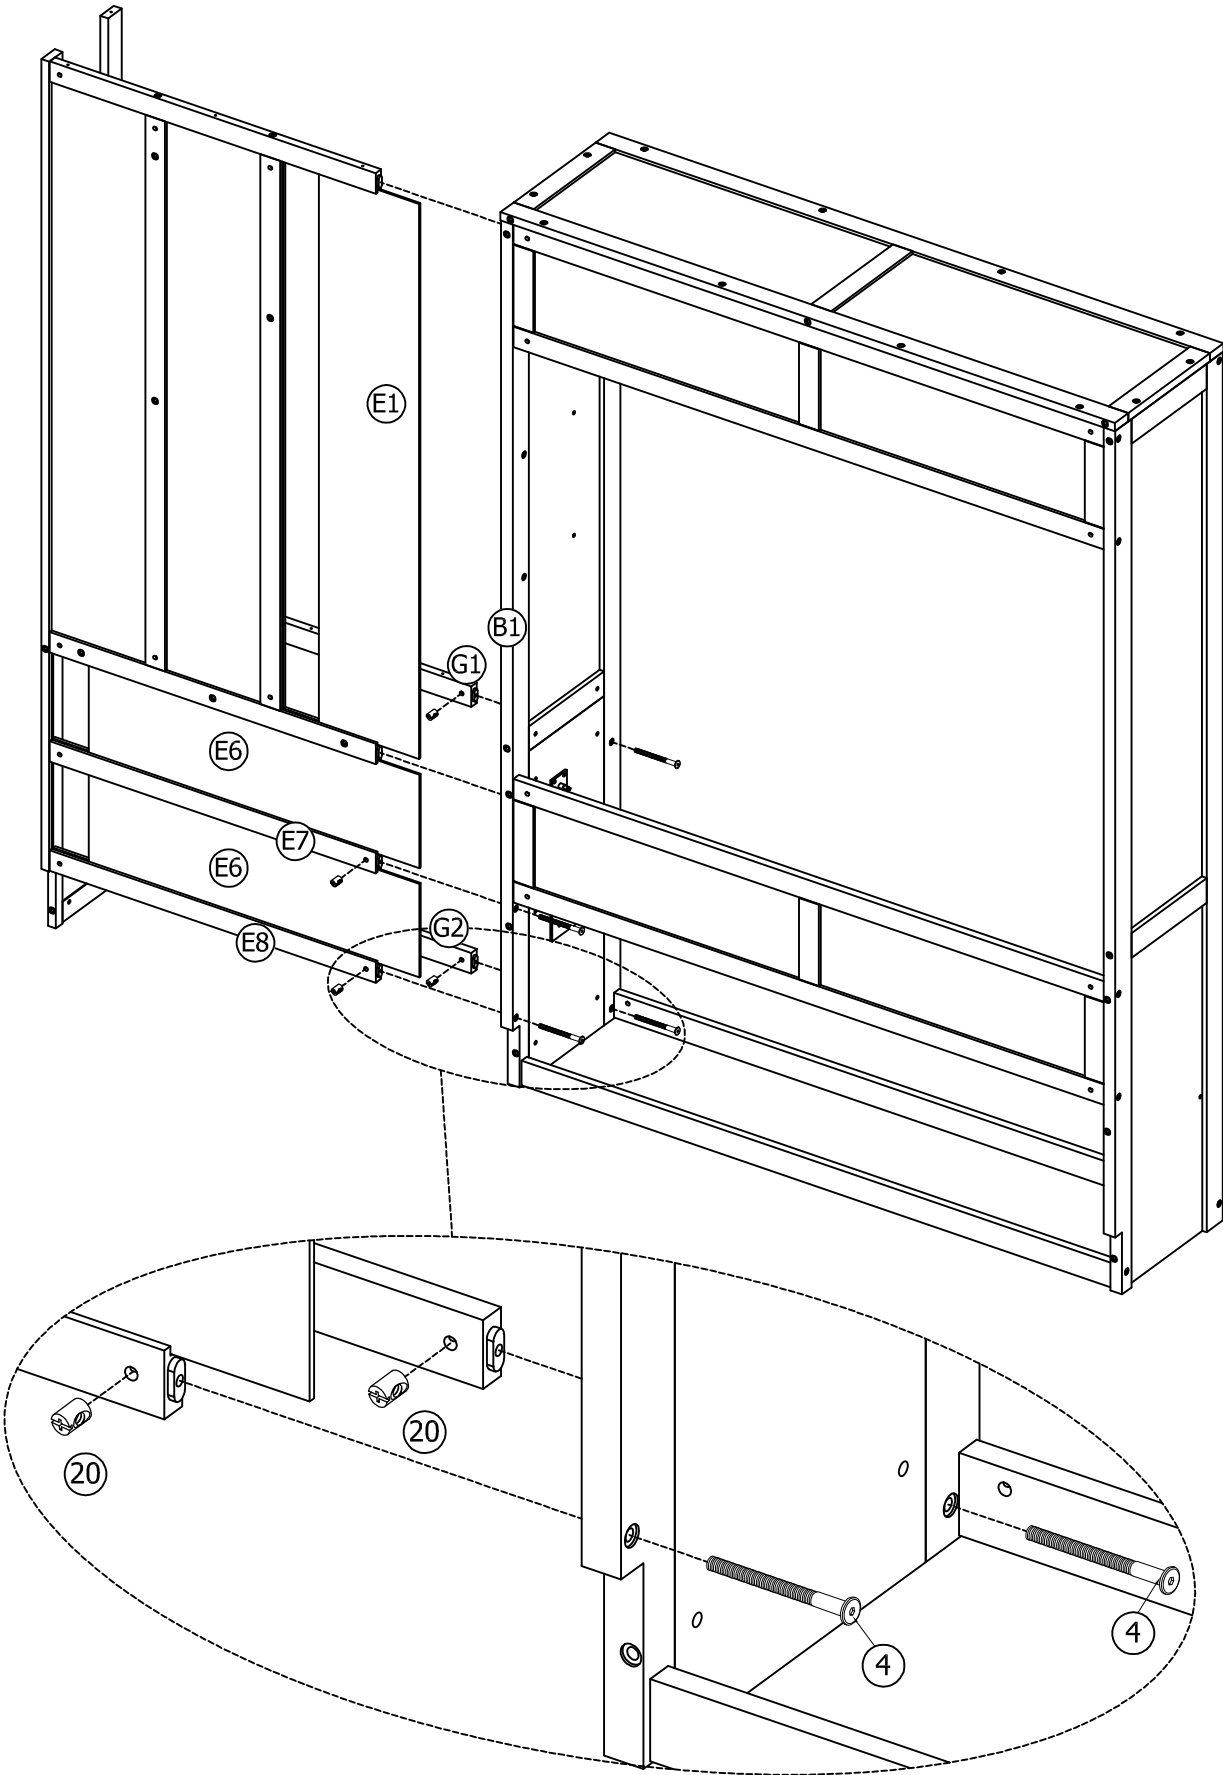


STEP13: Following below illustration.



Installation video



18	8
	
4(pcs)	2(pcs)

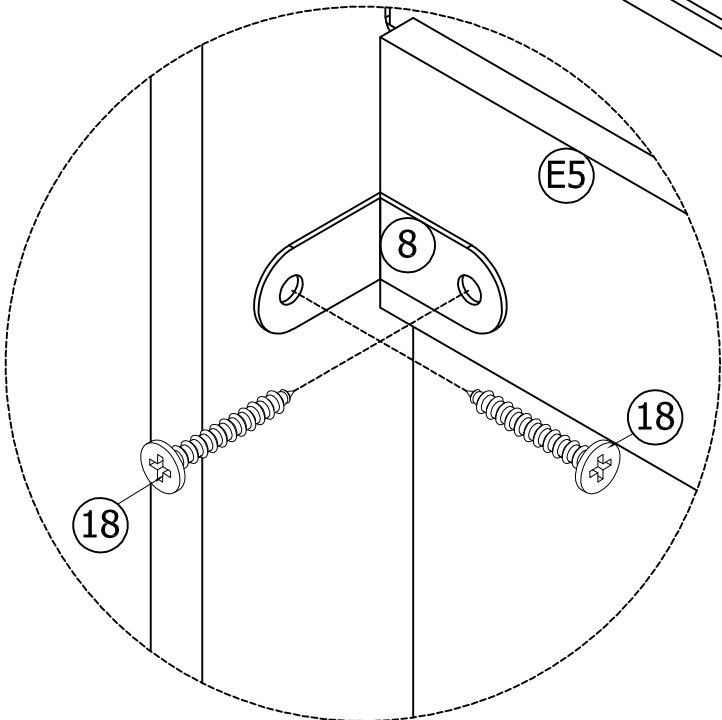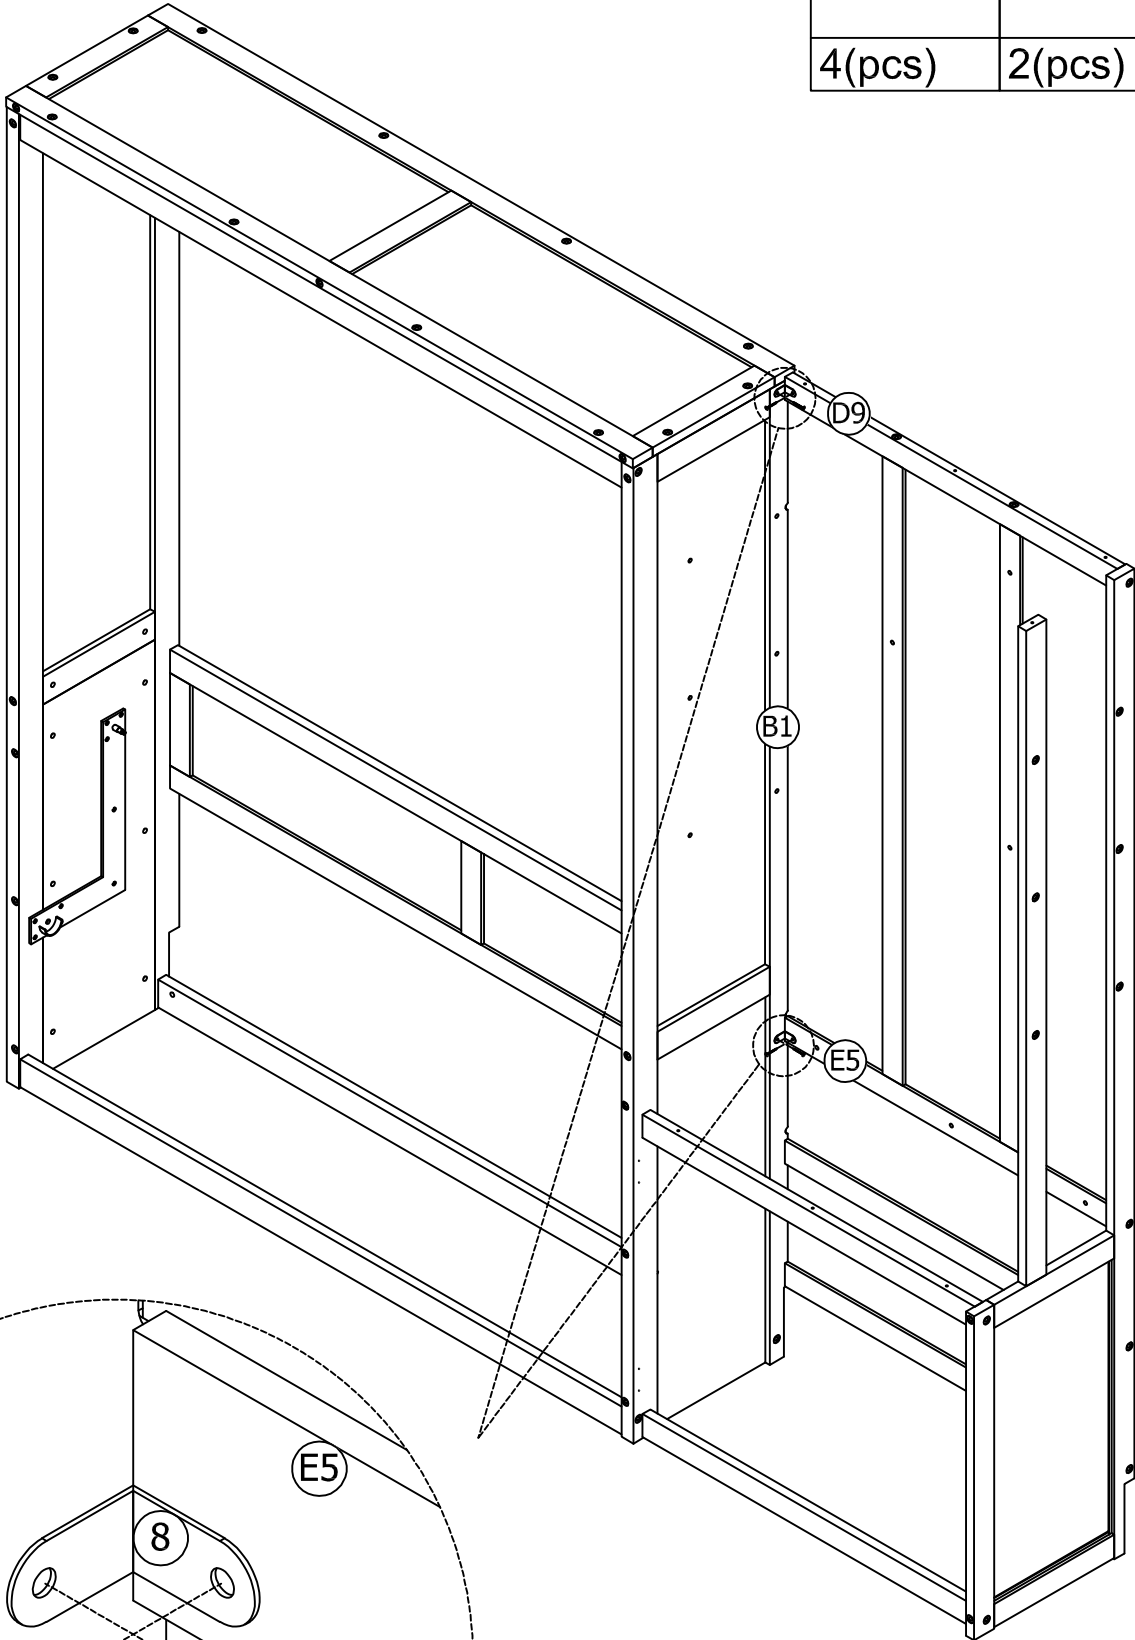


STEP14: Following below illustration.



Installation video


13	3	20
		
3(pcs)	3(pcs)	3(pcs)



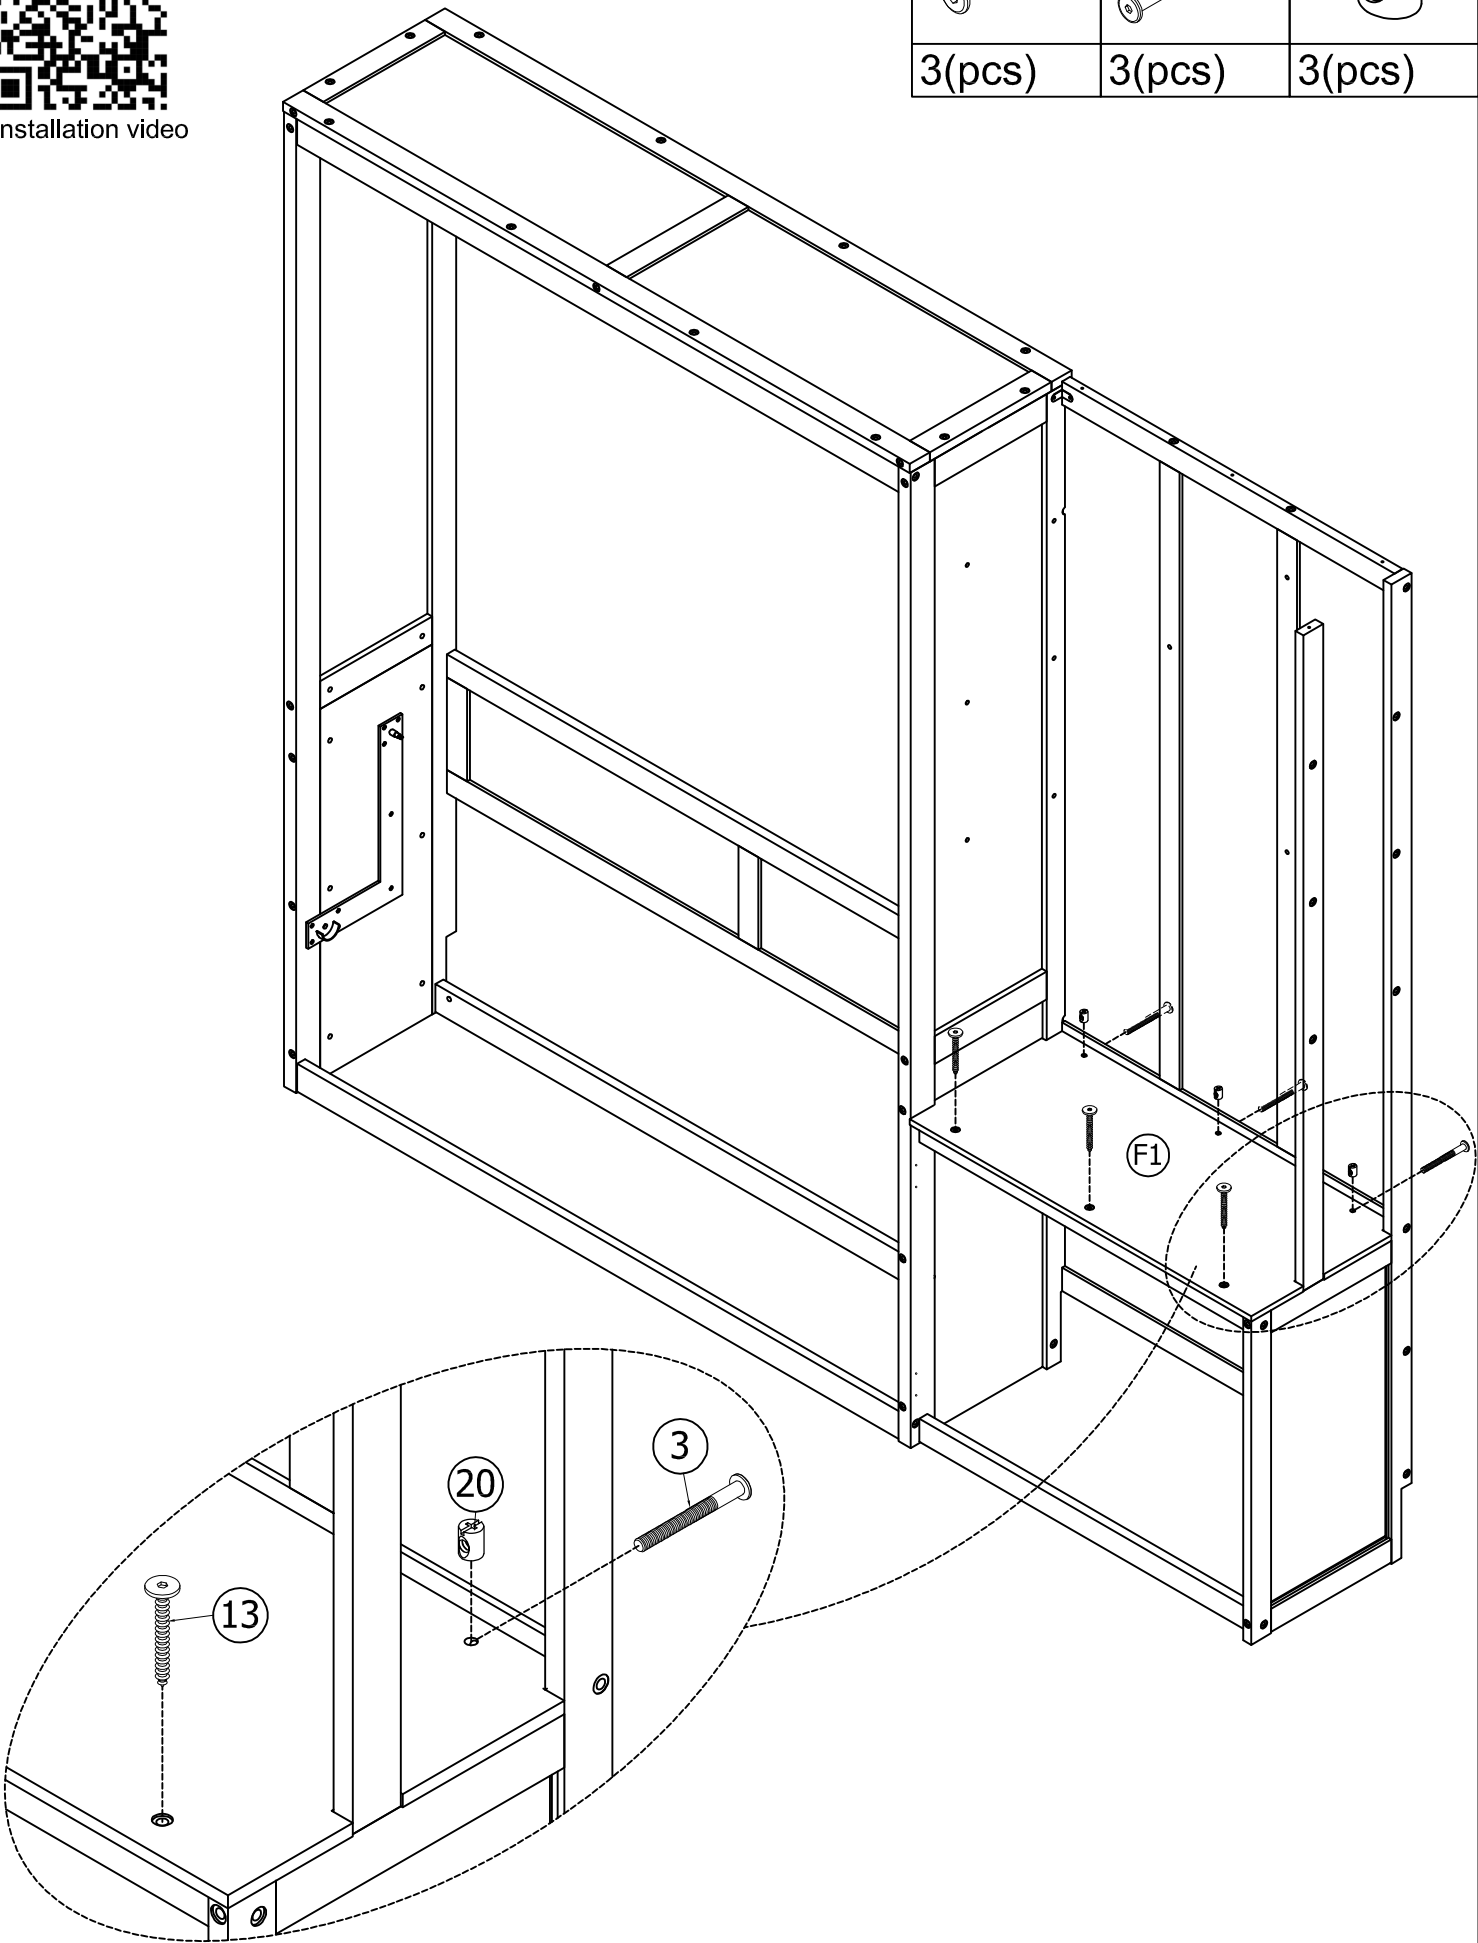



STEP15: Following below illustration.



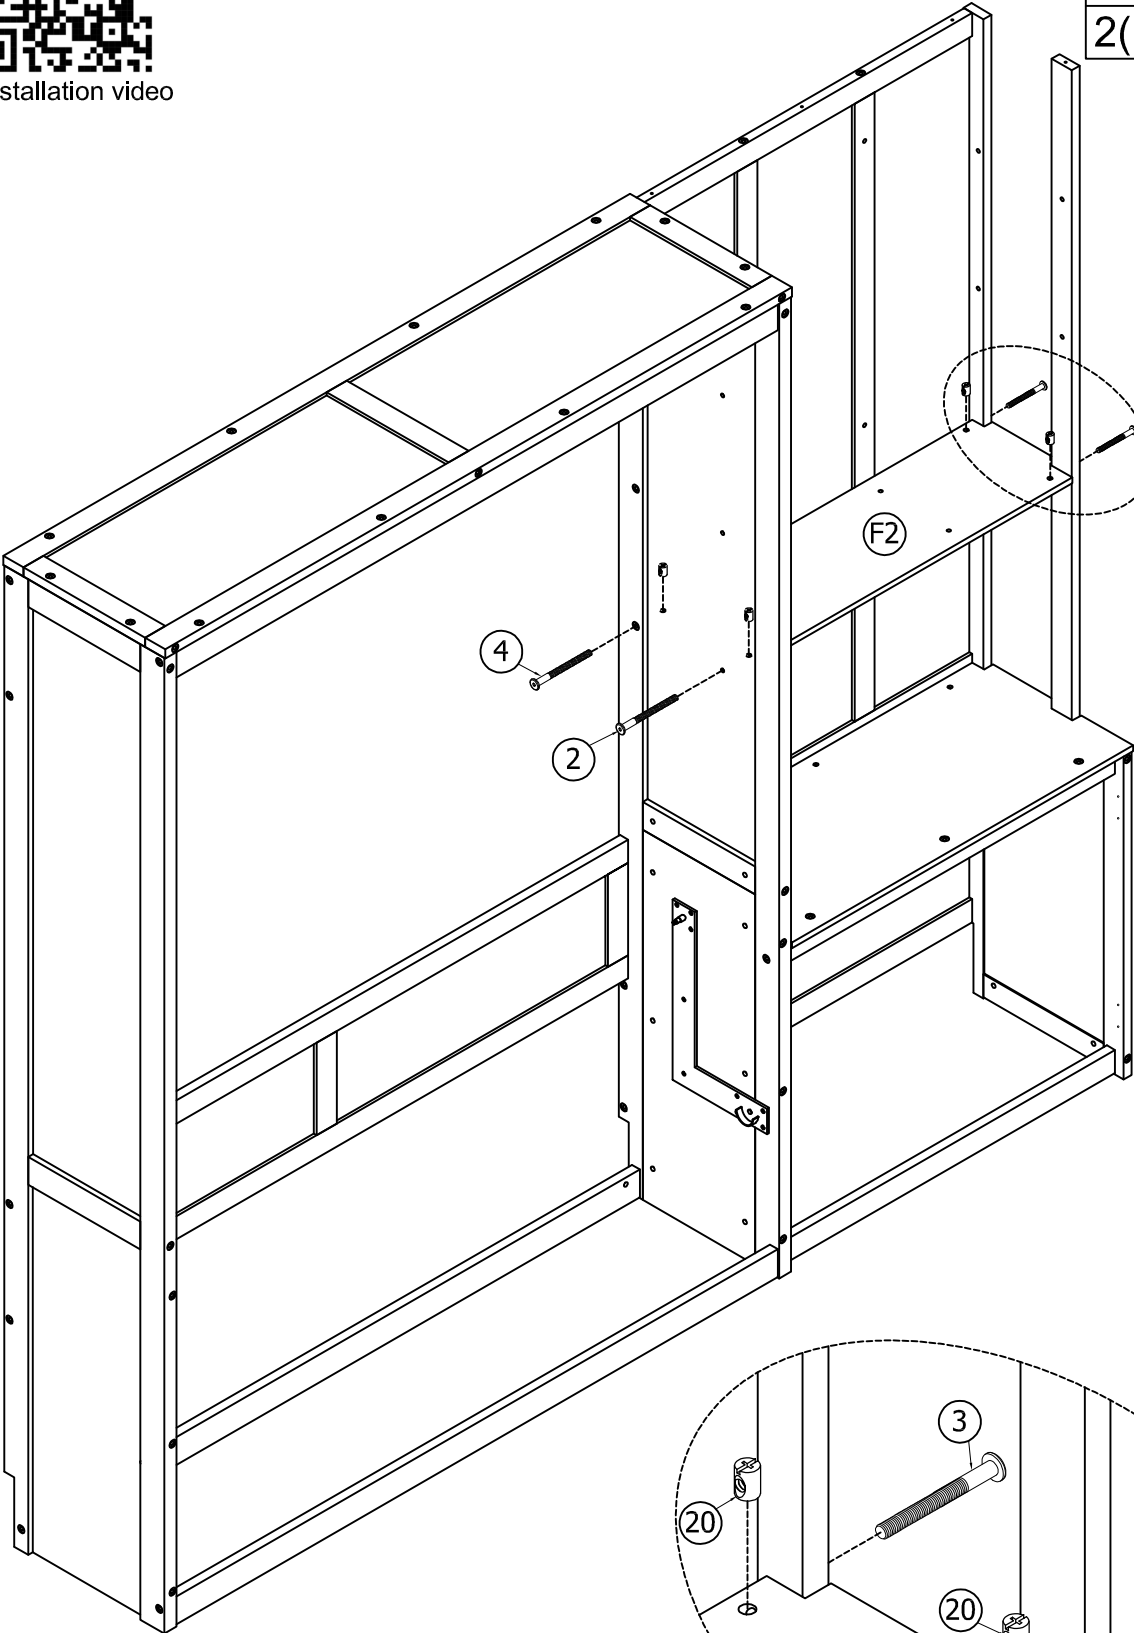Installation video




3	20
	
2(pcs)	4(pcs)
	4
	
	1(pc)
	2
	
	1(pc)


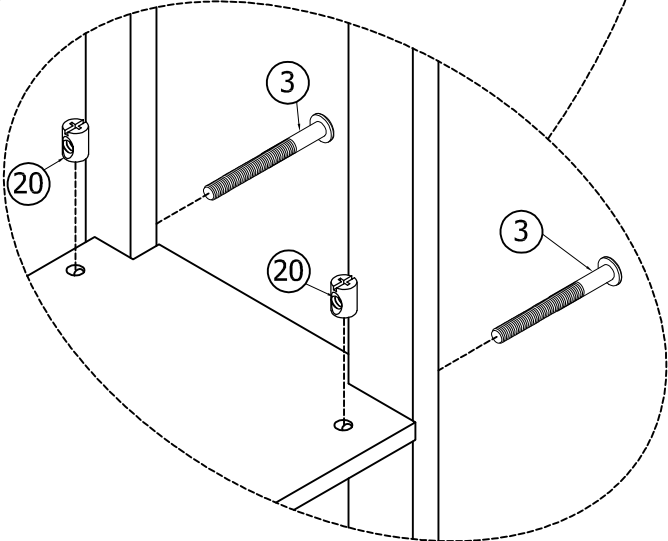



STEP16: Following below illustration.



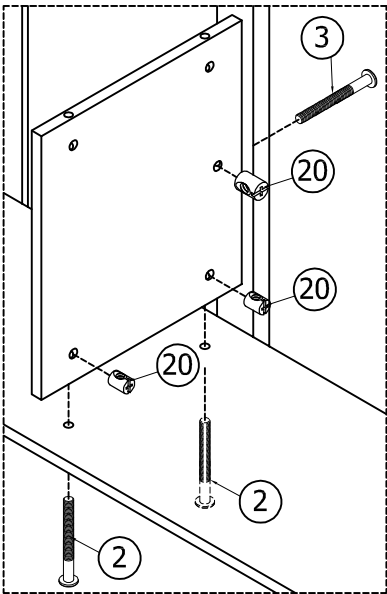Installation video




3	20
	
1(pc)	3(pcs)
	2
	
	2(pcs)



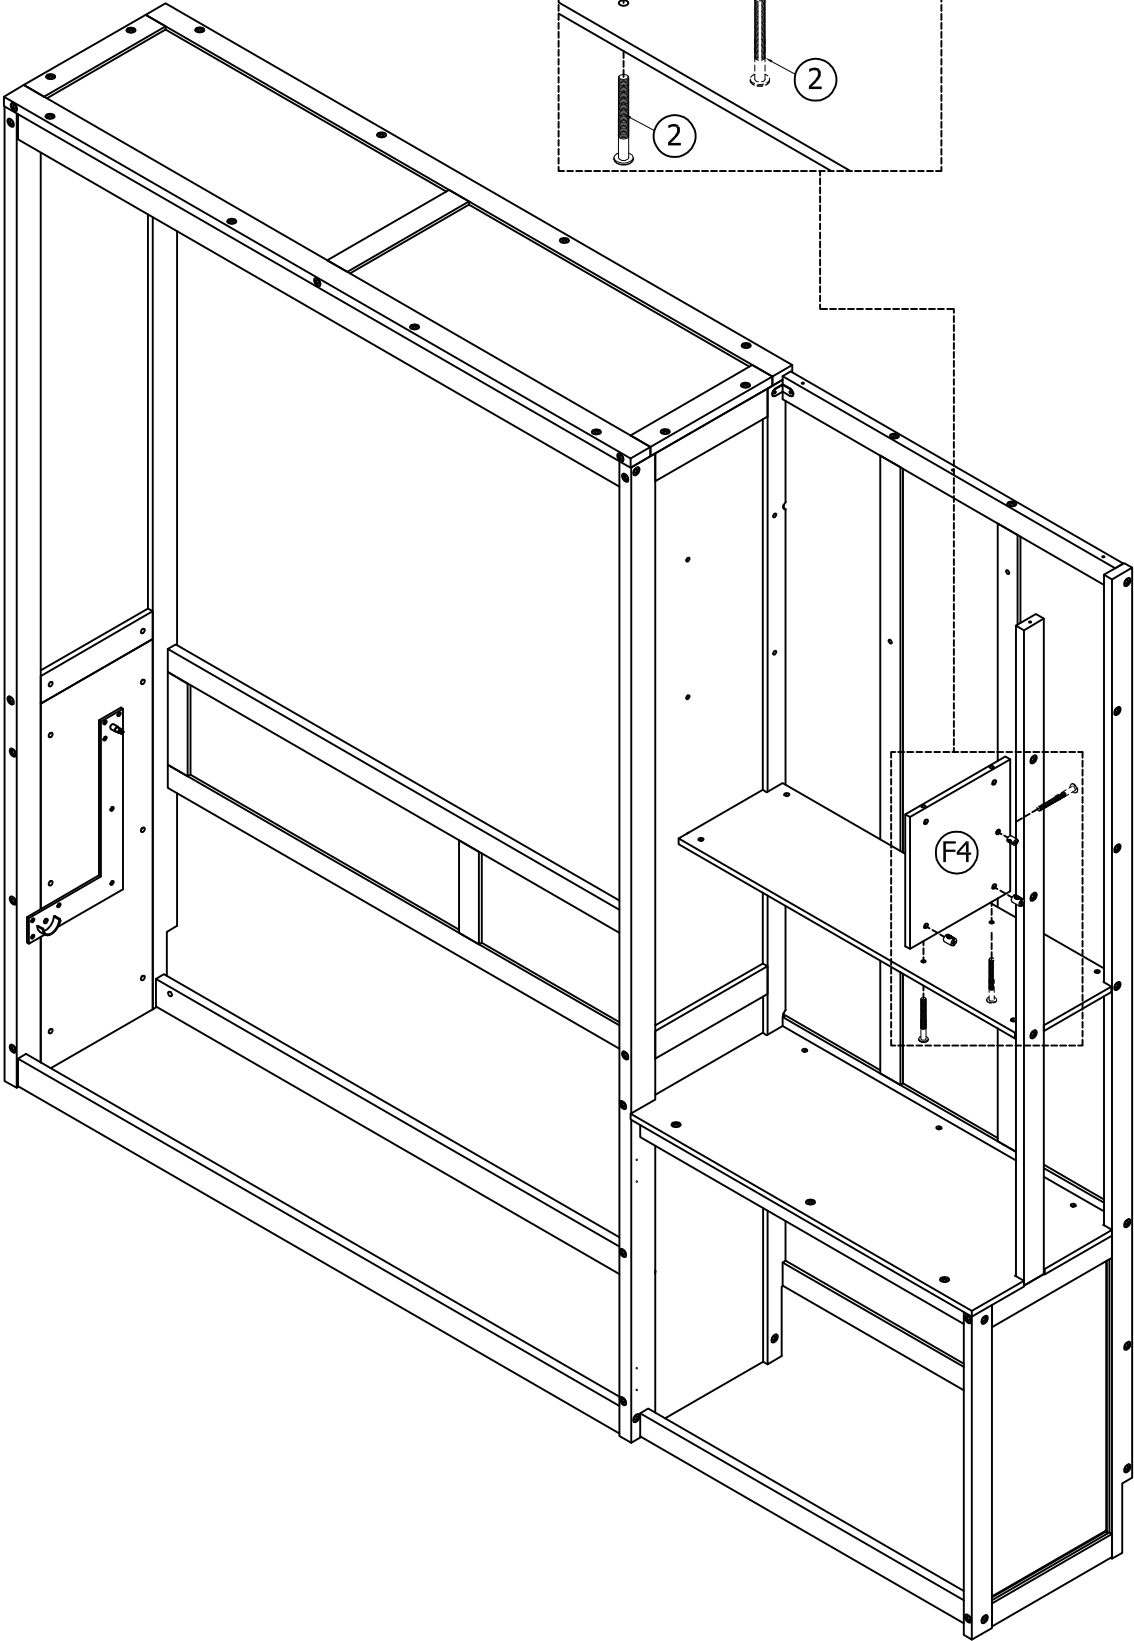



STEP17: Following below illustration.



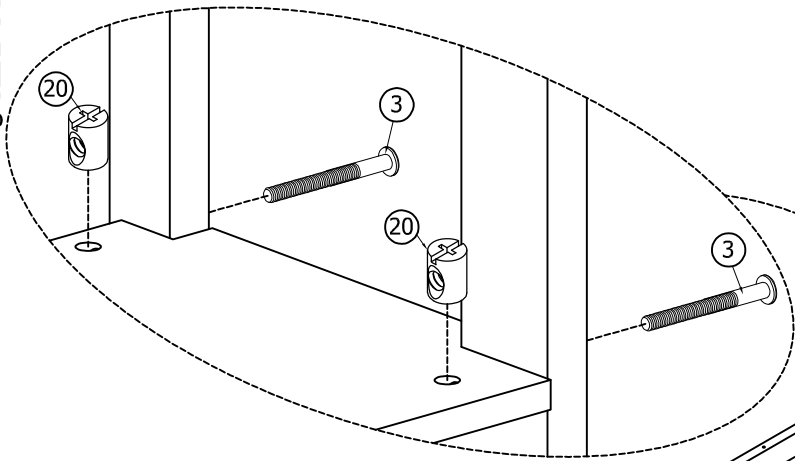Installation video




3	20
	
2(pcs)	4(pcs)
	4
	
	1(pc)
	2
	
	1(pc)

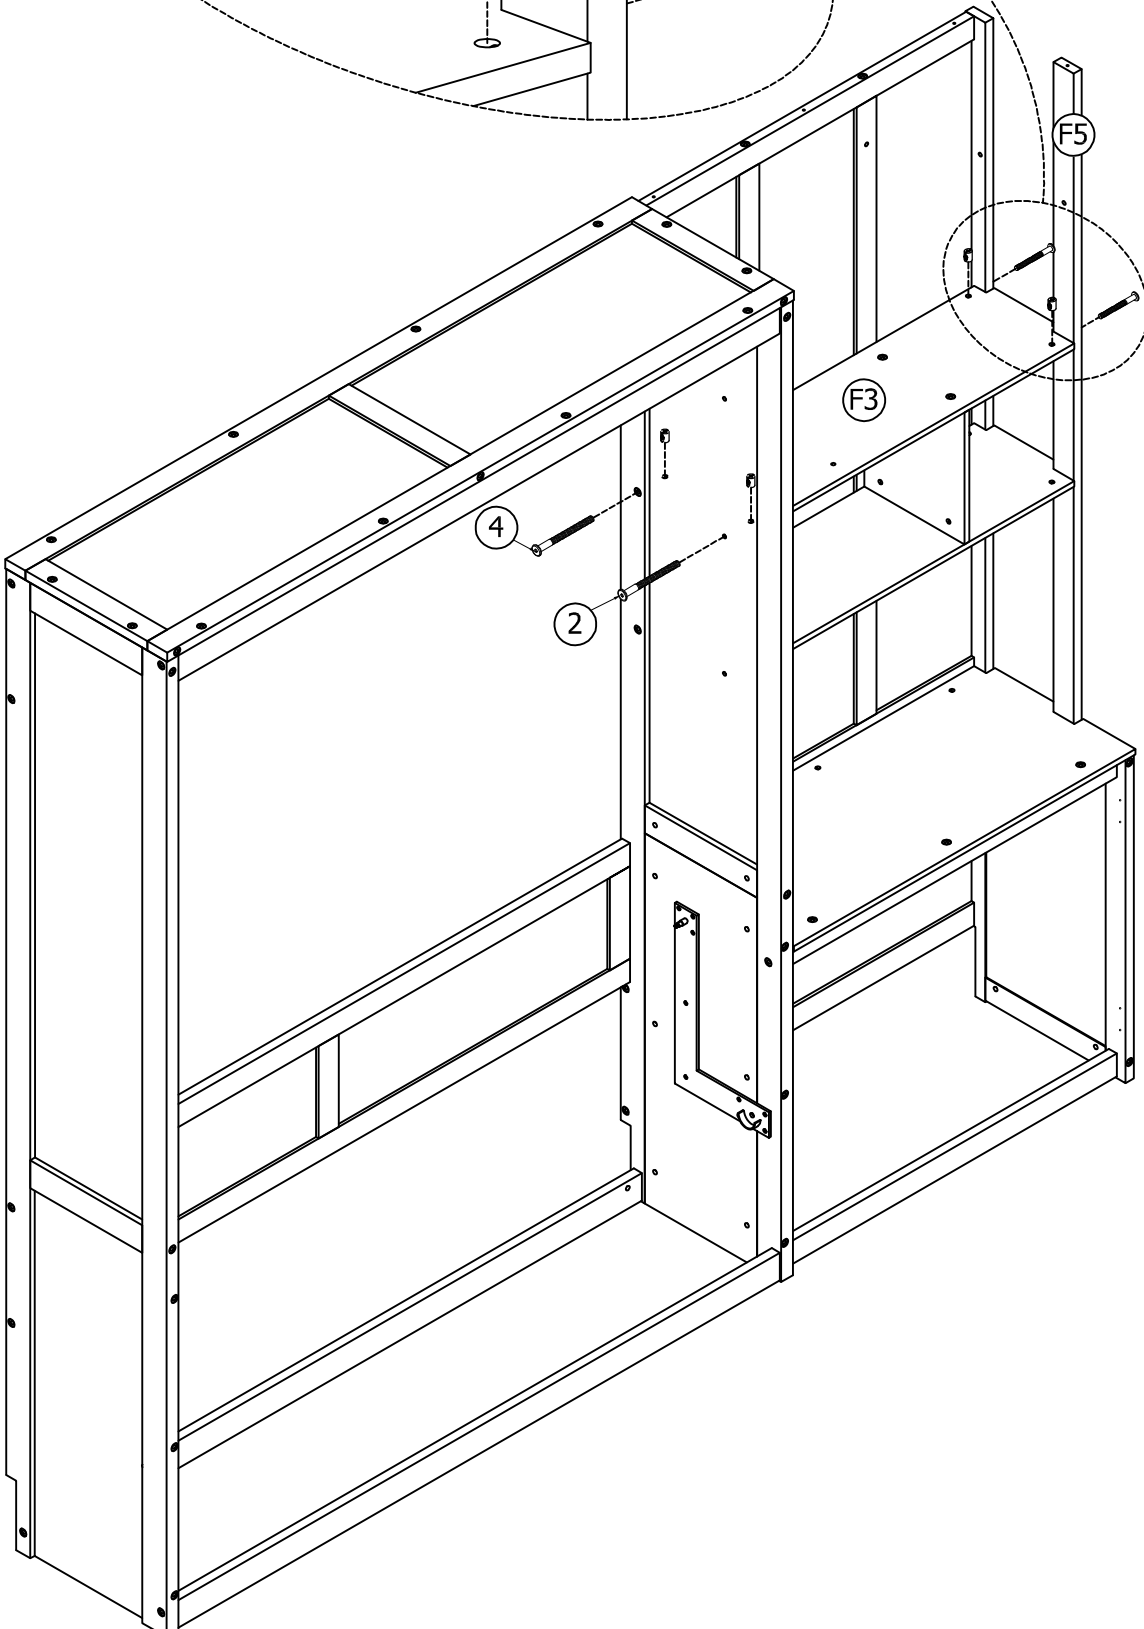

STEP18: Following below illustration.




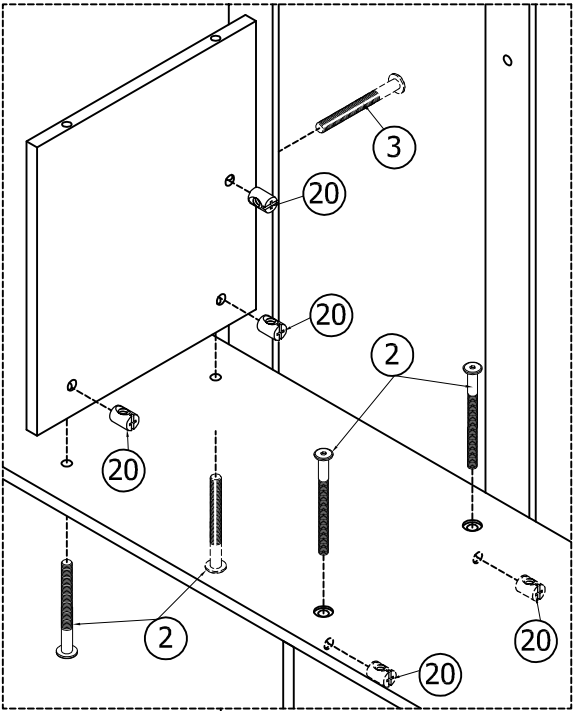Installation video




5(pcs)

2




4(pcs)

3




1(pc)

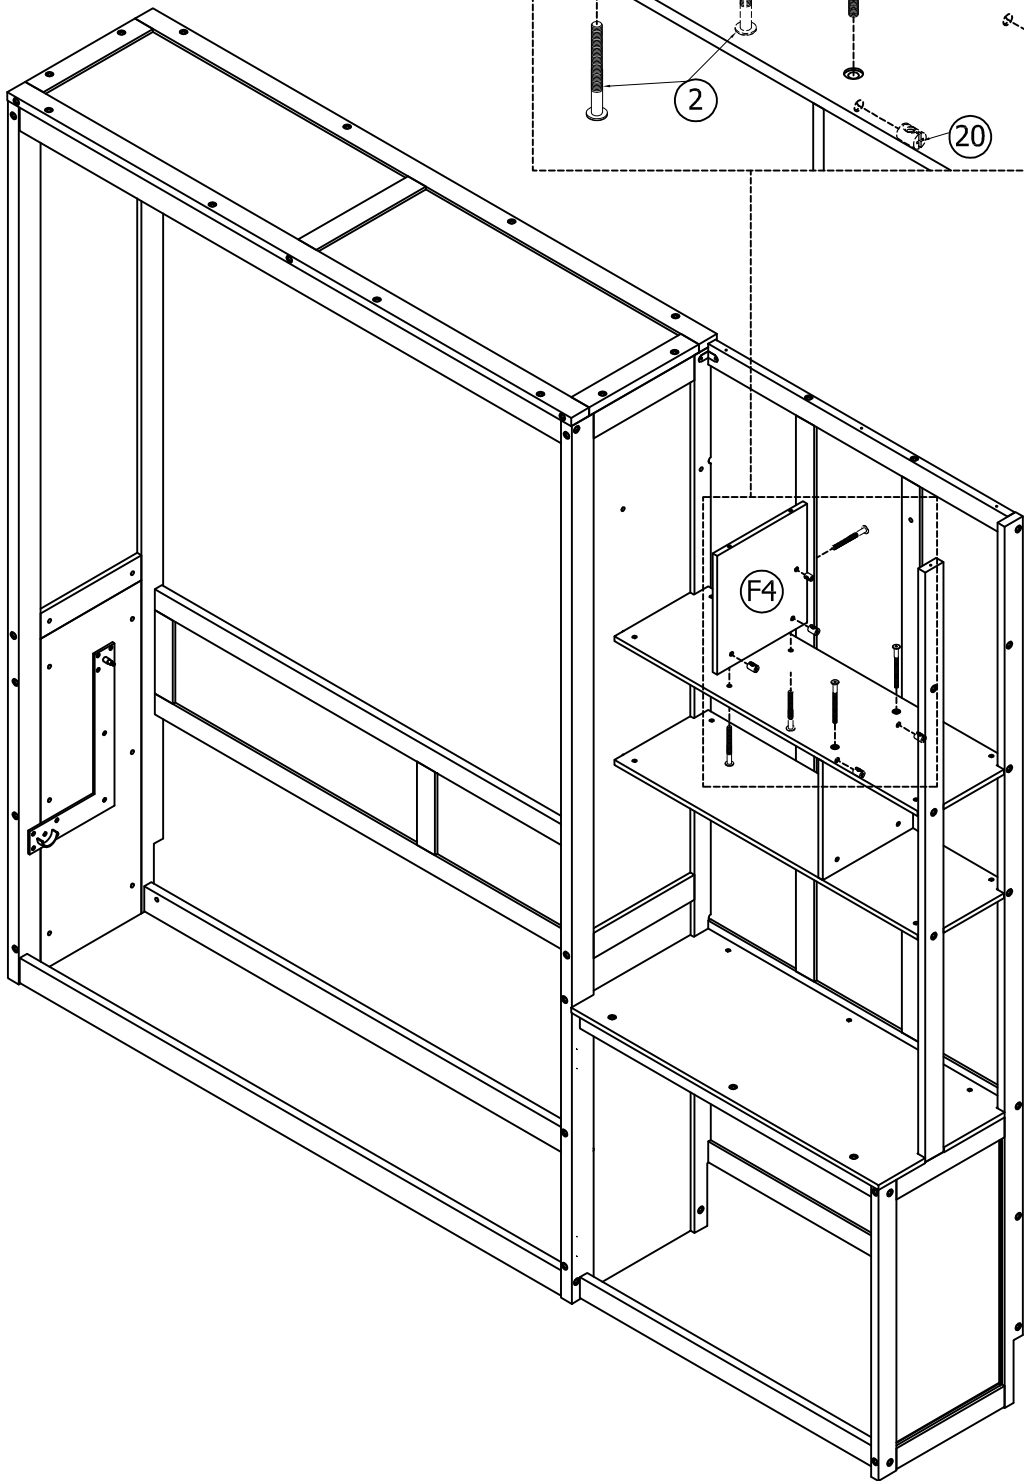

STEP19: Following below illustration.



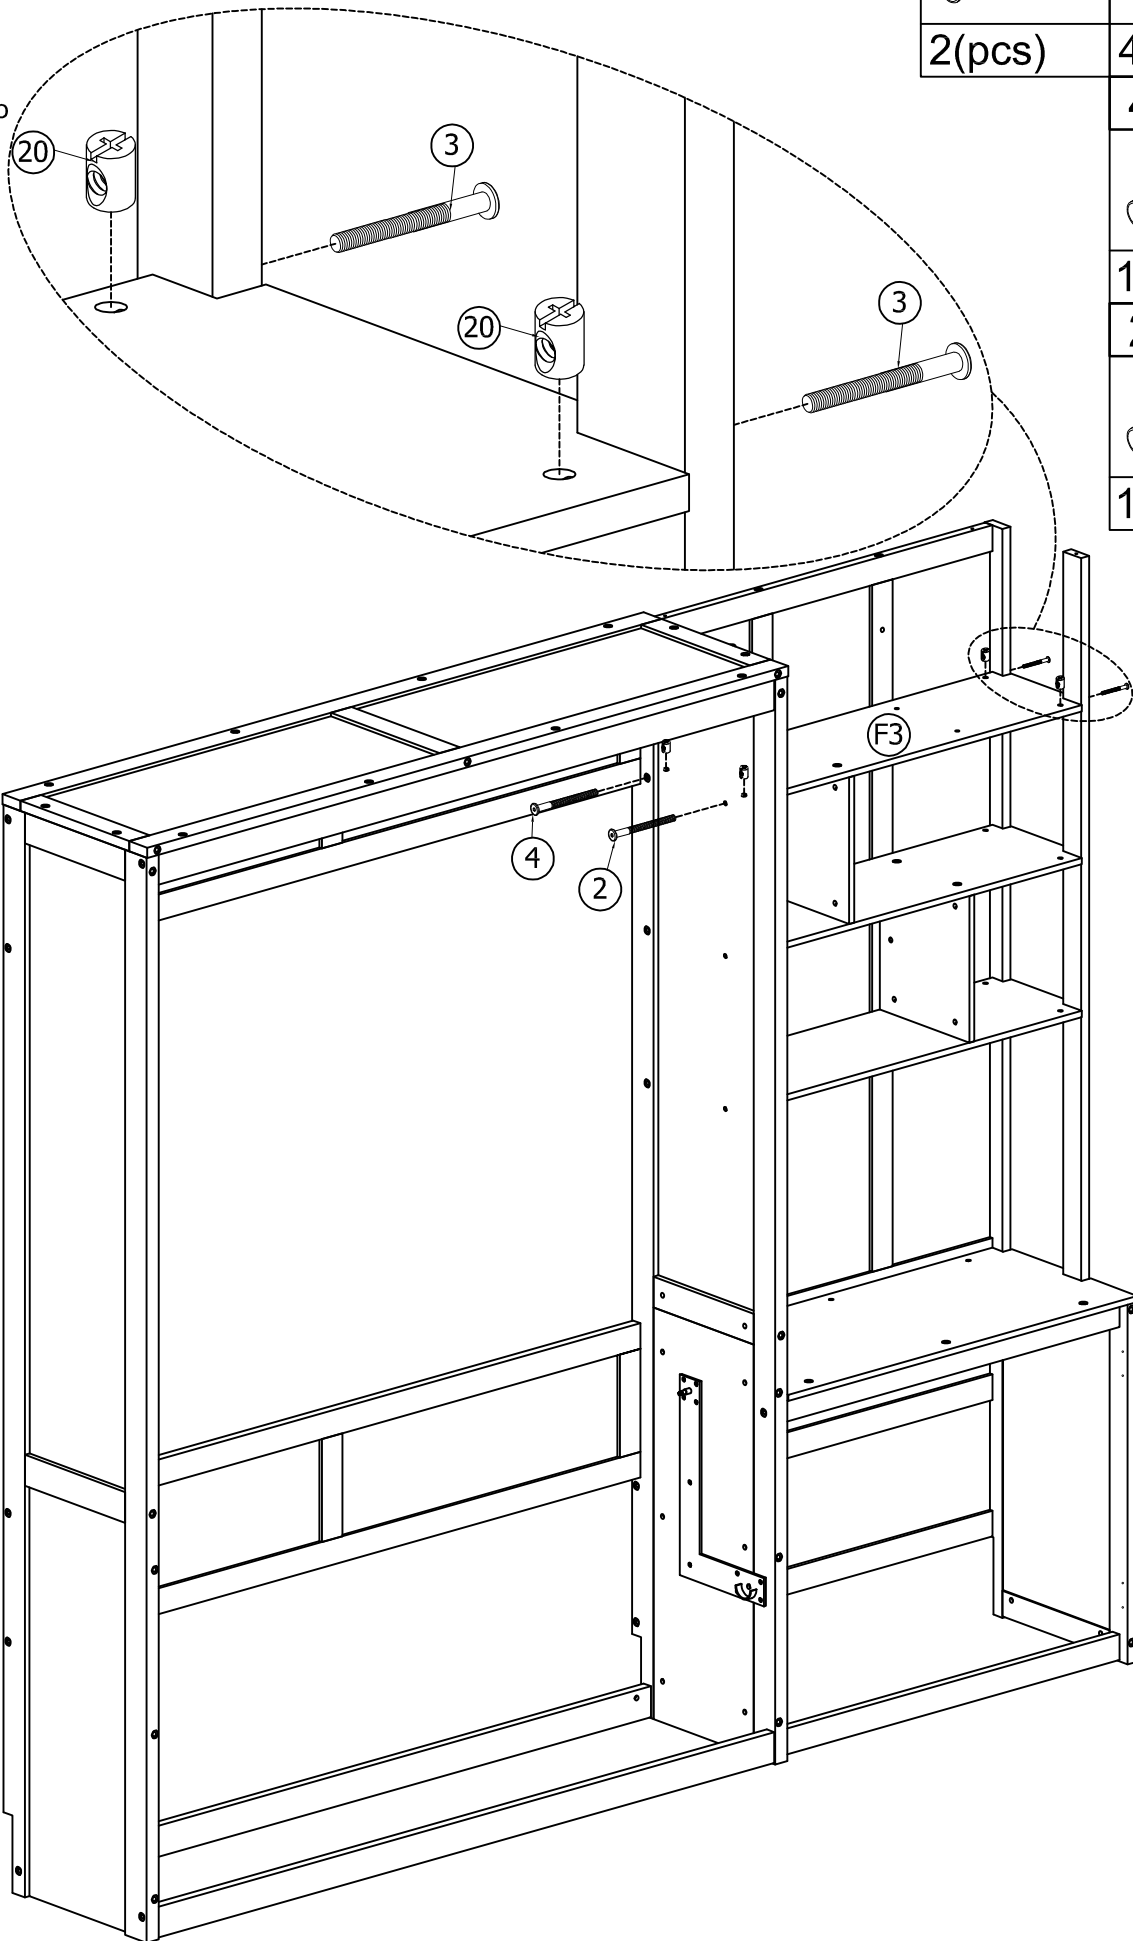Installation video




3	20
2(pcs)	4(pcs)
	4
1(pc)	2
1(pc)	

STEP20: Following below illustration.



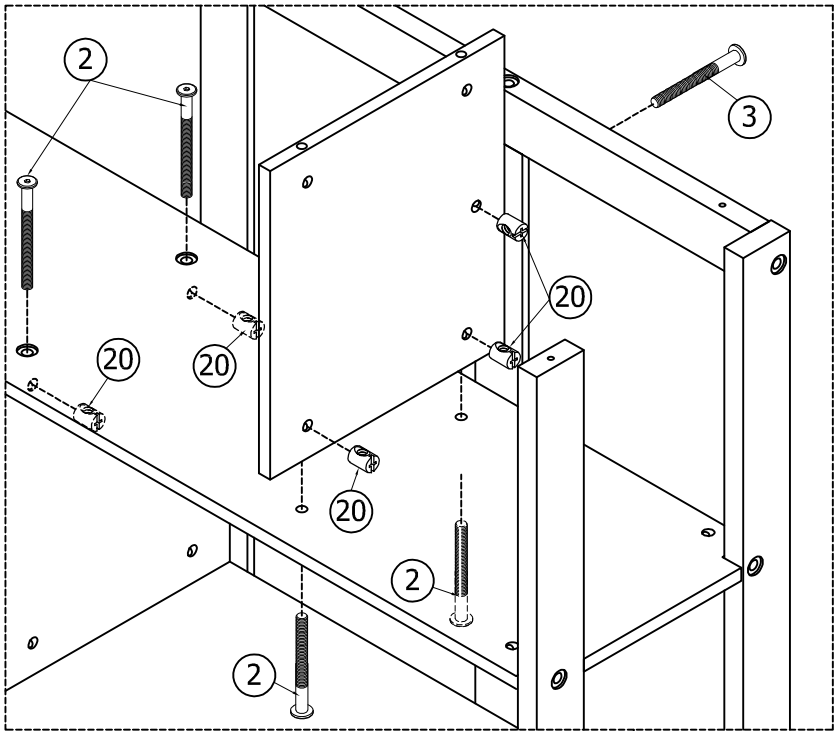Installation video




20




5(pcs)

2




4(pcs)

3



1(pc)

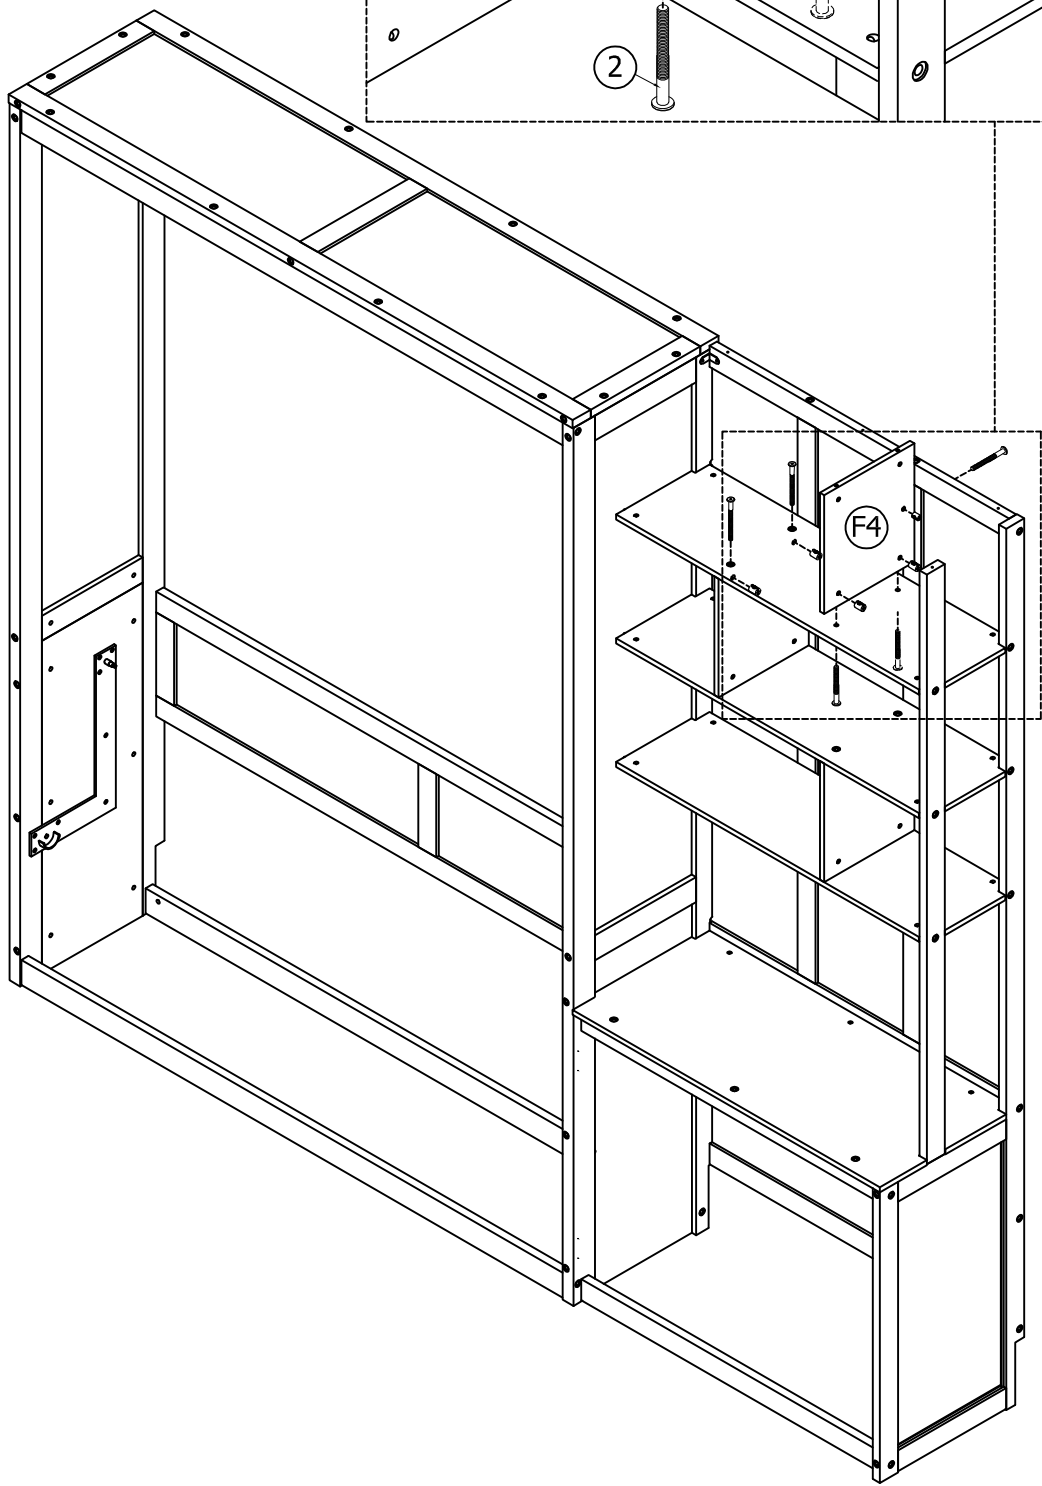


2(pcs)	2
	1
	4

STEP22: Following below illustration.



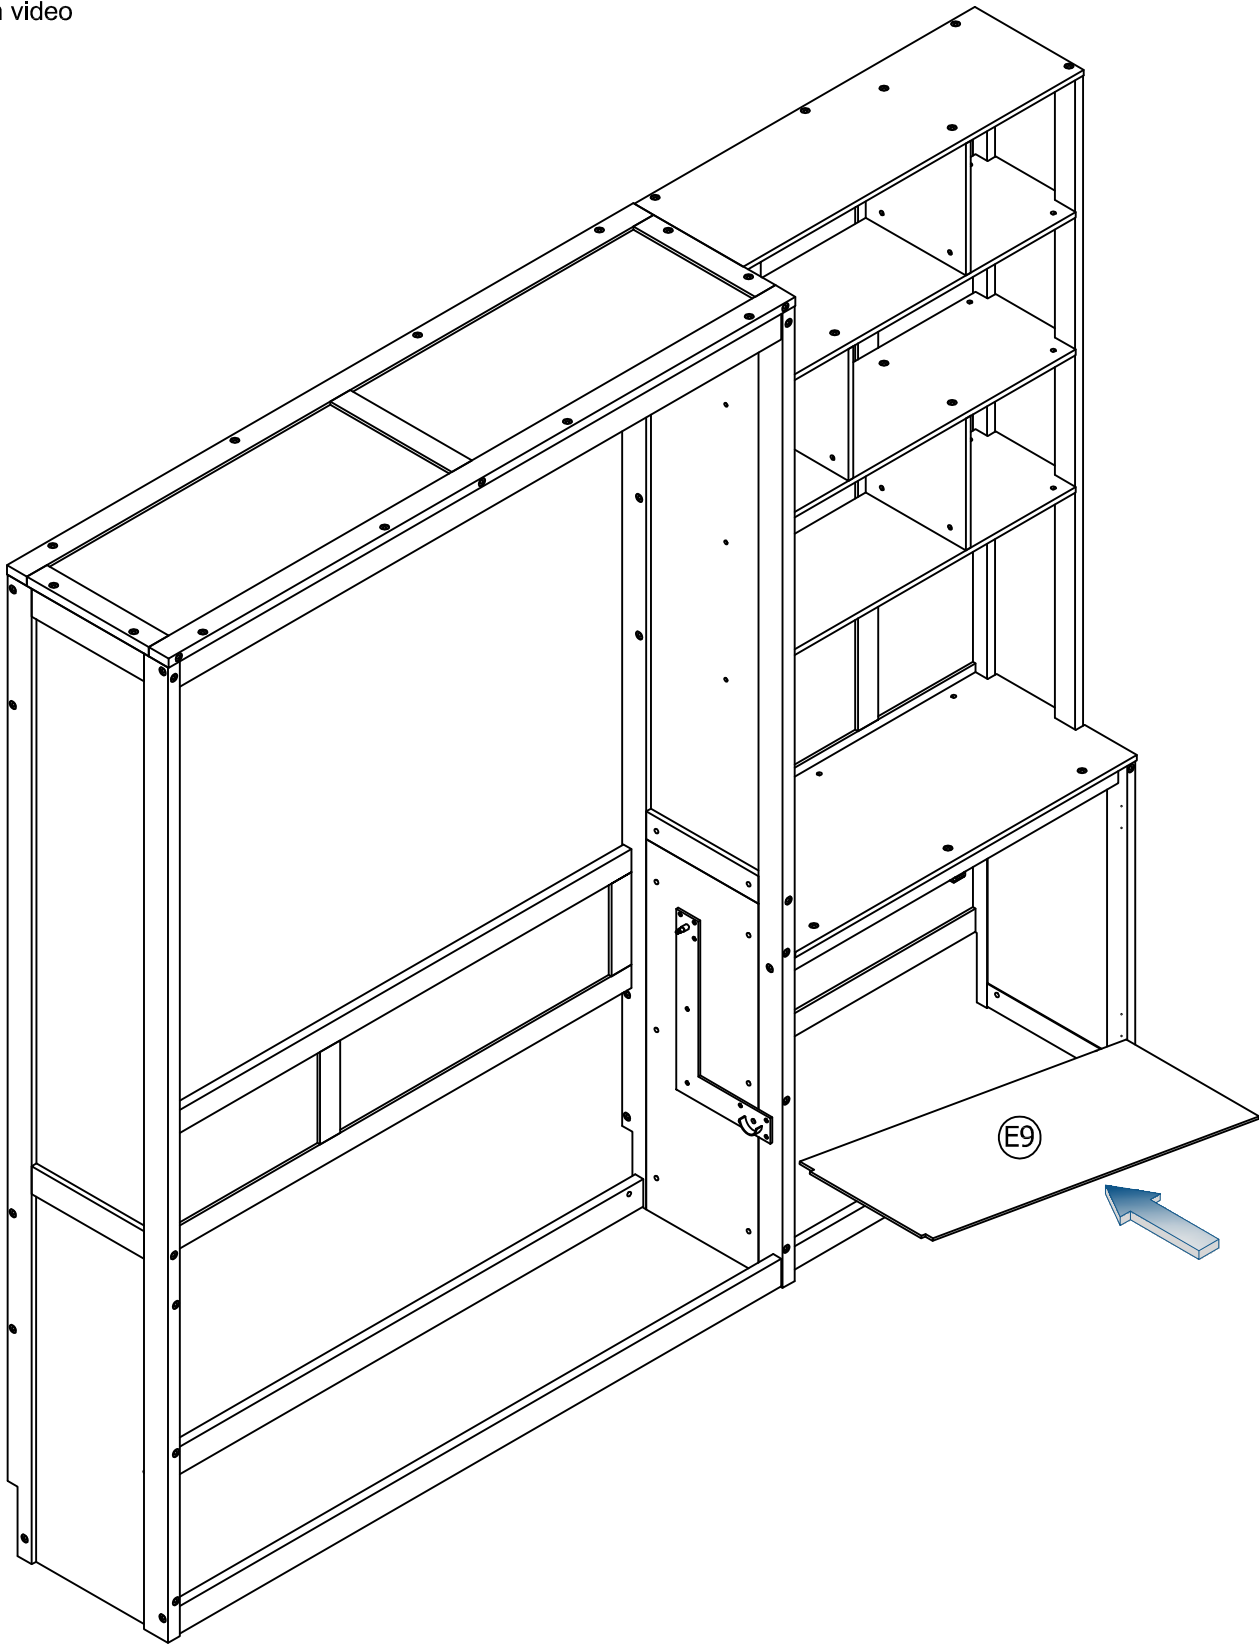Installation video




STEP23: Following below illustration.




Installation video

16





4(pcs)

27



2(pcs)

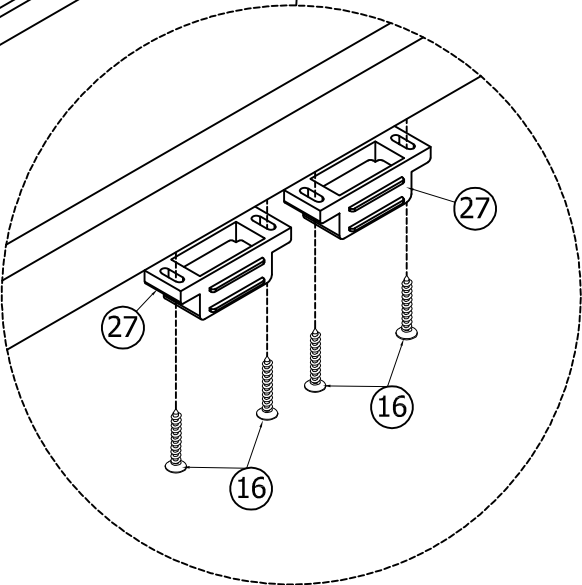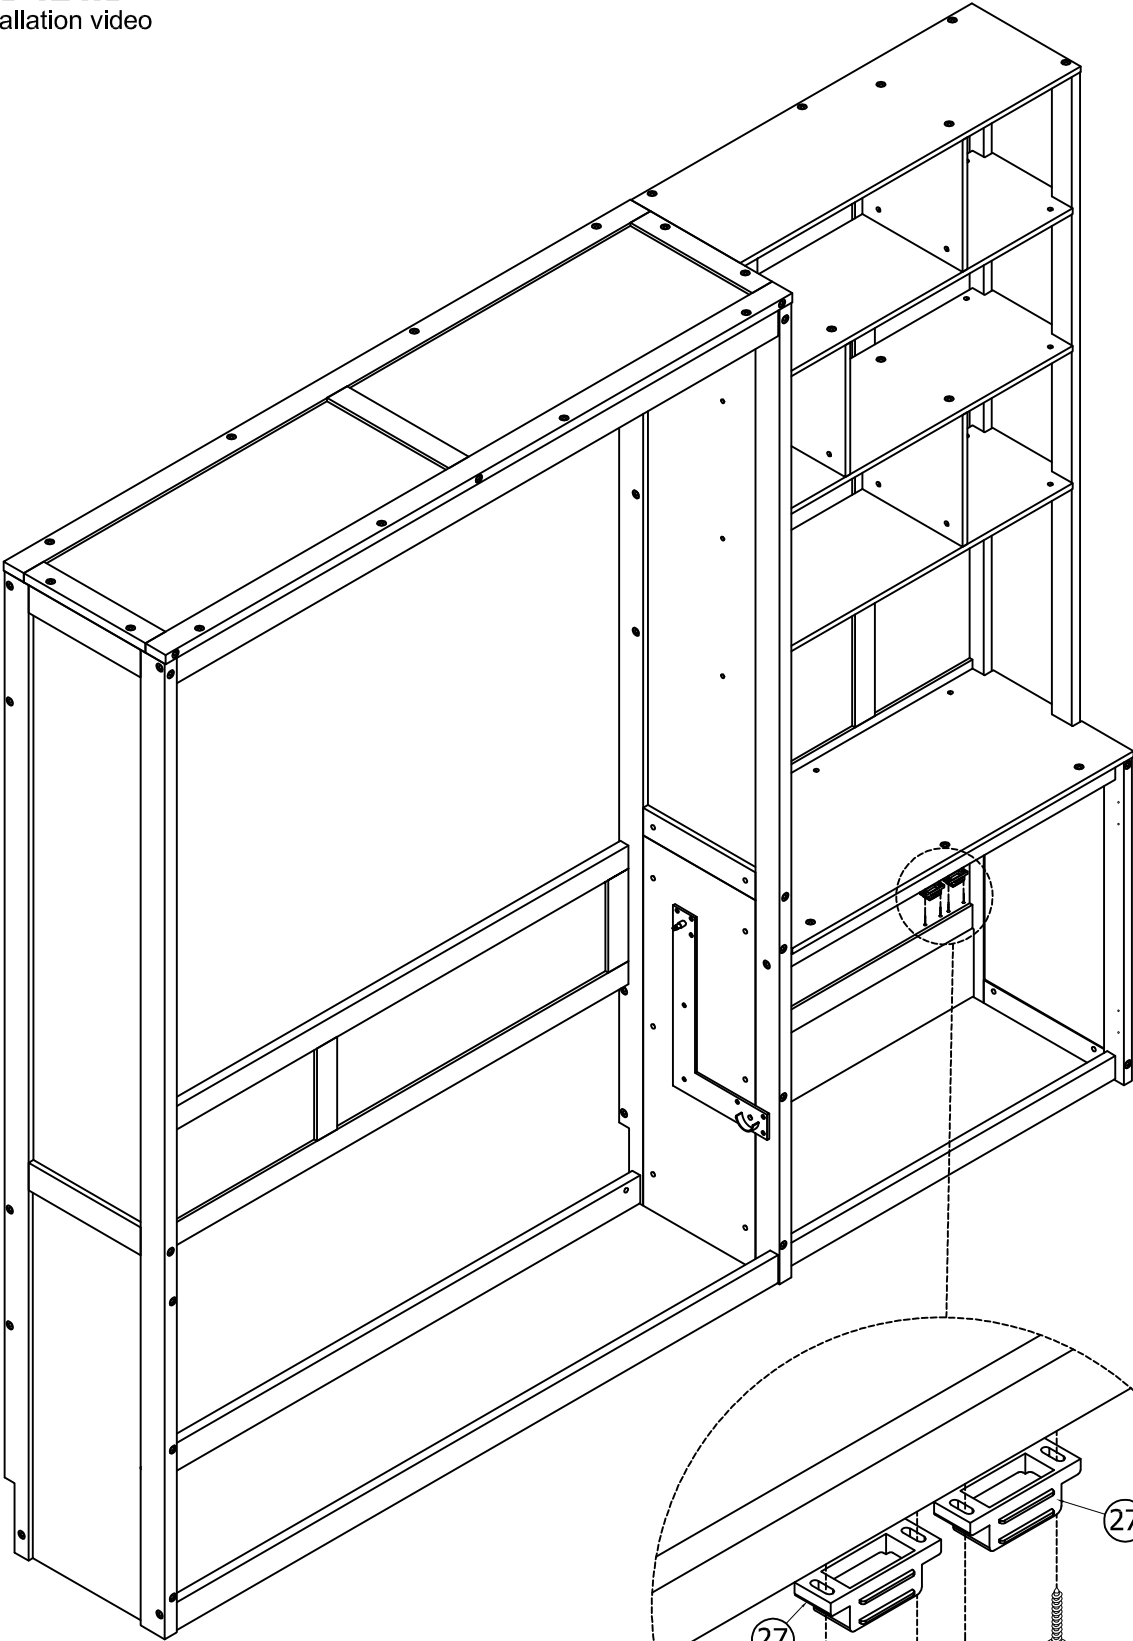


STEP24: Following below illustration.






Installation video

14



8(pcs)

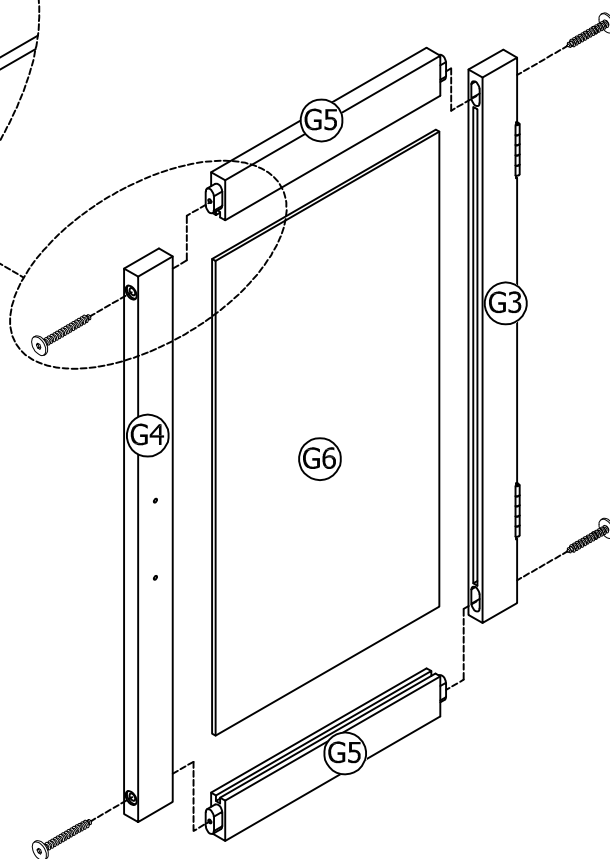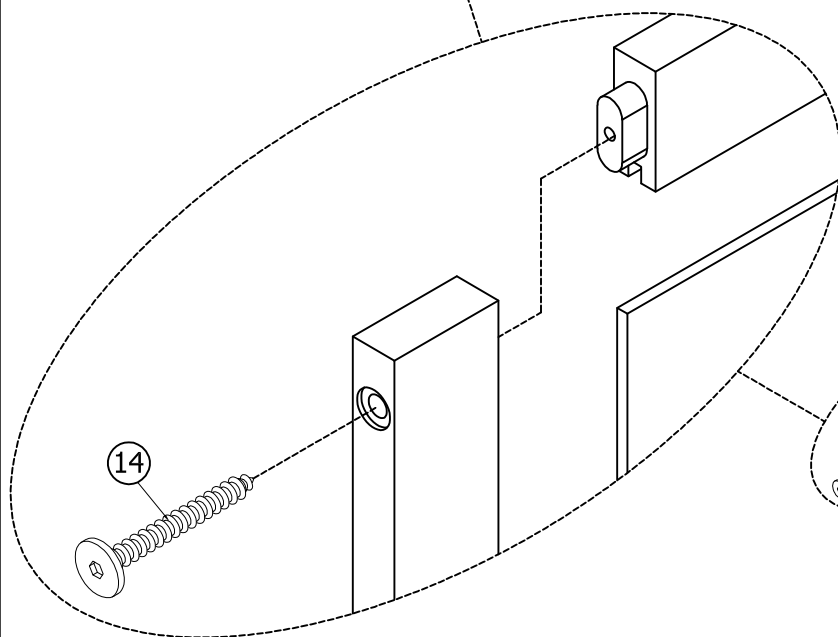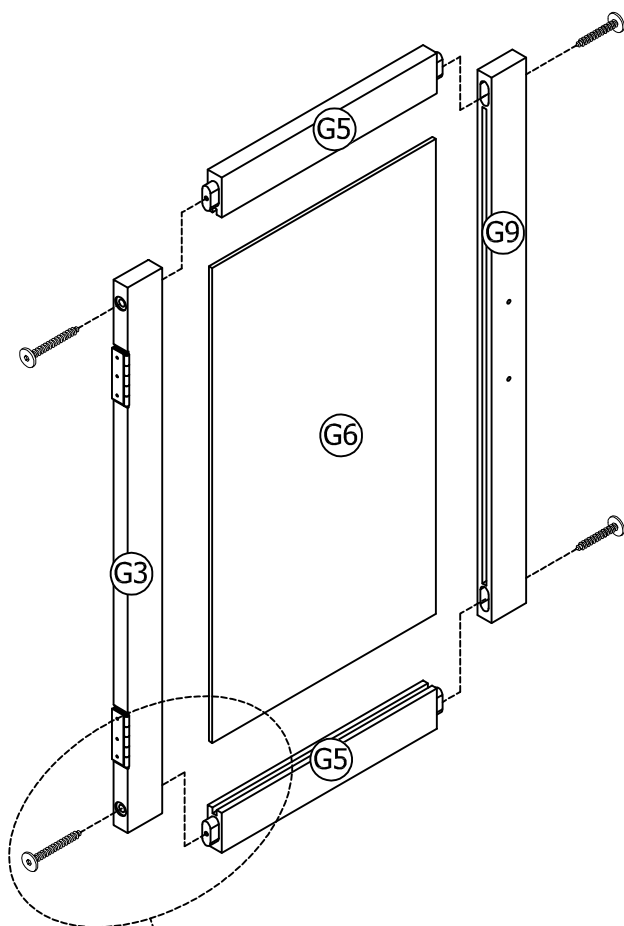


STEP25: Following below illustration.




Installation video

18



12(pcs)

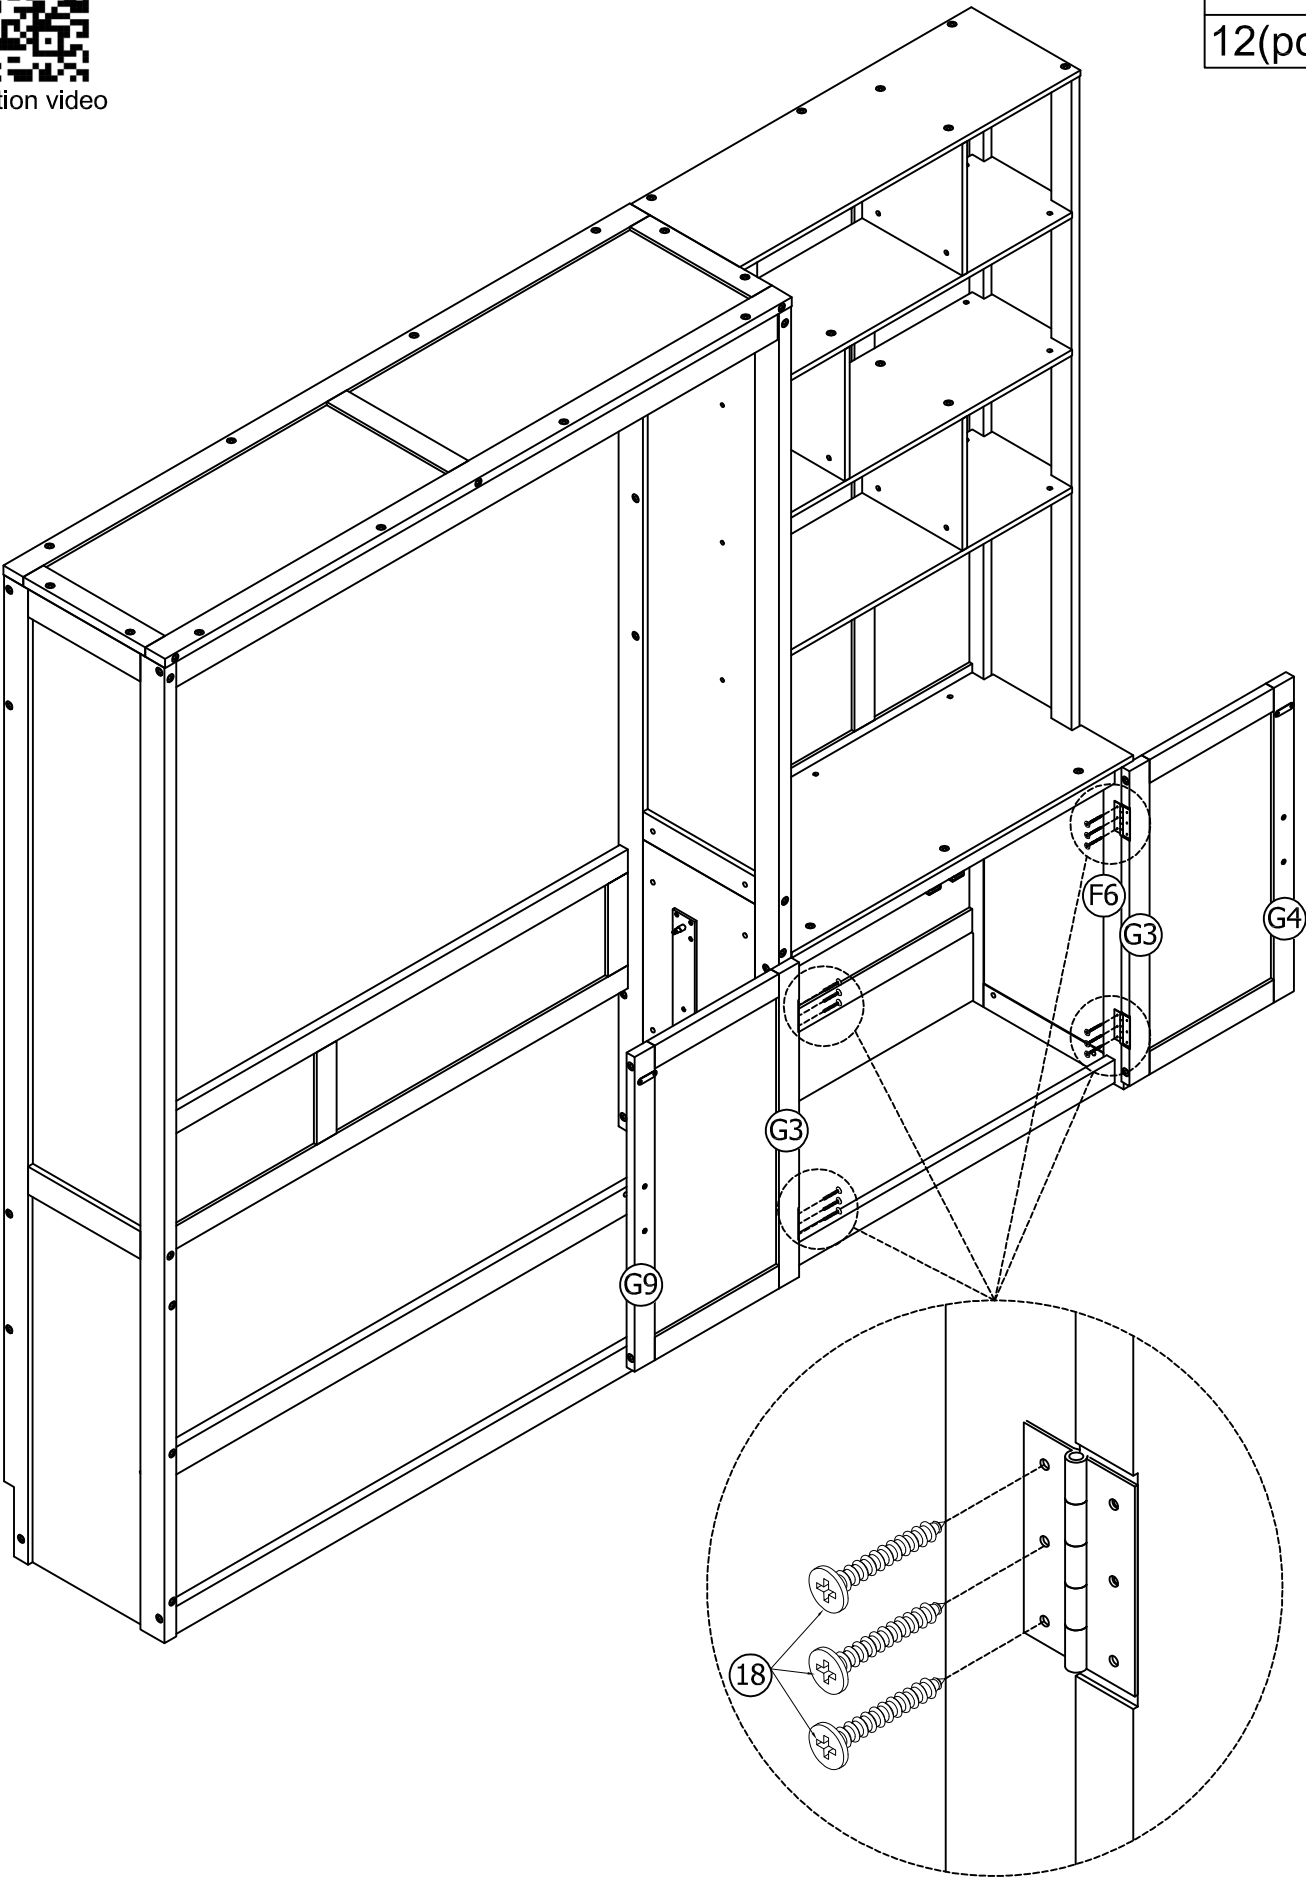


STEP26: Following below illustration.




Installation video

11




4(pcs)

10




2(pcs)

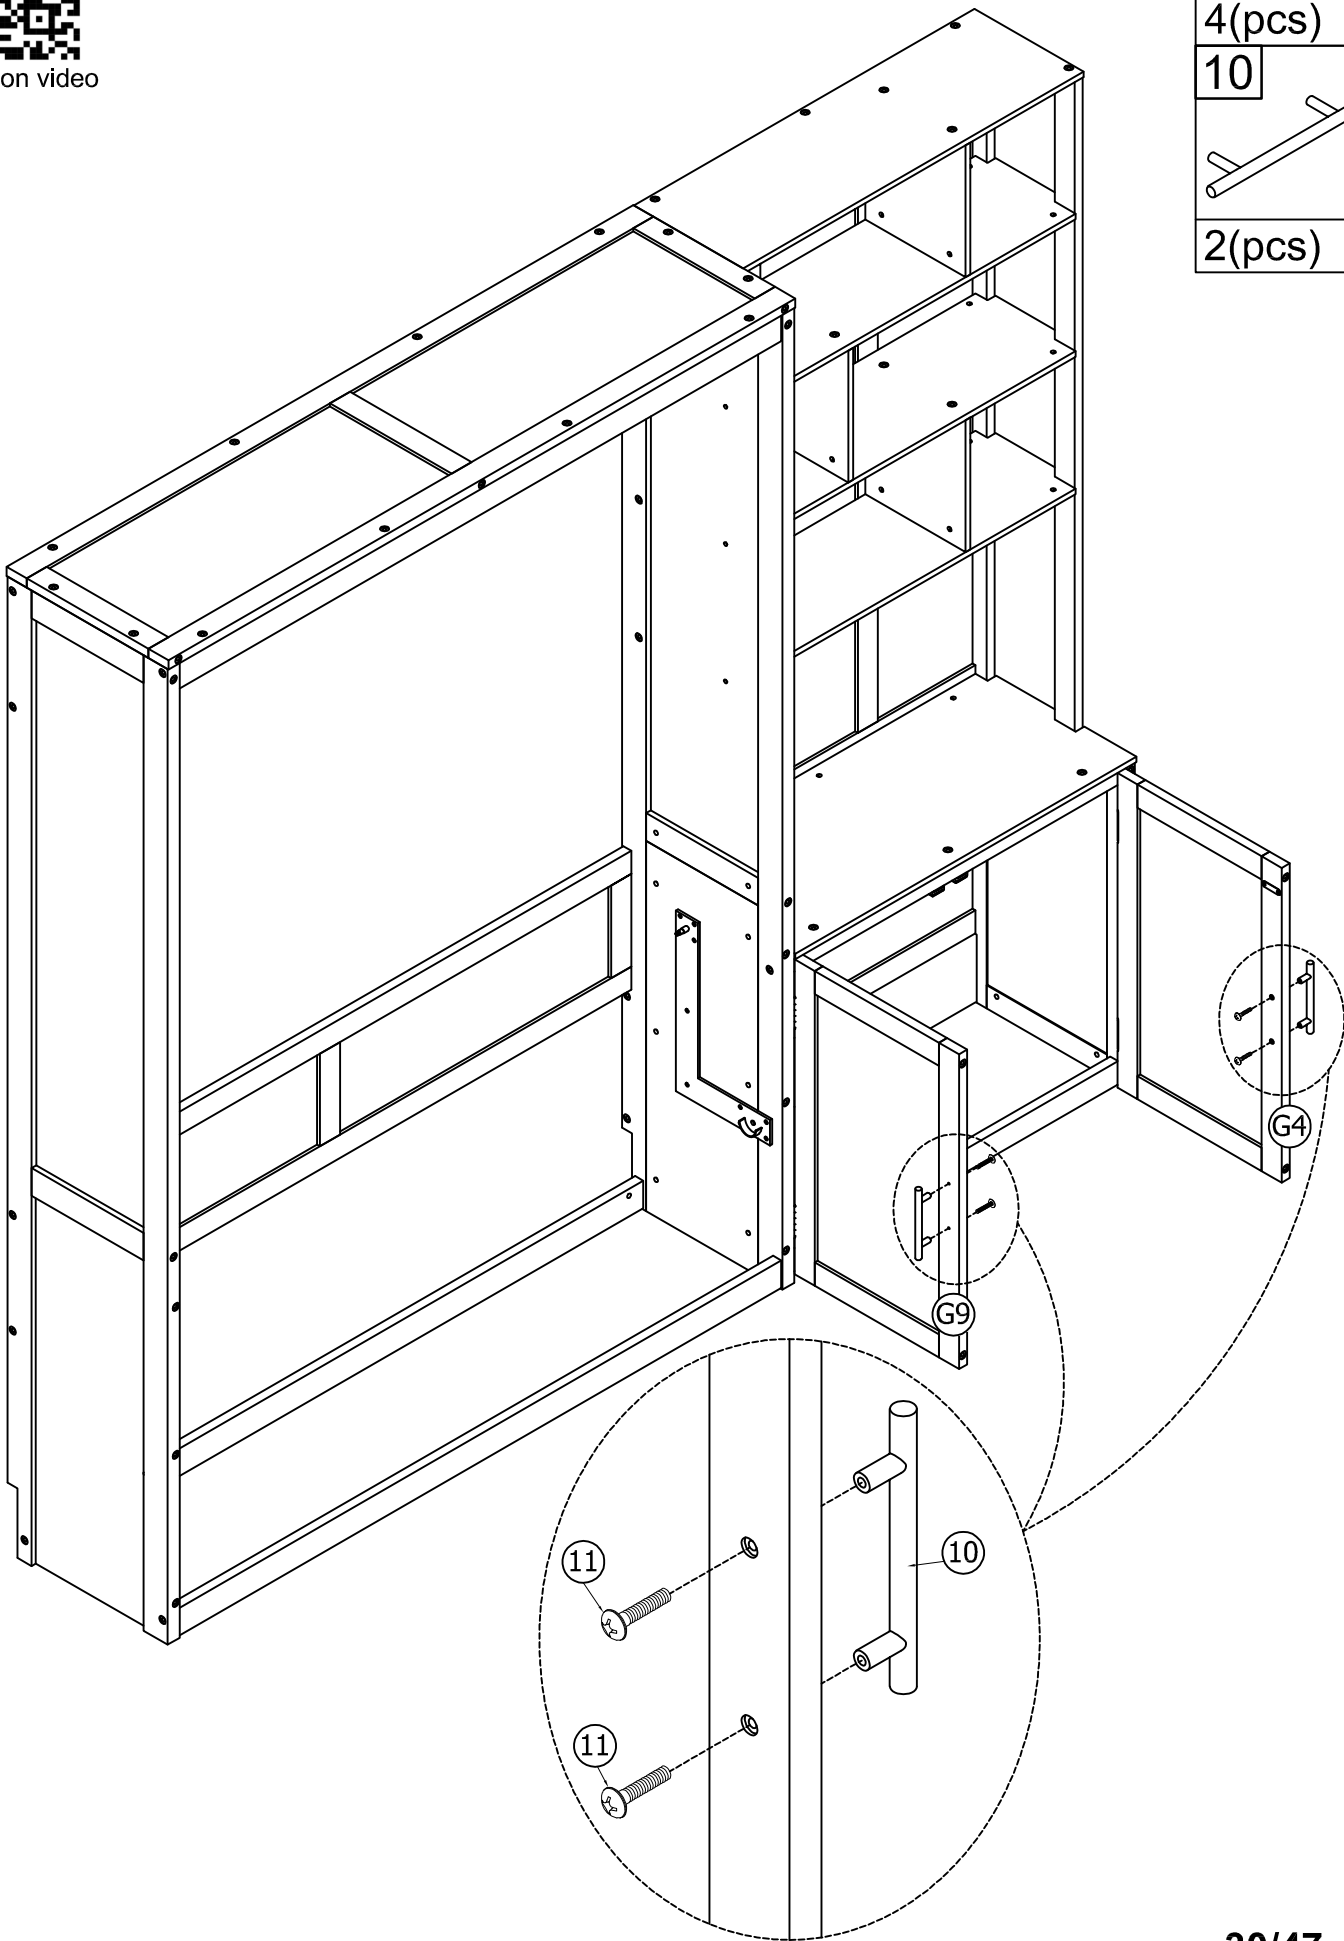


STEP27: Following below illustration.



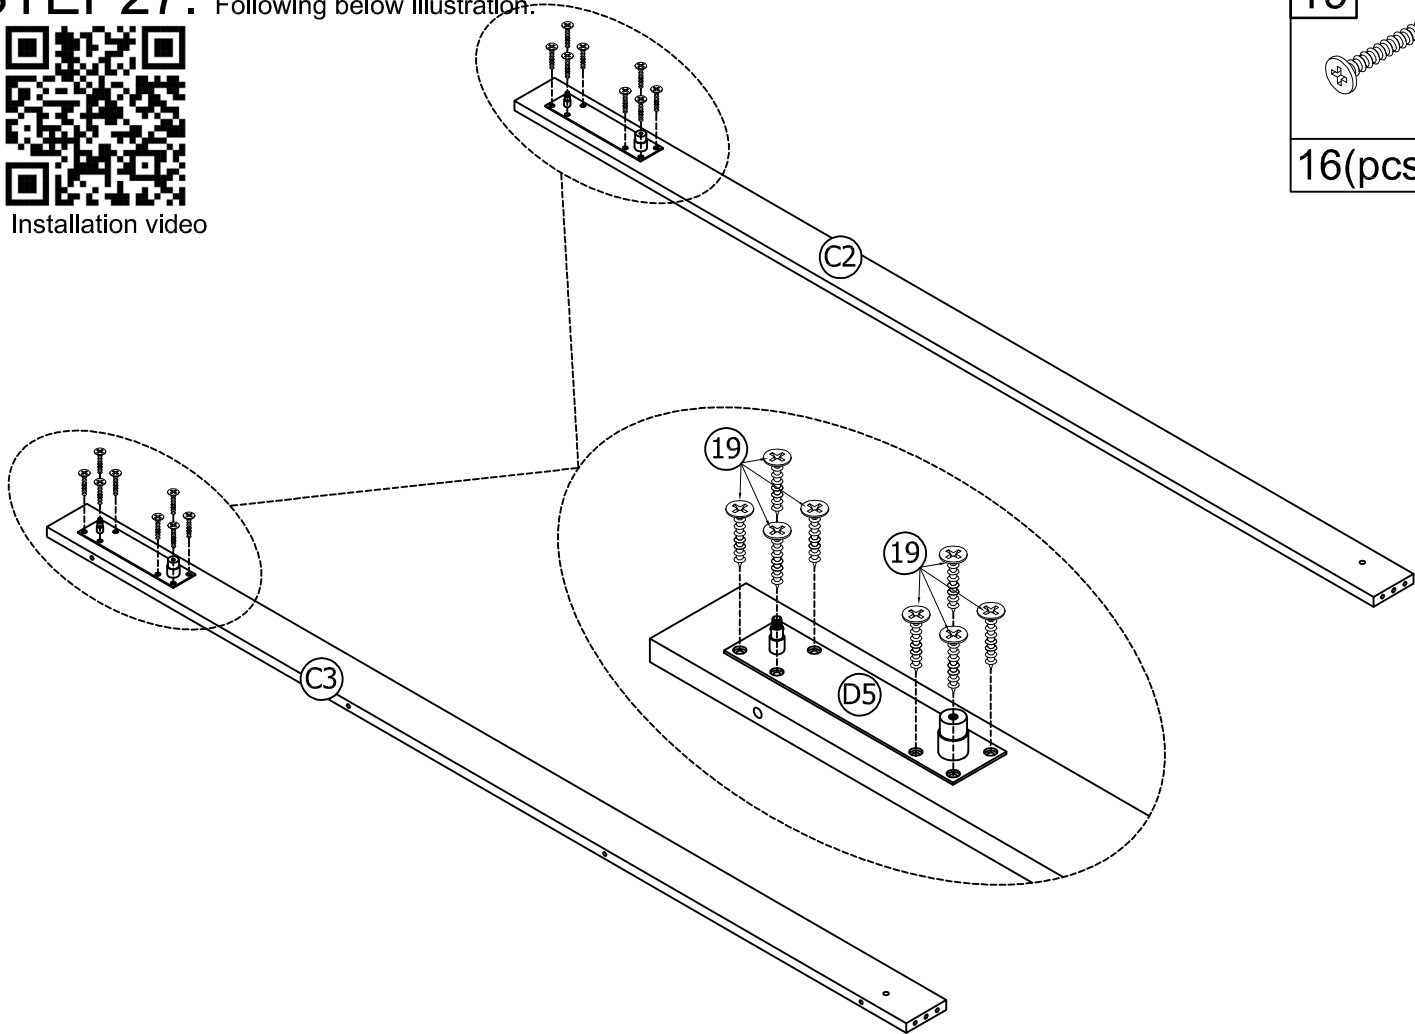Installation video






19

16(pcs)

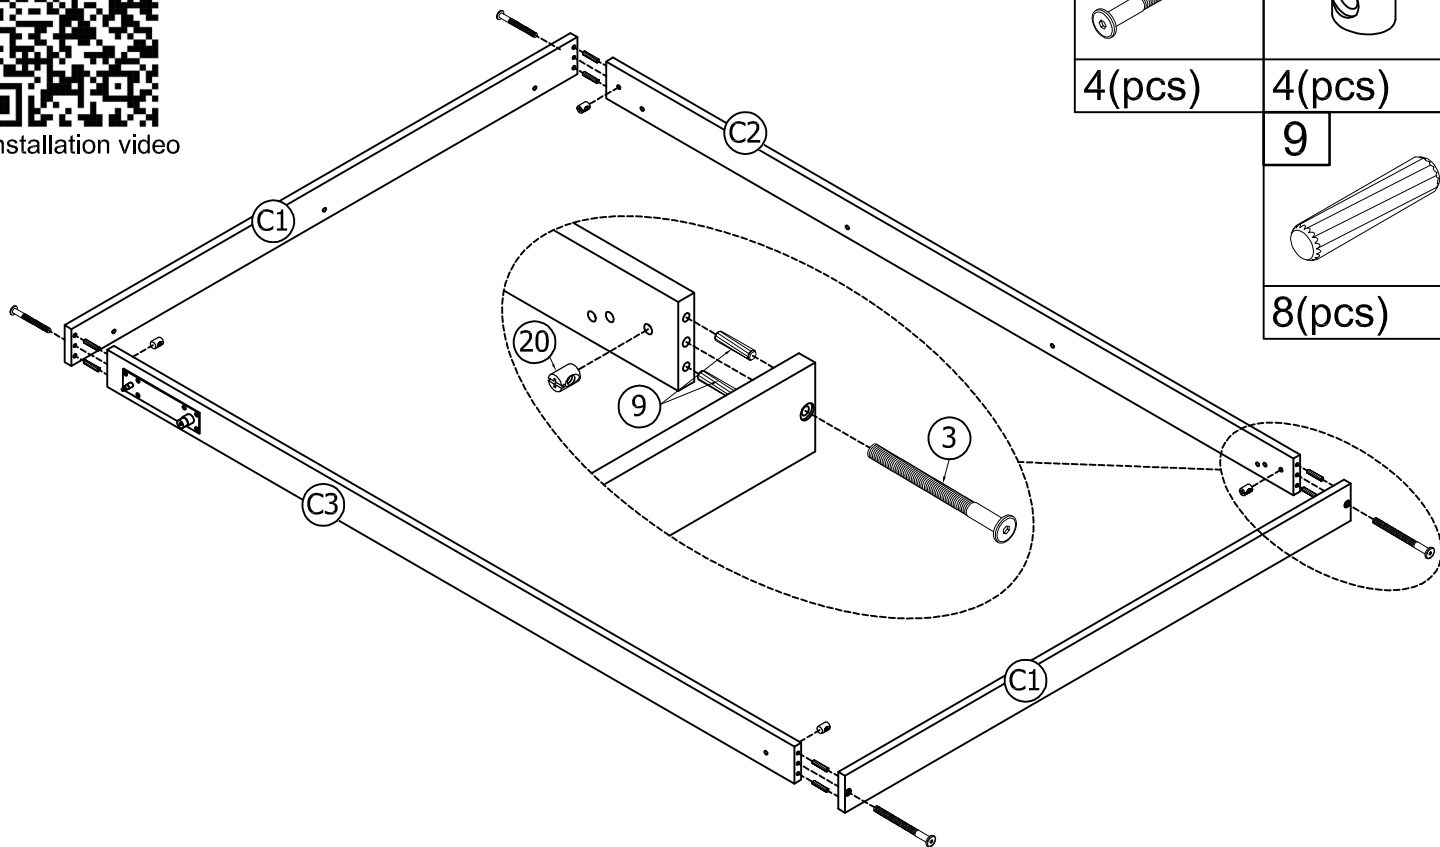STEP28: Following below illustration.



Installation video





3	20
	
4(pcs)	4(pcs)
	9
	
	8(pcs)

STEP29: Following below illustration.



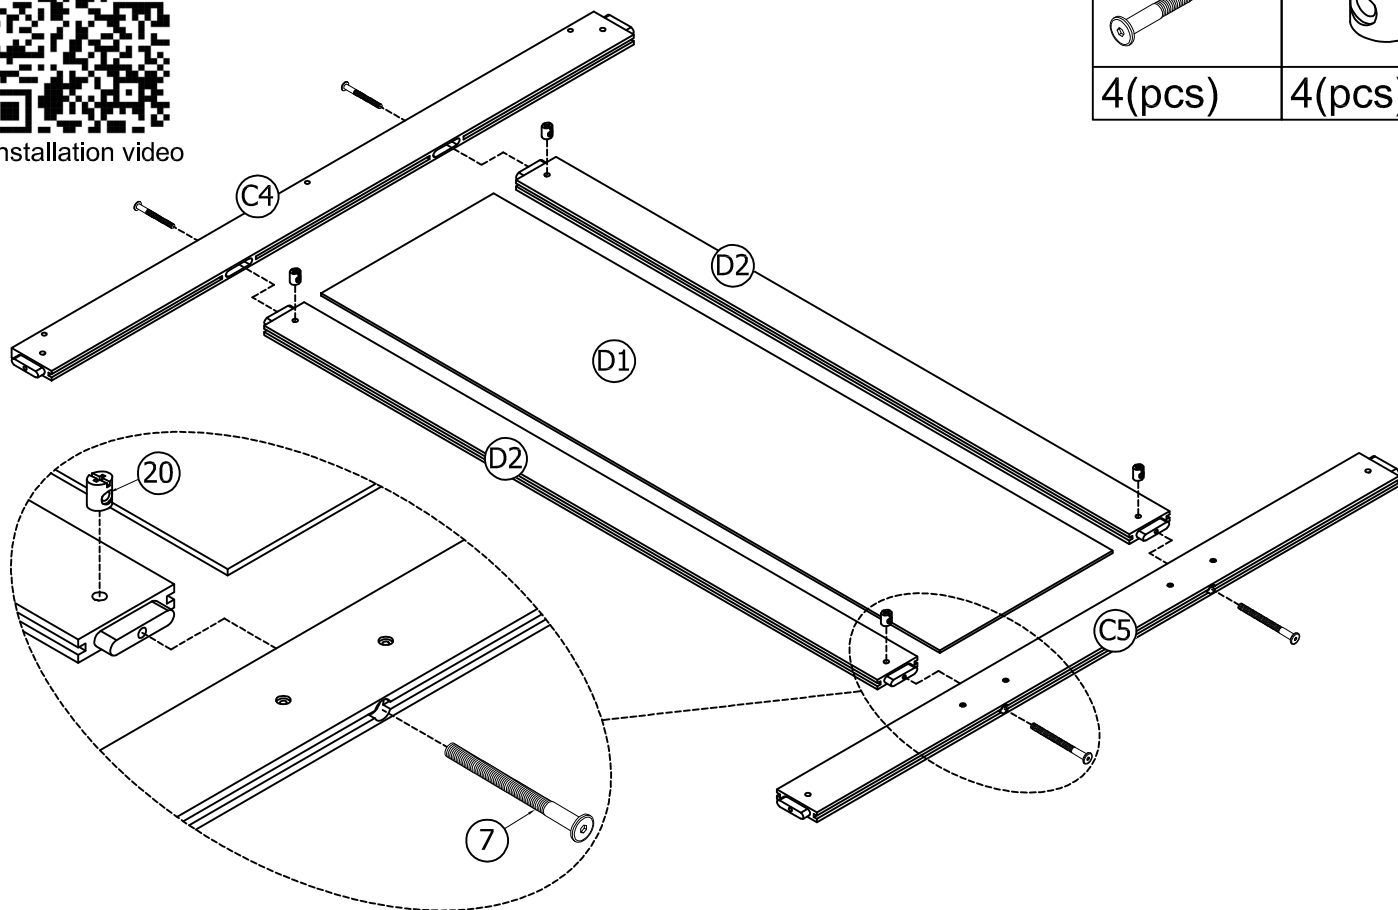Installation video





7	20
	
4(pcs)	4(pcs)

STEP30: Following below illustration.



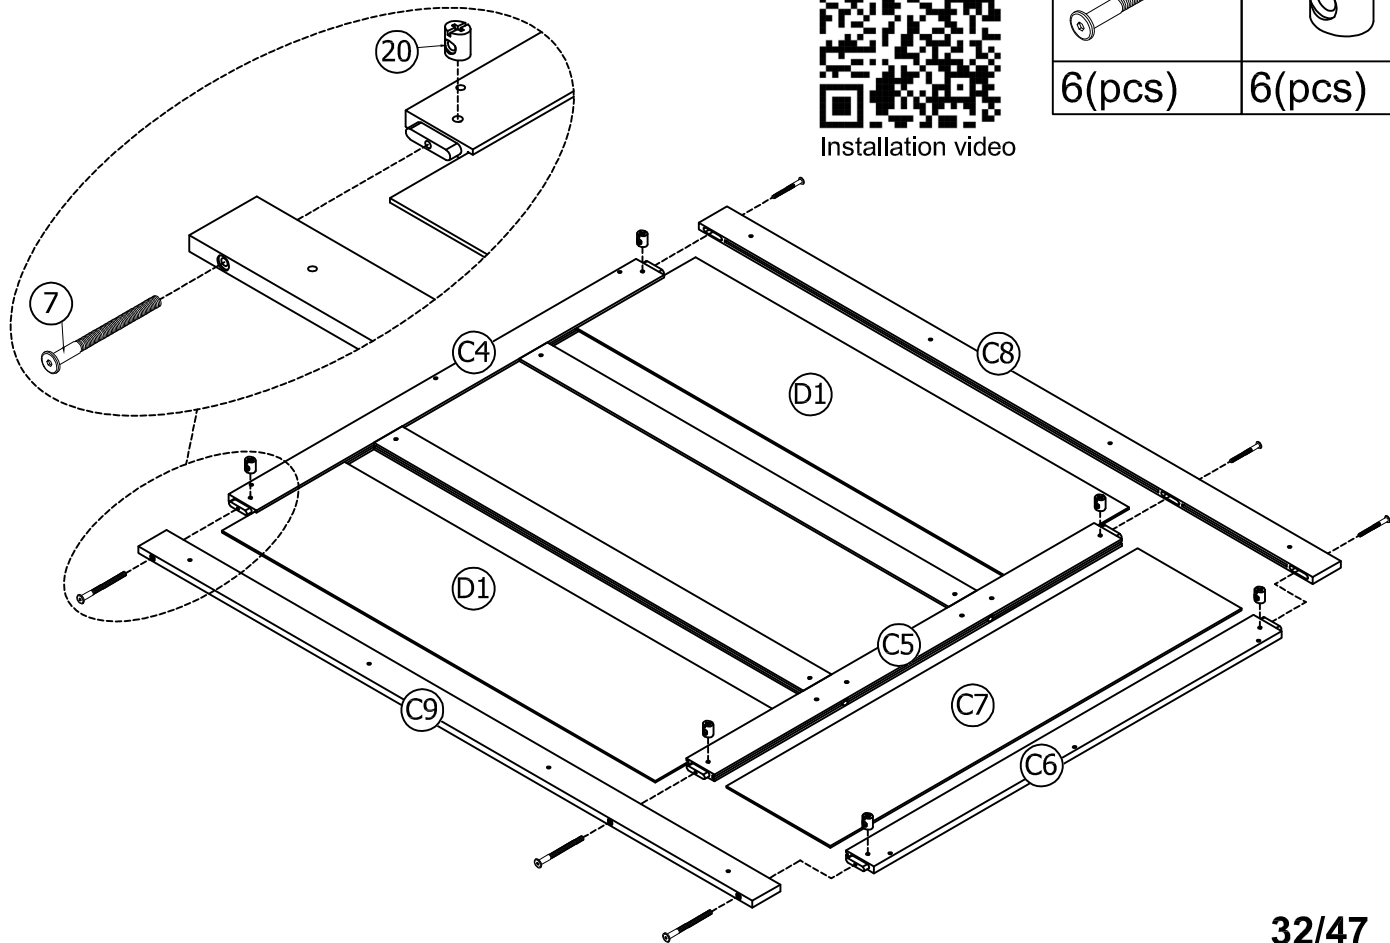Installation video




7	20
	
6(pcs)	6(pcs)

STEP31: Following below illustration.



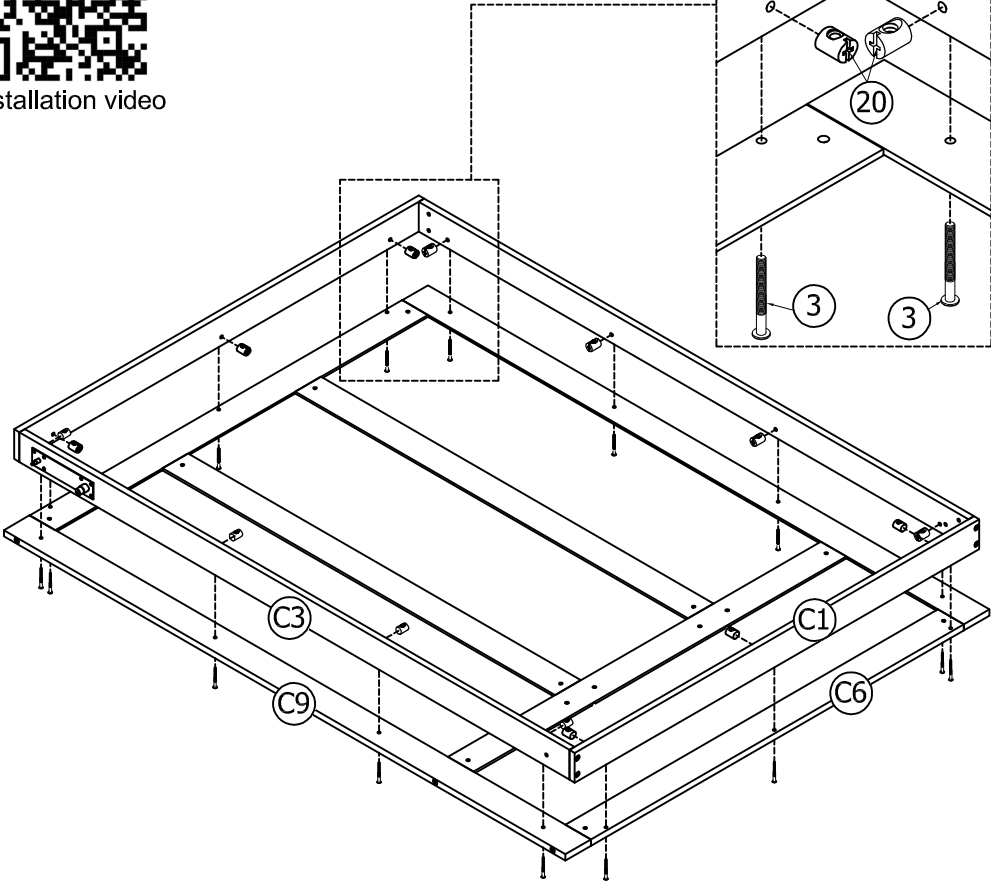Installation video




3	20
14(pcs)	14(pcs)

STEP32: Following below illustration.



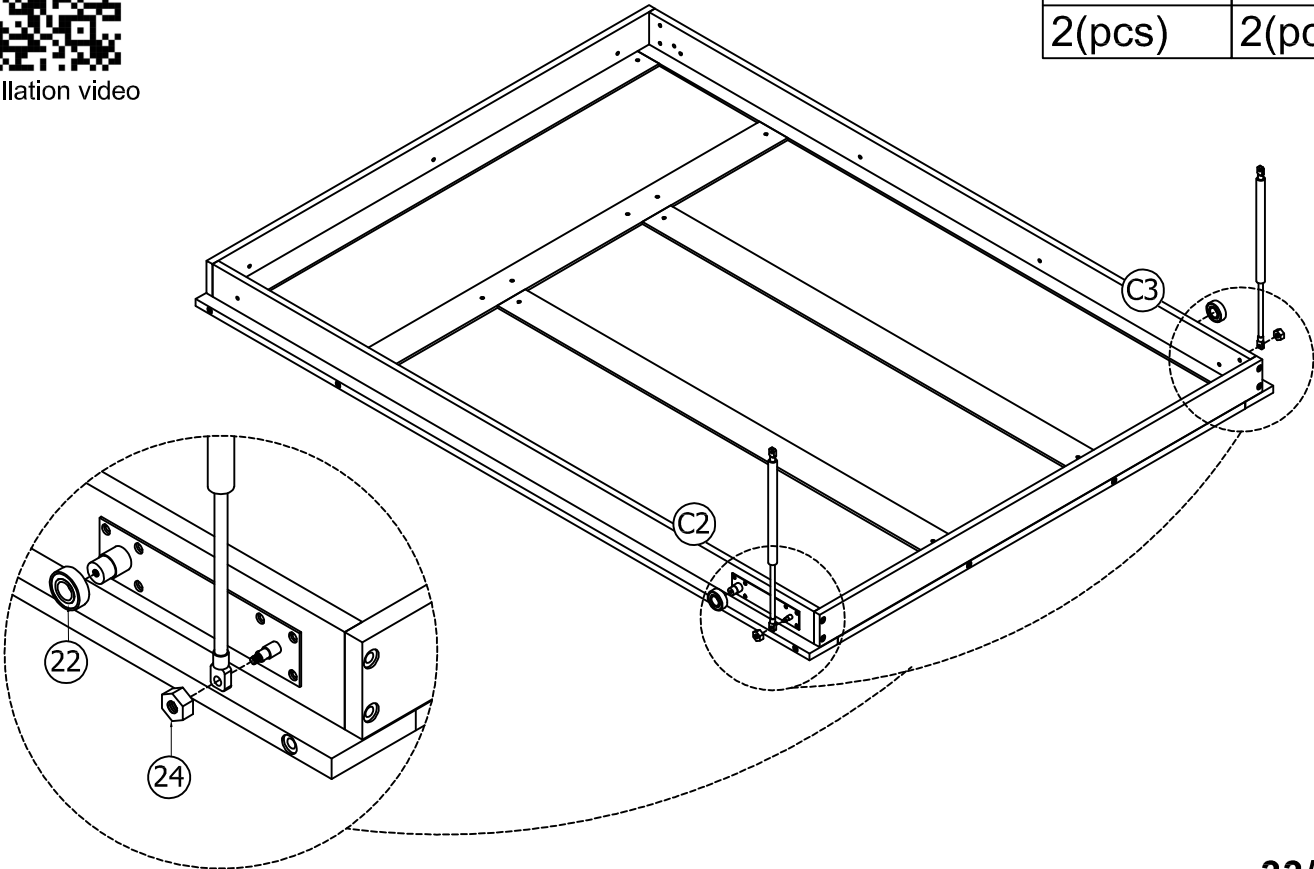Installation video



22	24
2(pcs)	2(pcs)

STEP33: Following below illustration.

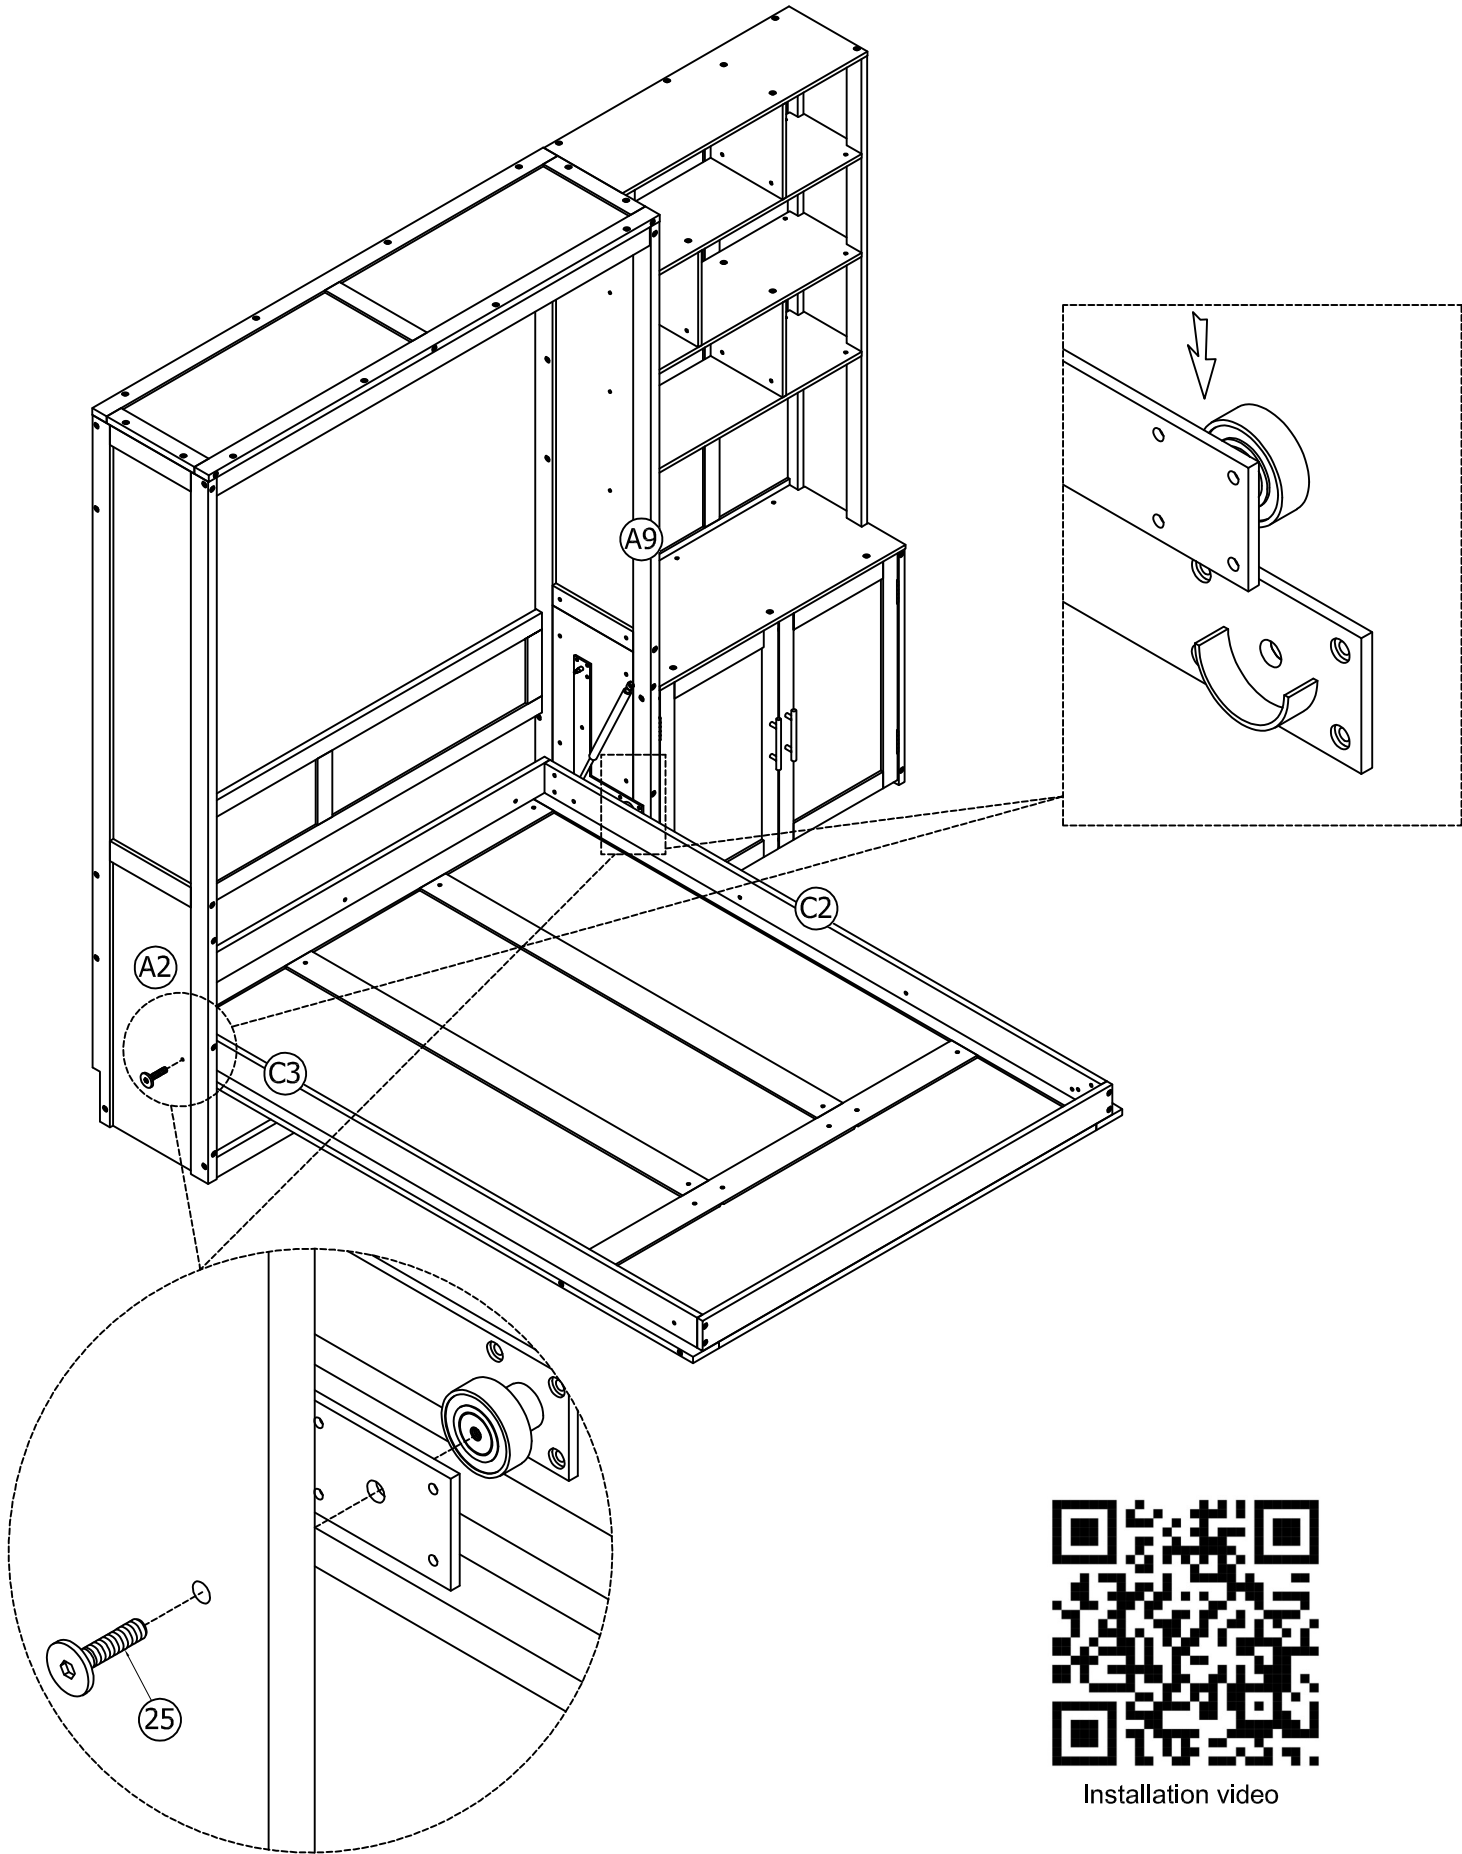


Four people are required to assemble and move this model.

25



2(pcs)



Installation video

STEP34: Following below illustration.

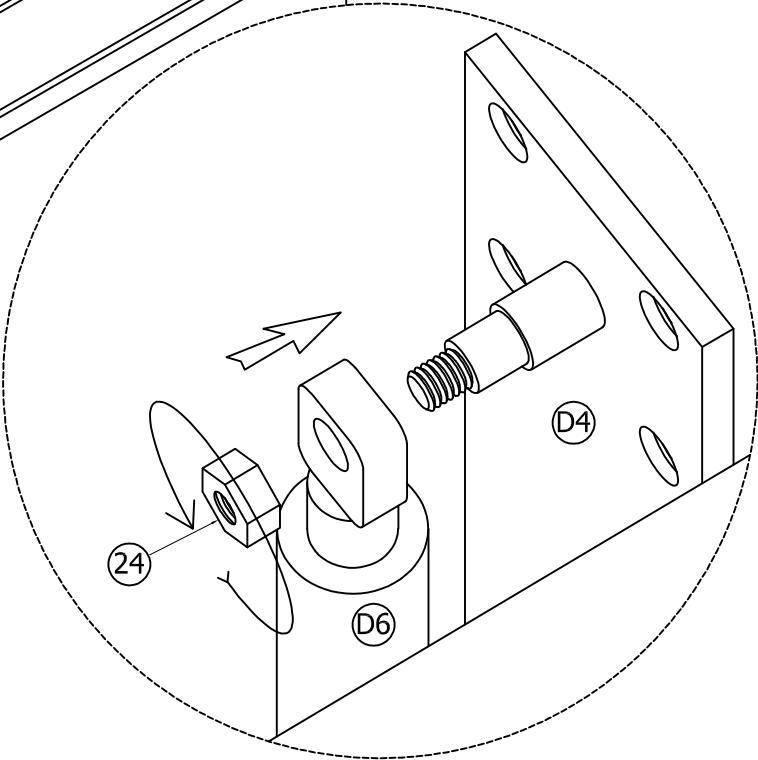
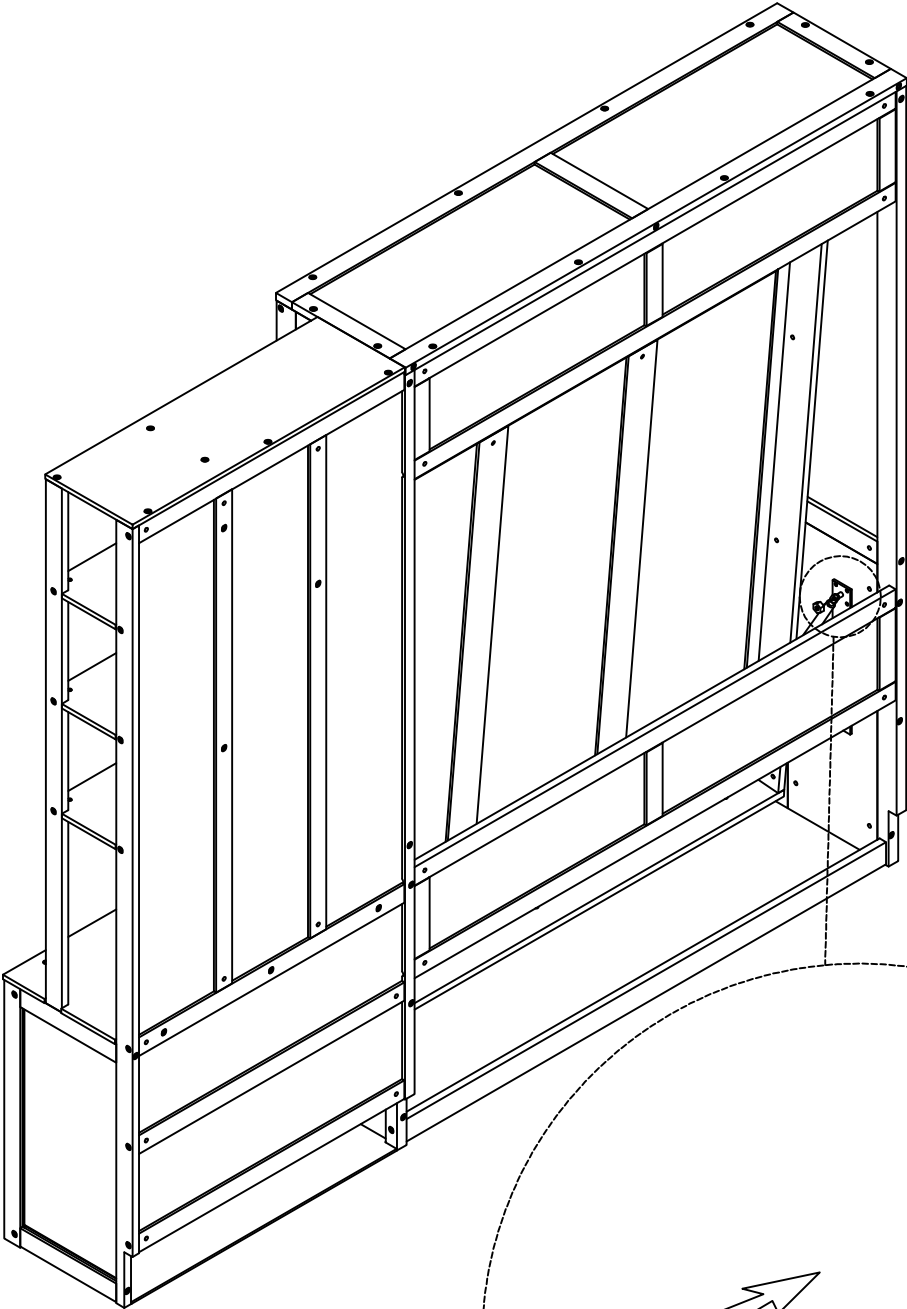
24



1(pc)



Four people are required to
assemble and move this model.



Installation video

STEP35: Following below illustration.

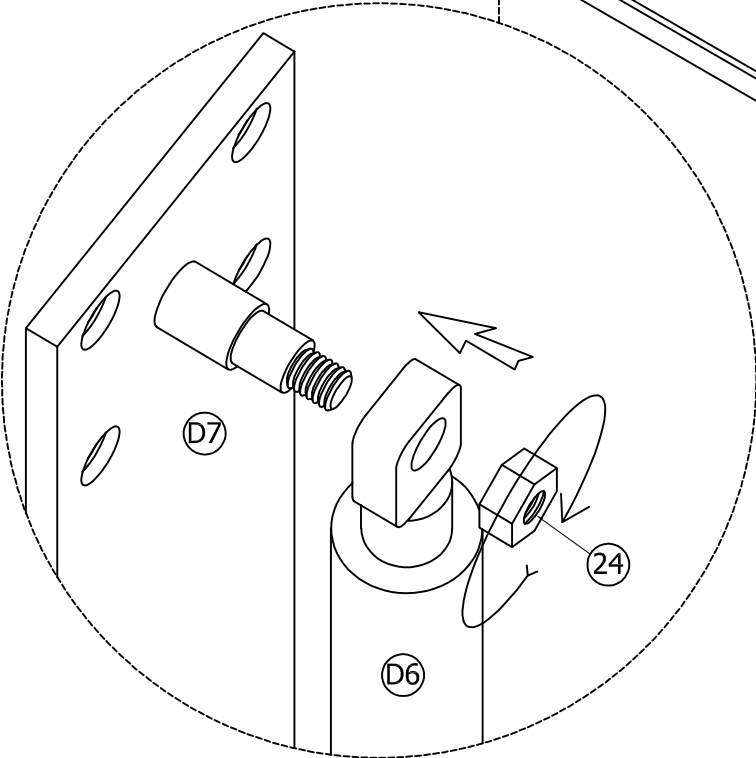
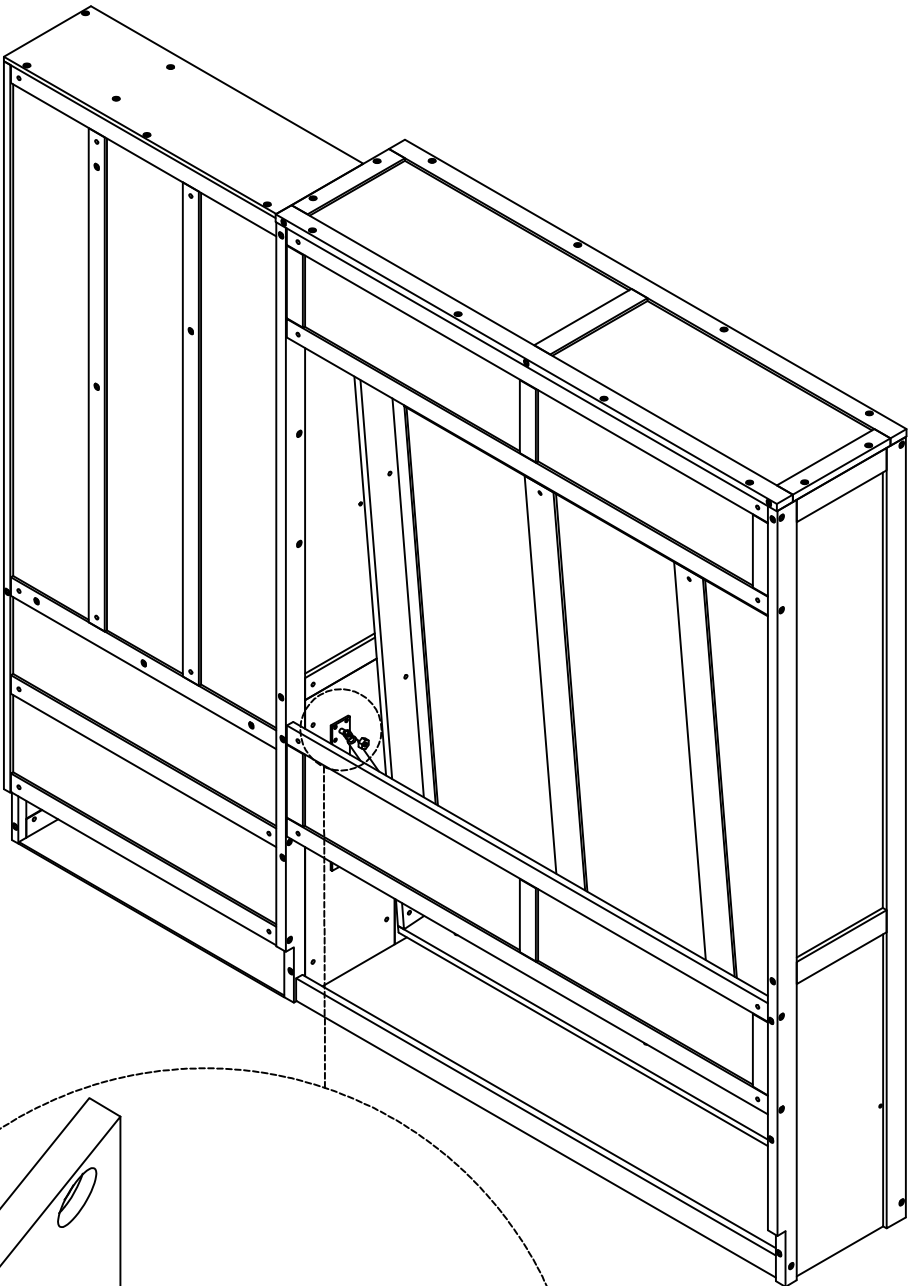
24



Four people are required to
assemble and move this model.



1(pc)




Installation video

STEP36: Following below illustration.



Four people are required to assemble and move this model.

26	1
	
2(pcs)	2(pcs)
	23
	
	2(pcs)


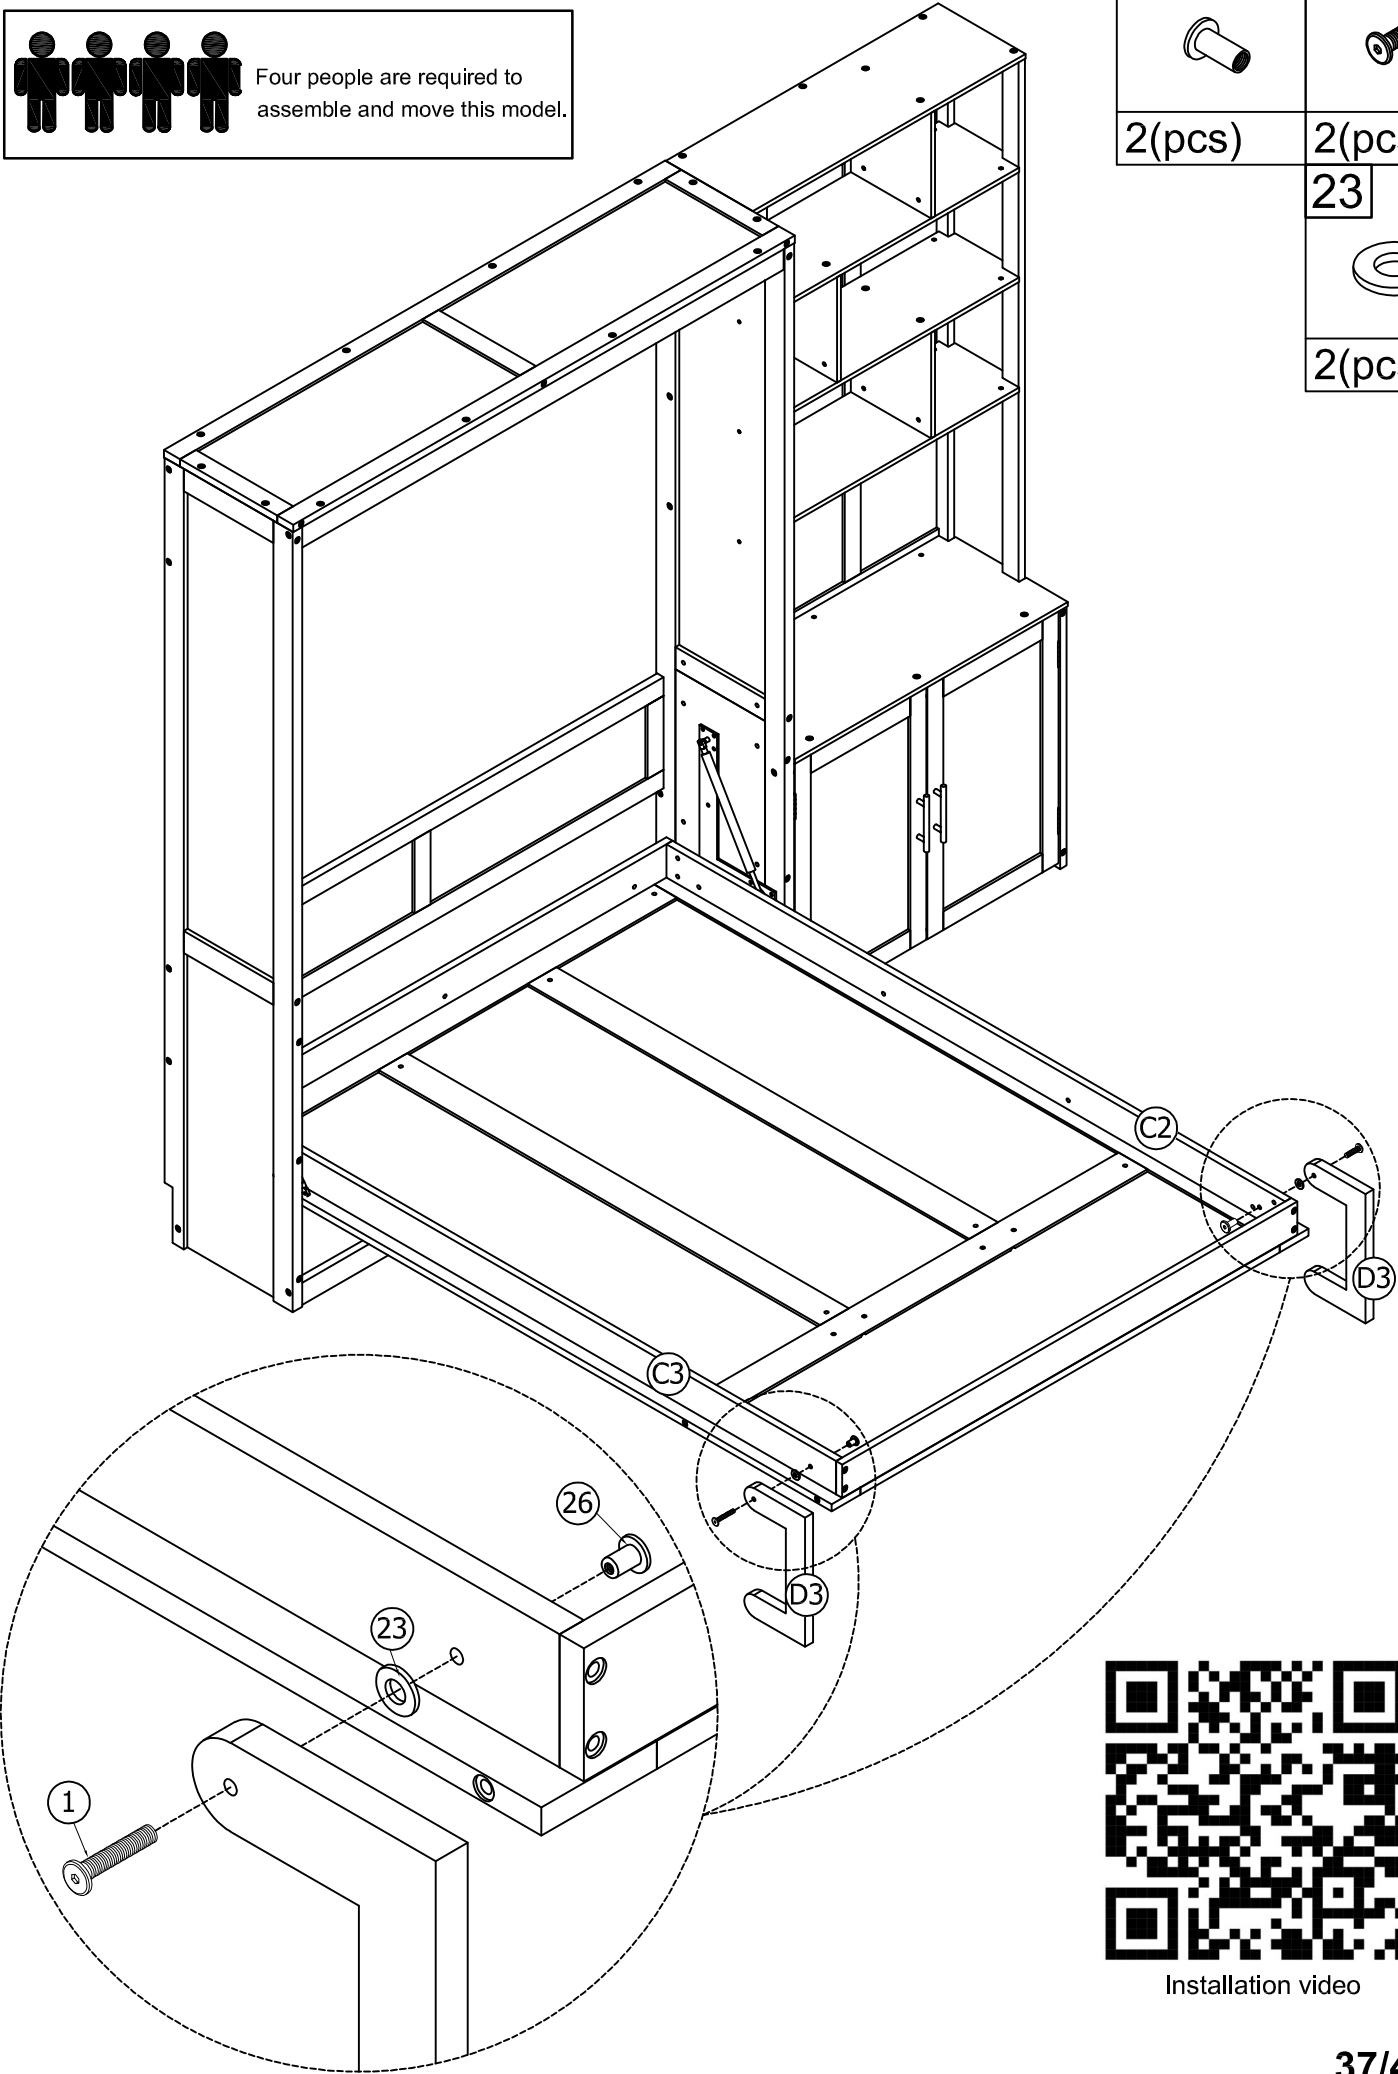




Installation video

STEP37: Following below illustration.



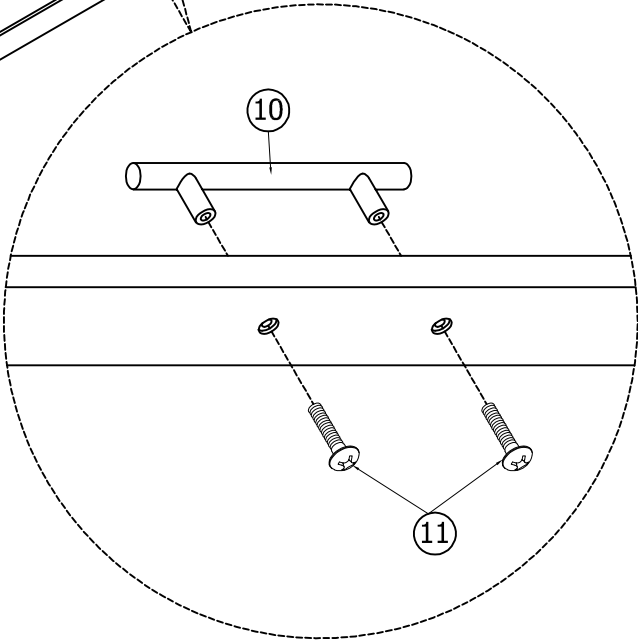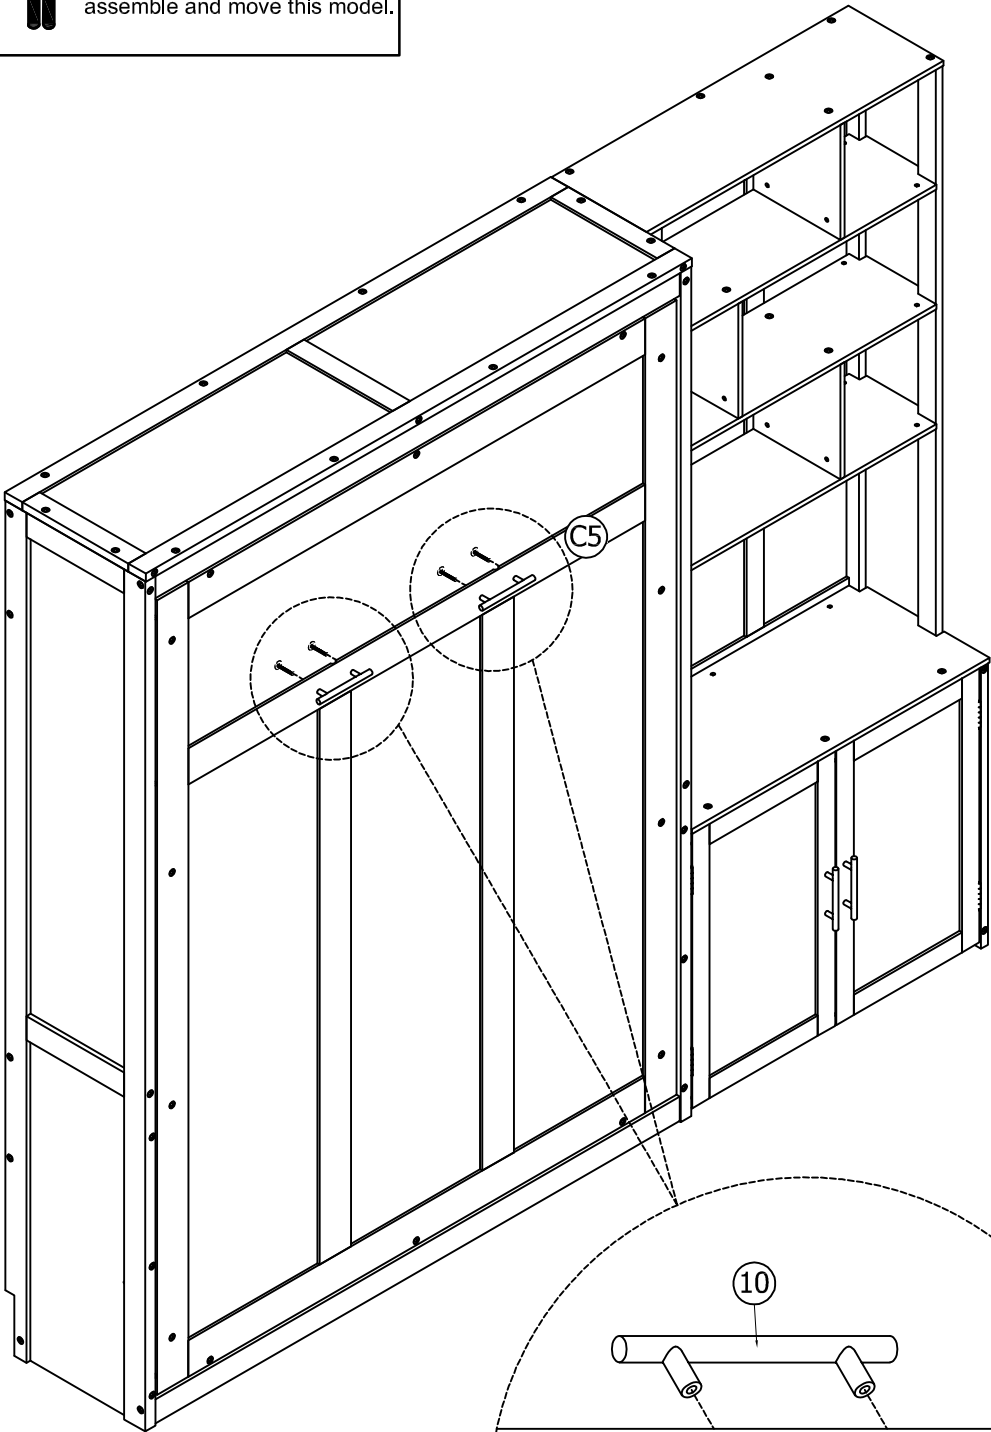Four people are required to assemble and move this model.




- 11
- 4(pcs)
- 10
- 2(pcs)





Installation video

STEP38: Following below illustration.

21

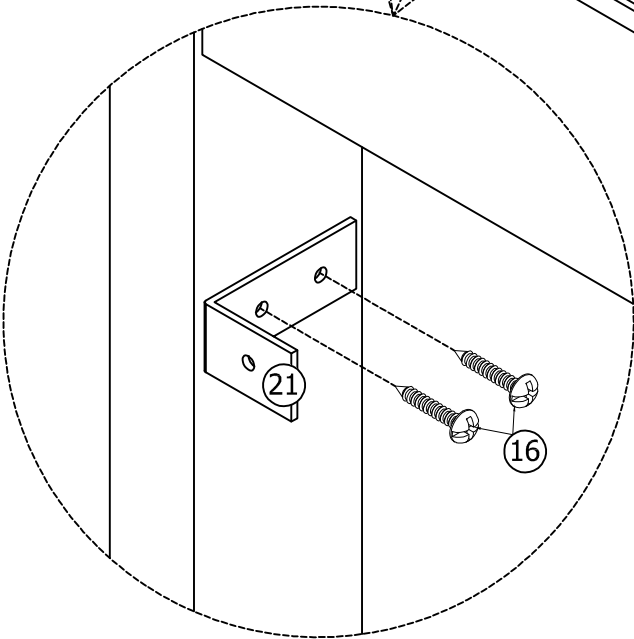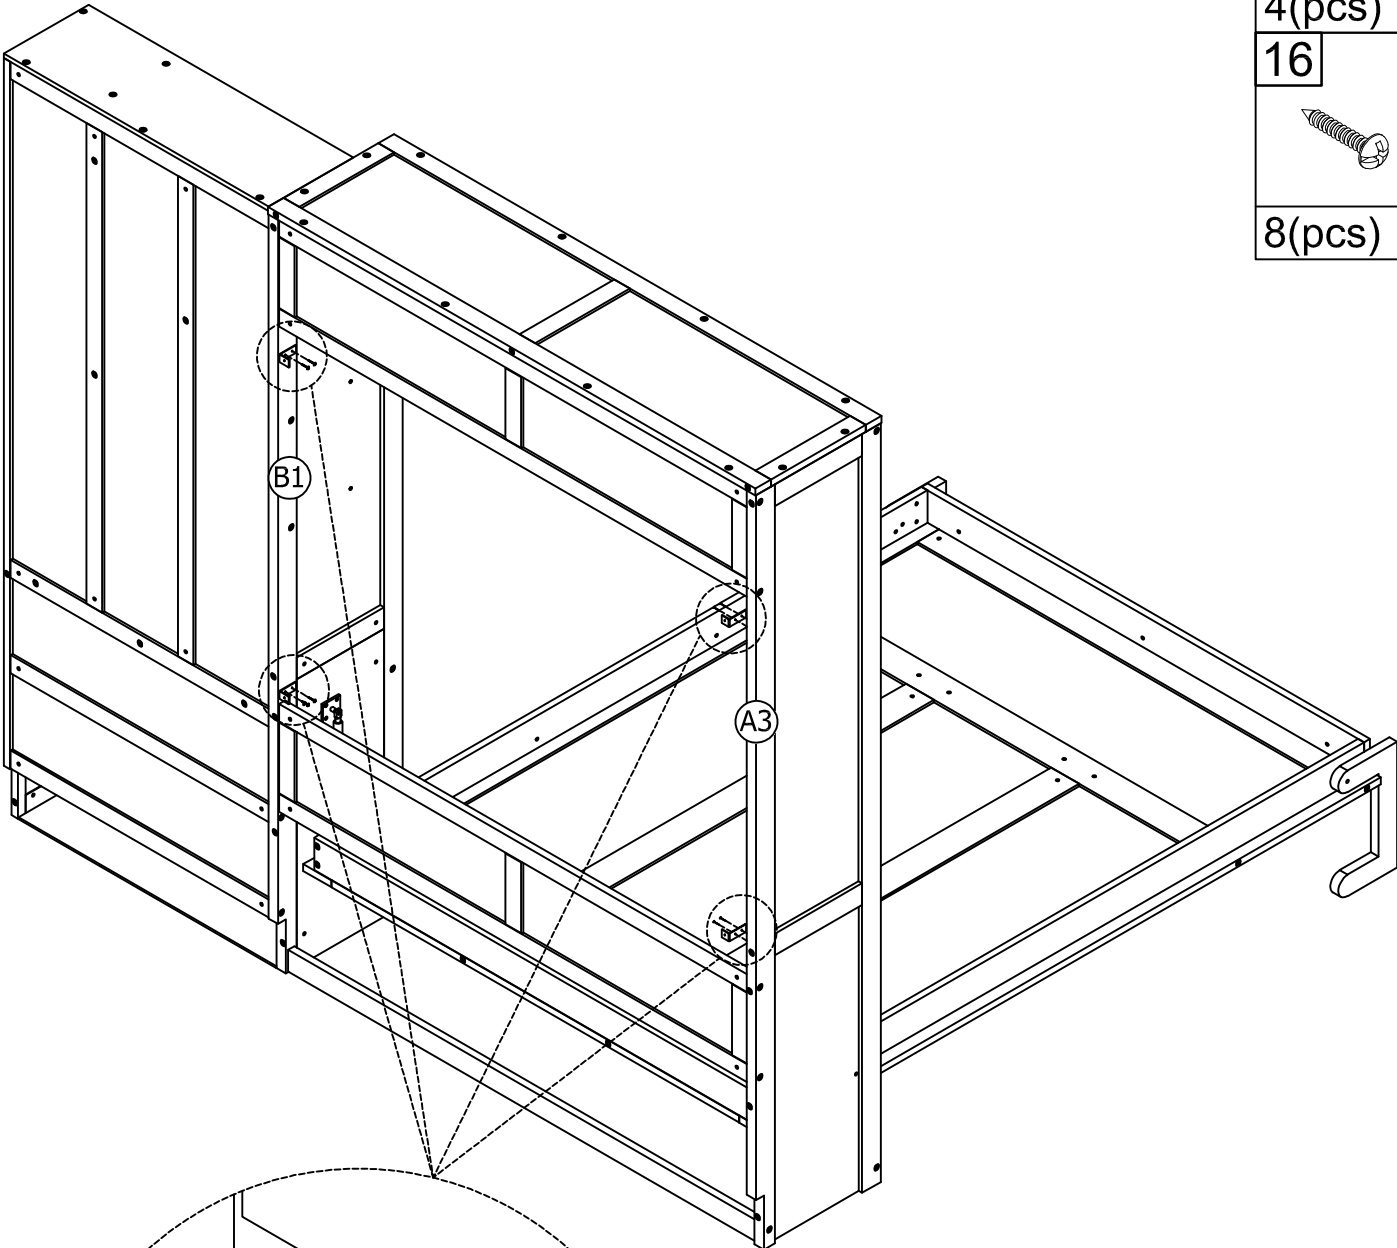4(pcs)
16


8(pcs)





Installation video

STEP39: Following below illustration.

30




18(pcs)

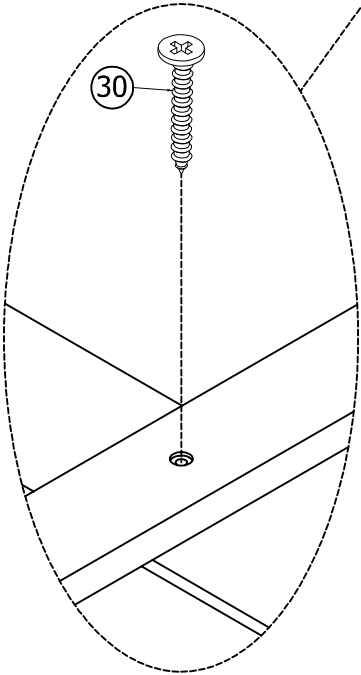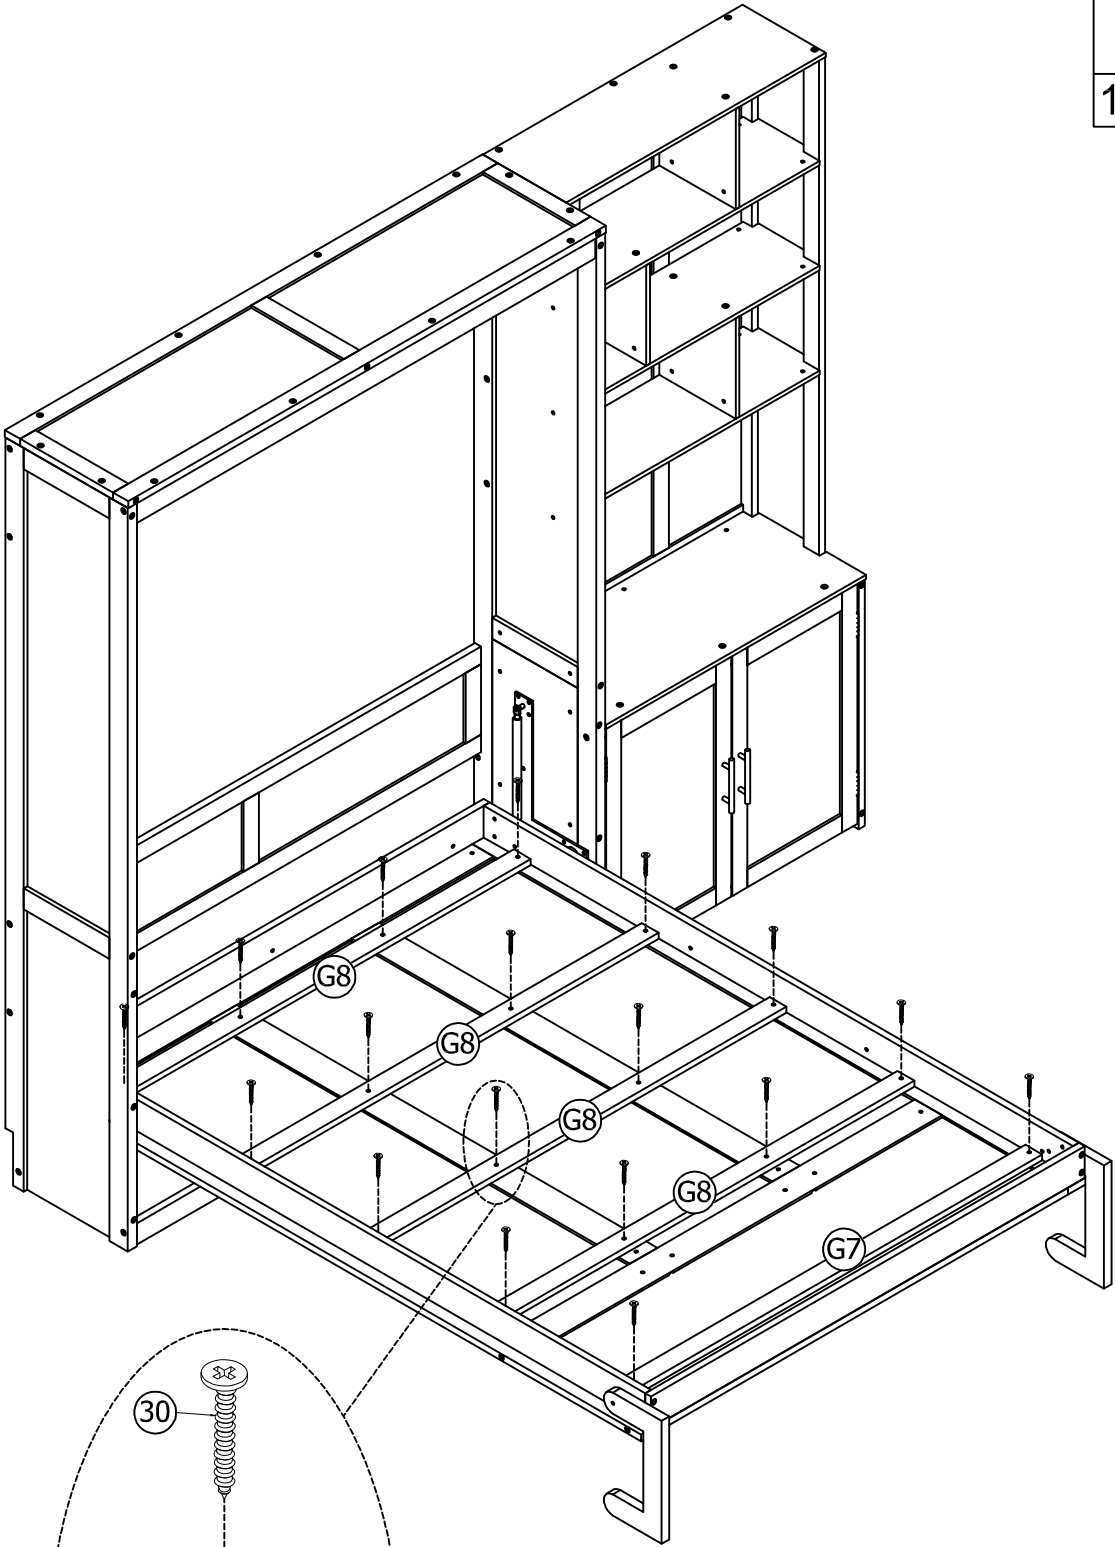


Installation video

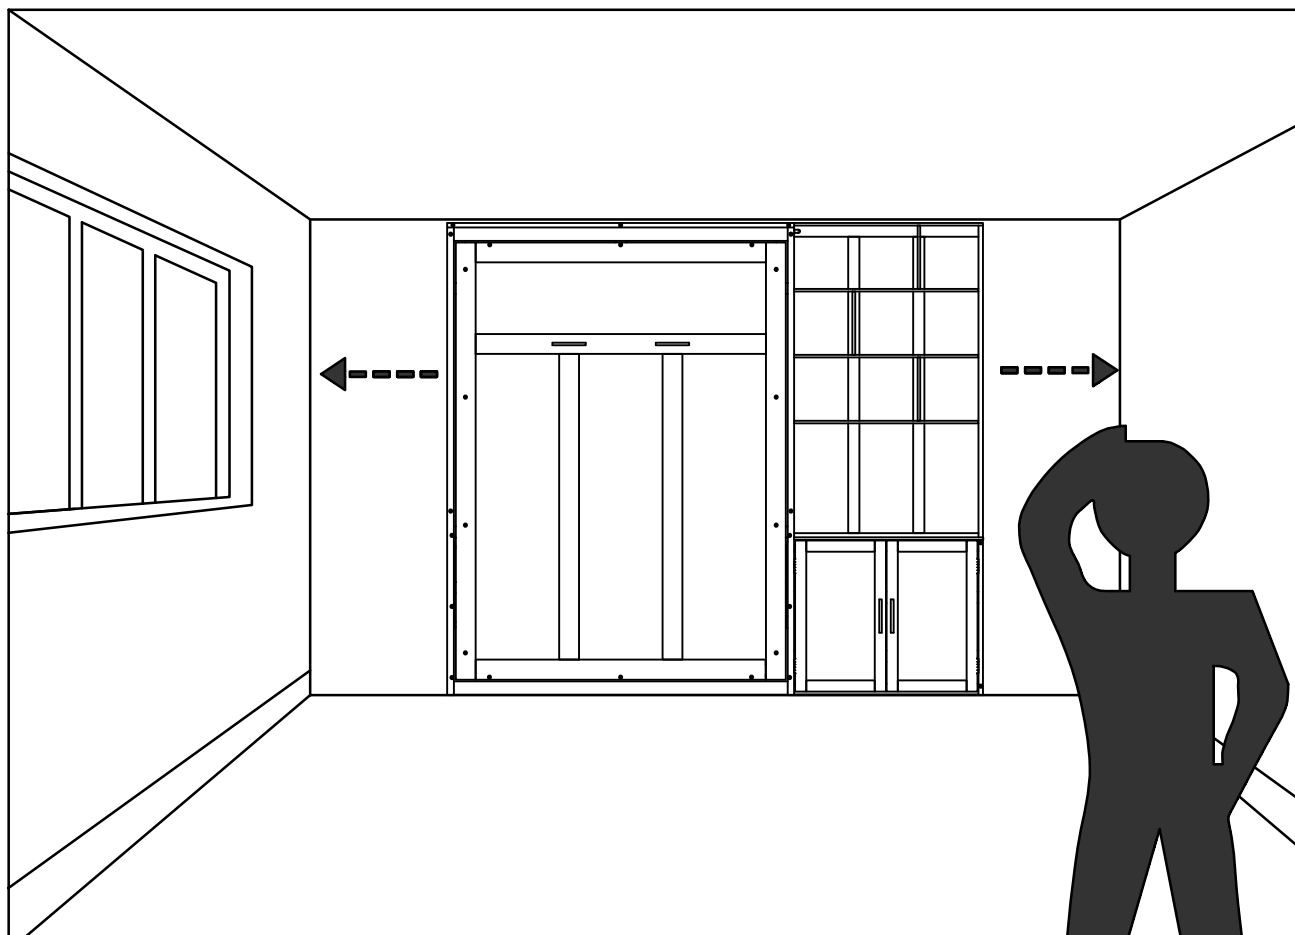
1- Determine the position of the bed in the room.



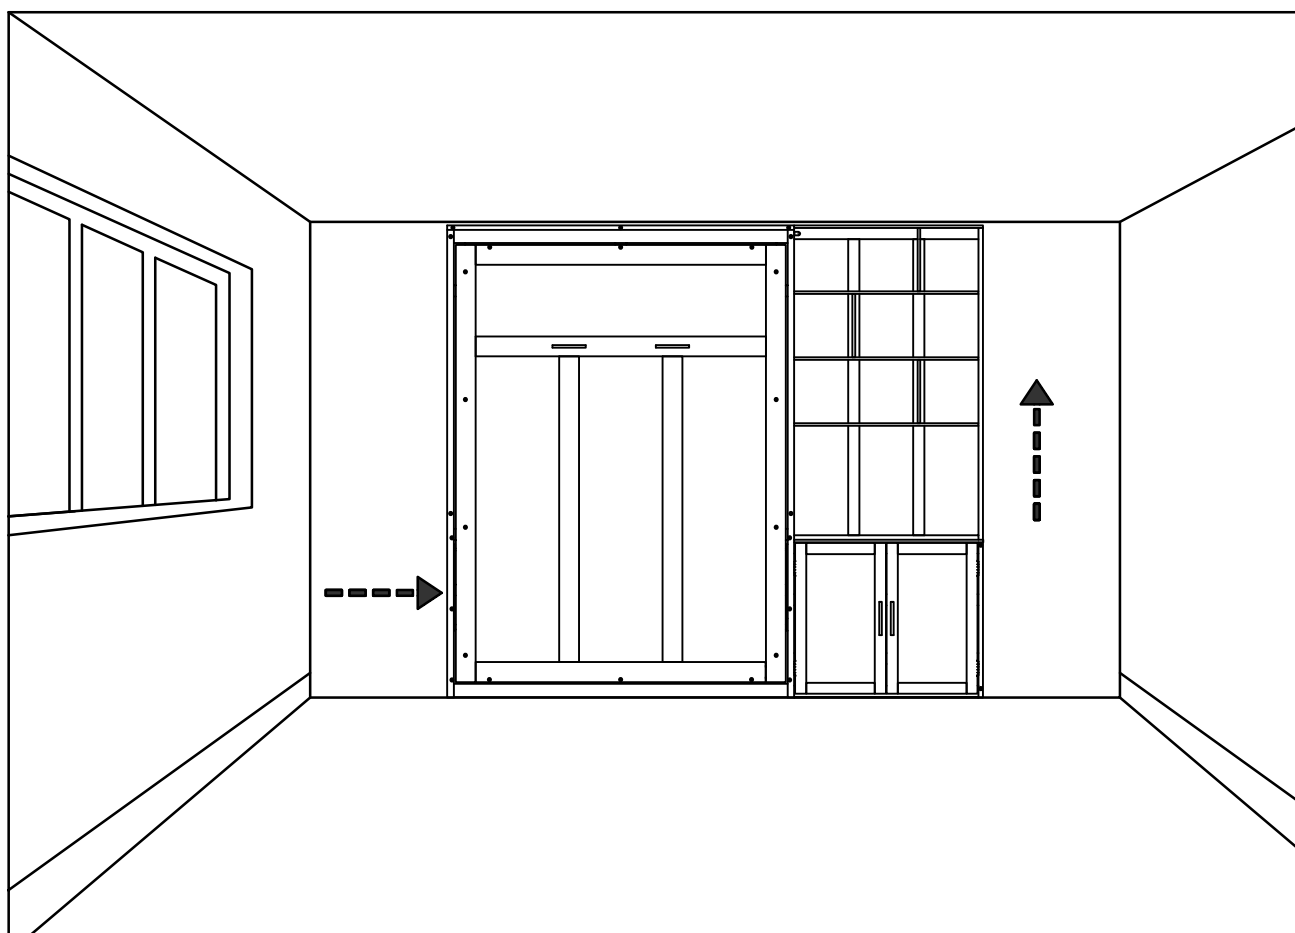
2- Put the bed back in its place. Please keep it vertical and horizontal.



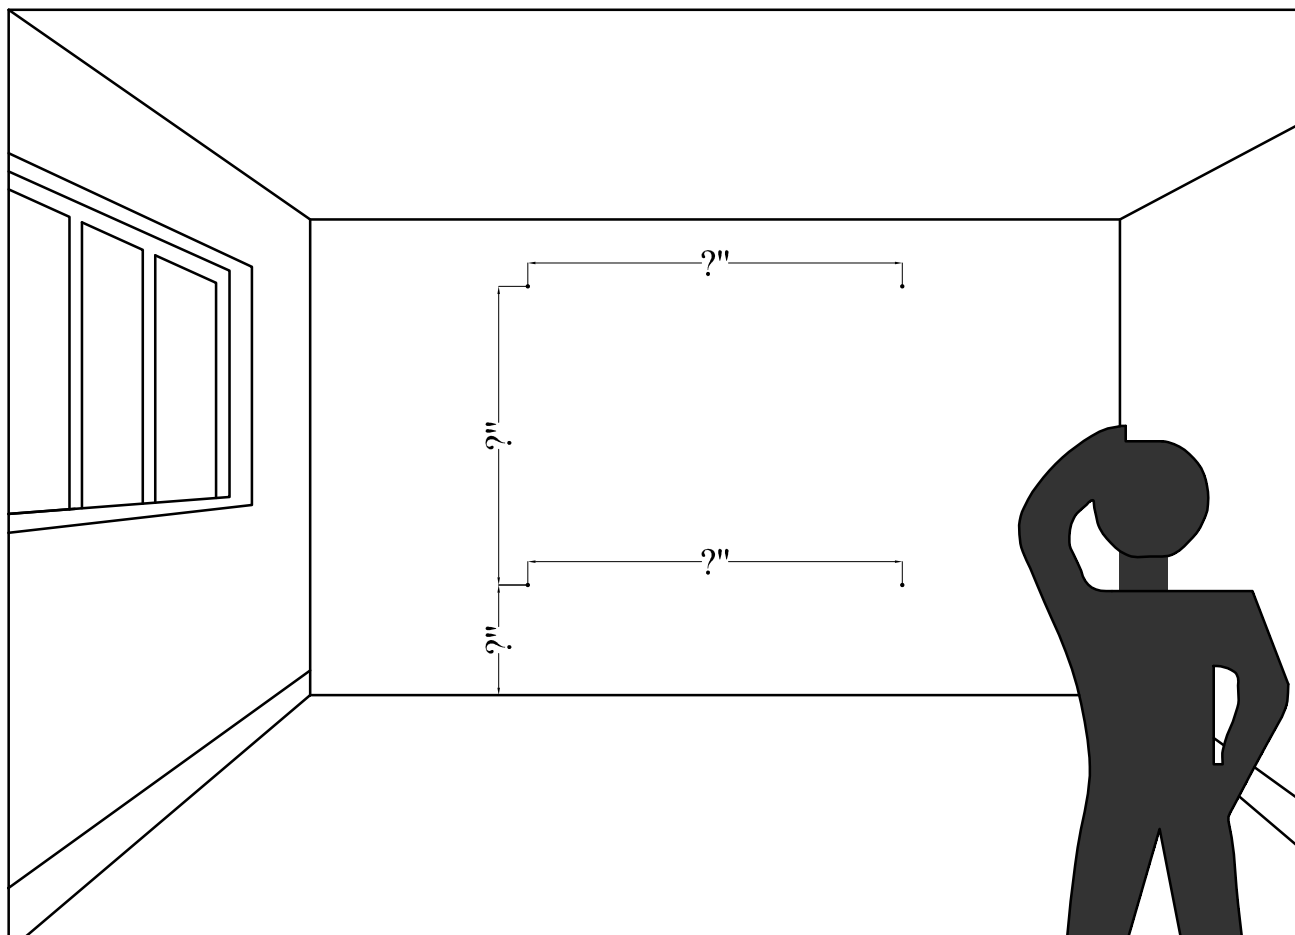3- Mark the points drill holes according to actual products



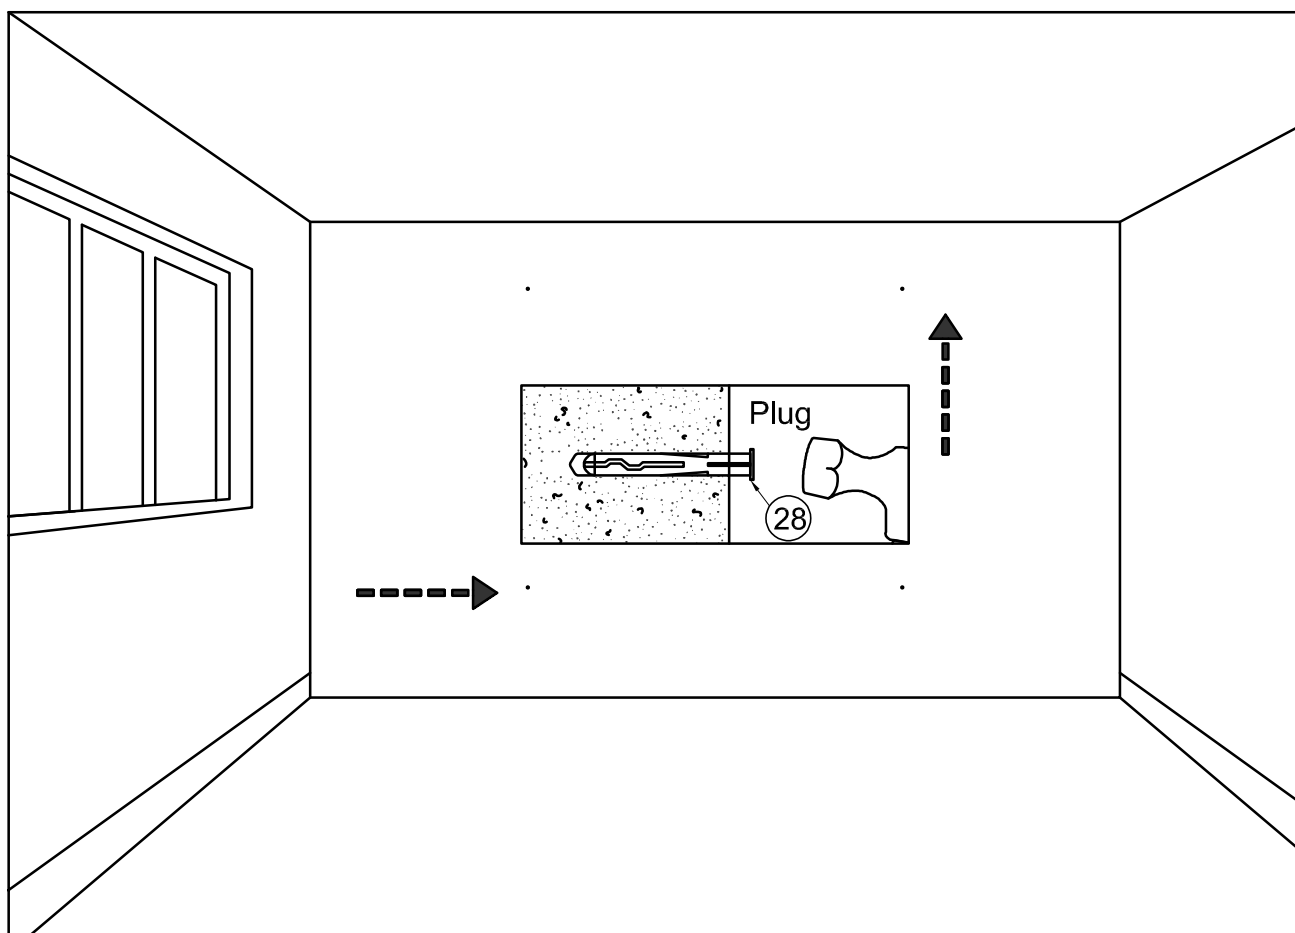4- Drill the positions marked in step 3 and secure the plug.



Wall attached item only:

A guide to wall mounting and fixings

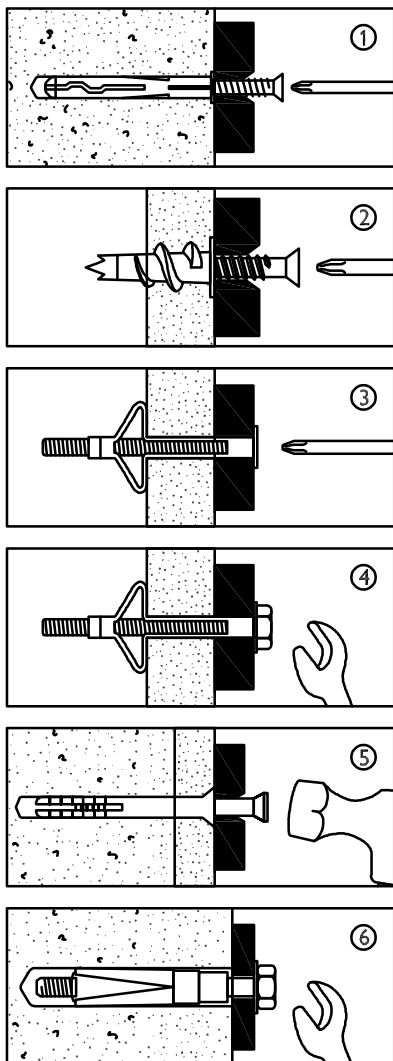


Warning

Wall fixing screws are not included, since different wall materials require different types of screws / fixings. Please ensure you use the correct screws / fixings for your type of walls and seek professional advice if you are not sure.

Failure of the product due to incorrect fixings is the responsibility of the installer.

Important: When drilling into the walls always check that there are no hidden wires or pipes etc.



Types of walls

You can use one of the following types of wall plug if your walls are made of brick, breezeblock, concrete, stone or wood.

1. Genral Purpose wall plug

Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general - purpose wall plugs can be used.

2. Plasterboard wall plug

For use when attaching light loads on to plasterboard partitions.

3. Cavity Fixing wall plug

For use with plasterboard partitions or hollow wooden doors.

4. Cavity Fixing - Heavy Duty wall plug

For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

5. Hammer Fixing wall plug

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

6. Shield Anchor wall plug - Heavy loads

For use with heavier load such as TV and HI-Fi speakers and satellite dishes etc.



Care and maintenance

Safety: Periodically check all fittings and wall fixings to ensure they have not come loose and retighten as necessary.

STEP40: Following below illustration.

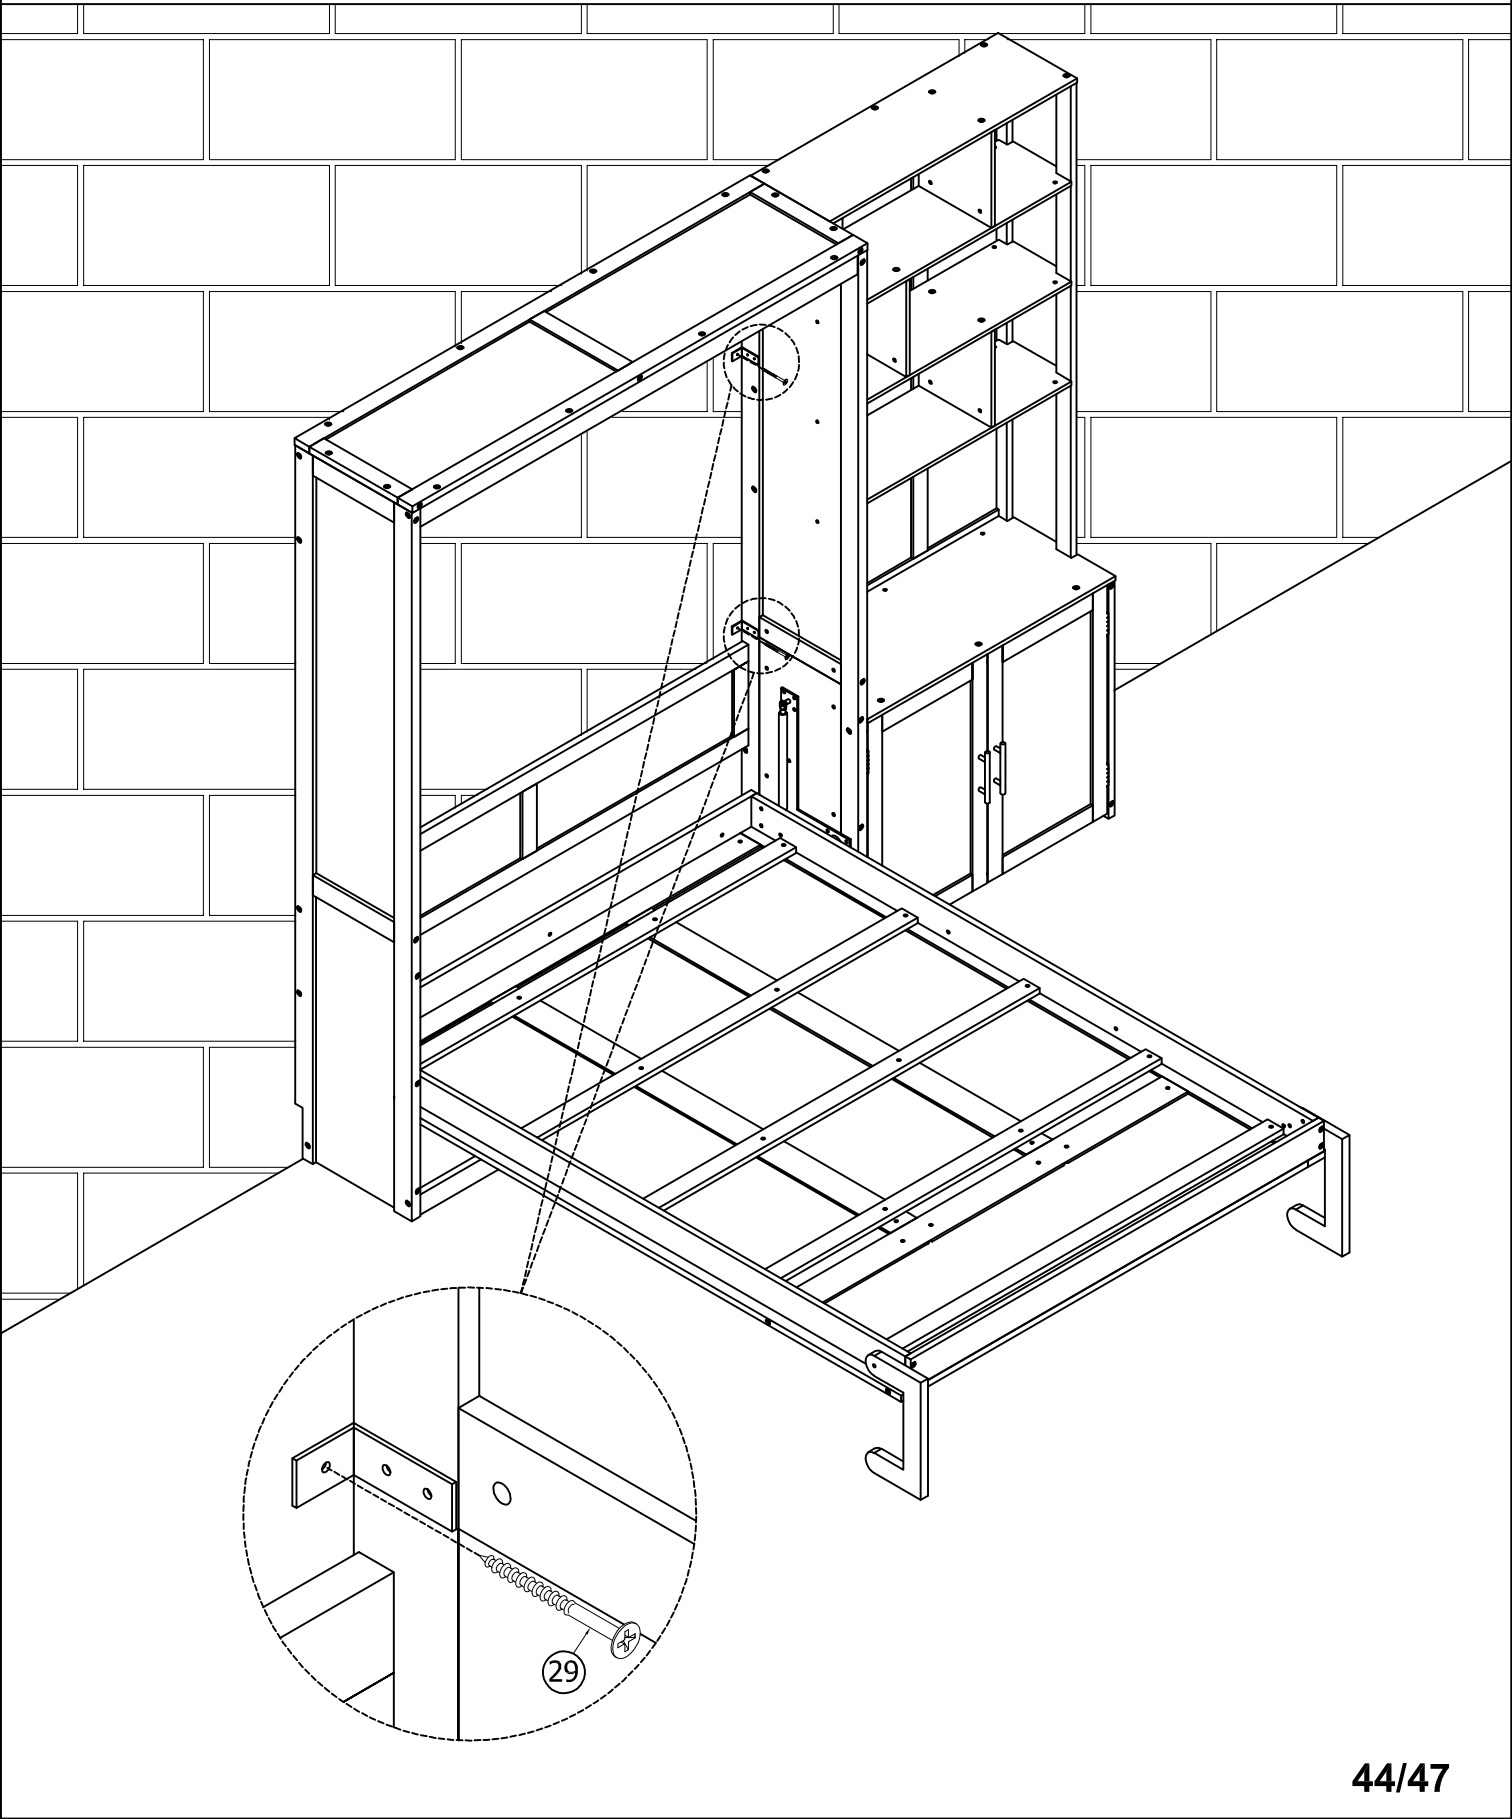
29



2(pcs)



.Requires 4 people to assemble
(2 people hold the large cabinet
in place and 2 people tilt the bed
until accessories are in place)




STEP41: Following below illustration.



29




2(pcs)



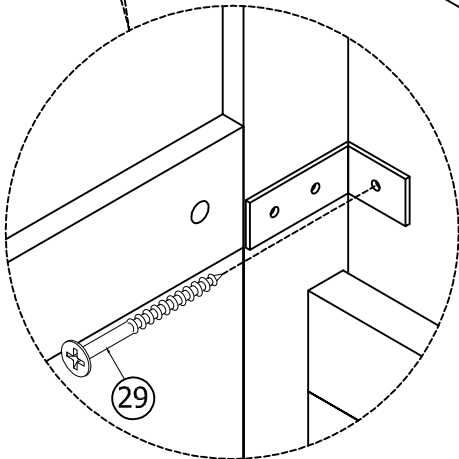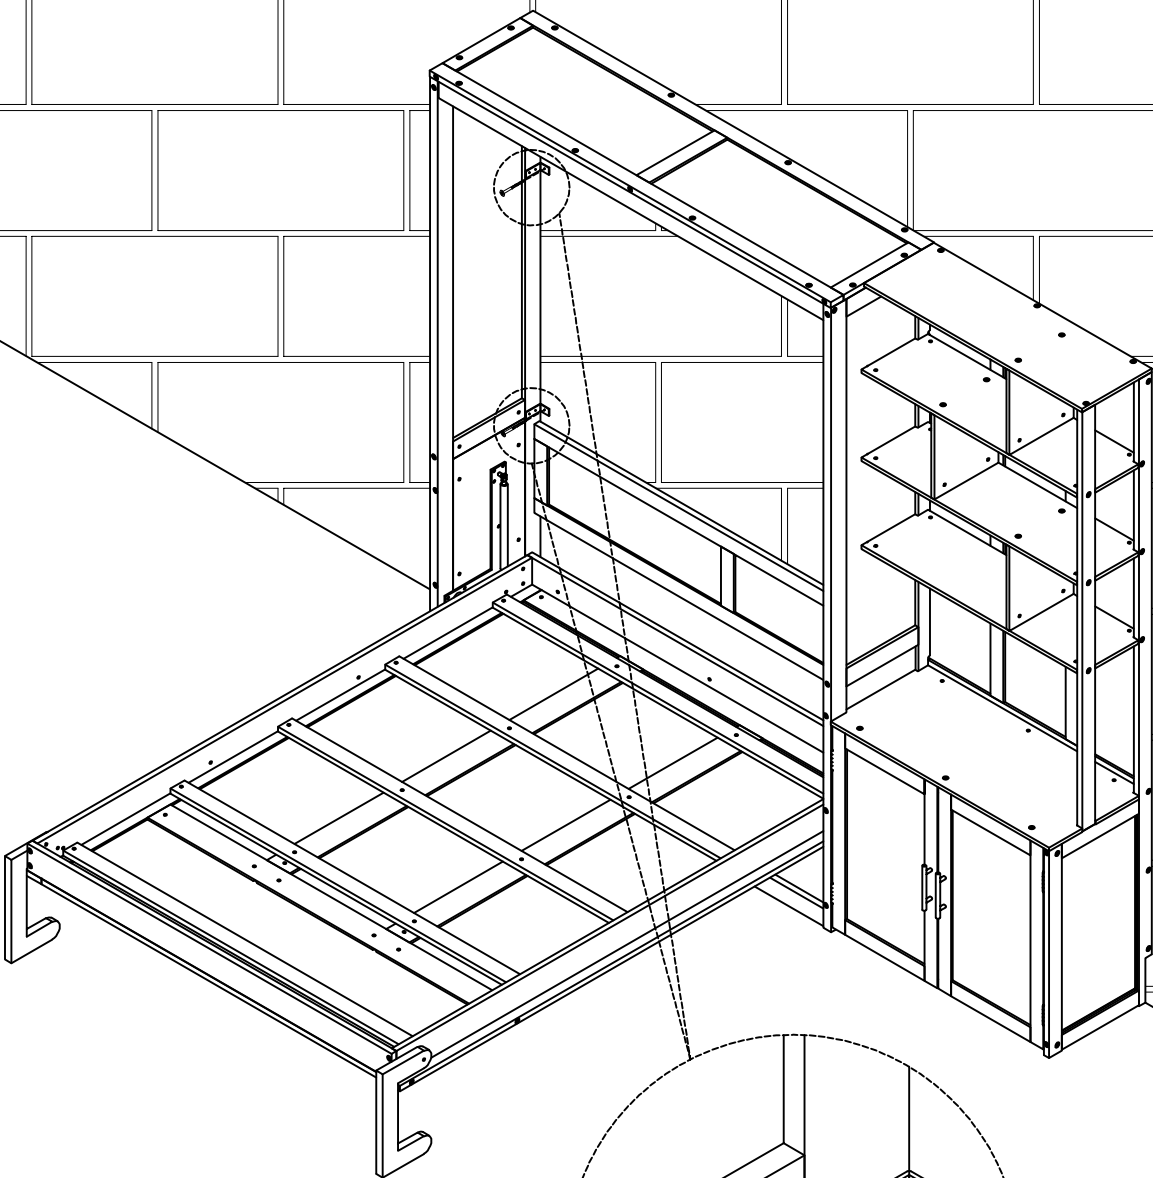
.Requires 4 people to assemble
(2 people hold the large cabinet
in place and 2 people tilt the bed
until accessories are in place)



OPTION 2

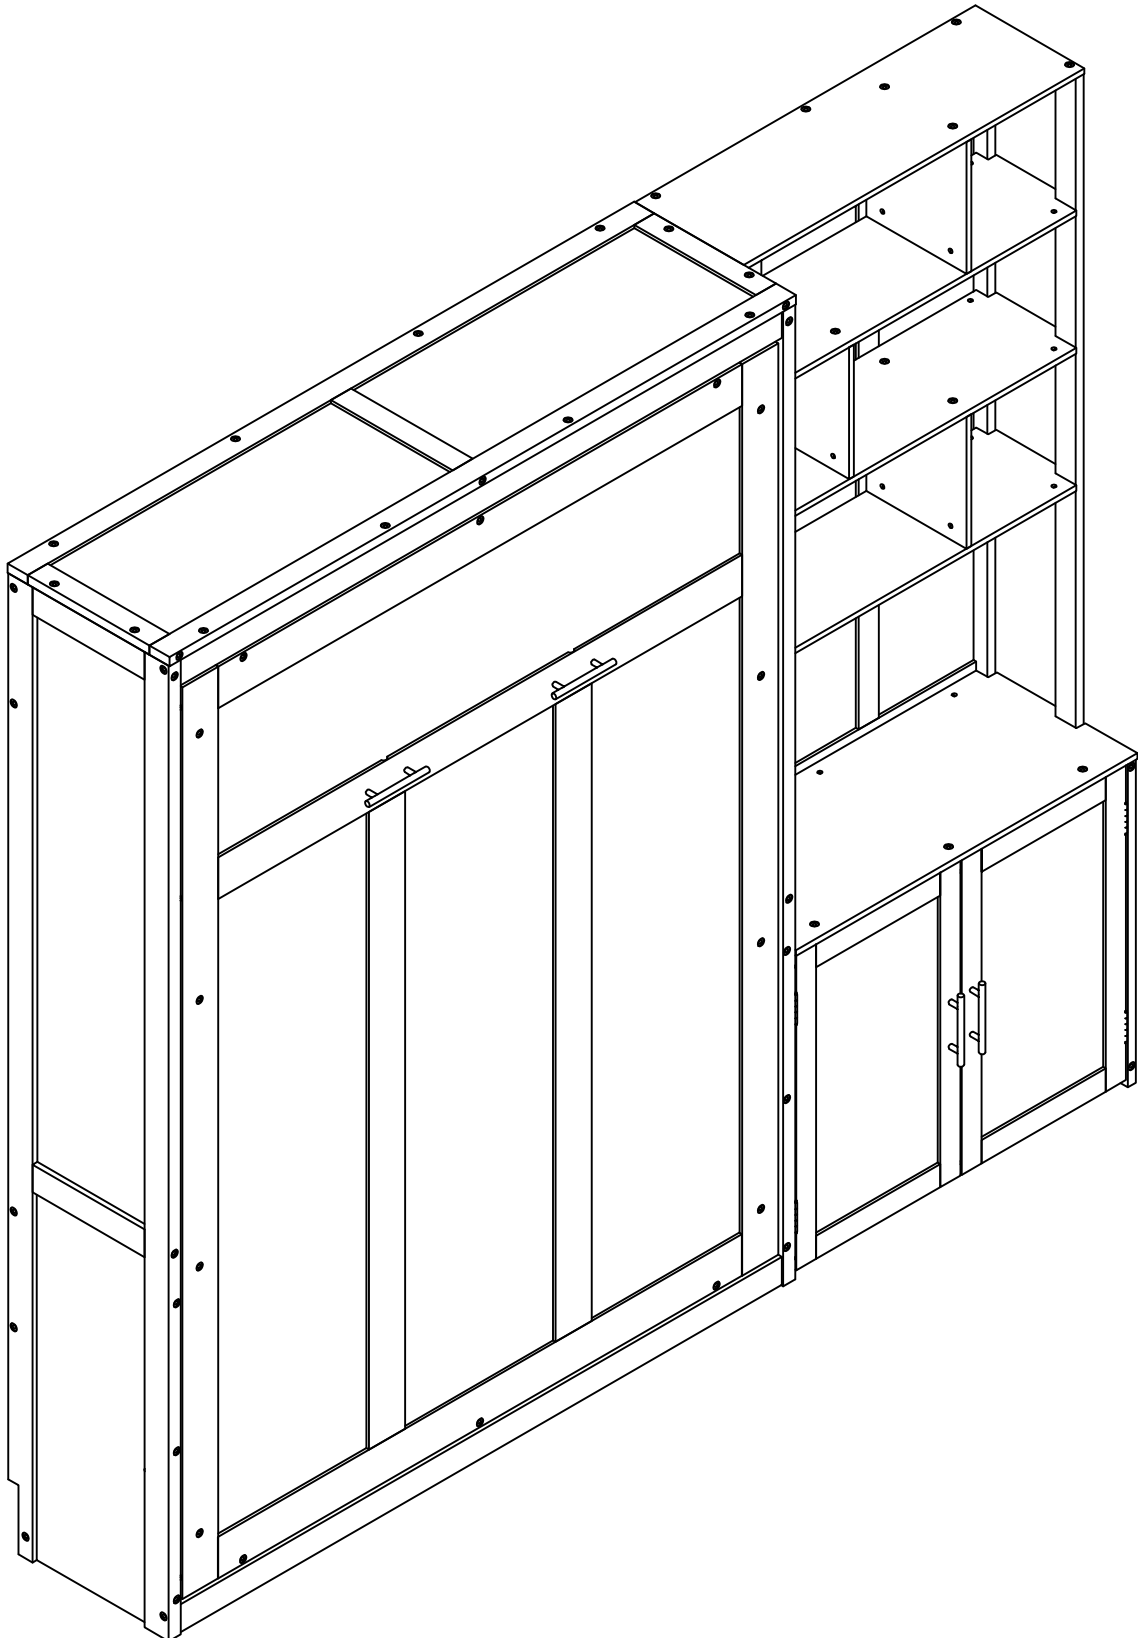

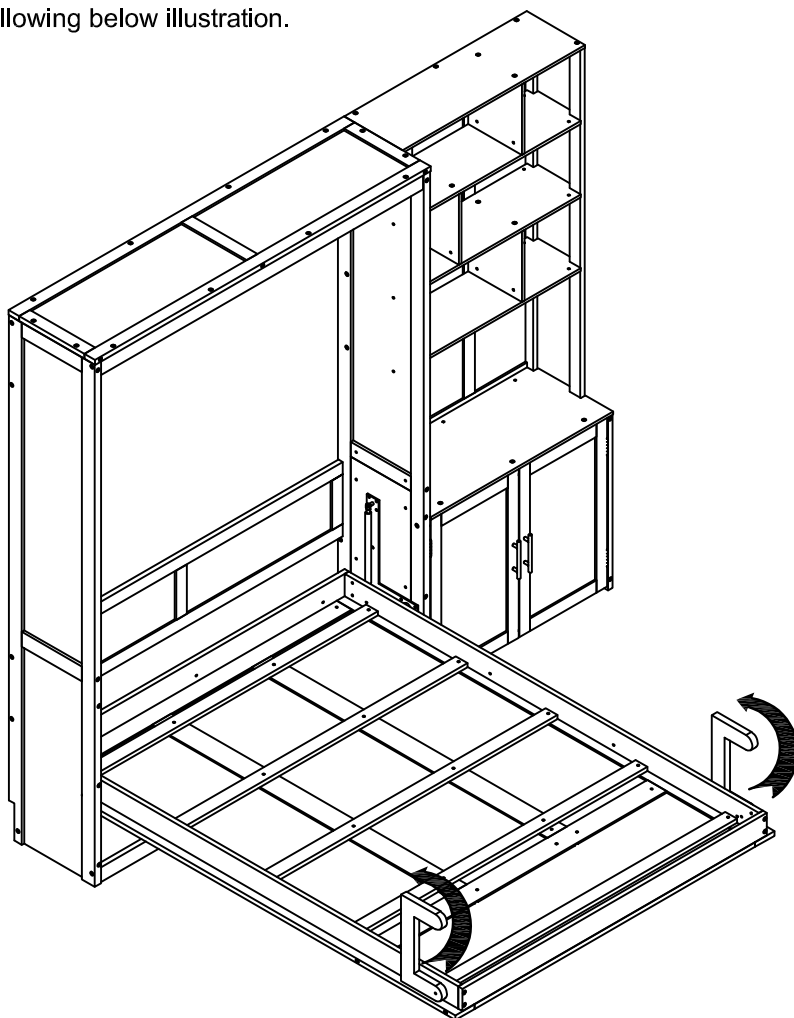STEP1: Following below illustration.



STEP2: Following below illustration.

