


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N729P290065


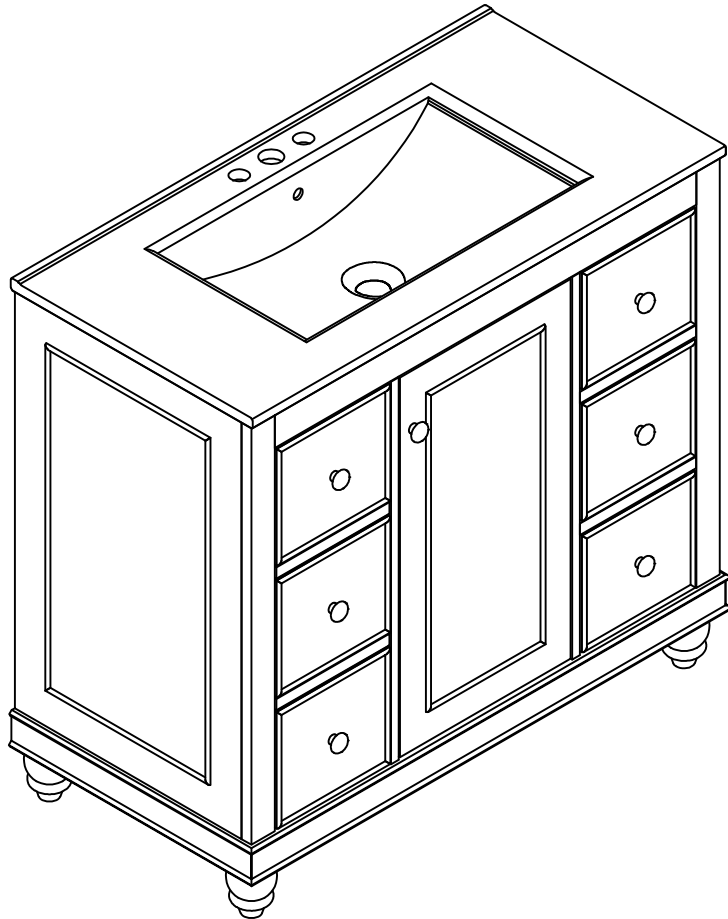


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED



*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.

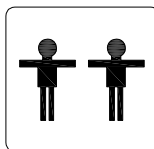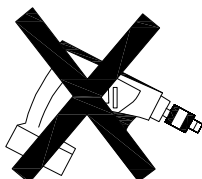


+



Tools Required




(Not included)



(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

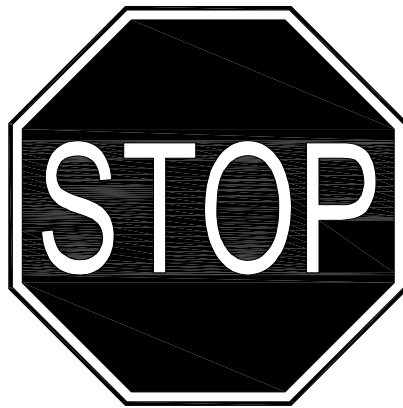

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.










Before Installation

Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

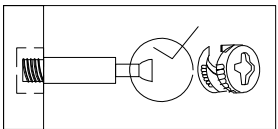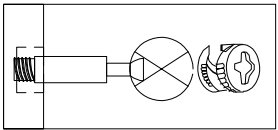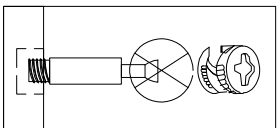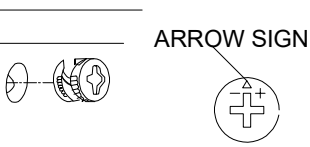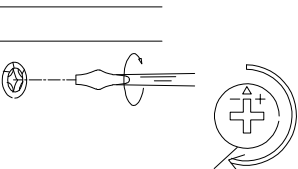
		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View

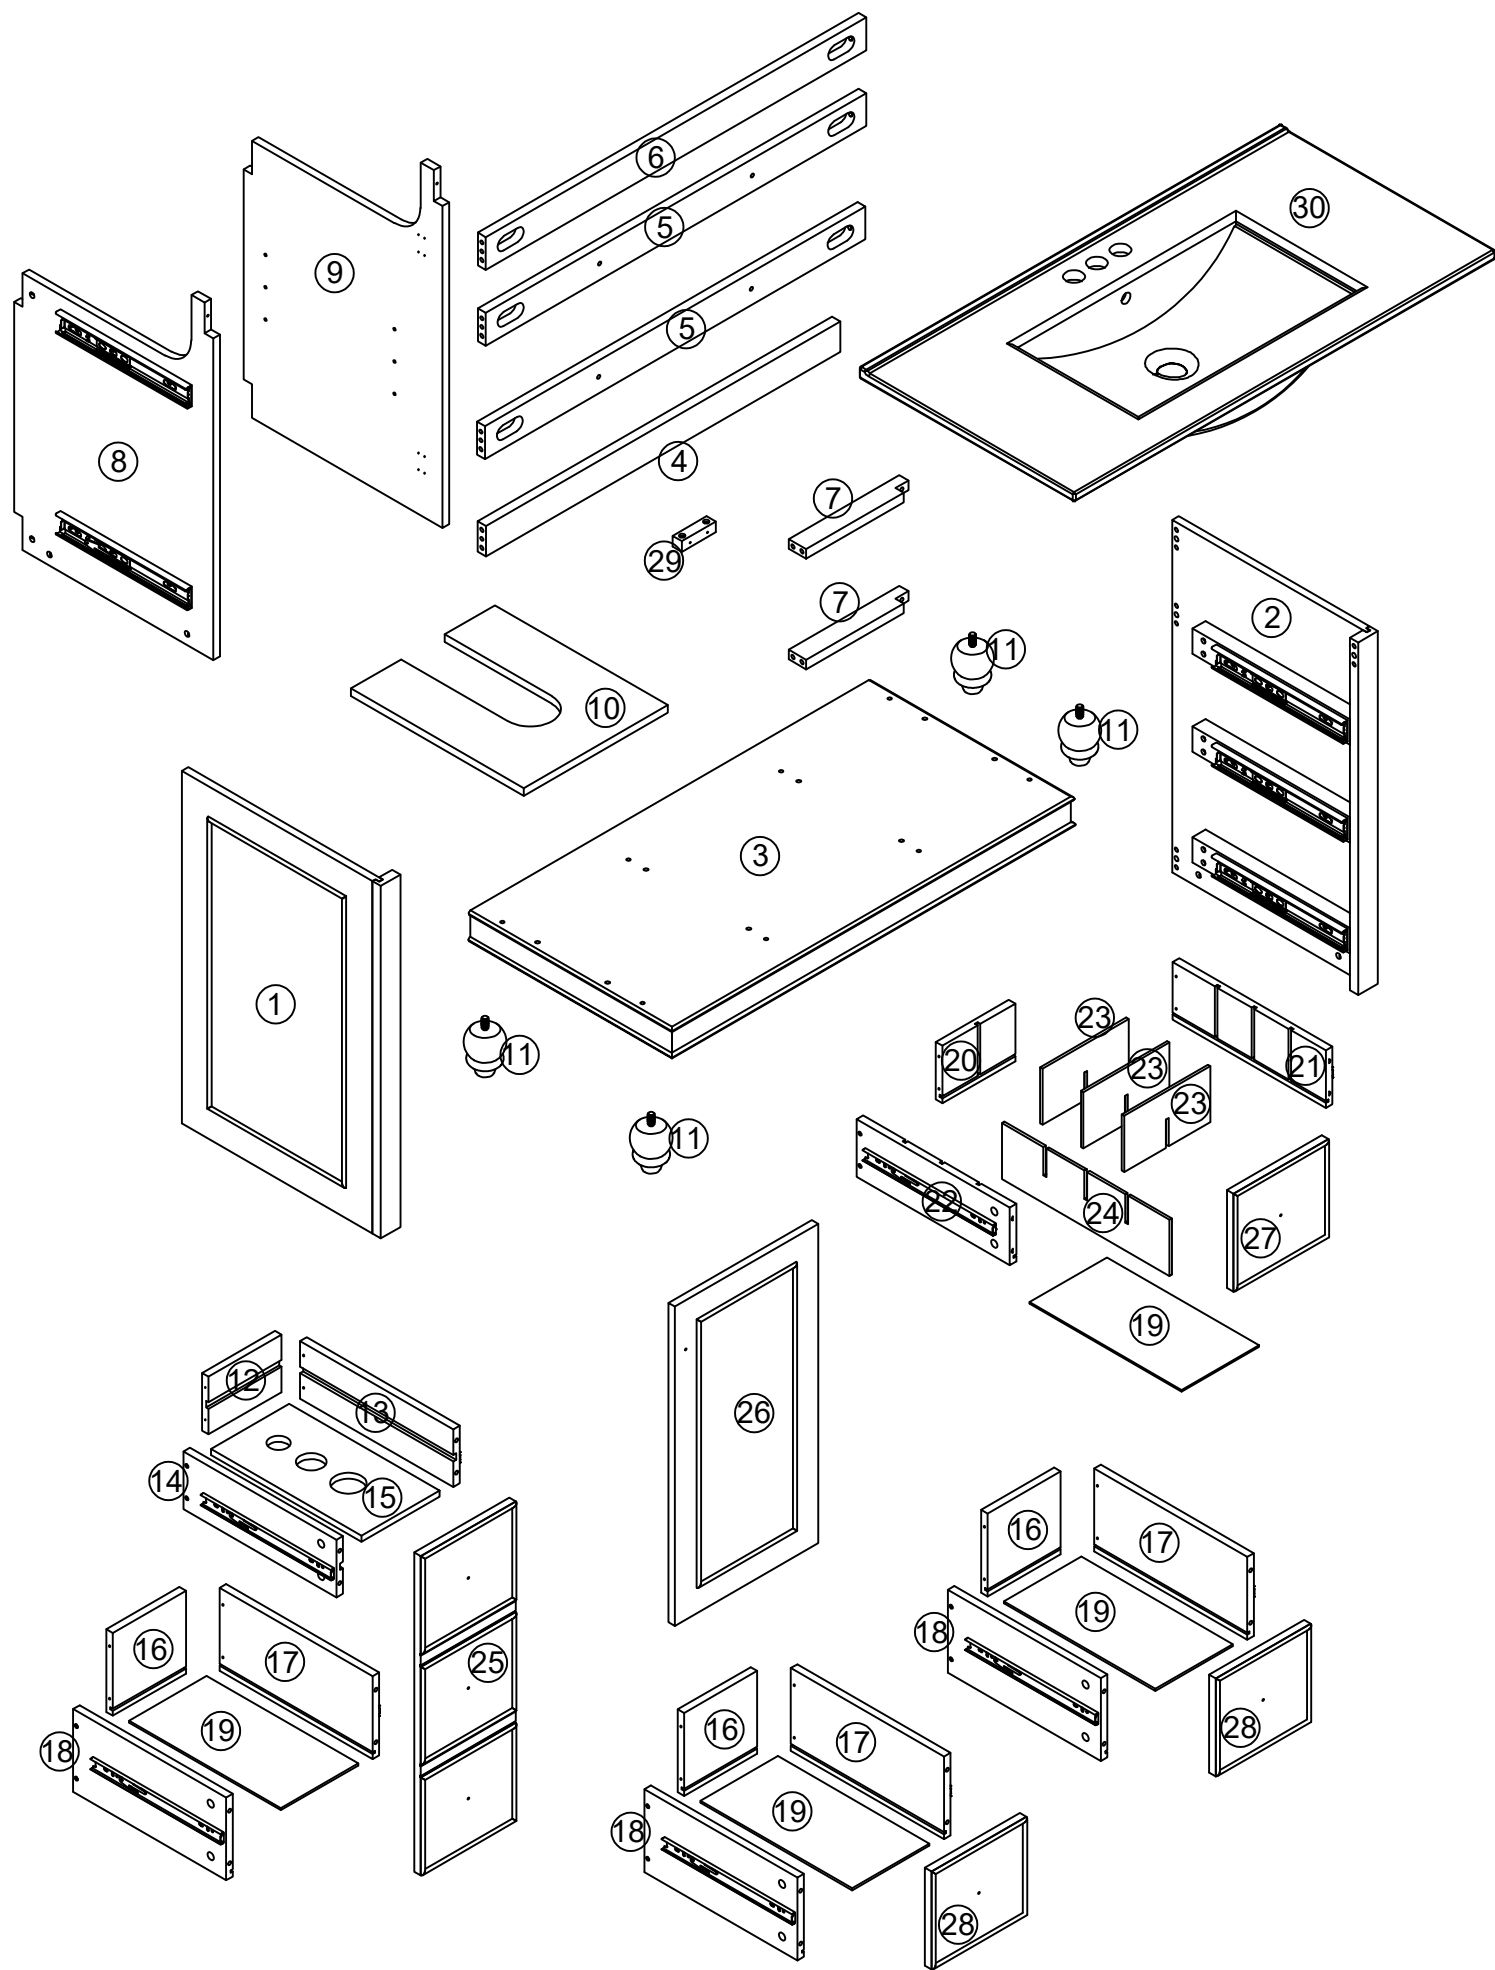


Part Lists N729P290065

1

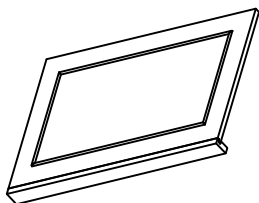


Side Panel (L) - 1pc

8

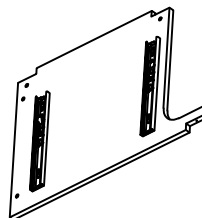


Panel Mid (L)- 1pc

2

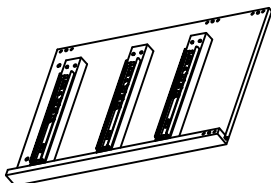


Side Panel (R) - 1pc

9

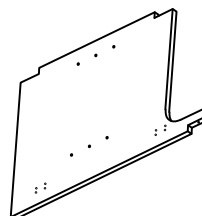


Panel Mid (R)- 1pc

3

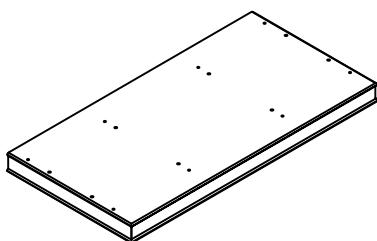


Frame Bottom - 1pc

10

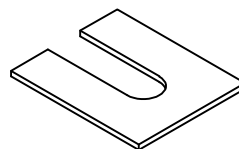

Adjustable Shelf - 1pc

4

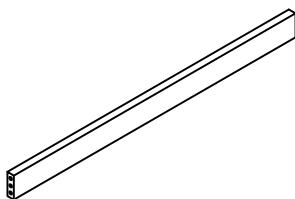


Front Crossbar Top - 1pc

11




Leg - 4pcs

5

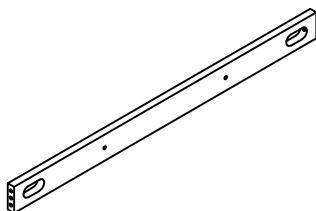


Rear Crossbar Bottom 1 - 2pcs

12




Bottom Drawer Panel Rear 1 - 1pc

6

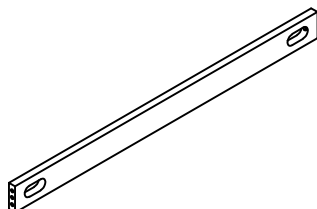


Rear Crossbar Bottom 2 - 1pc

13

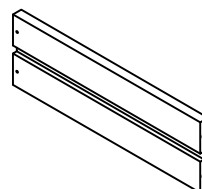


Bottom Drawer Panel Side 1 (R) - 1pc

7

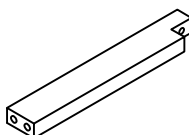

Rear Crossbar Top 2 - 2pcs


14

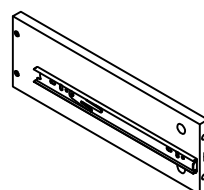

Bottom Drawer Panel Side 1 (L) - 1pc


Part Lists N729P290065

15

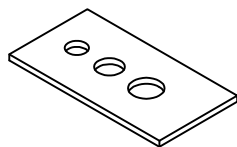


Panel Bottom 1 - 1pc

23




Vertical learning Compartment -3pcs

16




Bottom Drawer Panel Rear 2 - 3pcs

24

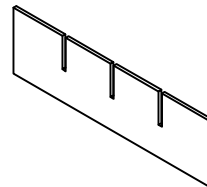


Drevent Studing - 1pc

17

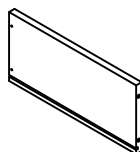


Bottom Drawer Panel Side 2 (R) - 3pcs

25

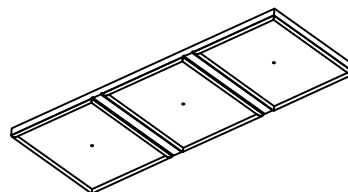


Bottom Drawer Face1 - 1pc

18

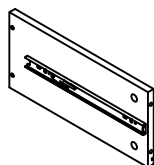


Bottom Drawer Panel Side 2 (L) - 3pcs

26

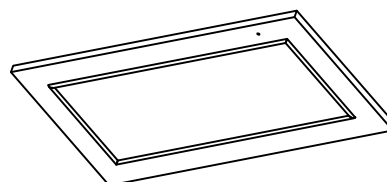


Door Cabinet - 1pc

19

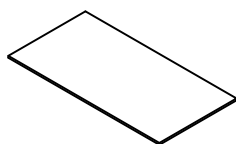


Panel Bottom 2 - 4pcs

27




Bottom Drawer Face 2 - 1pc

20

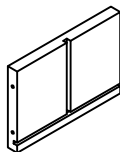


Bottom Drawer Panel Rear 3 - 1pc

28




Bottom Drawer Face 3 - 2pc

21

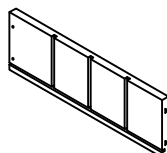


Bottom Drawer Panel Side 3 (L) - 1pc

30

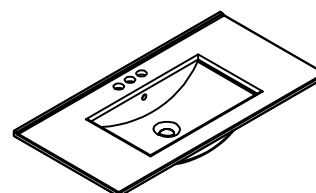


















Lavabo - 1pc

22

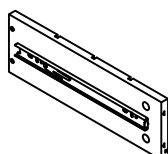


Bottom Drawer Panel Side 3 (R) - 1pc


Hardware Lists N729P290065

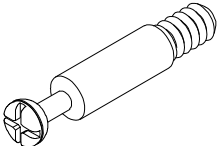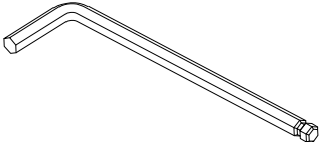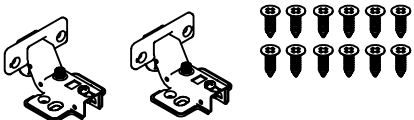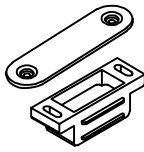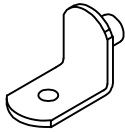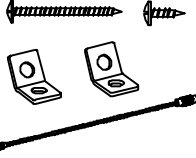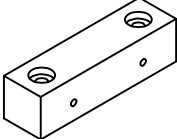A  Ø8*20mm Wood dowel (28pcs)	B  Ø6*32mm Three in one bolts (20pcs)	C  Ø14.5*9.5mm Three in one locks (20pcs)
D  Ø8xØ4*30mm Round head screw (4pcs)	E  K4mm Allen key (1pc)	F  2set 12pcs Damping hinge (2sets)
T  Scissor bud learns (7pcs)	I  M6 x 45mm Head bolt (12pcs)	J  Washer (8pcs)
N  M6 x 13mm Square Nut (12pcs)	L  45*12*1mm 45*17*14mm Plastic Door Magnet (1set)	L1  Ø5/32*28mm Handle screw (7pcs)
M  M6 x 65mm Head bolt (8pcs)	H  Shelf Pin (4pcs)	O  Ø10x10mm Plastic Canopy (20pcs)
P  Ø8xØ4*50mm Round head screw (20pcs)	G  Ø6xØ3*12mm Round head screw (4pcs)	K  M6 x 30mm Head bolt (2pc)
S  Ø6xØ3*15mm Flat head screw (4pcs)	Q  Anti fall Hardware (2sets)	29  Support piece - 1pc

STEP: 1

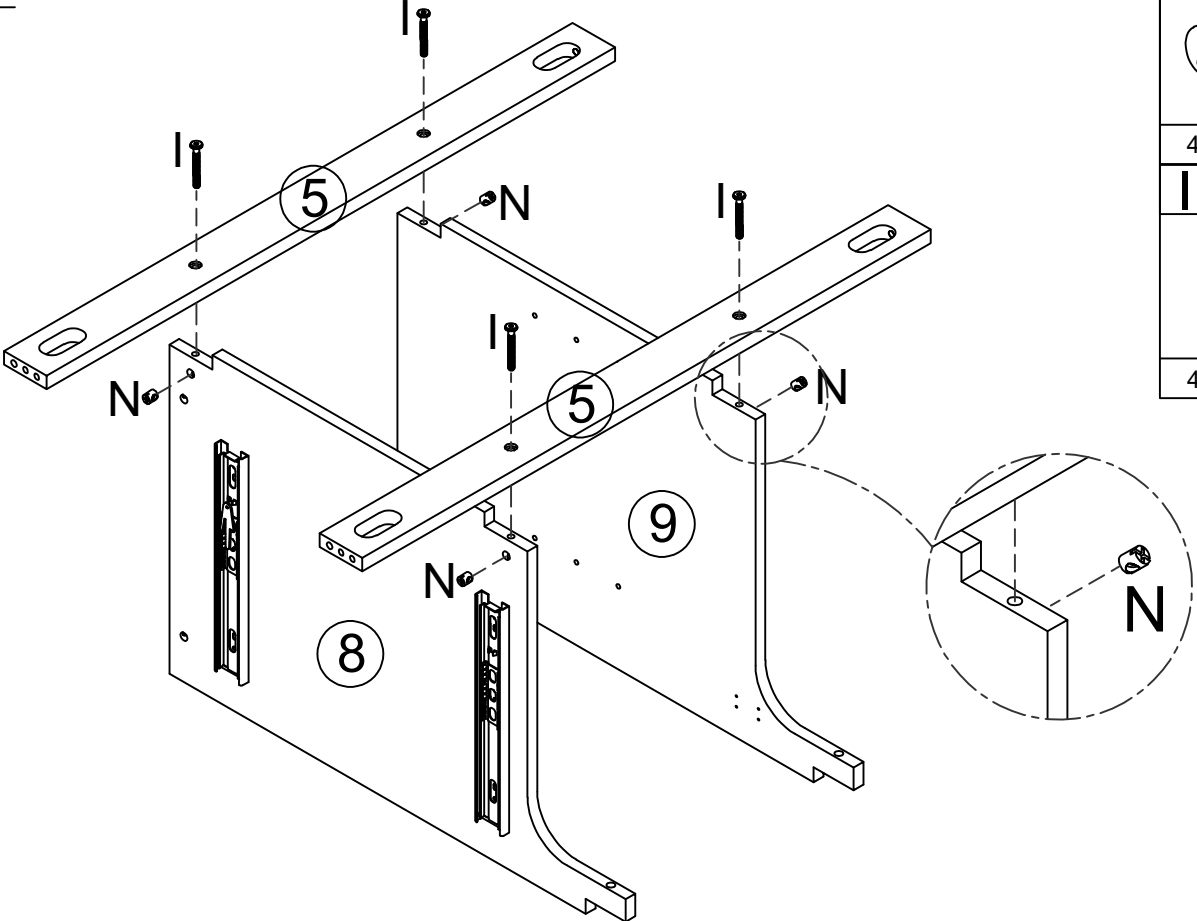


STEP: 2

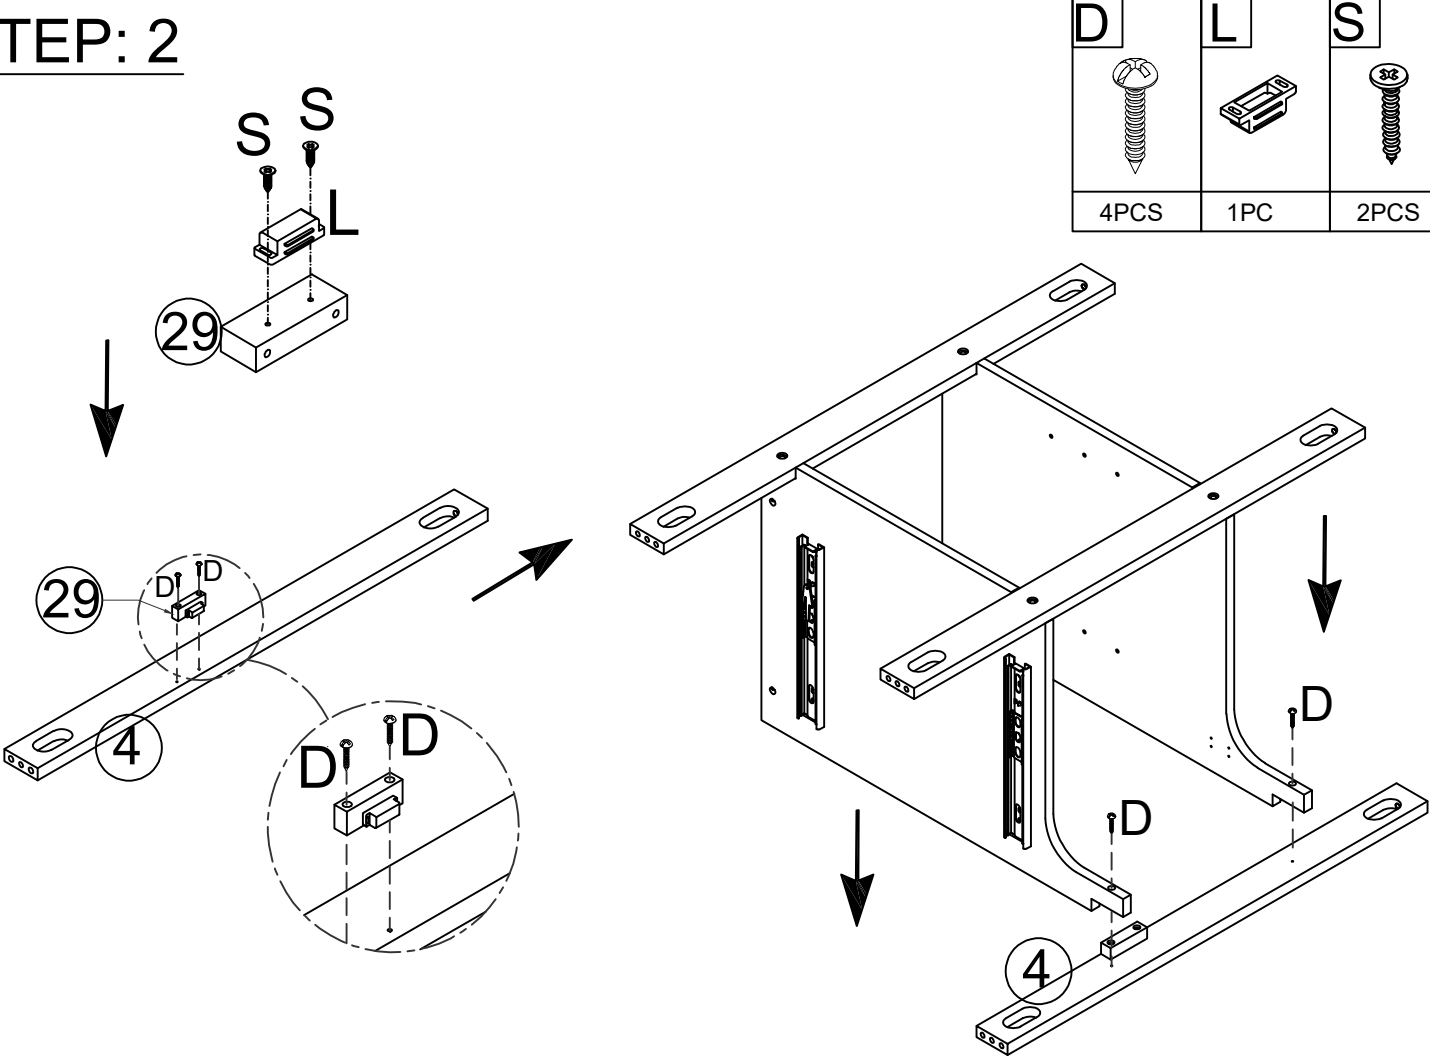


STEP: 3


A	I	J	K
			
20PCS	8PCS	8PCS	2PCS

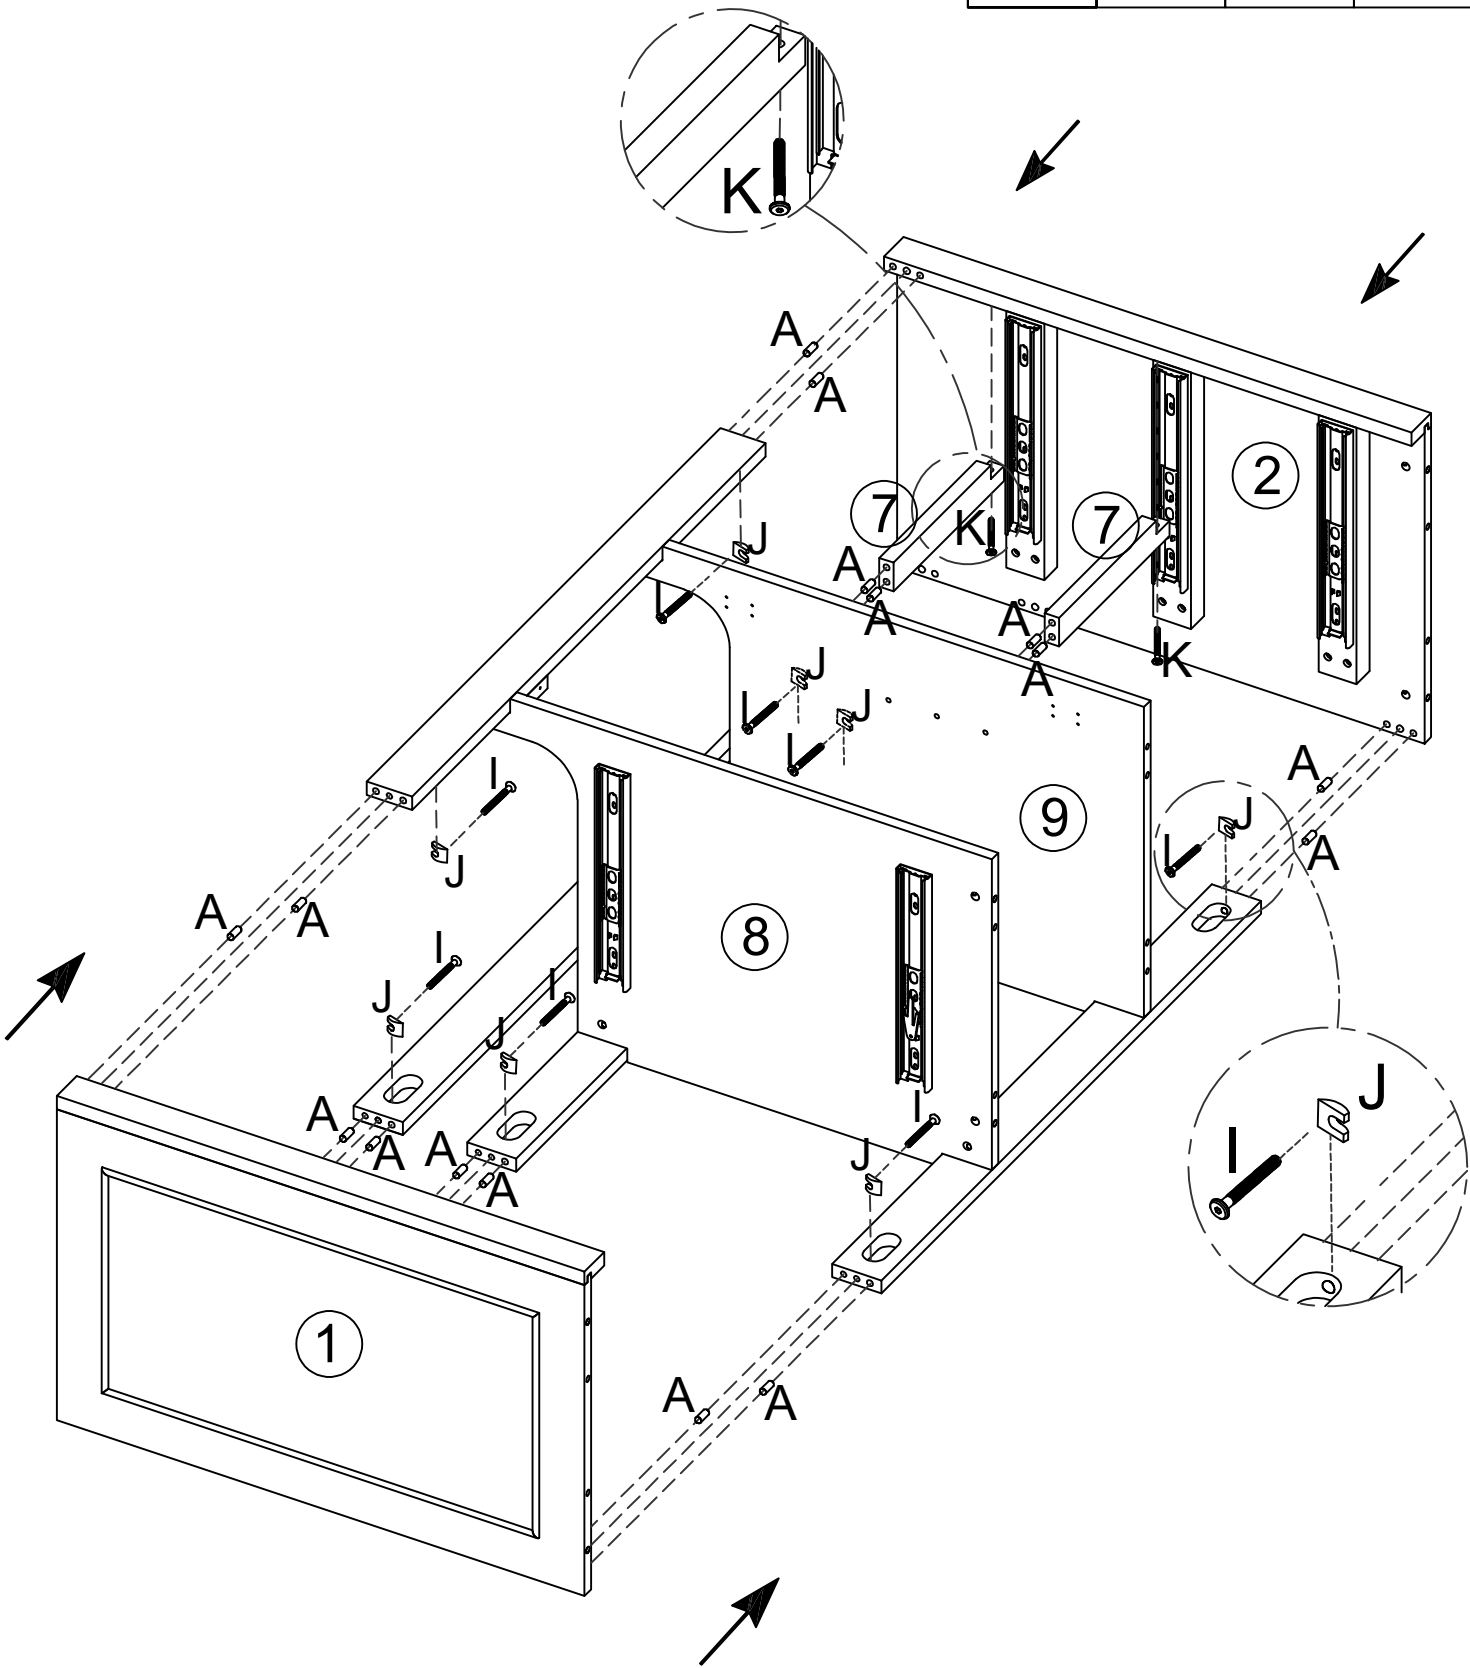


STEP: 4

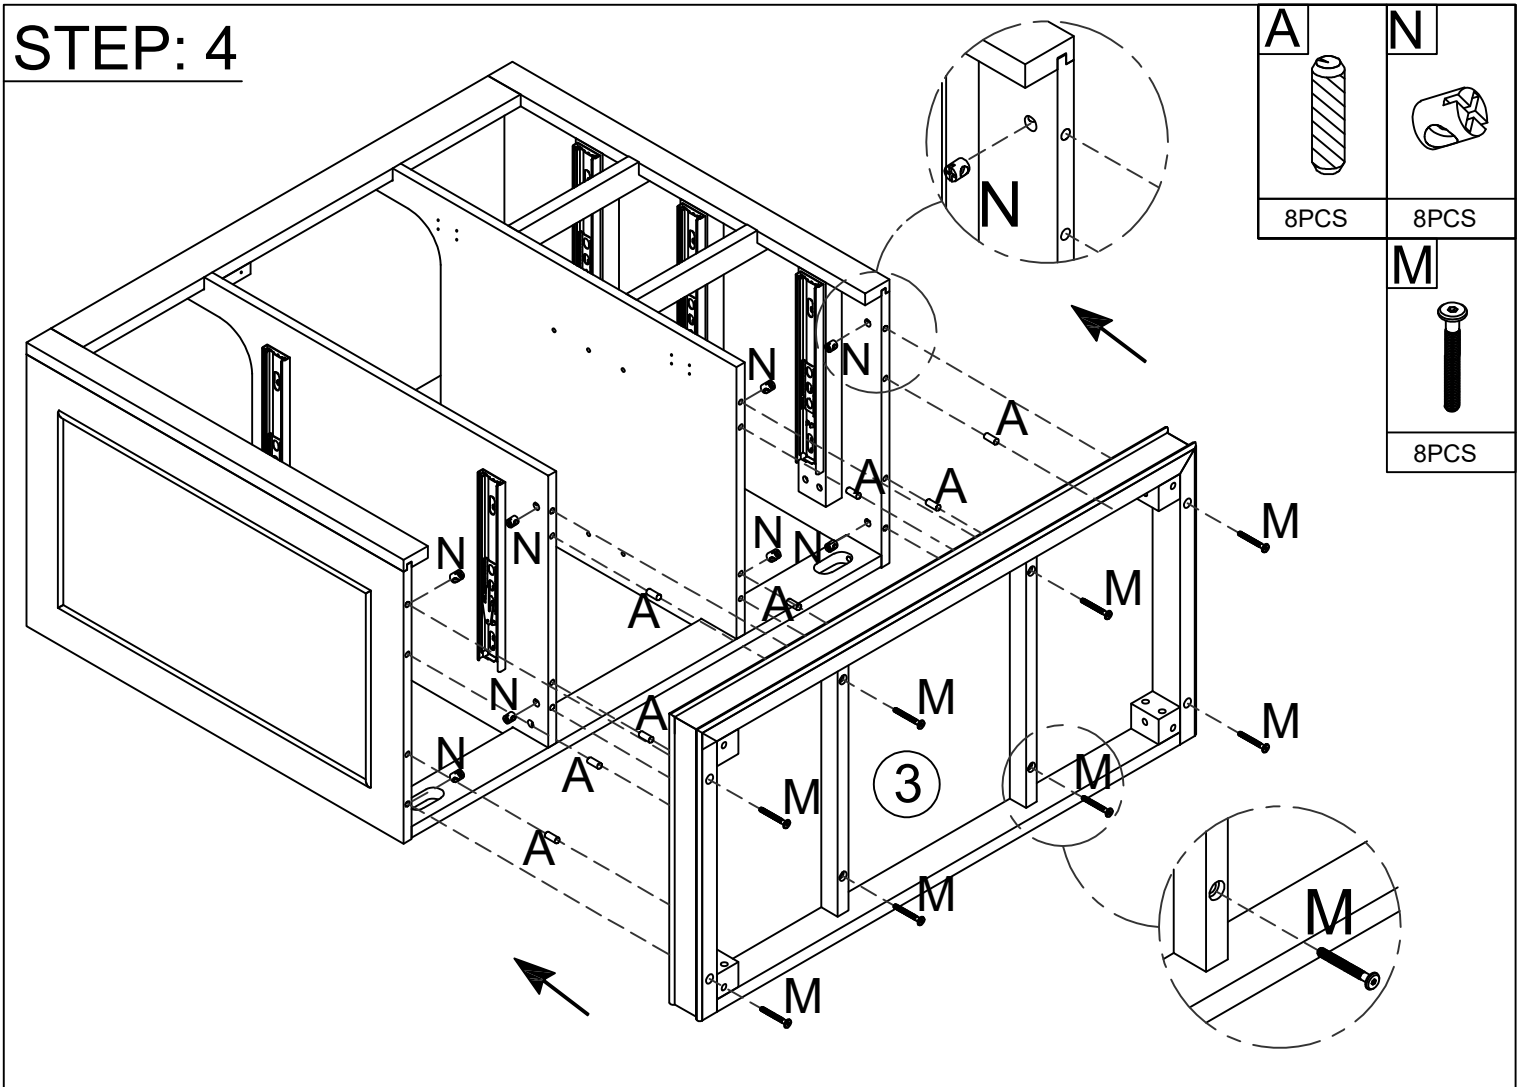

STEP: 5

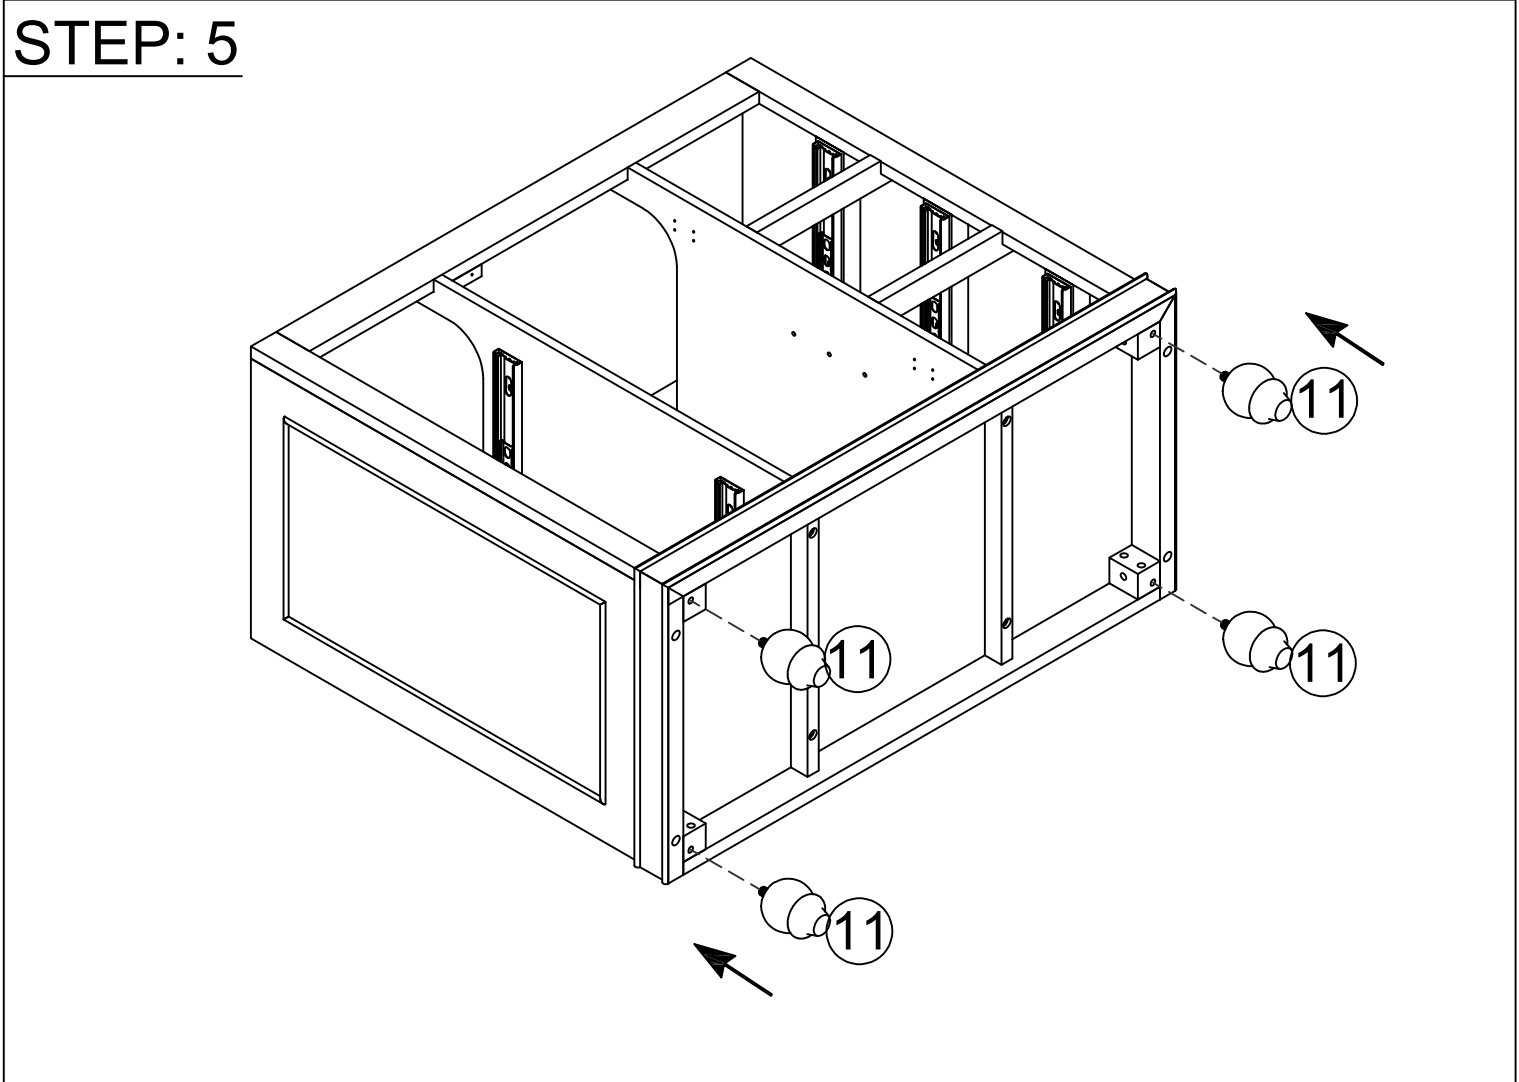


STEP: 6

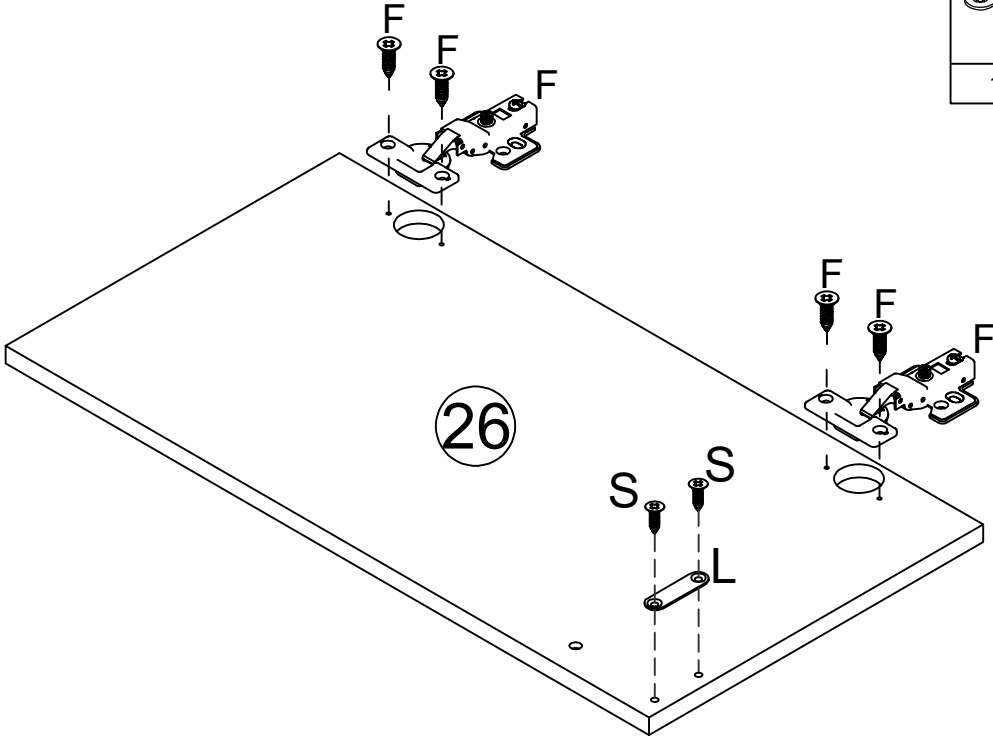

L	S	F
1PC	2PCS	2PCS
		F
		4PCS


STEP: 7

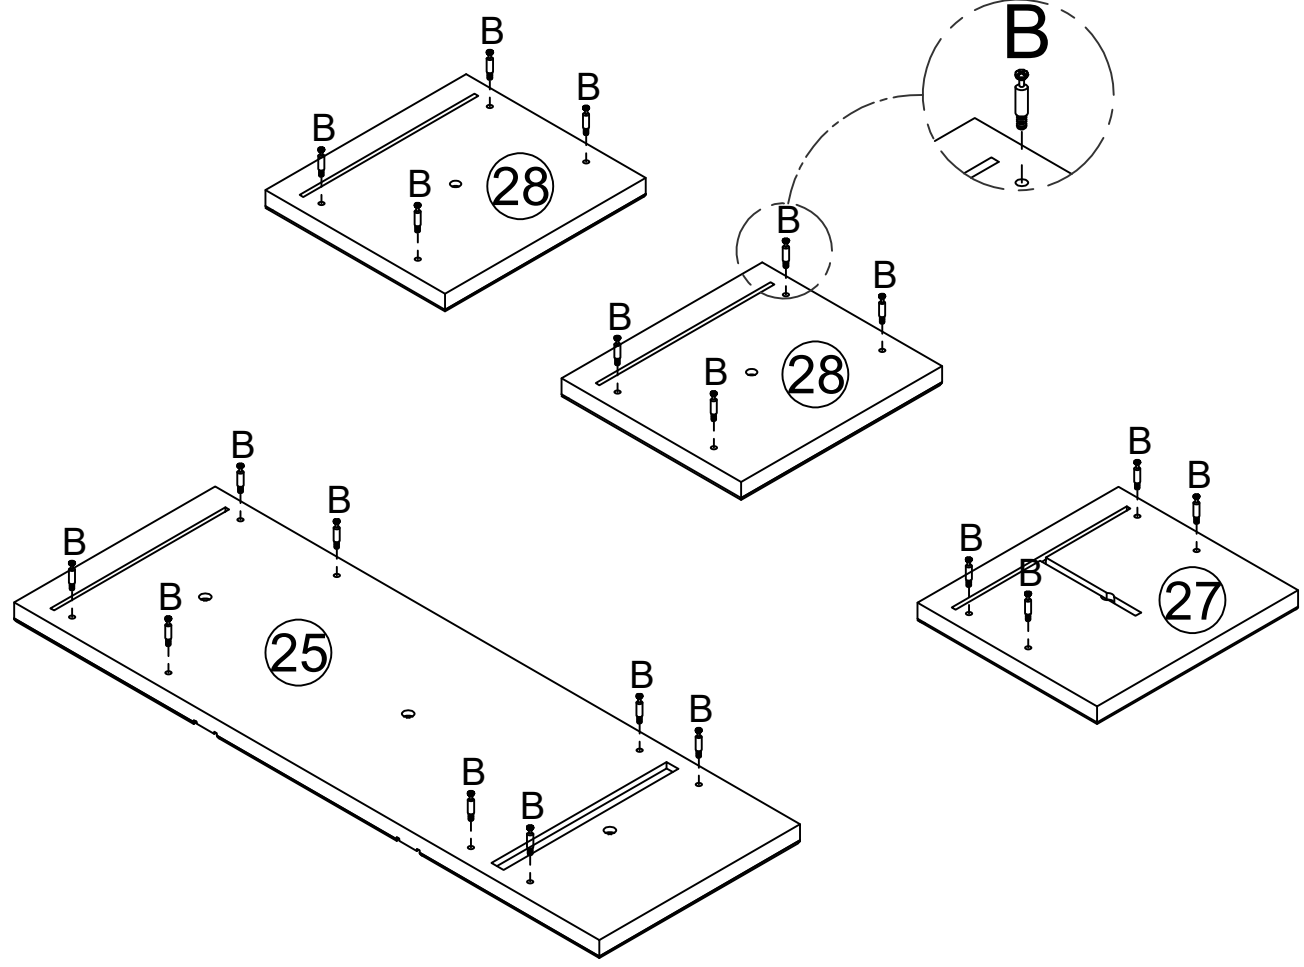

B
20PCS



STEP: 8

T	F	L1	H
			
1PC	8PCS	1PC	4PCS

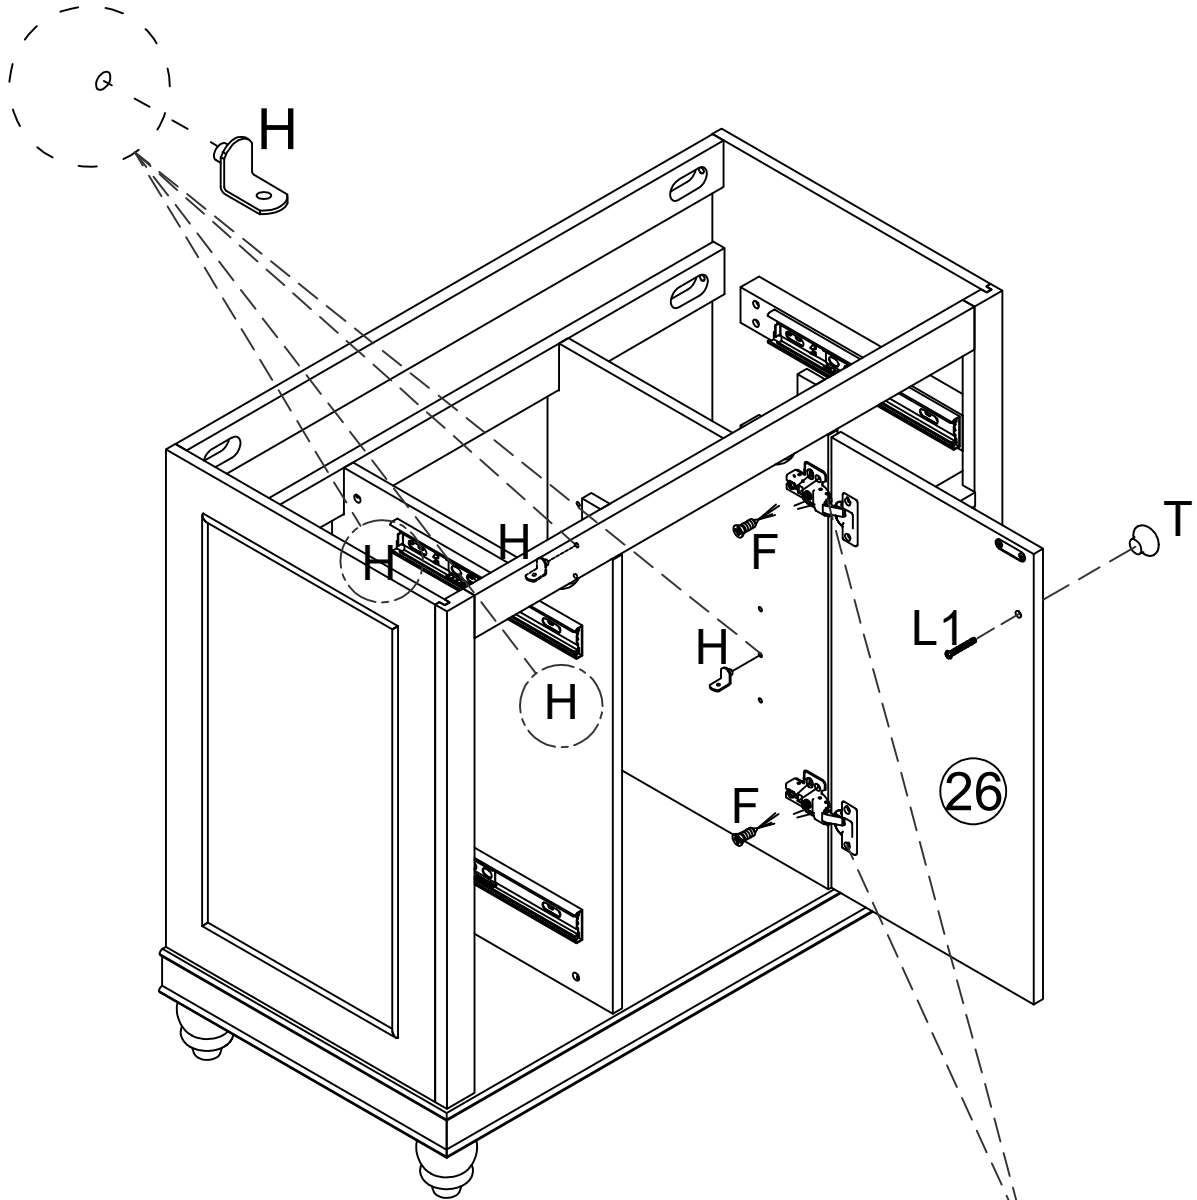




Use the screws to adjust up or down

Use the screws to permanent

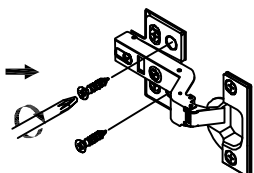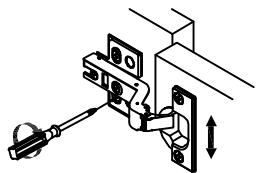

Use the screws to adjust left or right

Use the screws to adjust in or out

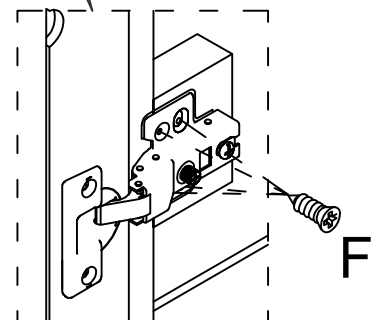
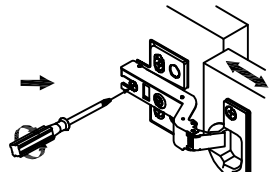
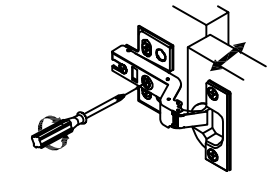


STEP: 9

G




4PCS

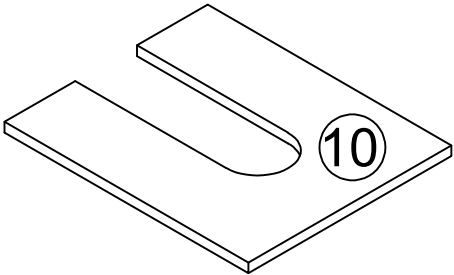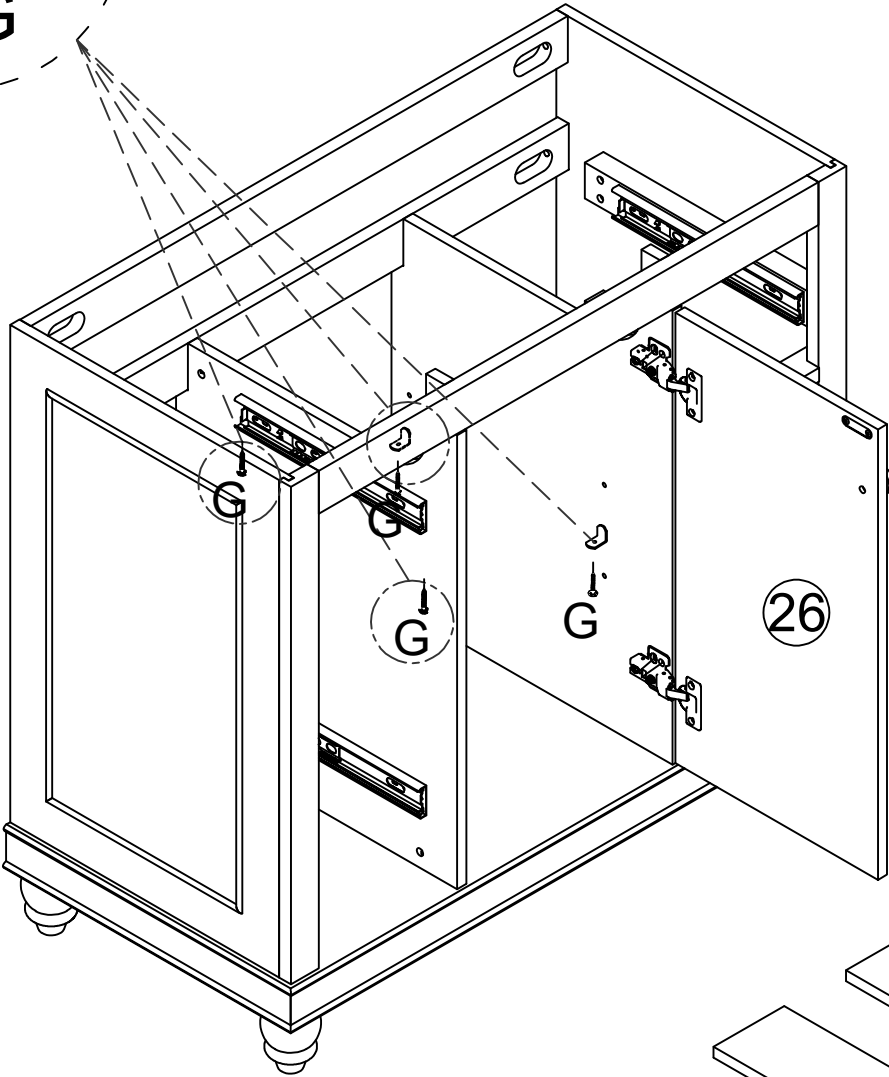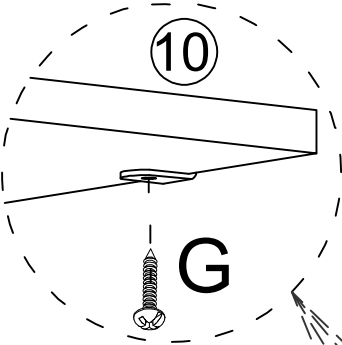




STEP: 10

C	T	O
		
8PCS	3PCS	8PCS
L1	P	
		
3PCS	8PCS	

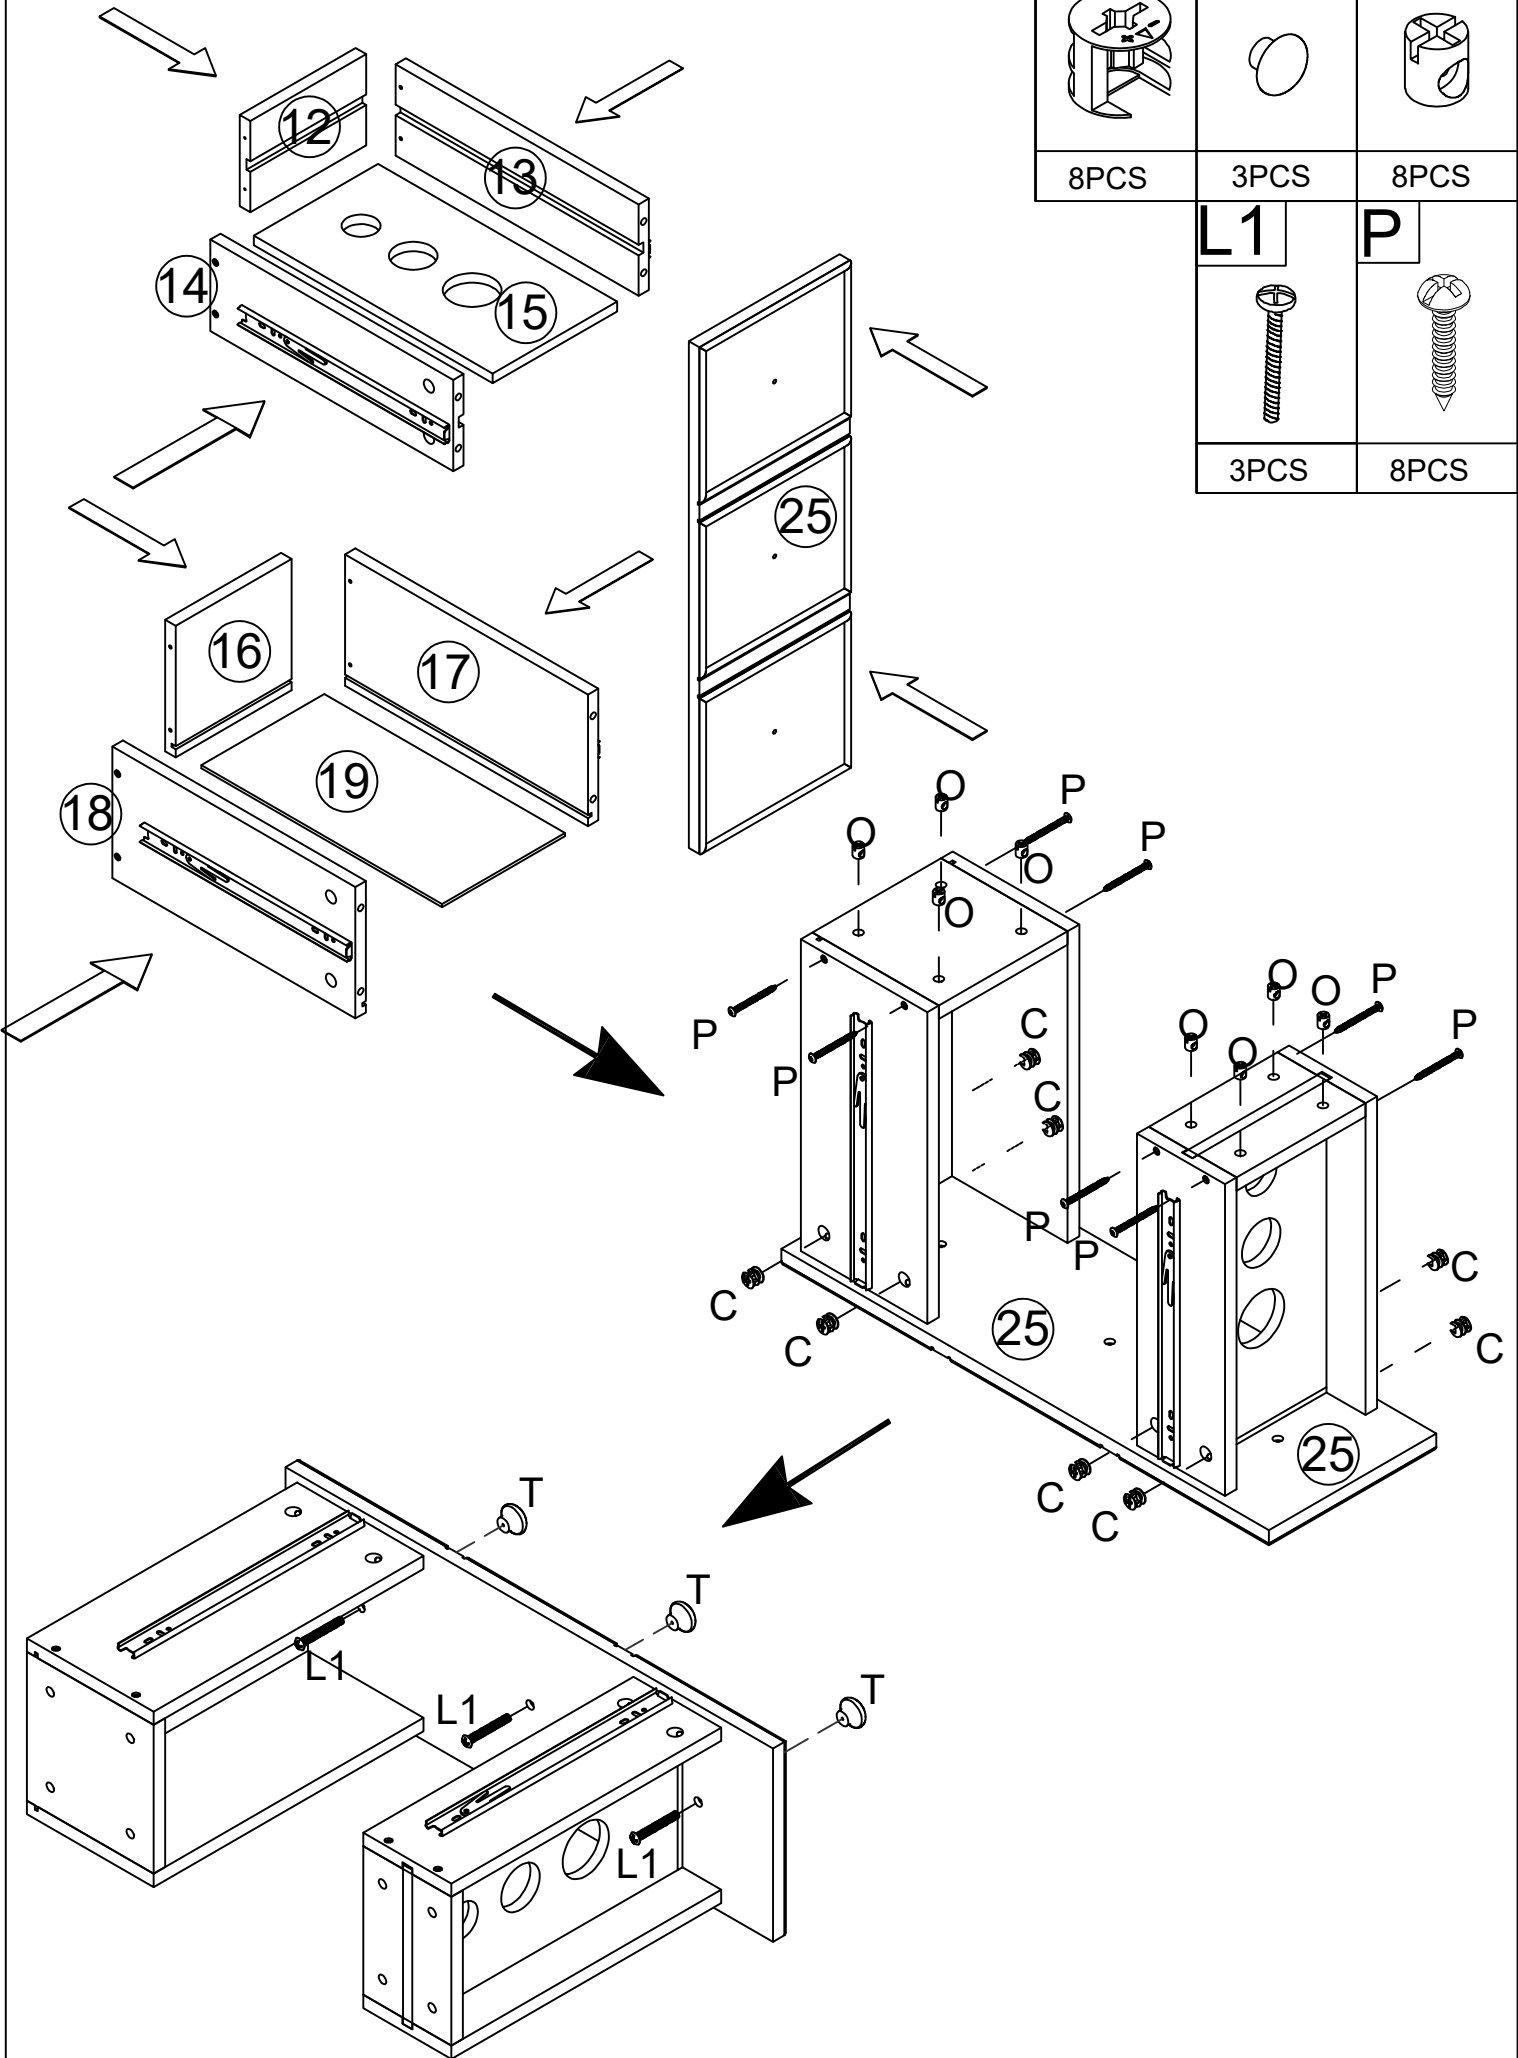


STEP: 11

C	T	O
		
8PCS	2PCS	8PCS
L1	P	
		
2PCS	8PCS	

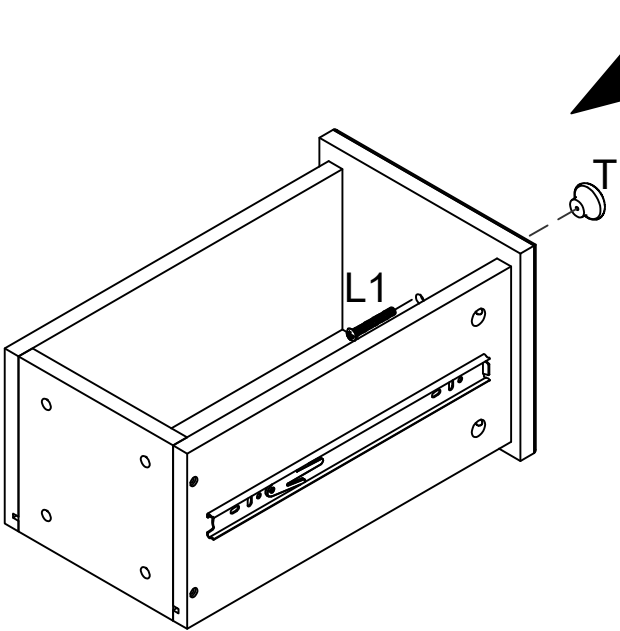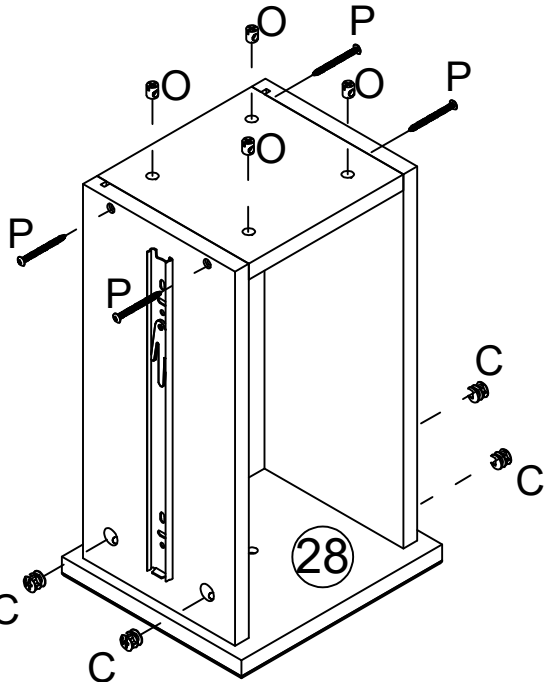
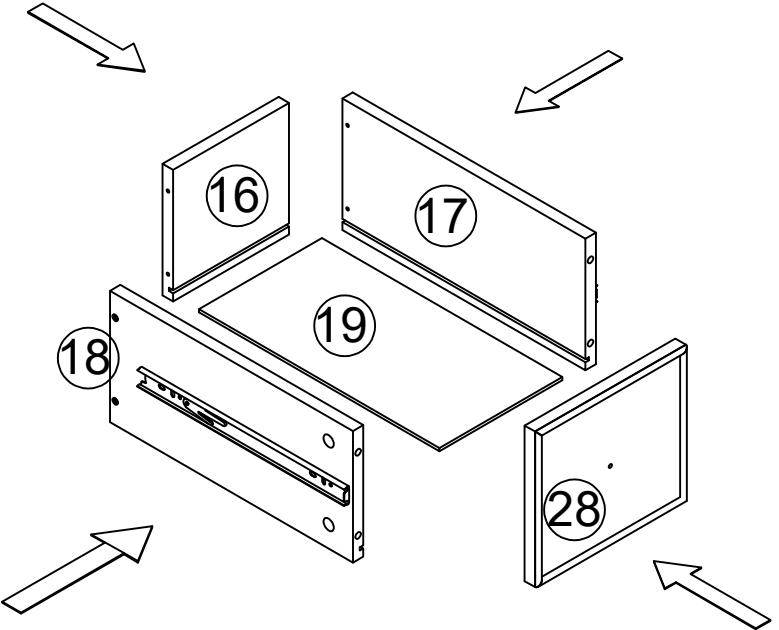


X 2


STEP: 12

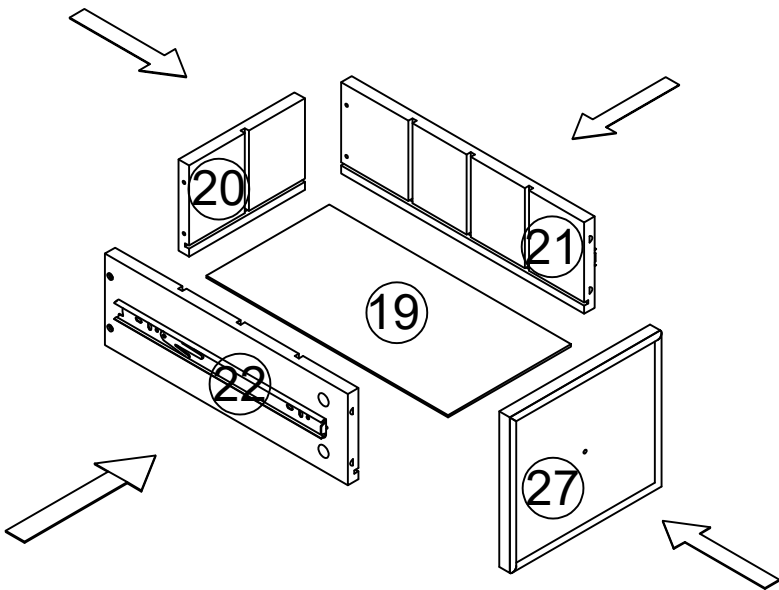


C	T	O
4PCS	1PC	4PCS
L1	P	
1PC	4PCS	

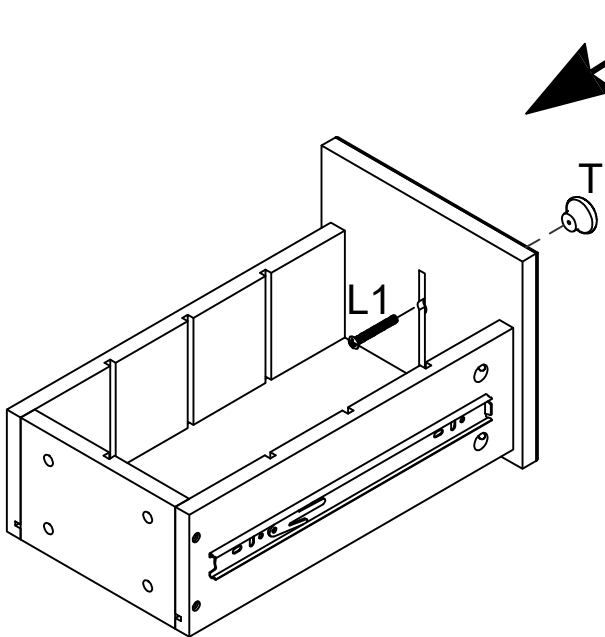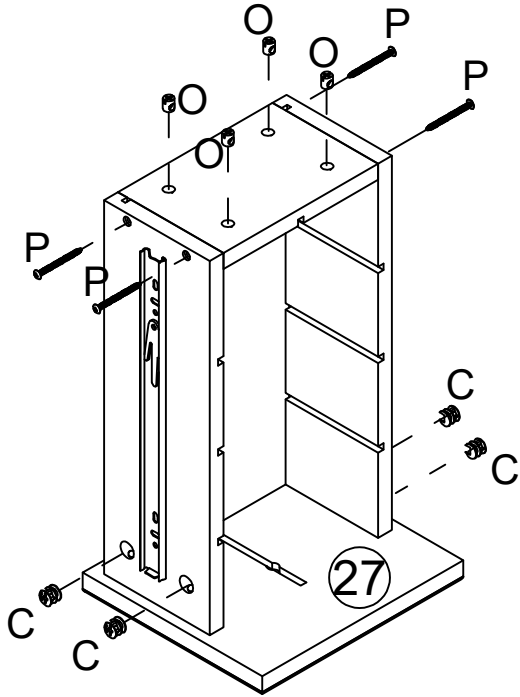

STEP: 13

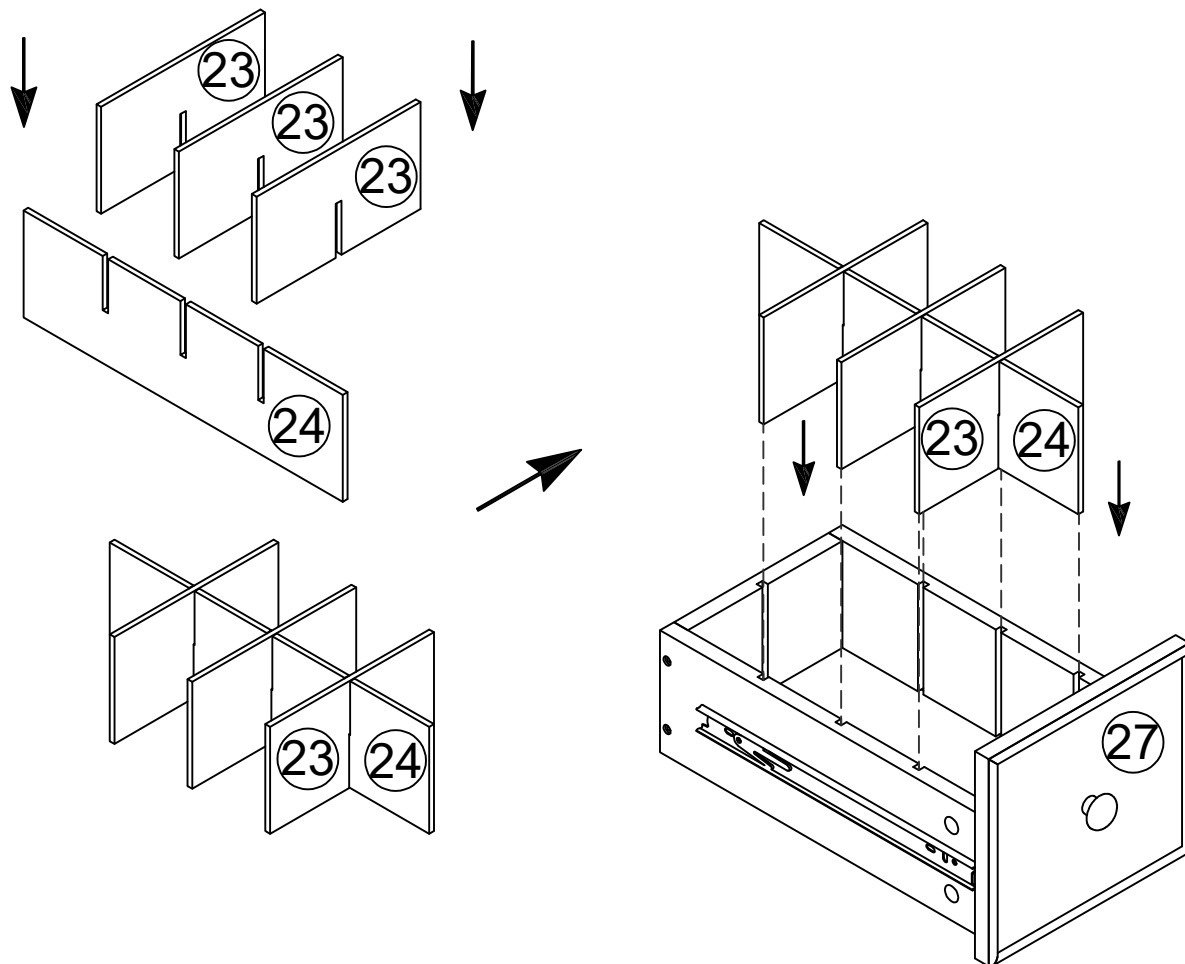


STEP: 14

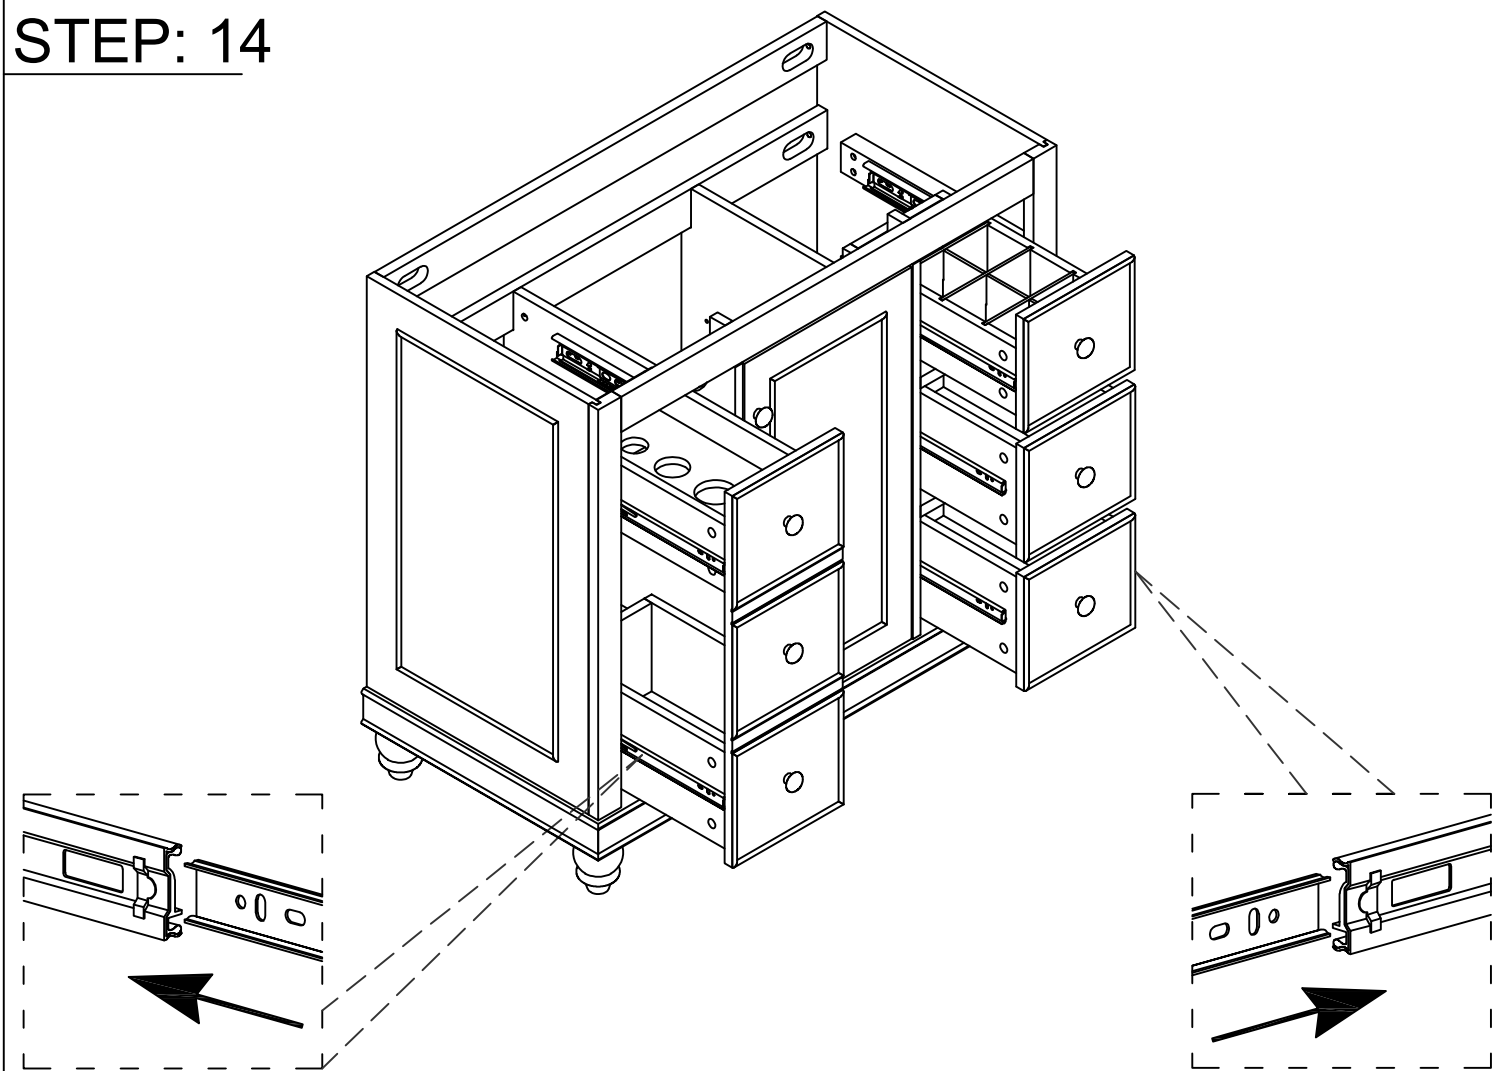


STEP: 15

Q




2SET

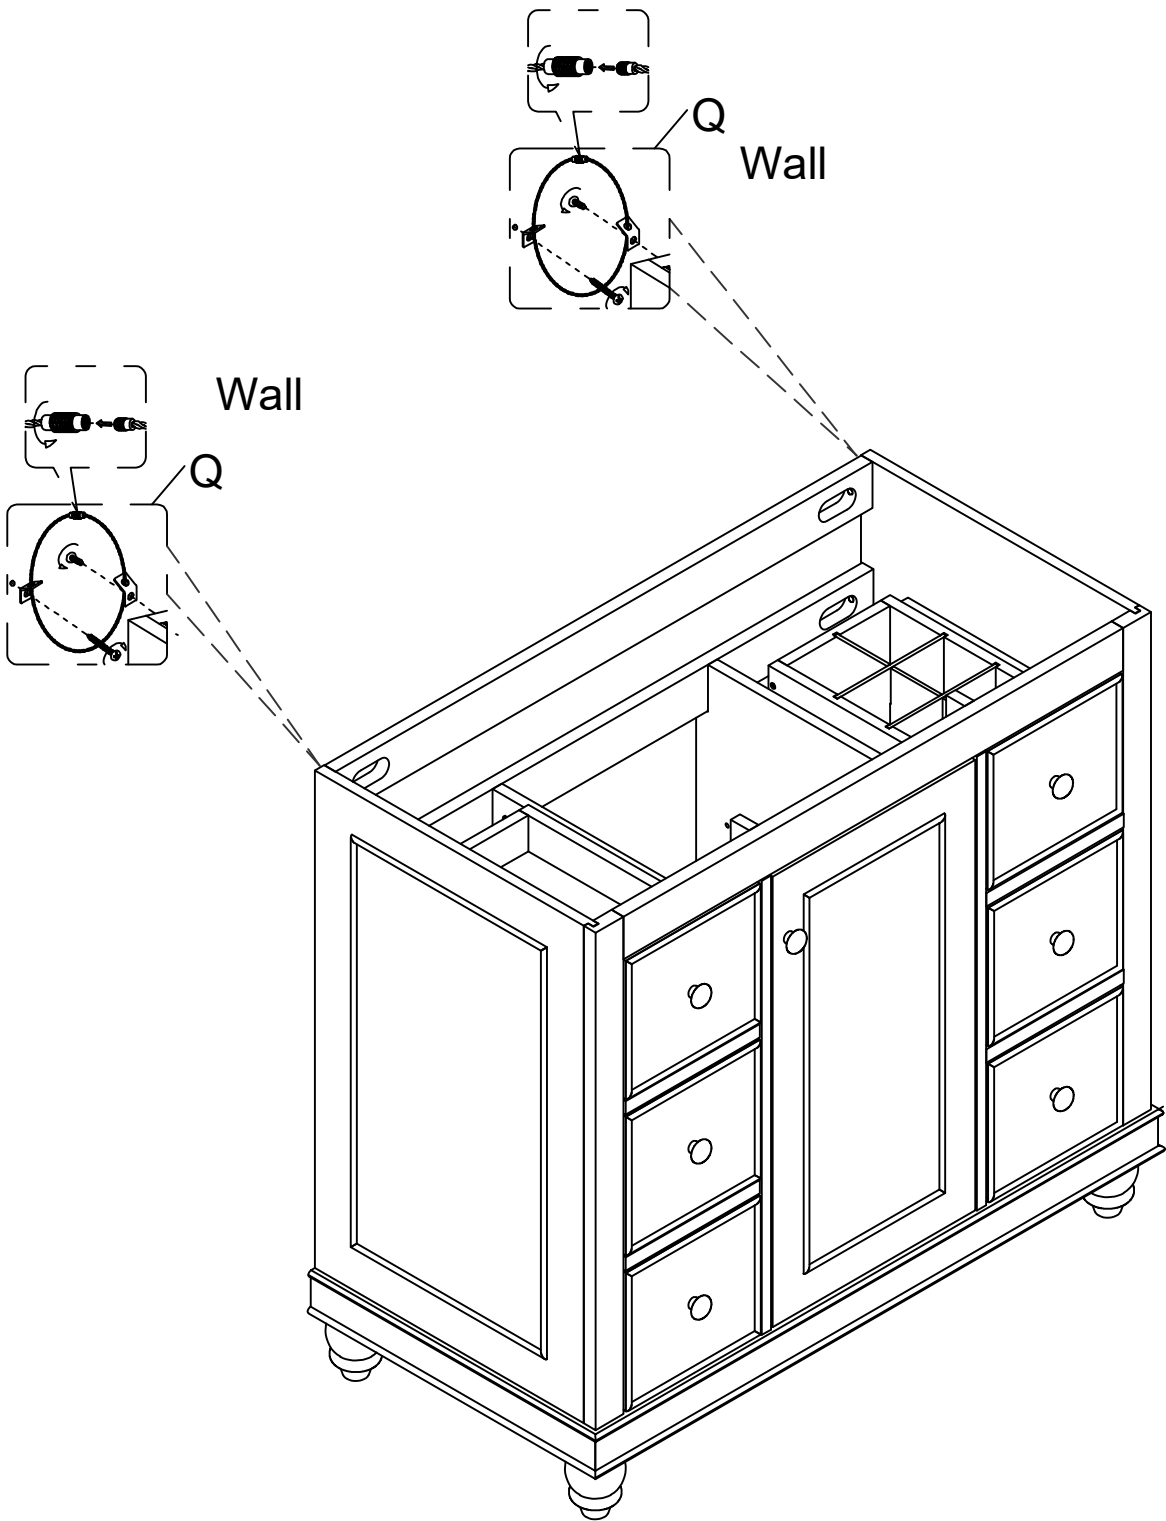


STEP: 16

Install the sink on the cabinet with glue.
Let stand for 24 hours

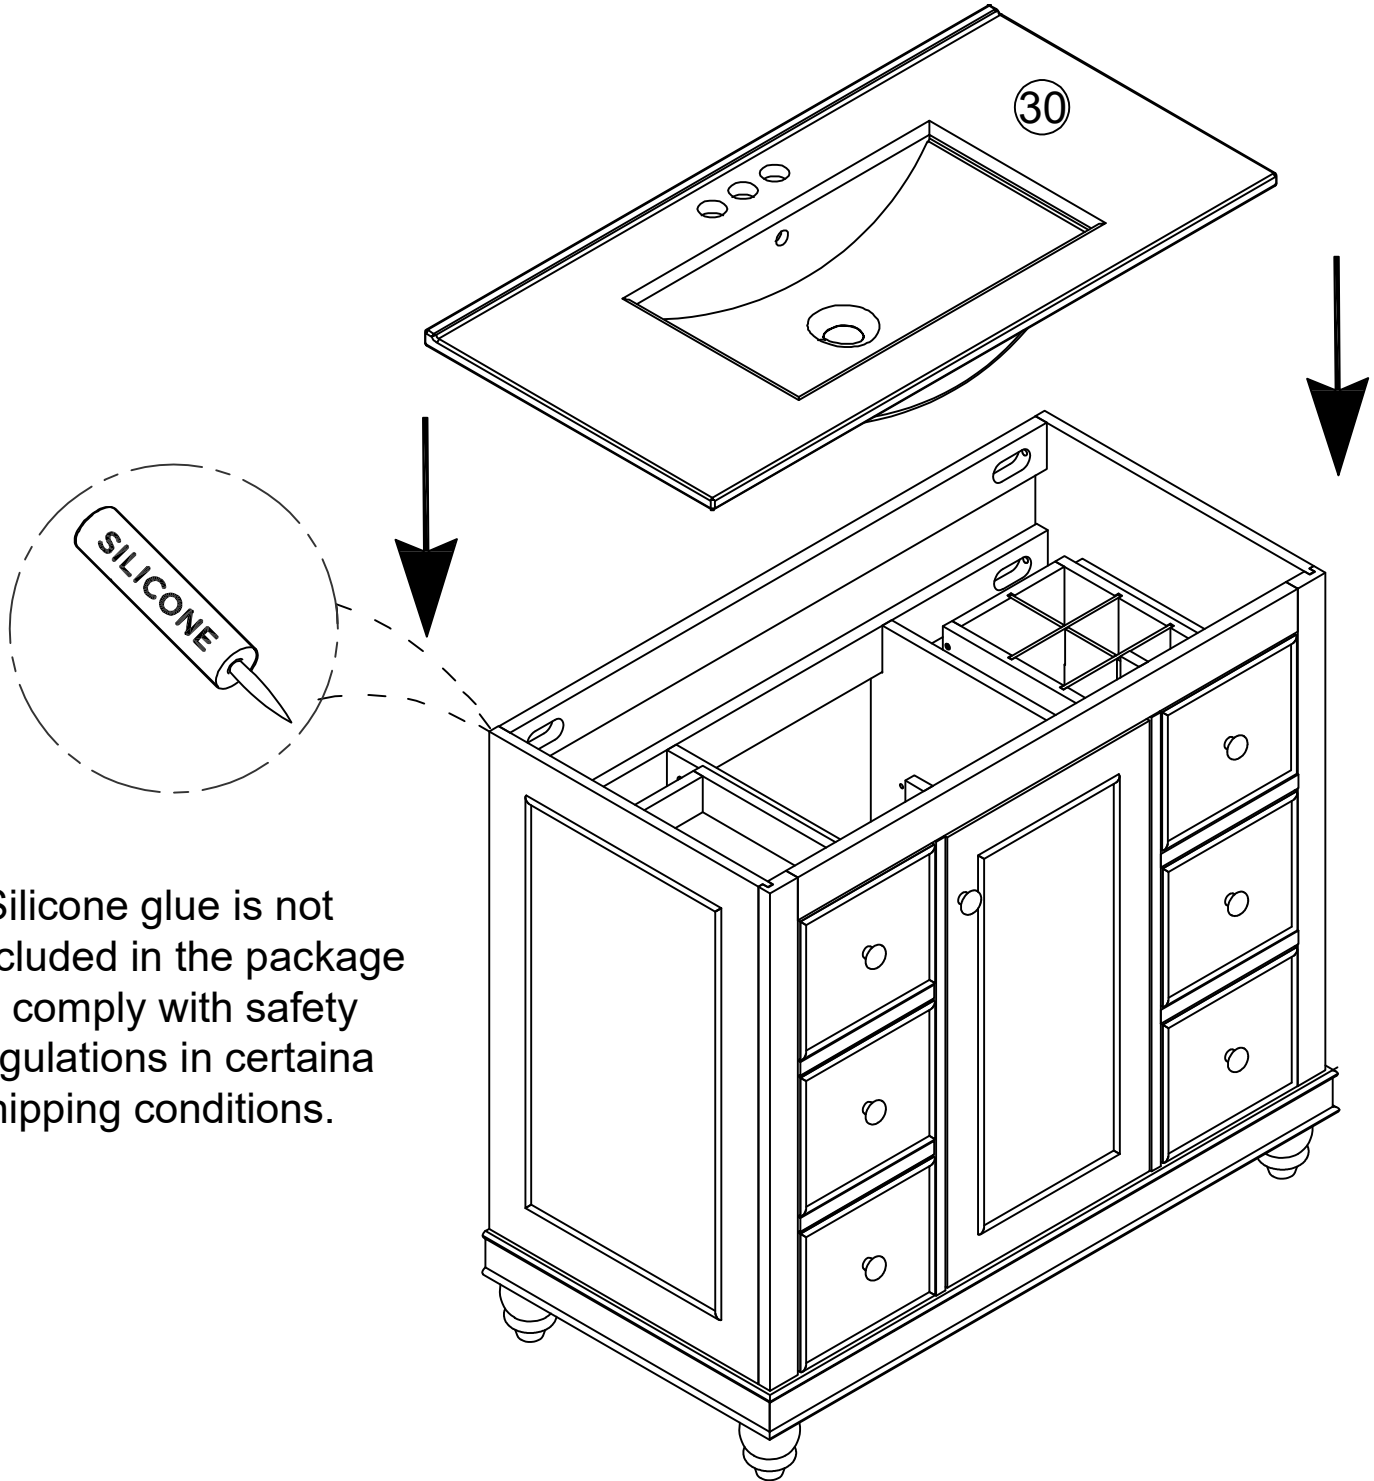


*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

STEP: 17

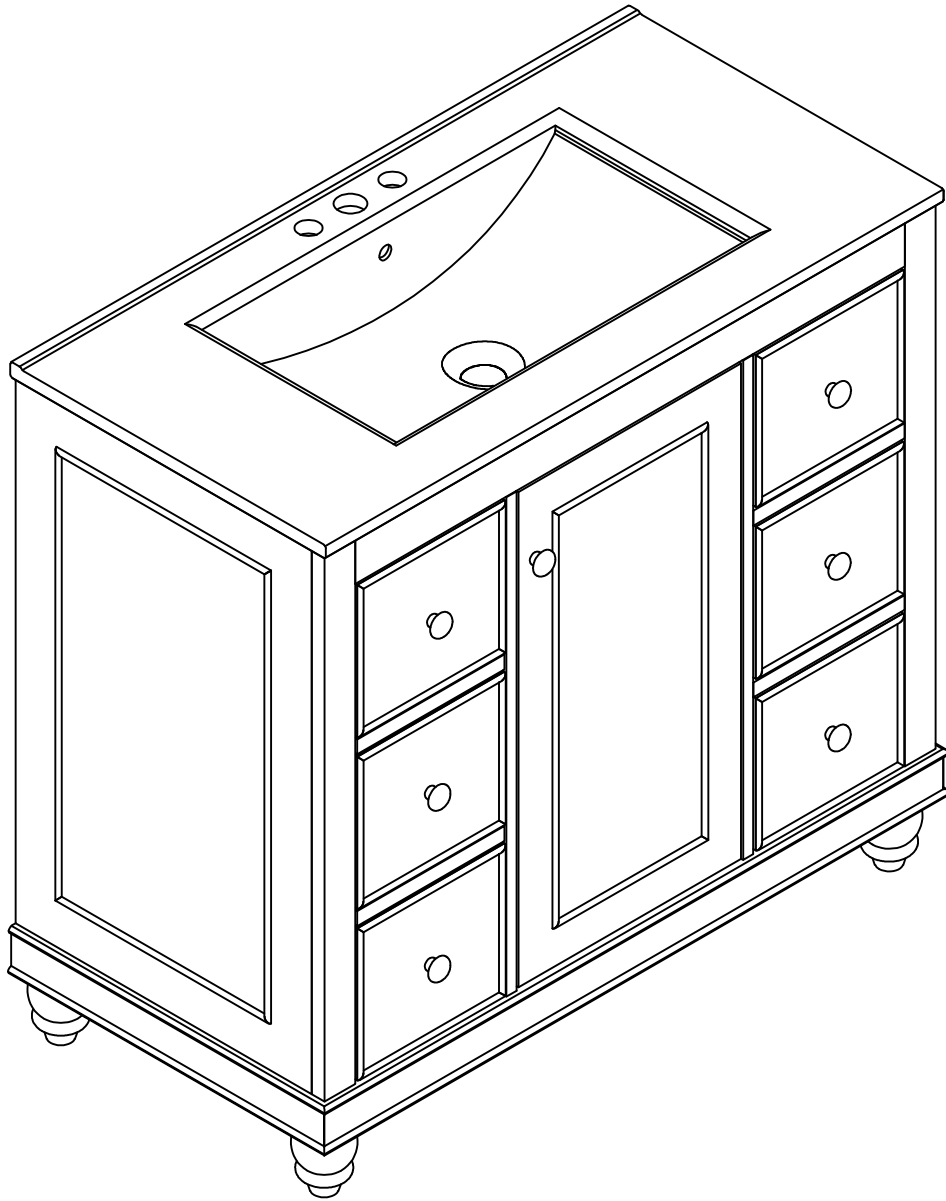


HINGE ADJUSTMENTS

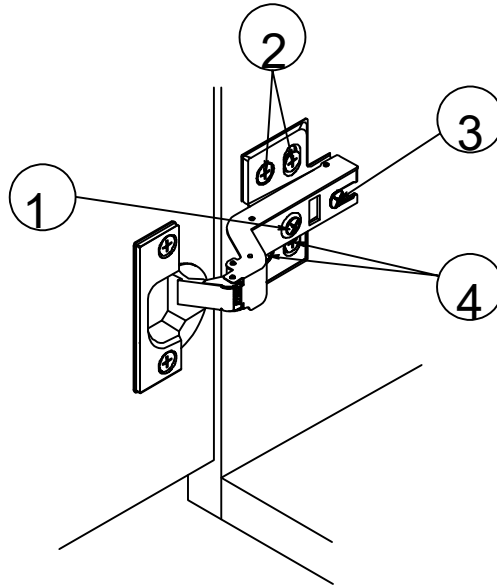


① Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet

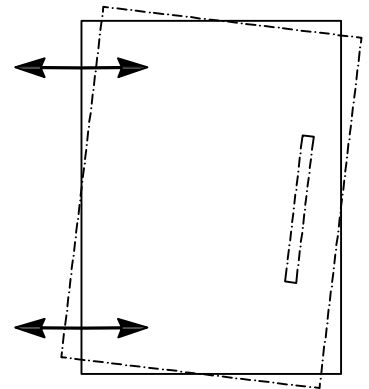

② Height adjustment

While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down

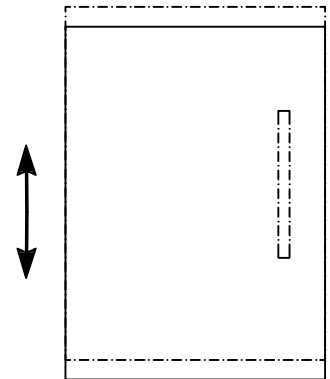

③ Forward and back adjustment

