


1

Align door bumper position and pre-drill a hole for wall anchor if on drywall.

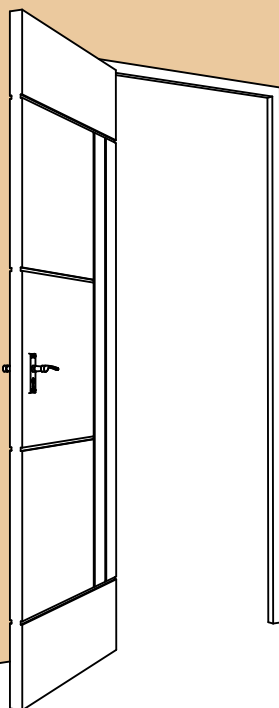

2

Insert wall anchor included for drywall installation, then secure with screw included.

Wall anchor

