


PLYLOX™ Window Clips Are Patented H-Shaped Carbon Steel Or Stainless Steel Clips Engineered To Fit Plywood Without Nails, Screws Or Adhesives.

PLYLOX™ works on any shape window with a brick, wood, or stucco casing at least 2 1/2 - 3 inches deep.

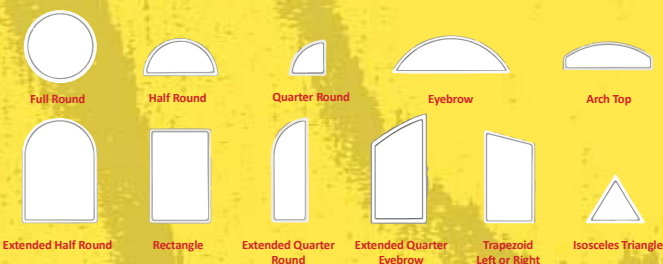

Maximum Allowable PLYLOX™ Clip Spacing (inches)						
Design Wind Speed (MPH, gust)	Nominal Recessed Width of Window (inches)					
	24	36	48	60	72	96
	Clip Spacing in Inches on the Vertical Edges					
110	24	24	24	24	16	8
120	24	24	24	16	8	6
130	24	24	16	8	8	N/A
140	24	24	12	8	6	N/A
150	24	16	8	6	N/A	N/A

There Is No Longer Any Need To Drill Holes Or Permanently Damage Your Property In Order To Protect Your Windows From Storm Damage.

Protect Your Property In 4 Easy Steps


How To Install and Remove Your PLYLOX™ Hurricane Window Clips



Step One
Measure Your Windows



Measure the height and width of a window. Subtract 1/4" from each measurement leaving 1/8" clearance.



Step Three
Slide Clips On Plywood



Slide PLYLOX™ window clips on to opposing vertical edges of the plywood cover and make sure it fits tightly.



Step Two
Cut The Plywood To The Pre-recorded Measurements



Cut your plywood 1/4" smaller than the window opening which allows 1/8" clearance all around.



Step Four
Push Plywood Into Window



With the teeth towards you, against the brick, push the plywood sheet into the window casing.



Remove, Store, Re-Use
You Can Remove PLYLOX™ Quickly And Easily

Just grasp the tension leg of the PLYLOX™ clip with your thumb and index finger and pull forward. This releases the PLYLOX™ and the plywood is easily removed.