






ASSEMBLY INSTRUCTION

SKU CODE: (WF290928/WF290929)






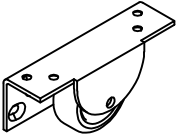


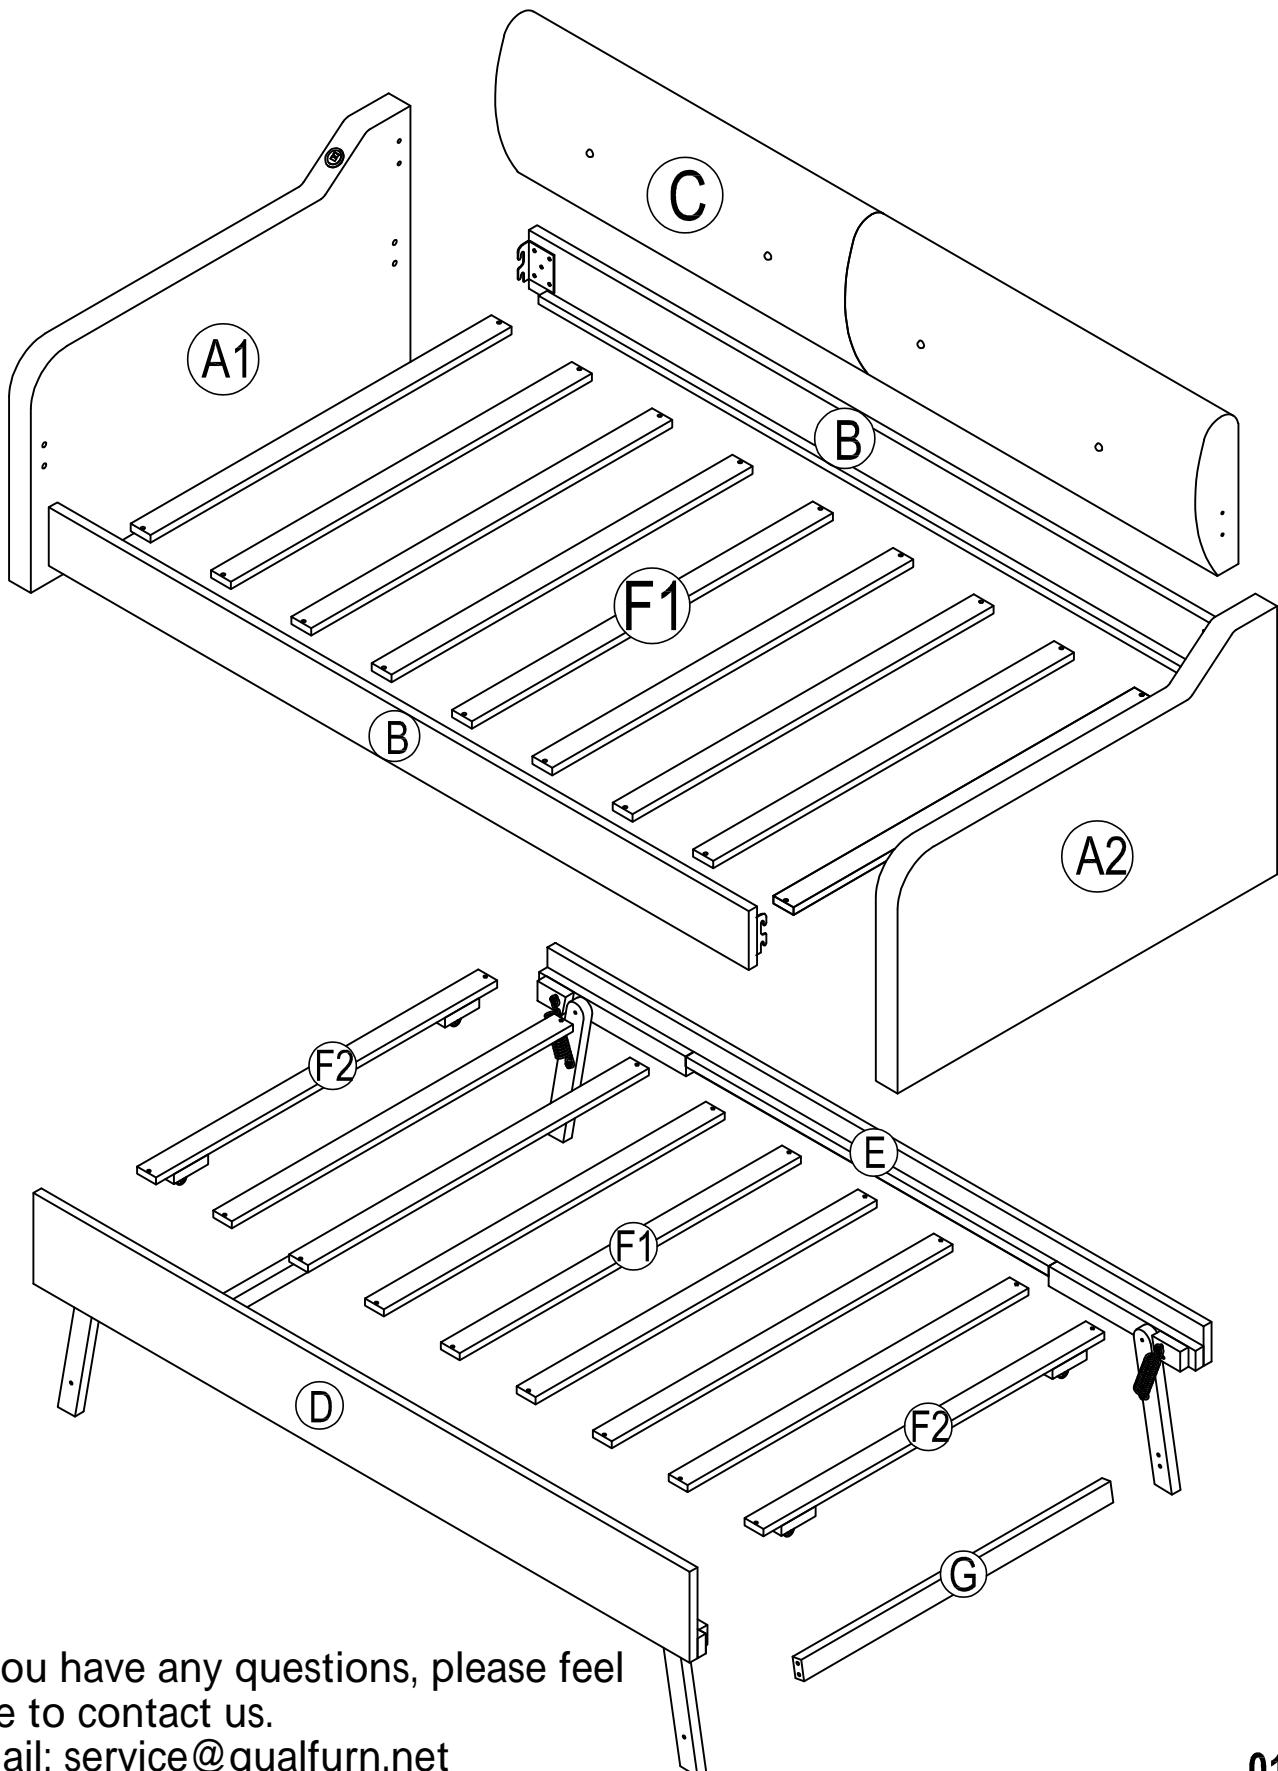


If you have any questions, please feel free to contact us.
Email: service@qualfurn.net


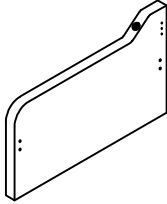
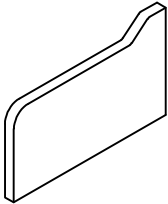
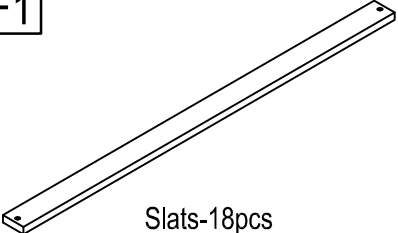
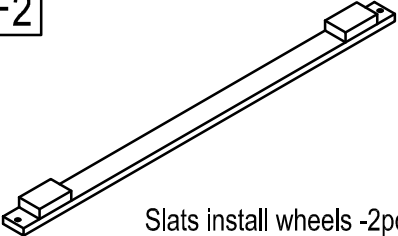
Part List(WF290928)


<div data-bbox="65 232 124 282">A1</div>  <p>HeadBoard-1pcs</p>	<div data-bbox="560 232 619 282">A2</div>  <p>FootBoard-1pcs</p>	<div data-bbox="1054 232 1114 282">F1</div>  <p>Slats-18pcs</p>
<div data-bbox="65 492 124 542">F2</div>  <p>Slats install wheels -2pcs</p>		

Hardware List

<div data-bbox="65 947 113 996">1</div>  <p>Plastic Feet(Ø50x40) 4pcs</p>	<div data-bbox="560 947 608 996">2</div>  <p>Ø1/4" x 30 mm Wood Screws 8pcs</p>	<div data-bbox="1054 947 1102 996">3</div>  <p>Ø1/4" x 50 mm Wood Screws 8pcs</p>
<div data-bbox="65 1207 113 1256">4</div>  <p>M4 x 30 mm Wood Screws 48pcs</p>	<div data-bbox="560 1207 608 1256">5</div>  <p>Ø10 x 40 mm Wood dowel 4pcs</p>	<div data-bbox="1054 1207 1102 1256">6</div>  <p>Wheels 4pcs</p>
<div data-bbox="65 1467 113 1516">7</div>  <p>Allen Key 1pc</p>	<div data-bbox="560 1467 608 1516">8</div>  <p>Steel Bracket 3pcs</p>	<div data-bbox="1054 1467 1102 1516">9</div>  <p>M4 x 15 mm Wood Screws 12pcs</p>

Part List(WF290929)

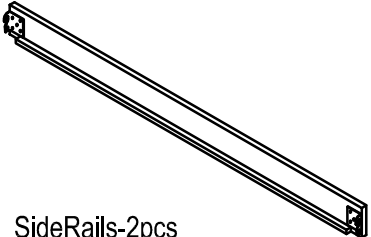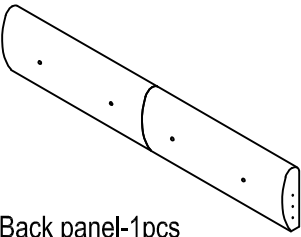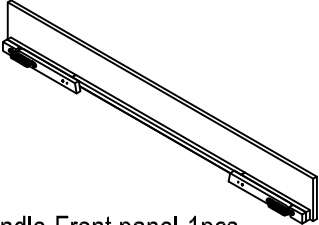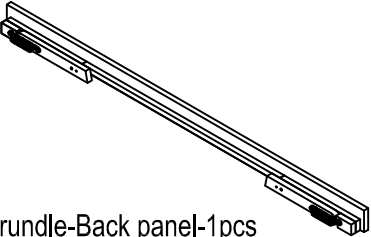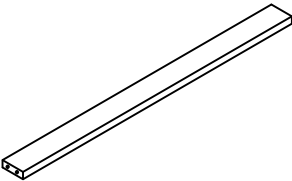
<div>B</div> <div></div> <div>Side Rails-2pcs</div>	<div>C</div> <div></div> <div>Back panel-1pcs</div>	<div>D</div> <div></div> <div>Trundle-Front panel-1pcs</div>
<div>E</div> <div></div> <div>Trundle-Back panel-1pcs</div>	<div>G</div> <div></div> <div>Trundle Legs Bar-2pcs</div>	





Assembly Tools Required (Not Included)

STEP 1: Following below illustration Assembly Plastic Feet(#1) With Headboard and Footboard use HW #2

1




4pcs

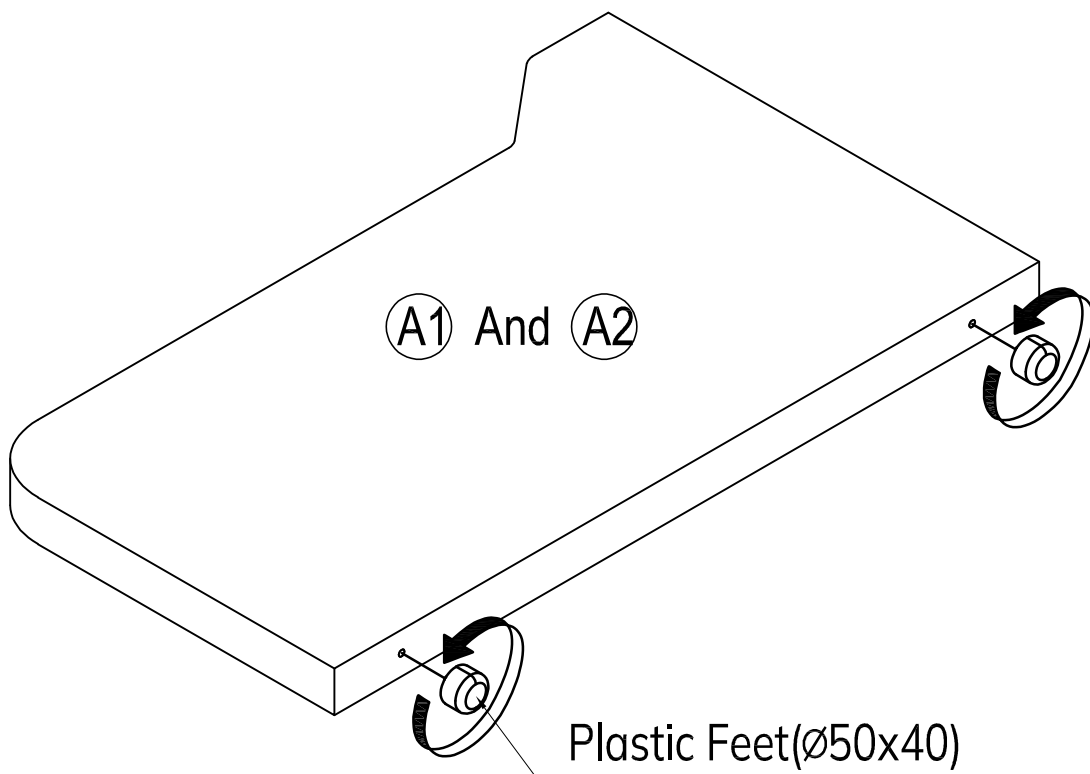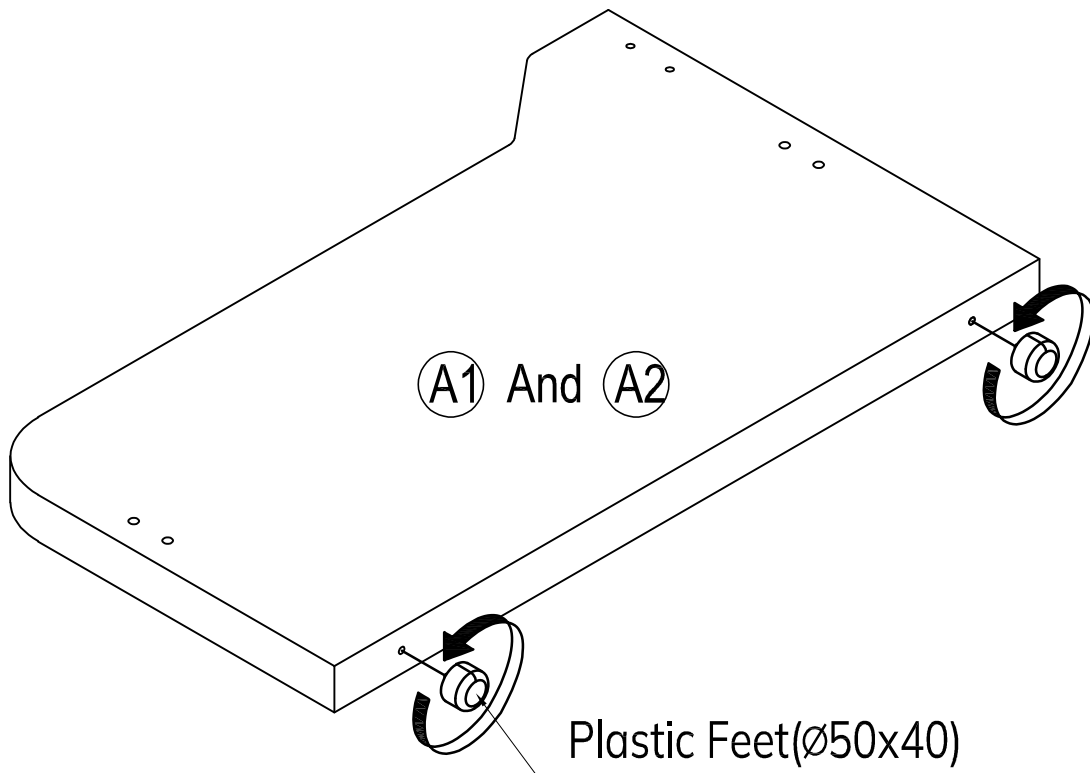


STEP 2: Following below illustration Using hardward #2 to Assembly Headboard and Footboard with siderail
B(x2).Look at detail view for more detail

2




8pcs

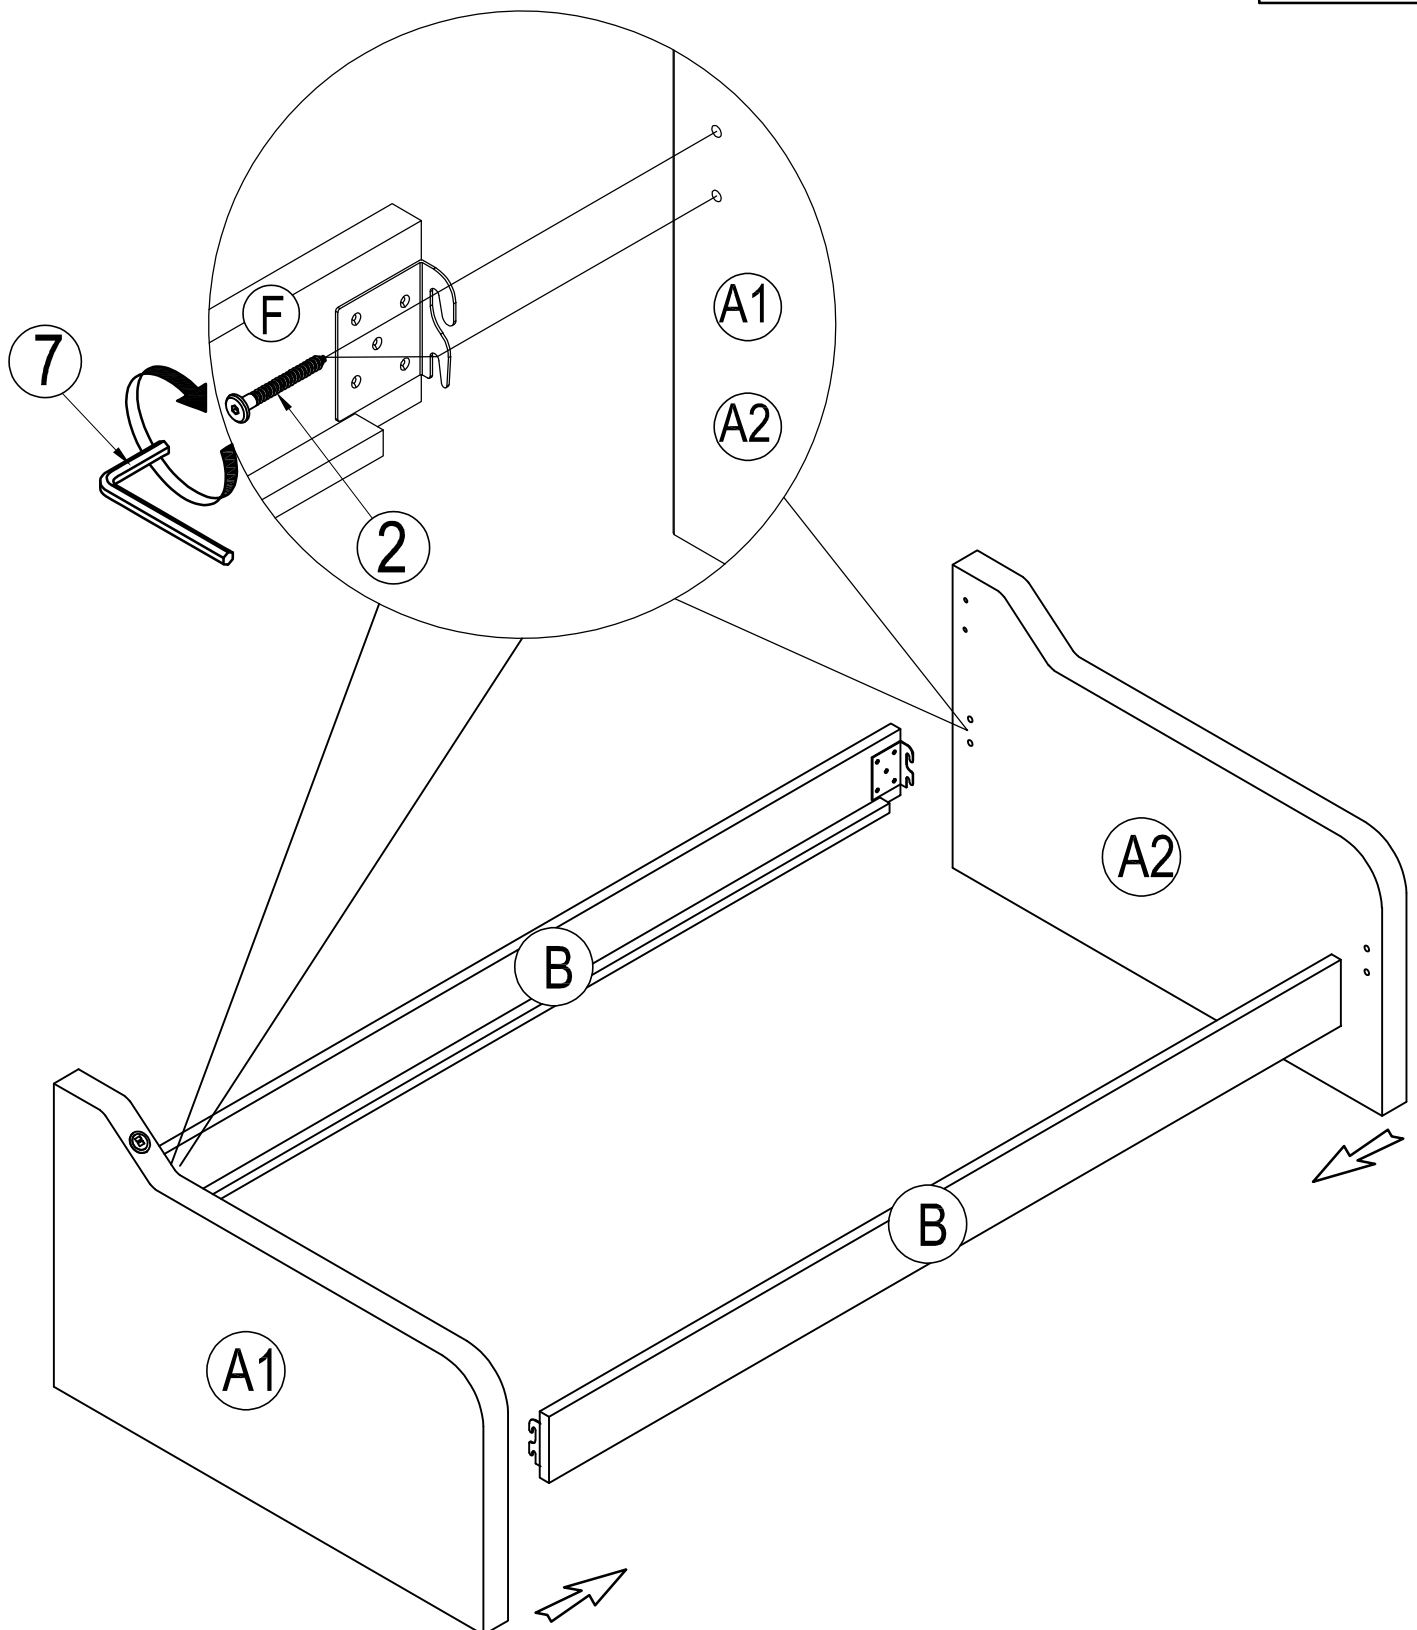



STEP 3: Following below illustration

-Using hardward #3 to Assembly Frame(completed on step 2) with Bach Frame C

8



6pcs

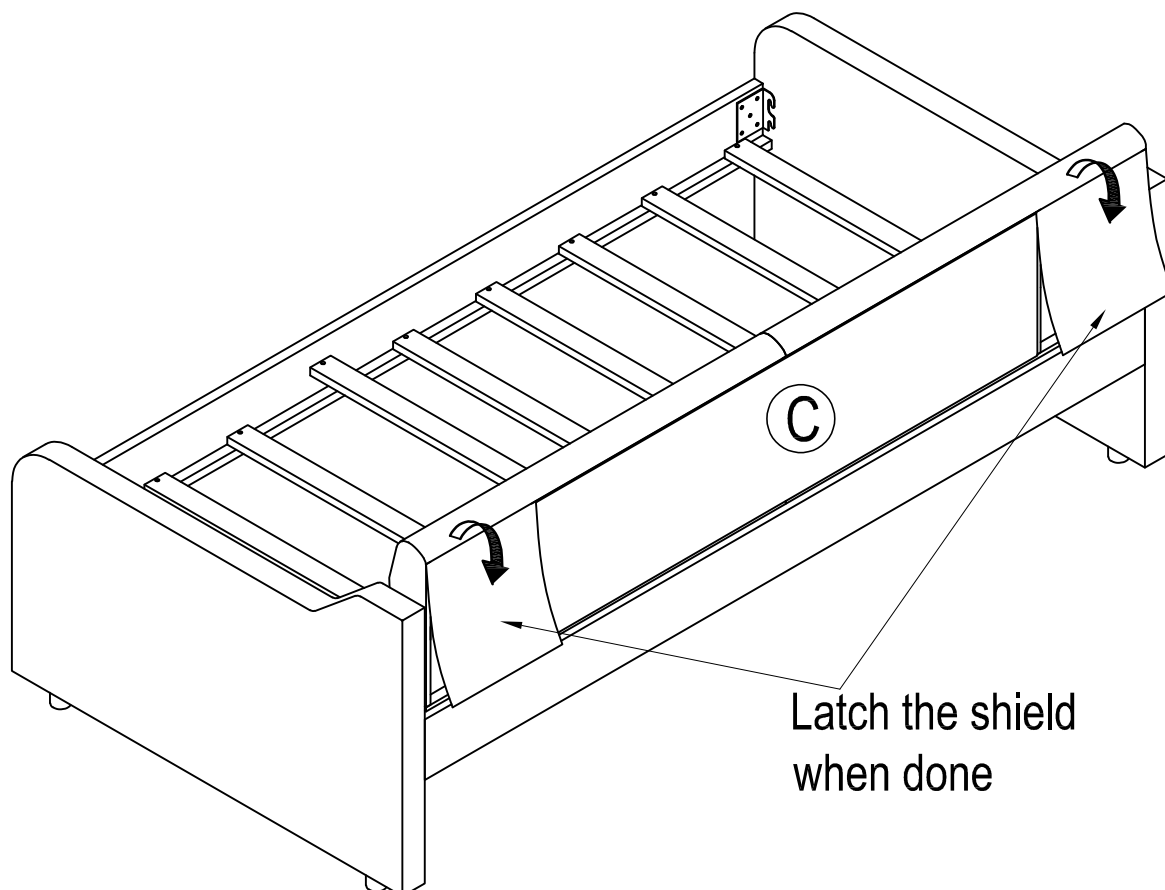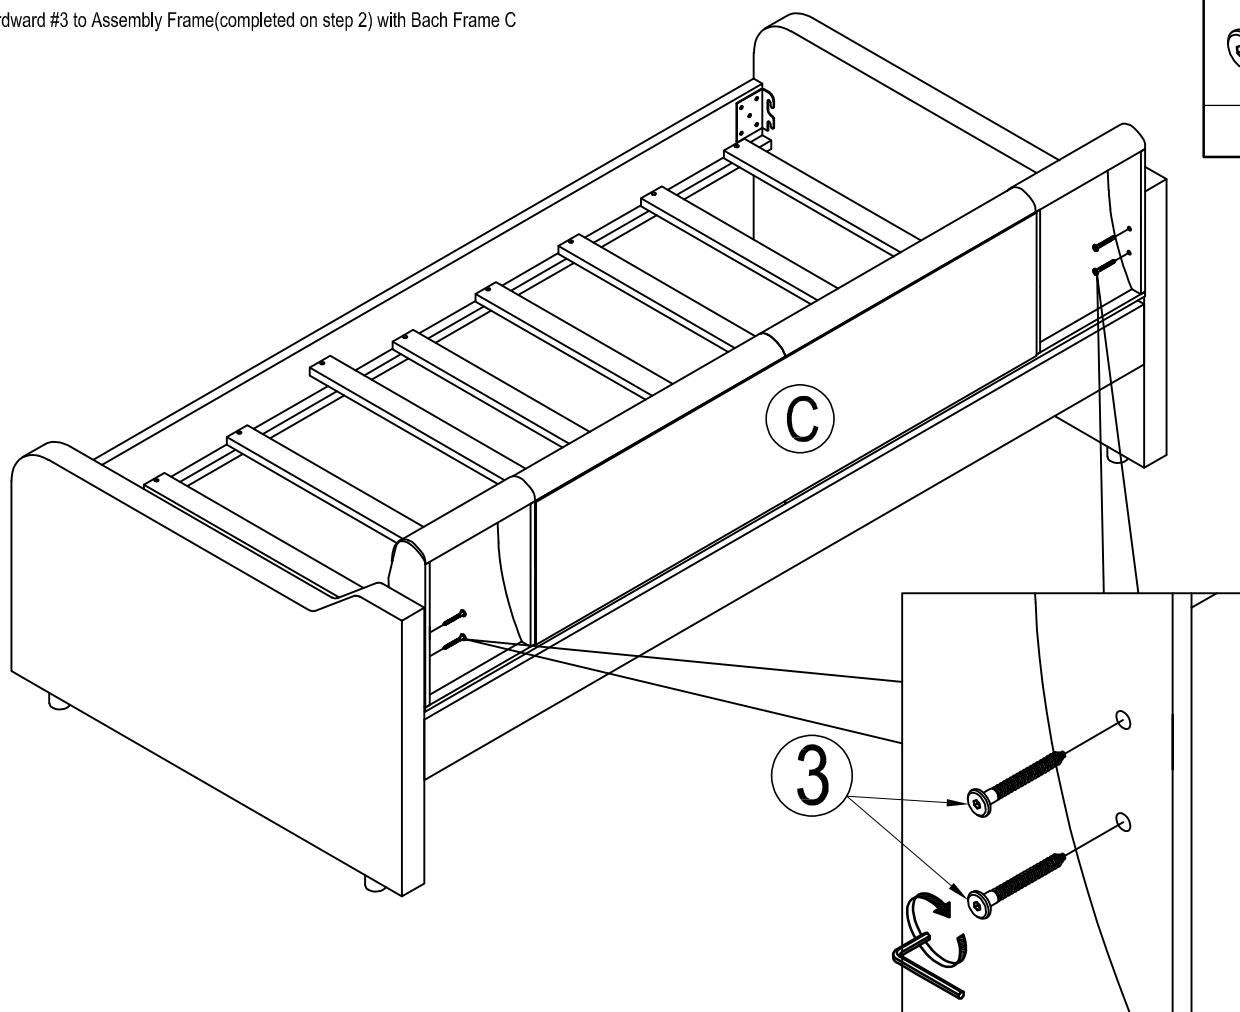

Latch the shield
when done

STEP 4: Following below illustration:


-Screw 10 slats F with Side Rail B by using hardware #4.

-Look at detail view for more detail


4




20pcs

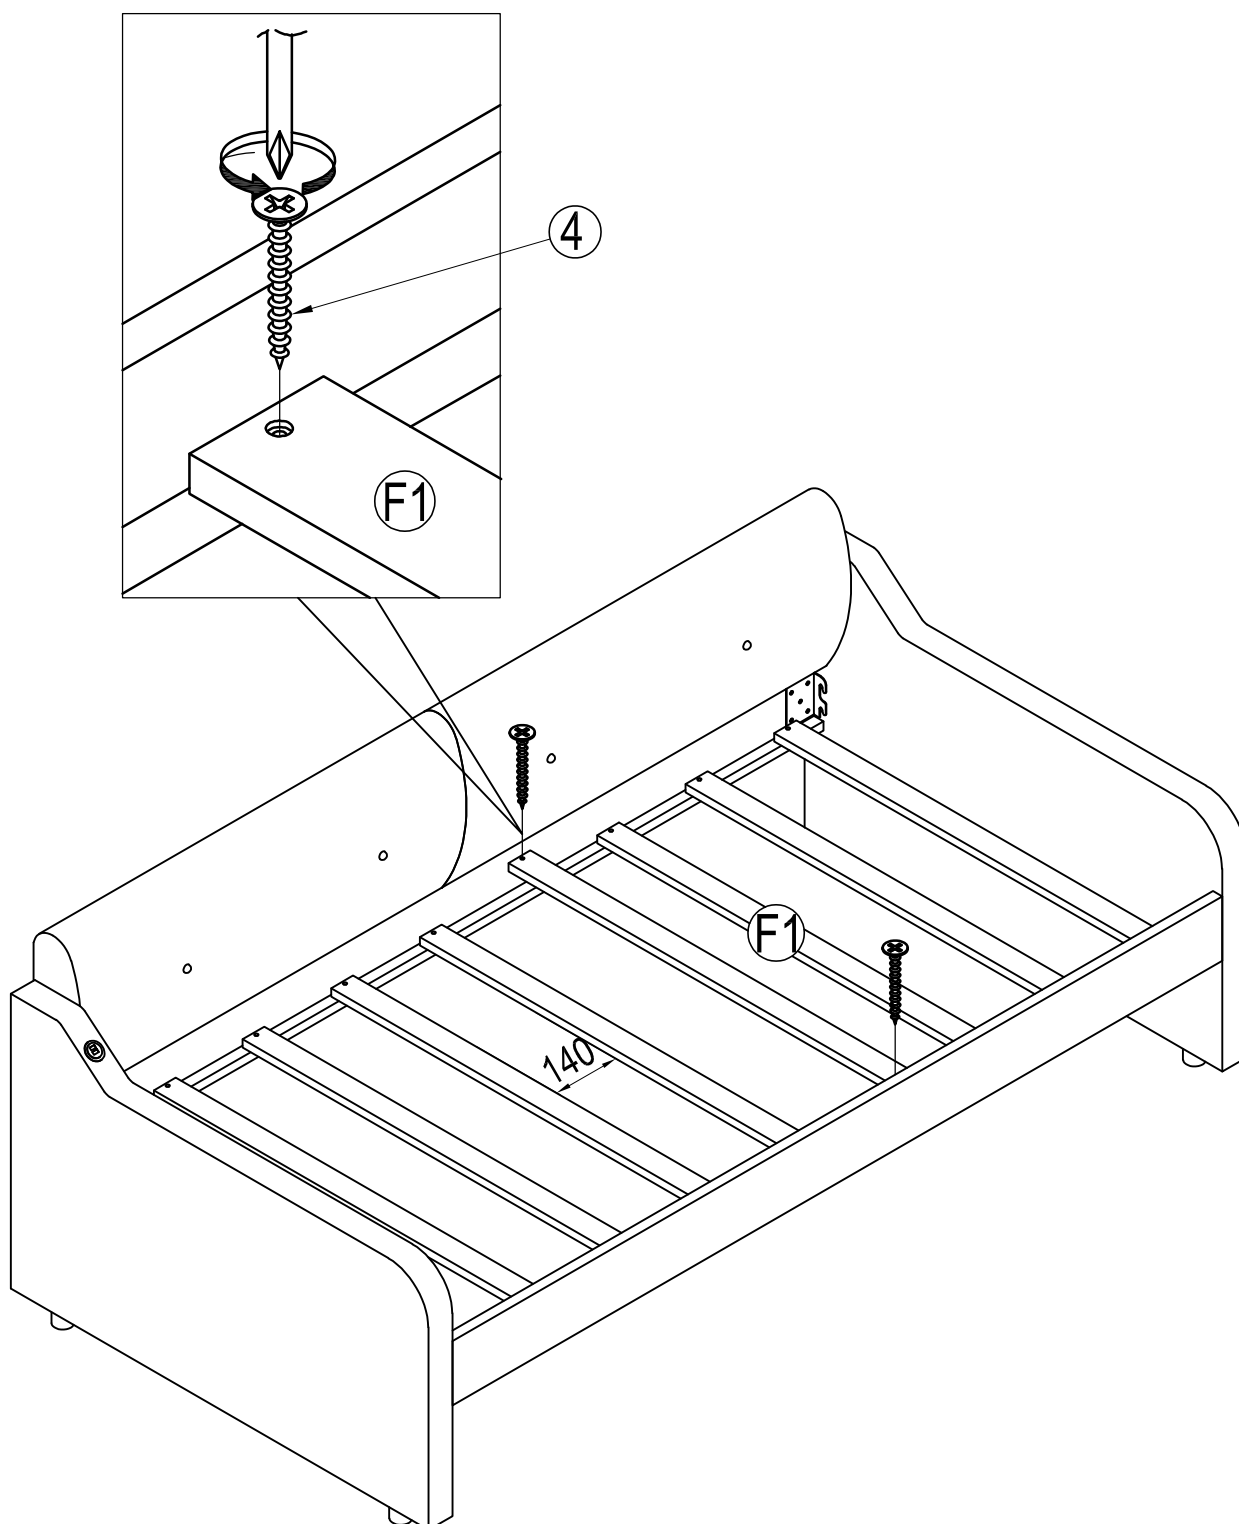


STEP 5-1: Following below illustration:


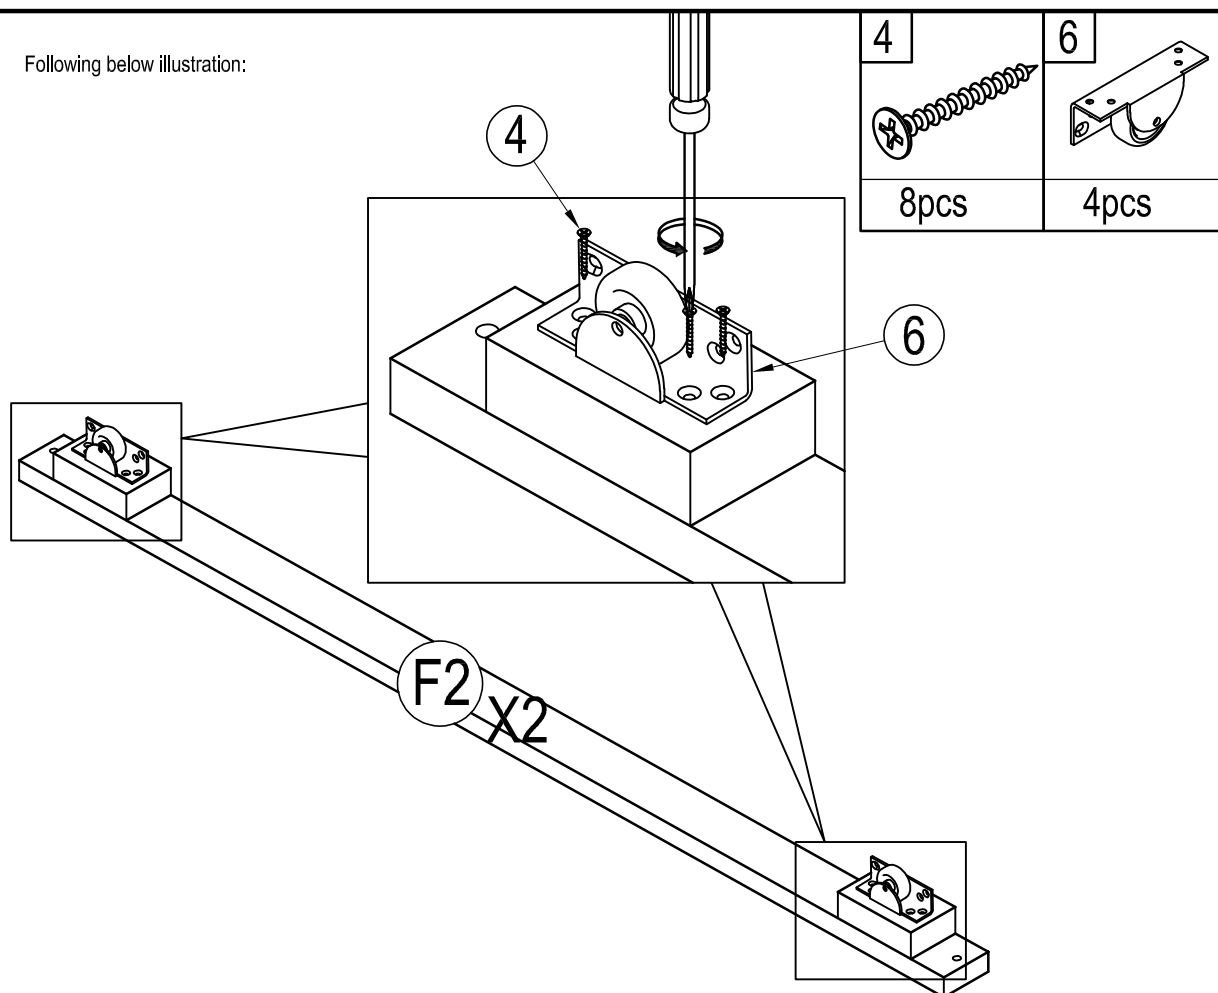


STEP 5-2: Loosen a screw number 4 and keep for step 6

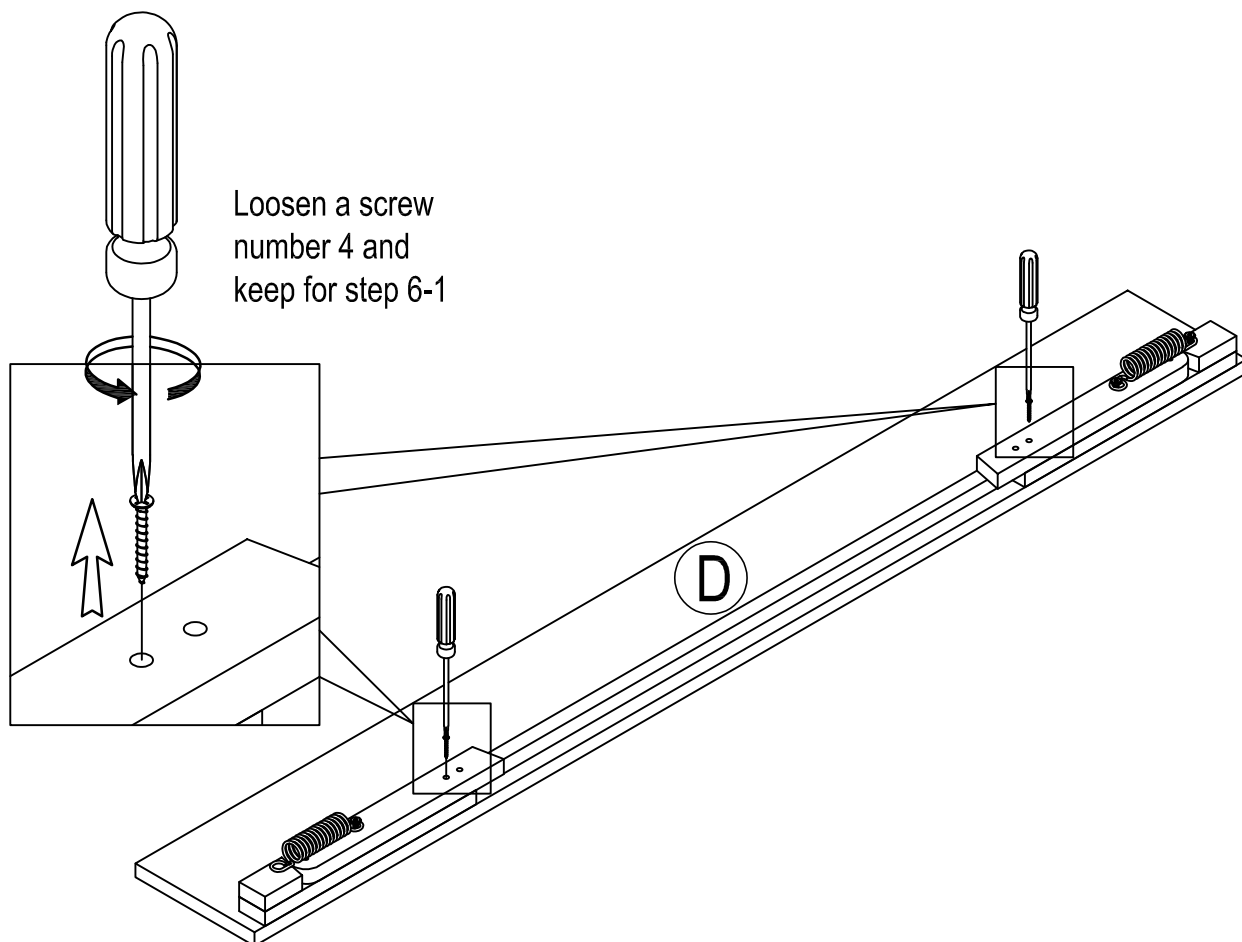



STEP 6-1: Following below illustration:

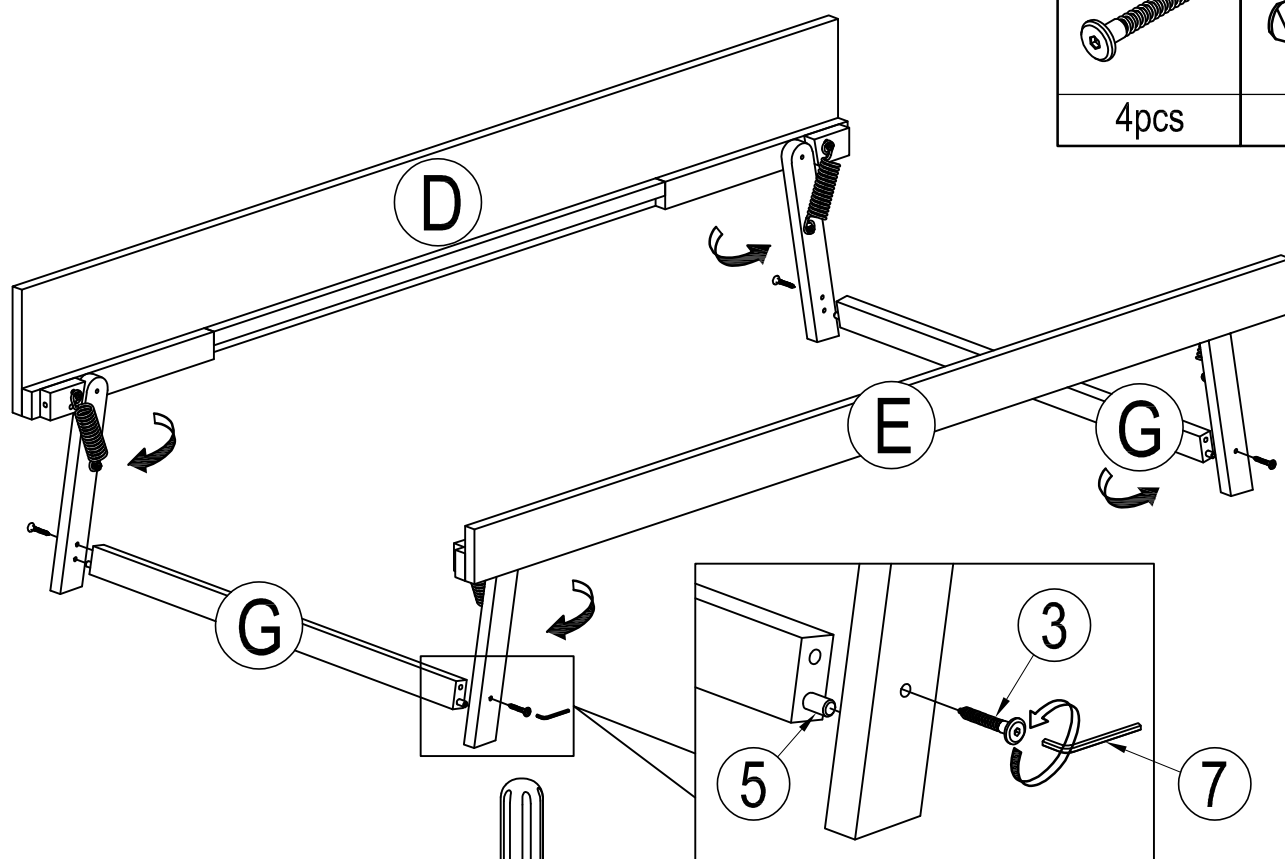



3	5
	
4pcs	4pcs

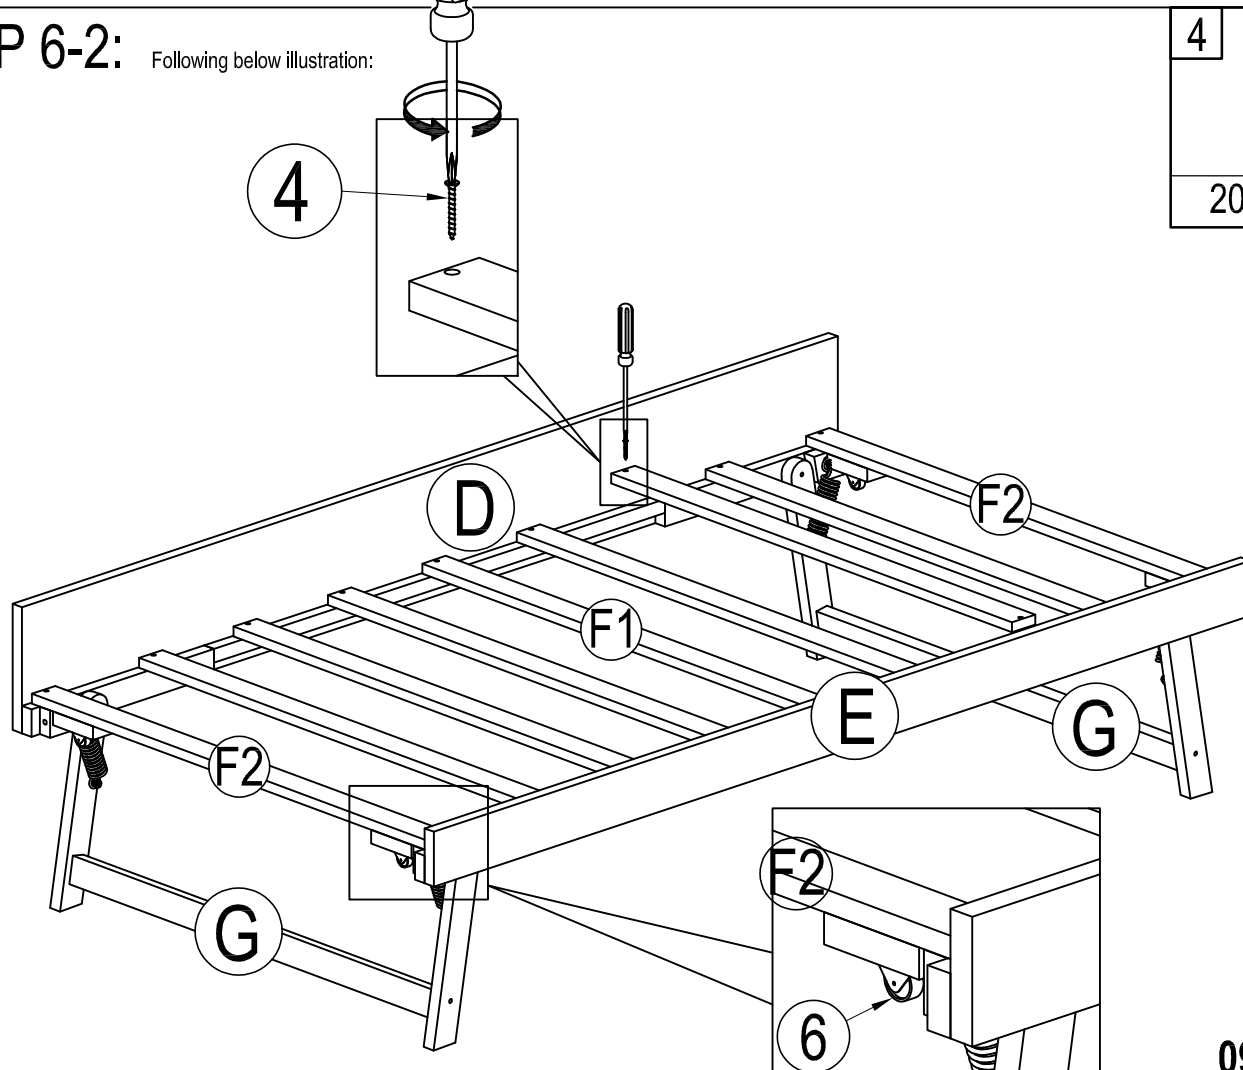
STEP 6-2: Following below illustration:



4

20pcs

STEP 7: Following below illustration:

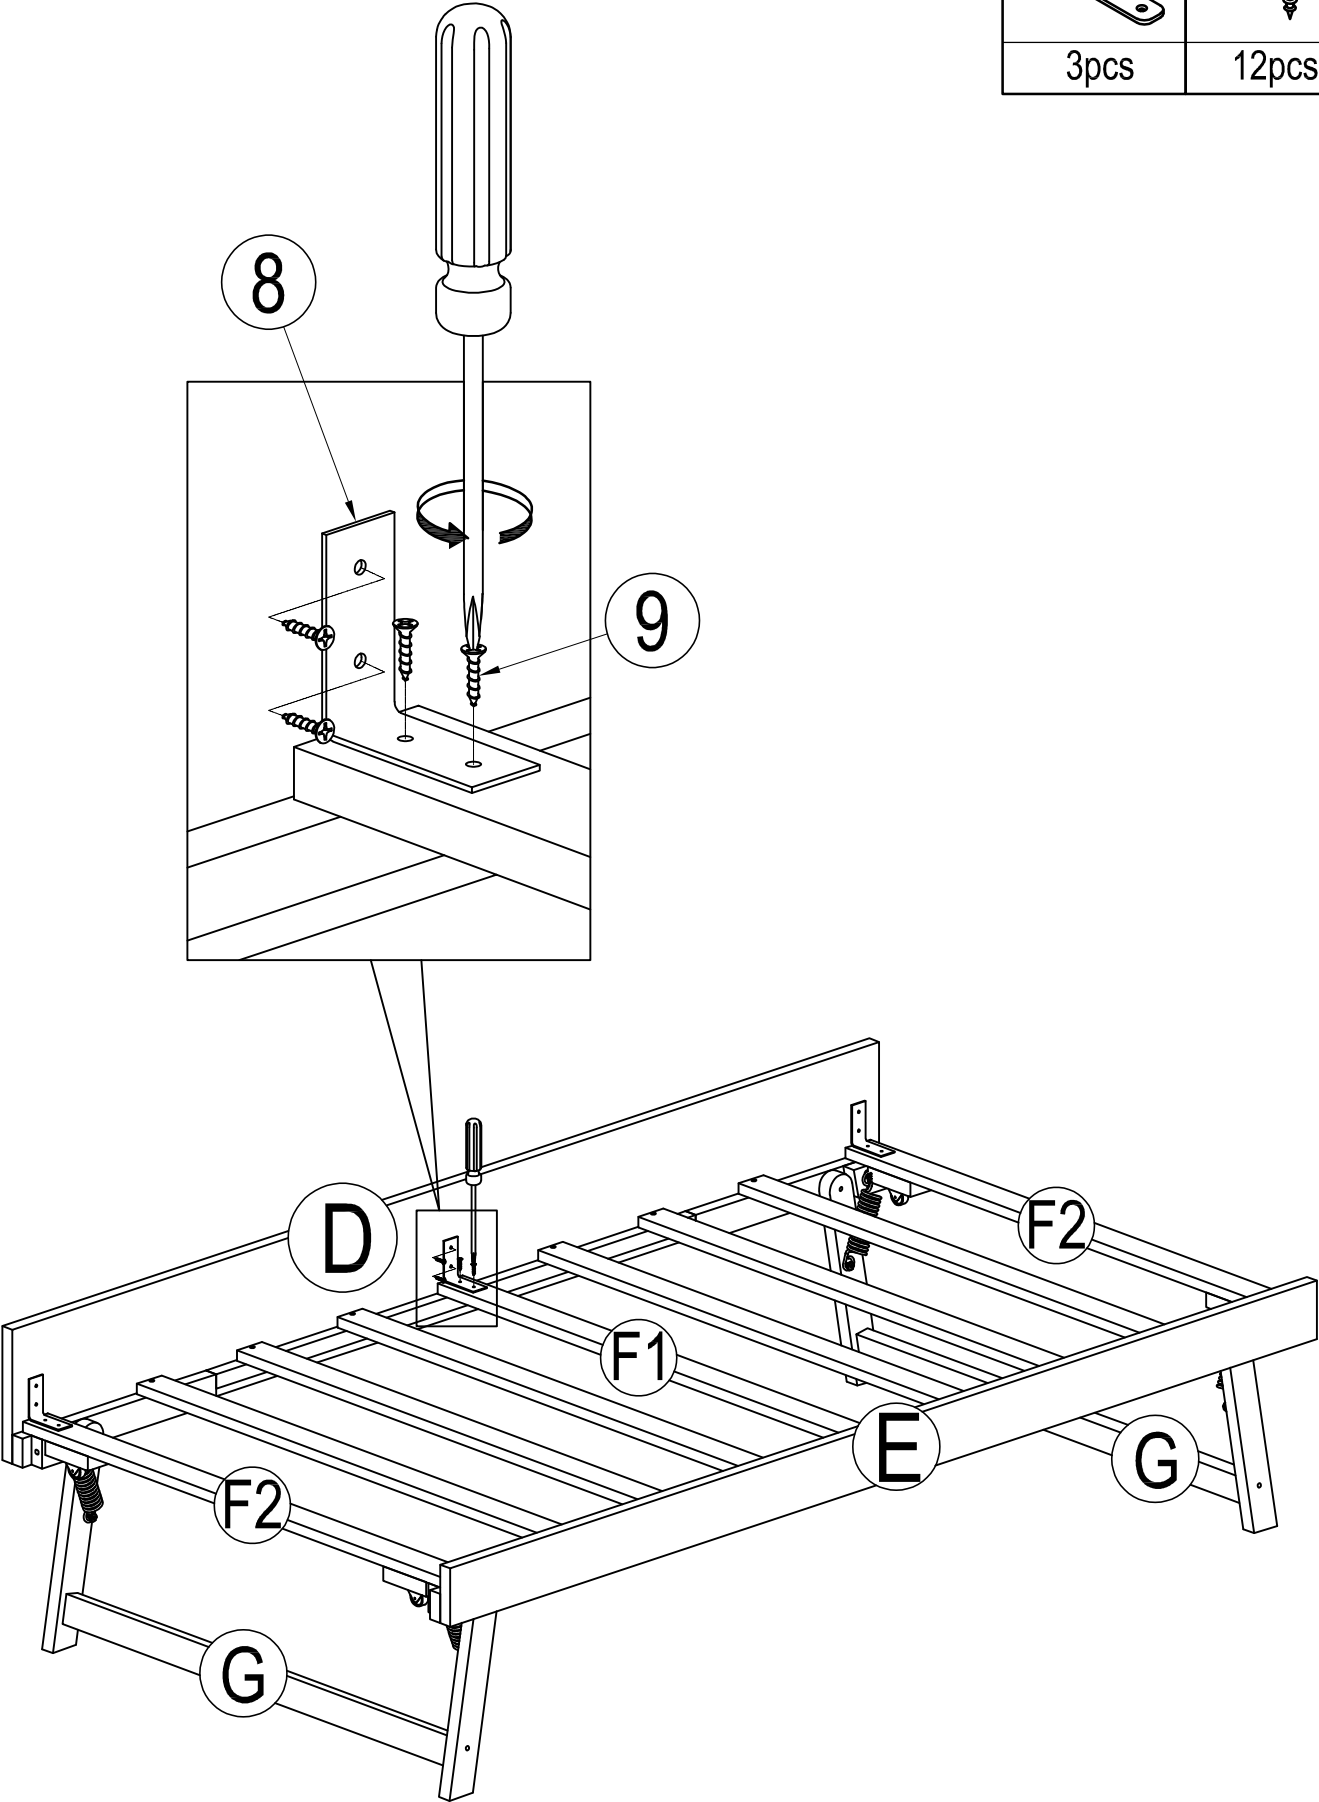8		9	
3pcs		12pcs	



STEP 8: Following below illustration:

