
ASSEMBLY INSTRUCTIONS


EEI-7116

V0.16.04.24

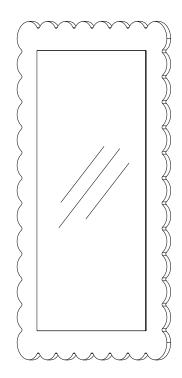



Let's get started!





Read through all of the instructions before starting



Approx. 20 minutes assembly time



Make sure you have all parts and components before discarding any packing materials

Care instructions are

listed in the last step

of this manual



Only use hand tools to assemble this item. Do not use power tools. Do not tighten bolts or screws completely until all hardware is lined up and inserted into the holes.

Do not over-tighten screws and bolts to avoid stripping the hardware or cracking the item.

Assemble your item on a flat, carpeted area, with plenty of space to work. This, will prevent damage and scratches to your floors or the item while you're assembling the product.


Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.

(2)

2 people recommended for assembly

Furniture components:

1 Mirror Panel x

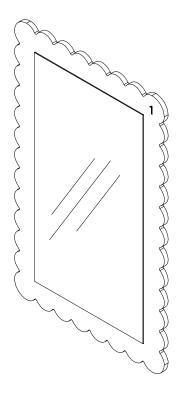

Provided hardware:

A.		Screw M3.5 x 12 mm	x4
В.		Screw M4 x 25 mm	x2
C.		▶PVC Wall Plug	x2
D.	(Co)	Keyhole Wall Bracket	x2

What you need:





You may also need:

- + Power Drill + Level


Step 1

A Screw M3.5 x 12 mm	x4
Keyhole Wall Bracket	x2
COMPONENTS	
Mirror Panel	x1

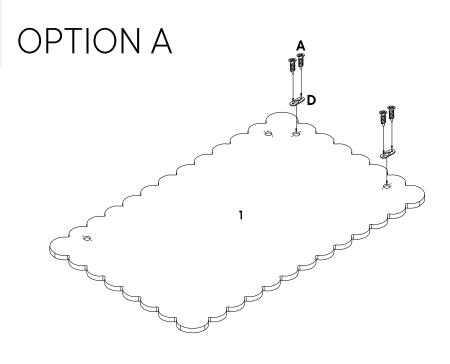

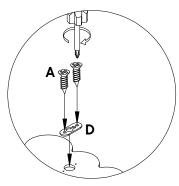

OPTION B

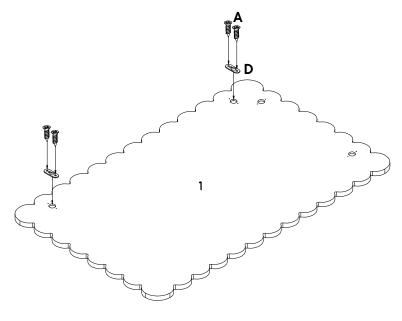



Step 2

OPTION A & B


HARDWARE	
B Screw M4 x 25 mm	x2
PVC Wall Plug	x2
COMPONENTS	
Mirror Panel	x1


Different wall materials require unique wall fasteners. The PVC wall plugs (C) and screws (B) are designed for fixing to concrete walls only. Please consult your local hardware store to ensure you are using the correct hardware for your wall type

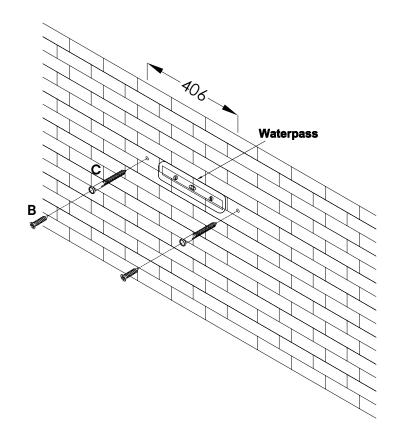

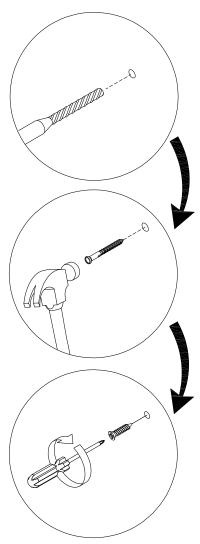




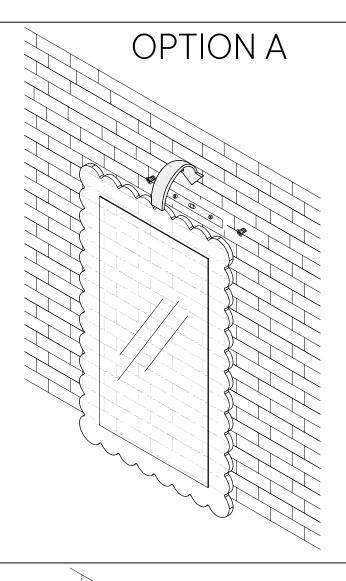

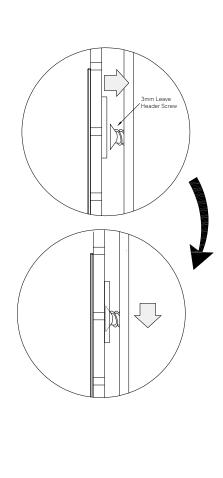


Step 4

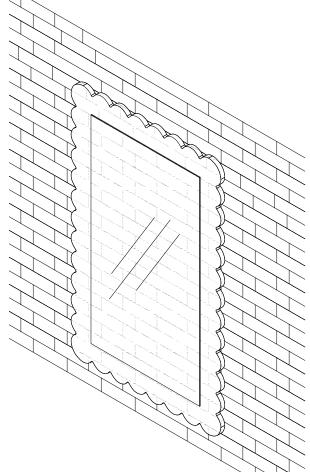

*modway



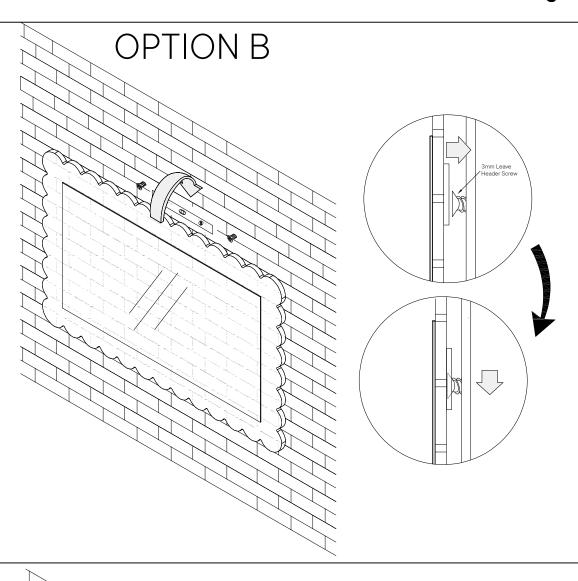

Step 6

