


7. Parts Breakdown

FIGURE 7

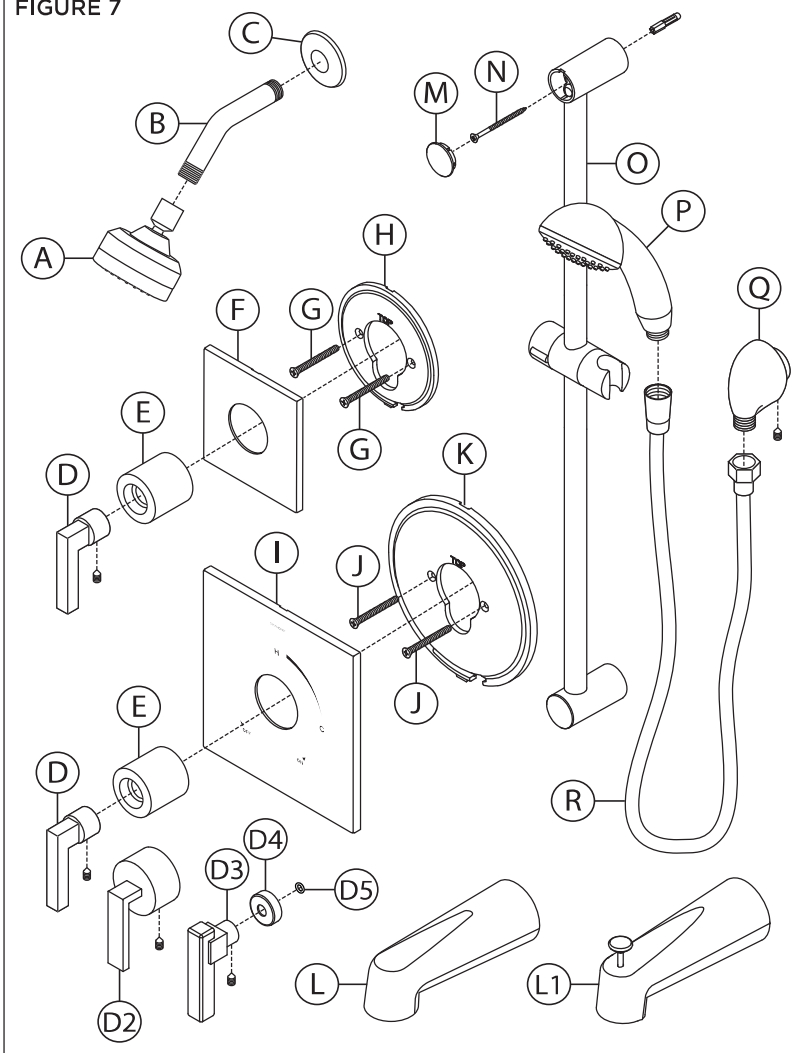

*Order in-line vacuum breaker (EF-109) for hand shower systems without dual checks.

Replacement Parts

Item	Description	Part Number
A	Showerhead	362SH
B	Shower Arm	300S
C	Flange	
D	Standard Handle	T-617
D2	Metal Lever Handle	RTS-092
D3	Metal Lever Handle	RTS-093
D4	Handle Flange	DF-6
D5	O-ring	DF-25
E	Dome Cover	RTS-037
F	Diverter Escutcheon	
G	Screws	RTS-040
H	Mounting Plate	
I	Shower Escutcheon	
J	Screws	RTS-001
K	Mounting Plate	
L	Tub Spout	067
L1	Diverter Tub Spout	352TS
M	Slide Bar Assembly	RA-009
N		
O		
P	Hand Shower	EF-100
Q	Wall Elbow	EF-105
R	60" Hose	RTS-045

Notes:

- 1) Append appropriate suffix for premium finish.
- 2) Append appropriate flow rate to showerhead or hand shower for low flow.
- 3) Apply a bead of silicone around the perimeter of all shower trim installed flush to the finished wall. Leave opening on bottom of escutcheons for weep hole.
- 4) Apply plumber tape to threaded connections as necessary. DO NOT use plumber tape on fittings with face seal washers or o-rings.
- 5) DO NOT OVERTIGHTEN fittings with face seal washers or o-rings.