

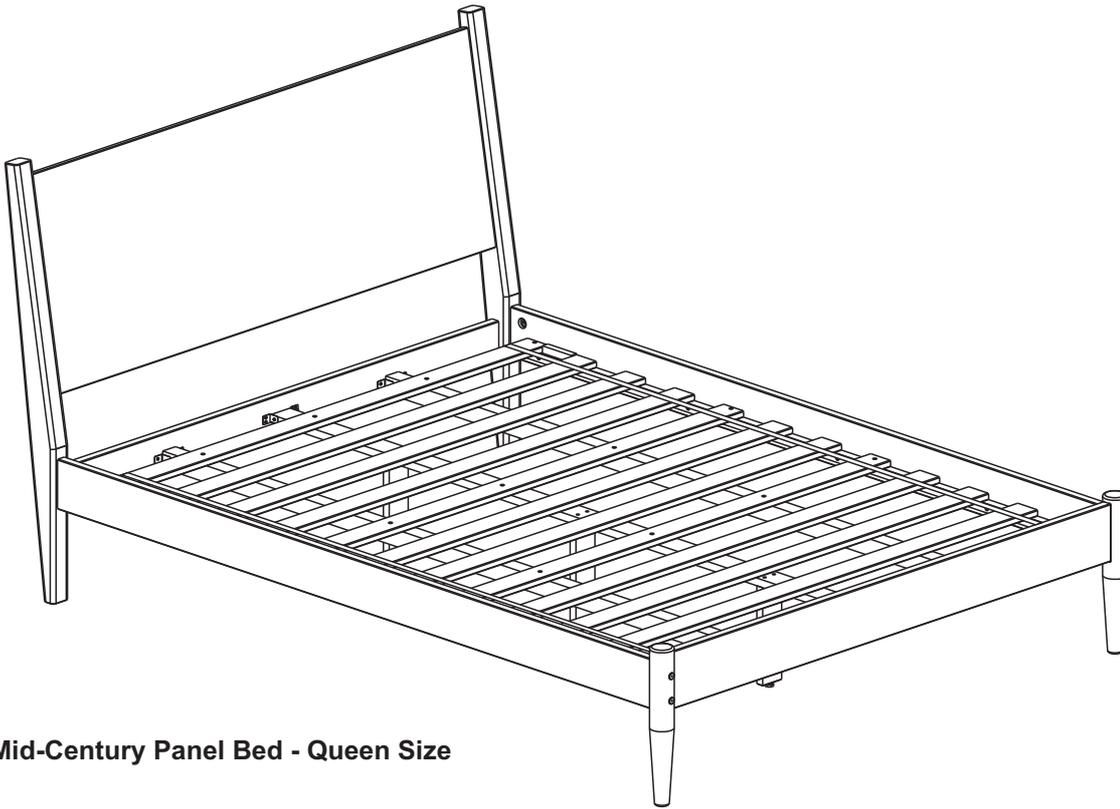
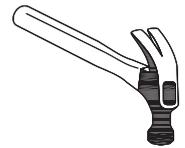


# ASSEMBLY INSTRUCTIONS

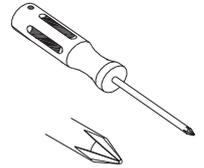


Mid-Century Panel Bed - Queen Size

01:00 Hs

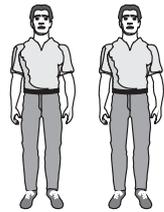

## HARDWARE INCLUDED



**A** - 10,0x50 Wood Dowel  
Qty. 20



**B** - 4,0x40 Screw  
Qty. 16




**C** - 3,5x16 Screw  
Qty. 40




**D** - 3,5x30 Screw  
Qty. 20



**E** - Screw Nut  
Qty. 08




**F** - Allen Key  
Qty. 01




**G** - Support Bar  
Qty. 02



**H** - 1/4x100 Screw  
Qty. 08



**I** - 7,0x50 Screw  
Qty. 06

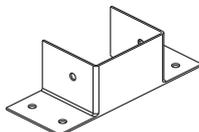


**K** - Support Bar  
Qty. 04




**L** - Wood Hole  
Cover - Qty. 04


# PARTS INCLUDED

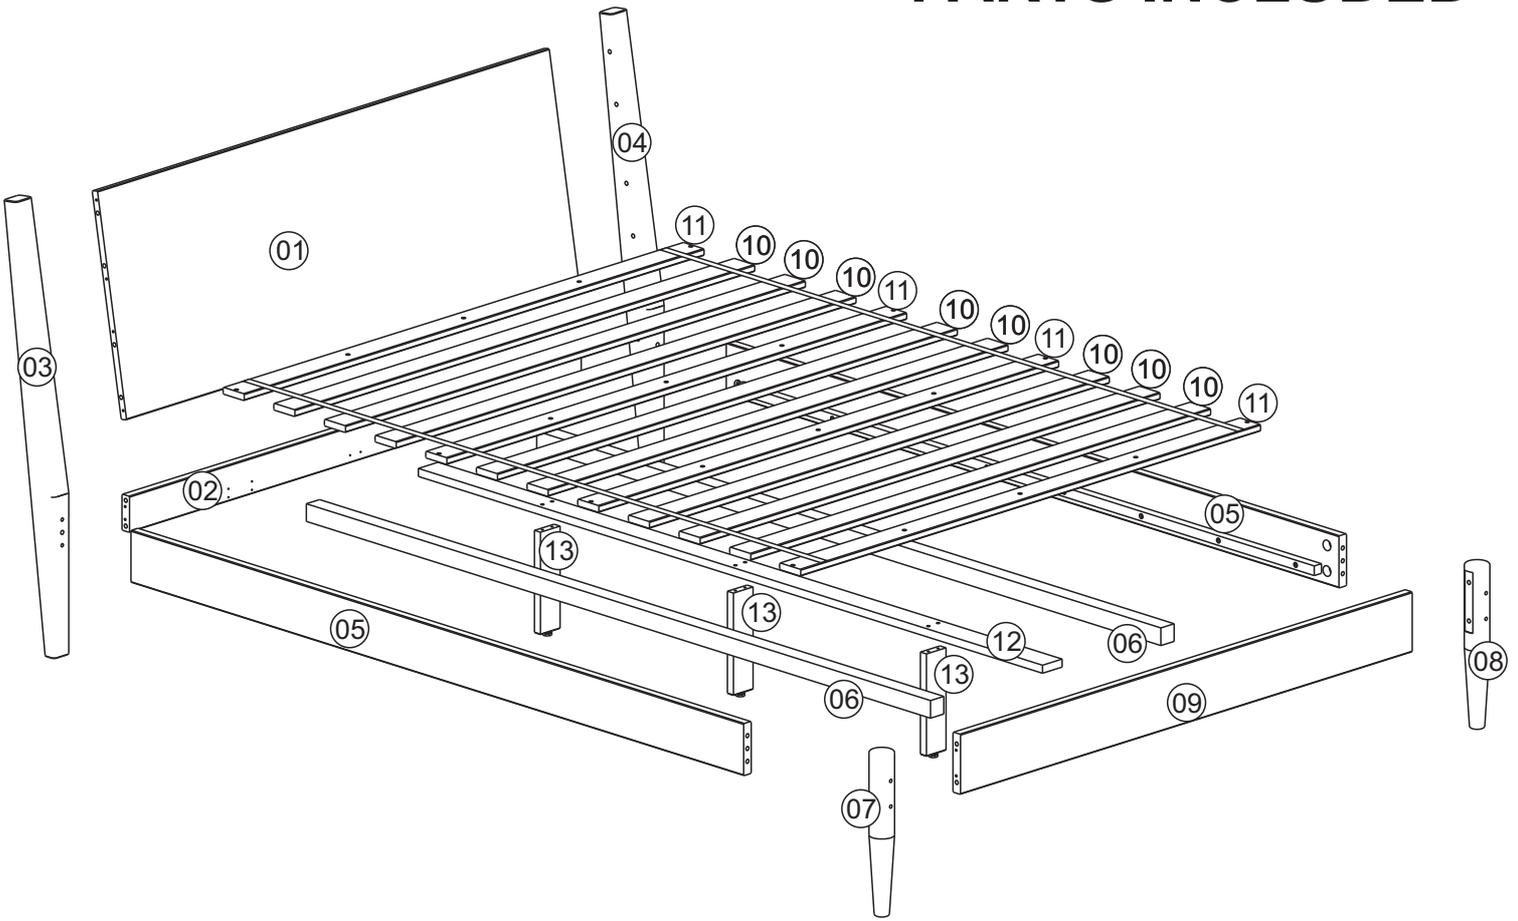

## STEP 1

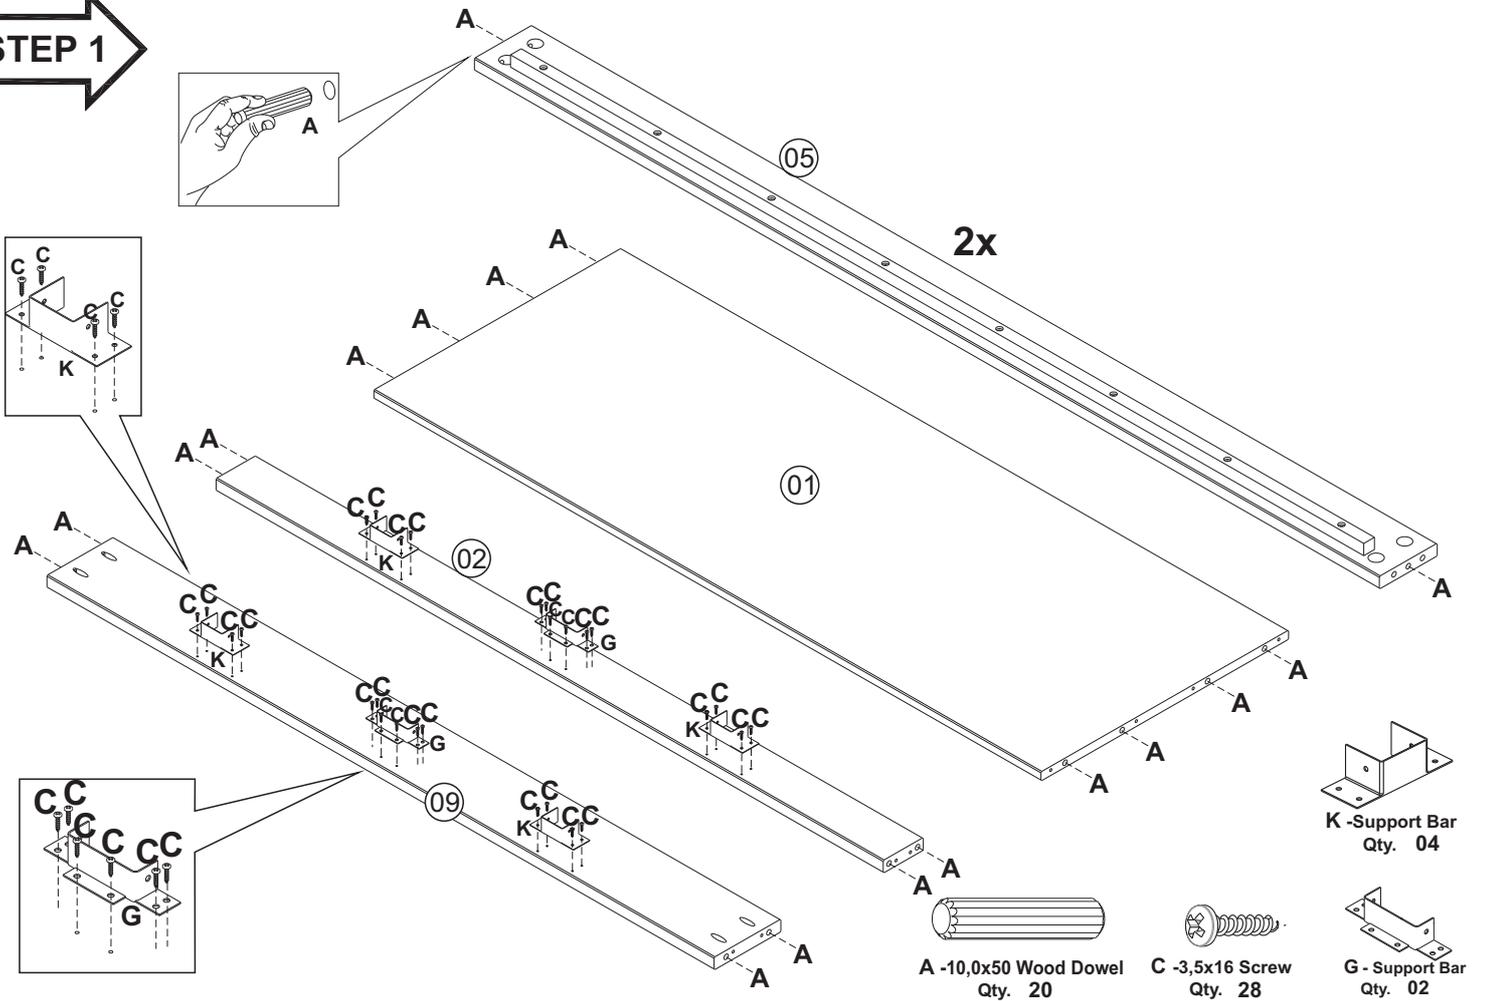


**STEP 2**

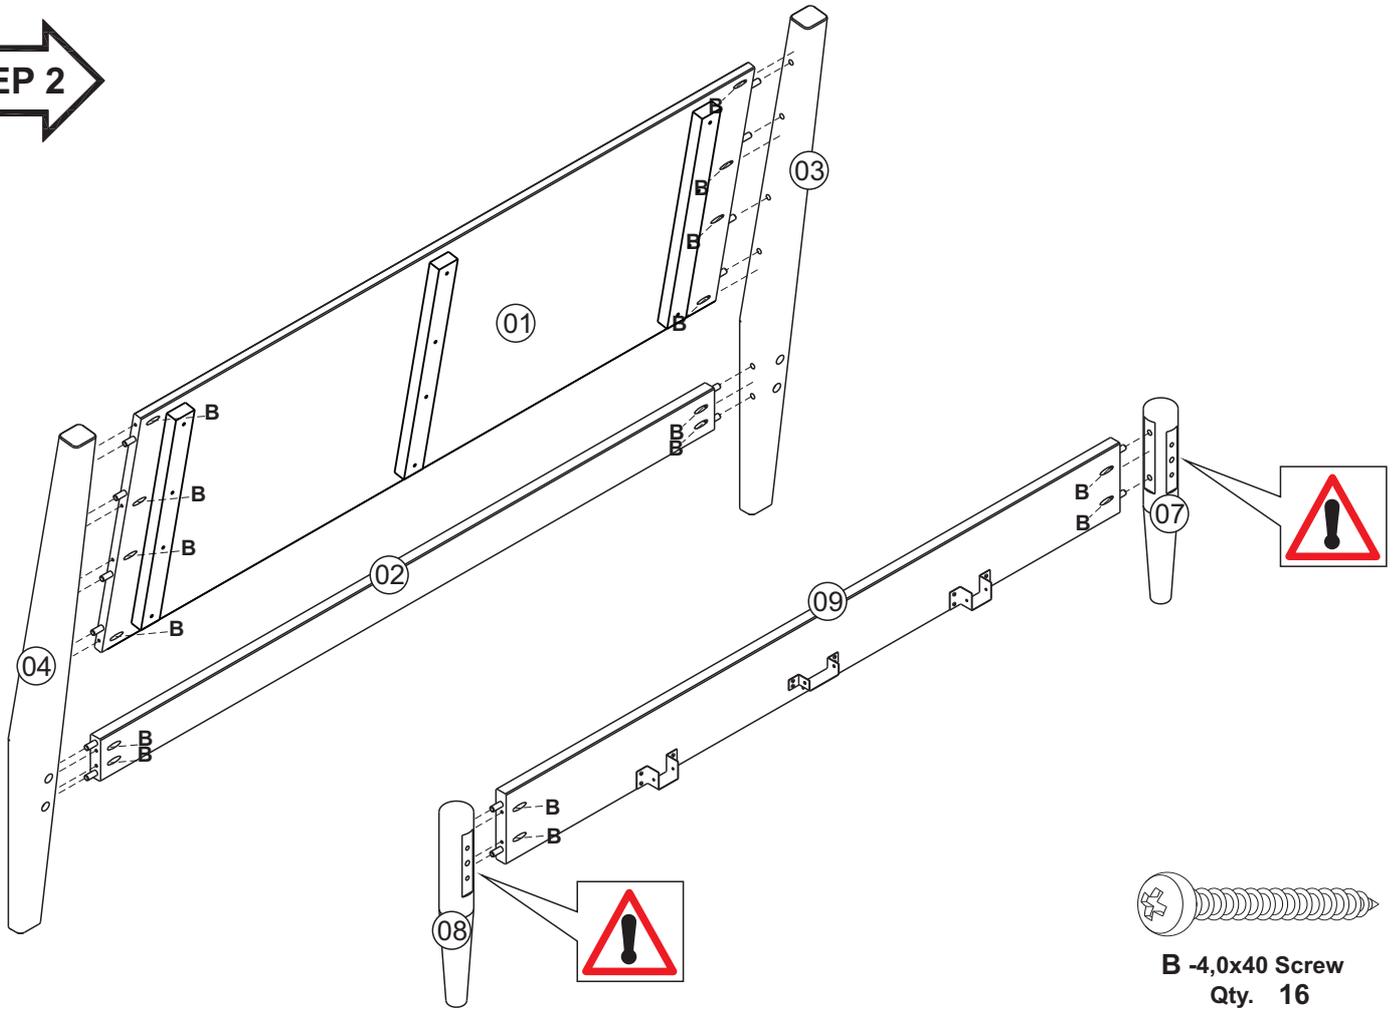

**B -4,0x40 Screw**  
Qty. 16

**STEP 3**

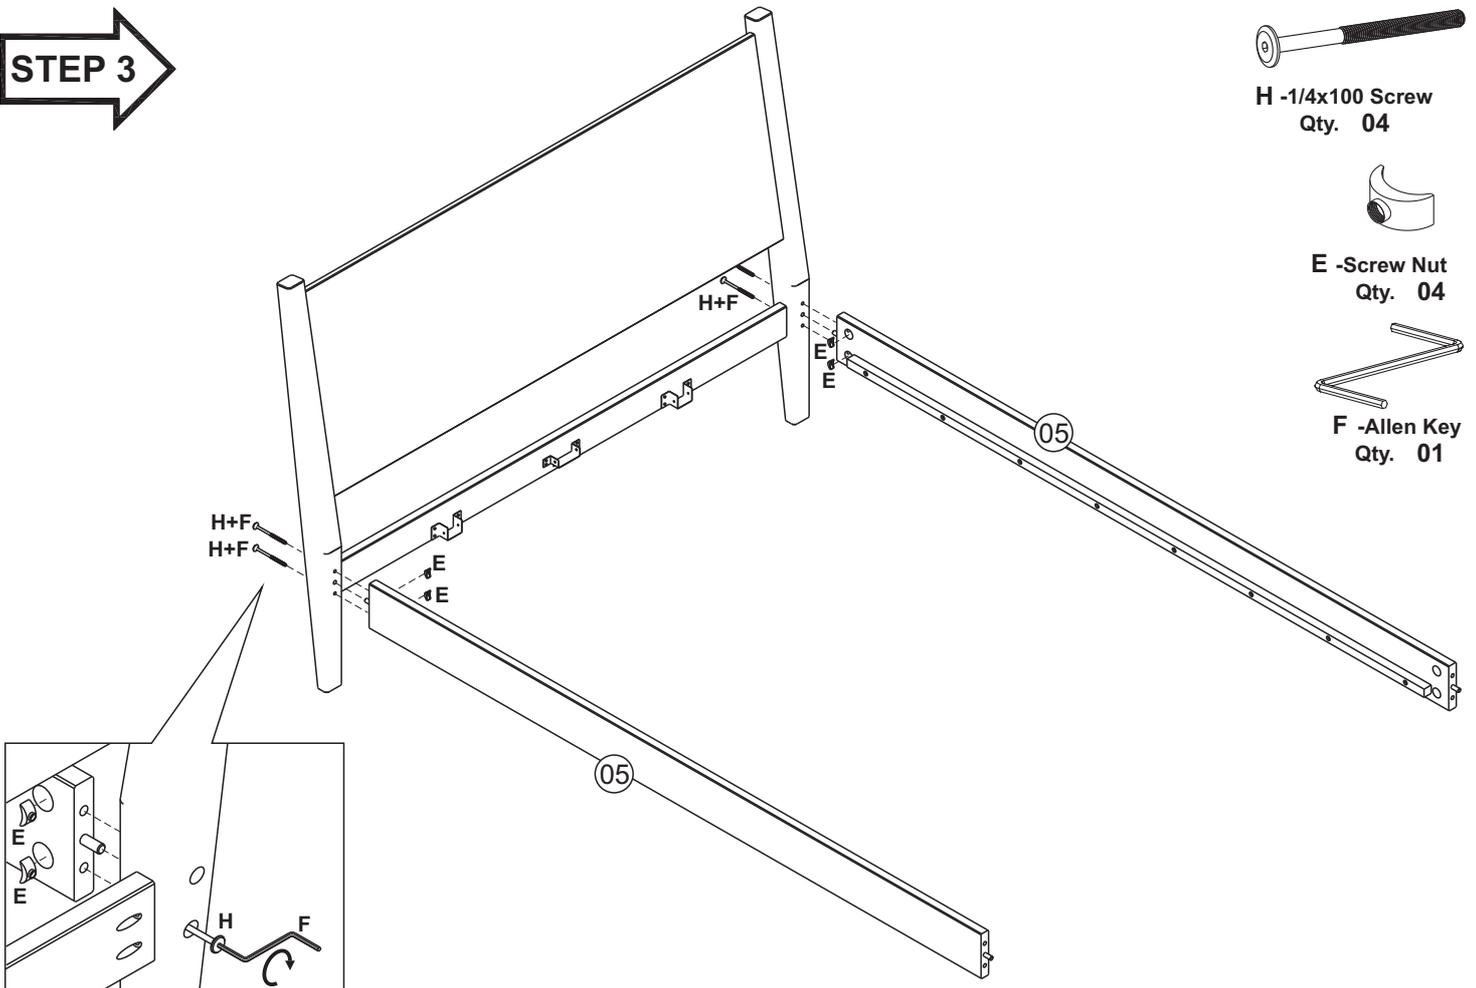


**H -1/4x100 Screw**  
Qty. 04

**E -Screw Nut**  
Qty. 04

**F -Allen Key**  
Qty. 01

**STEP 4**

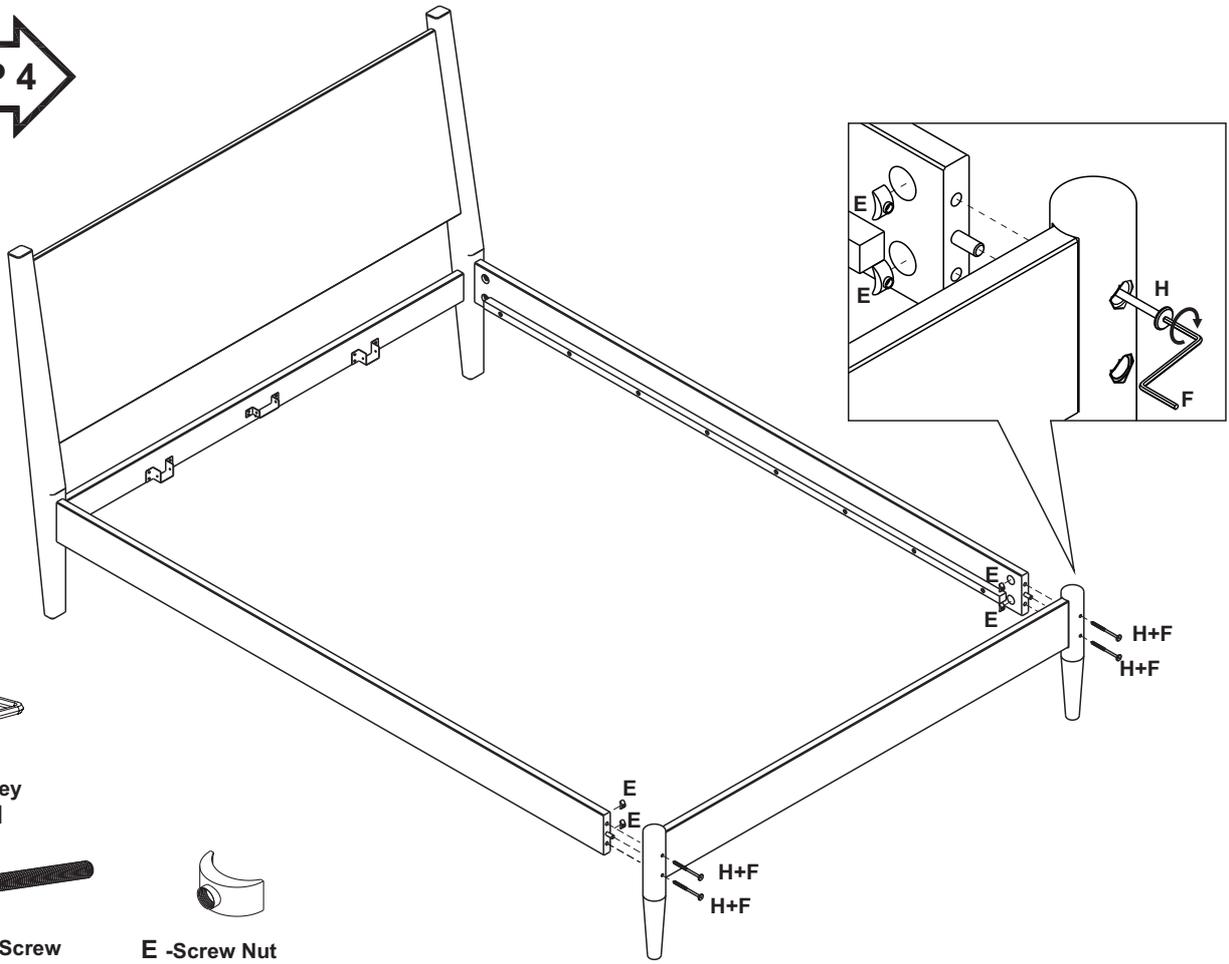


F -Allen Key  
Qty. 01

H -1/4x100 Screw  
Qty. 04

E -Screw Nut  
Qty. 04



**STEP 5**

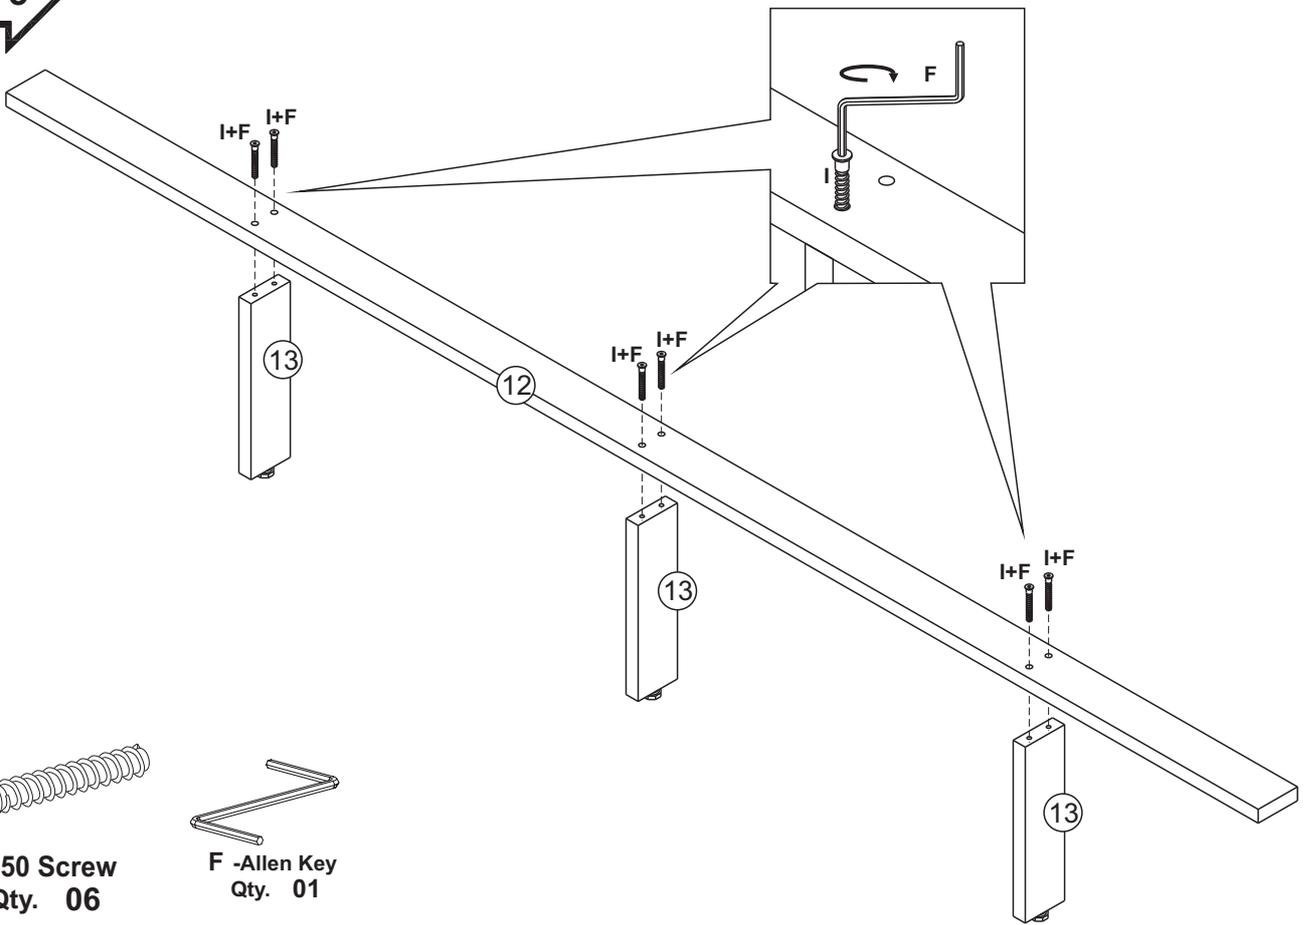

I - 7,0x50 Screw  
Qty. 06


F -Allen Key  
Qty. 01

**STEP 6**

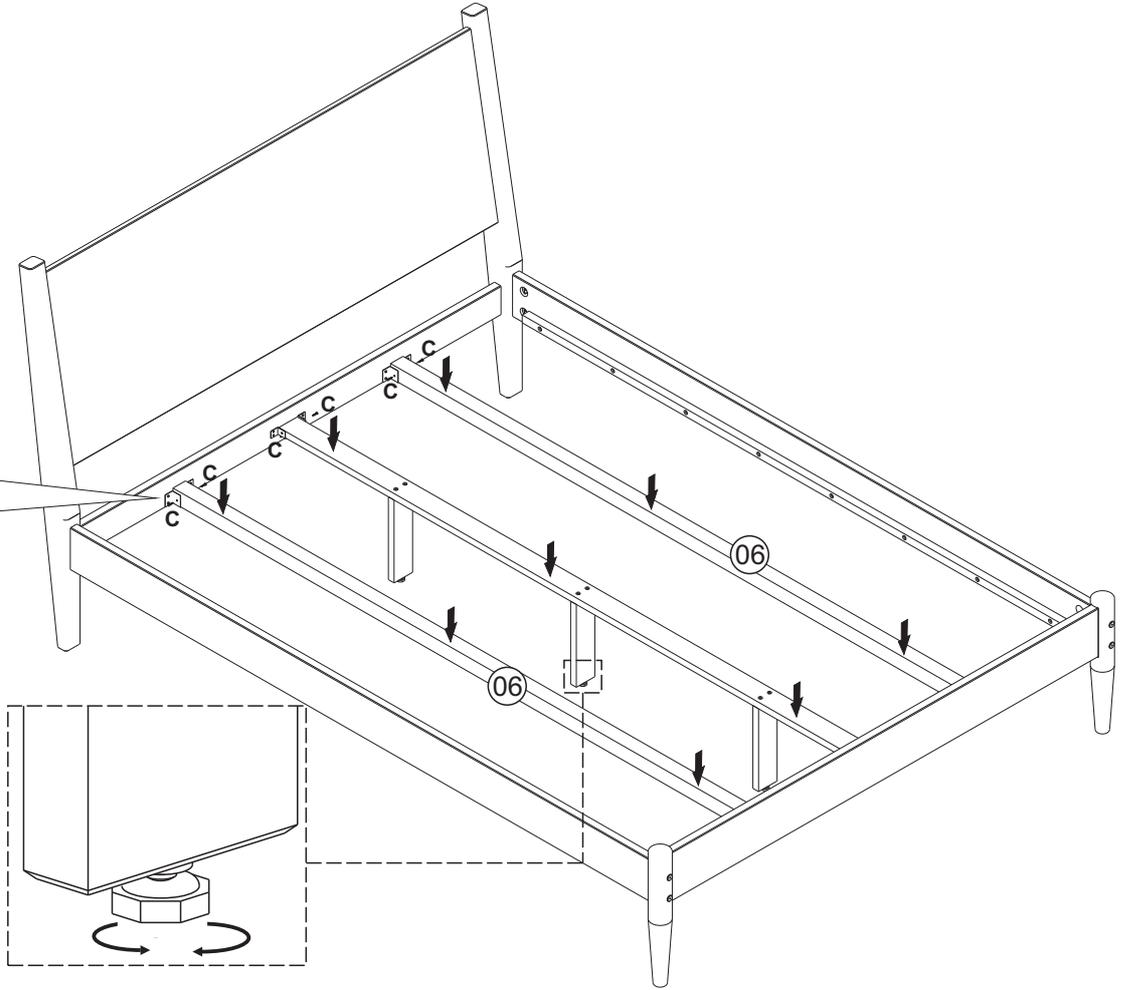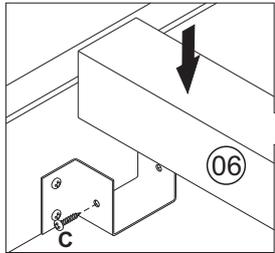


**C -3,5x16 Screw**  
Qty. 12

**STEP 7**

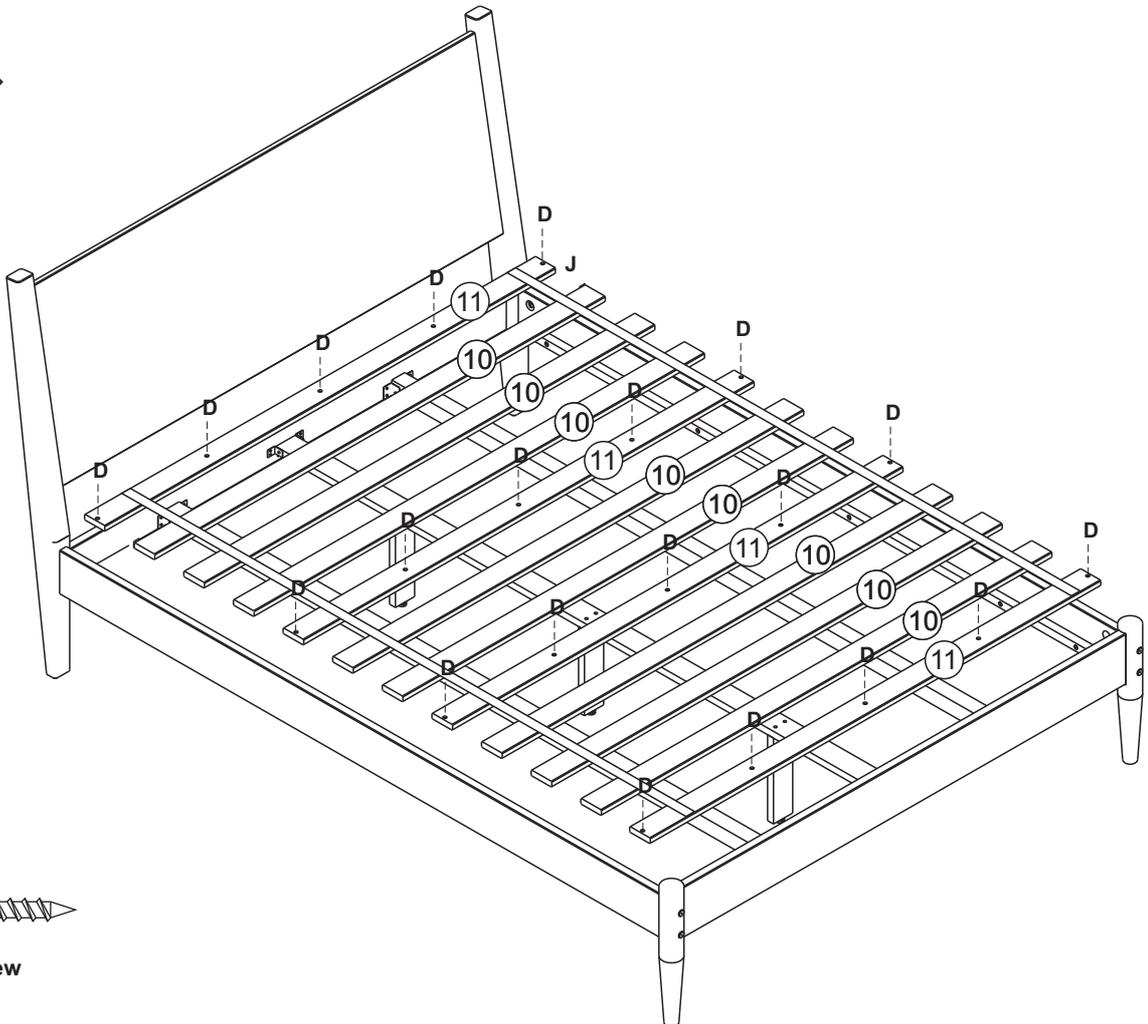

**D -3,5x30 Screw**  
Qty. 20

**STEP 8**

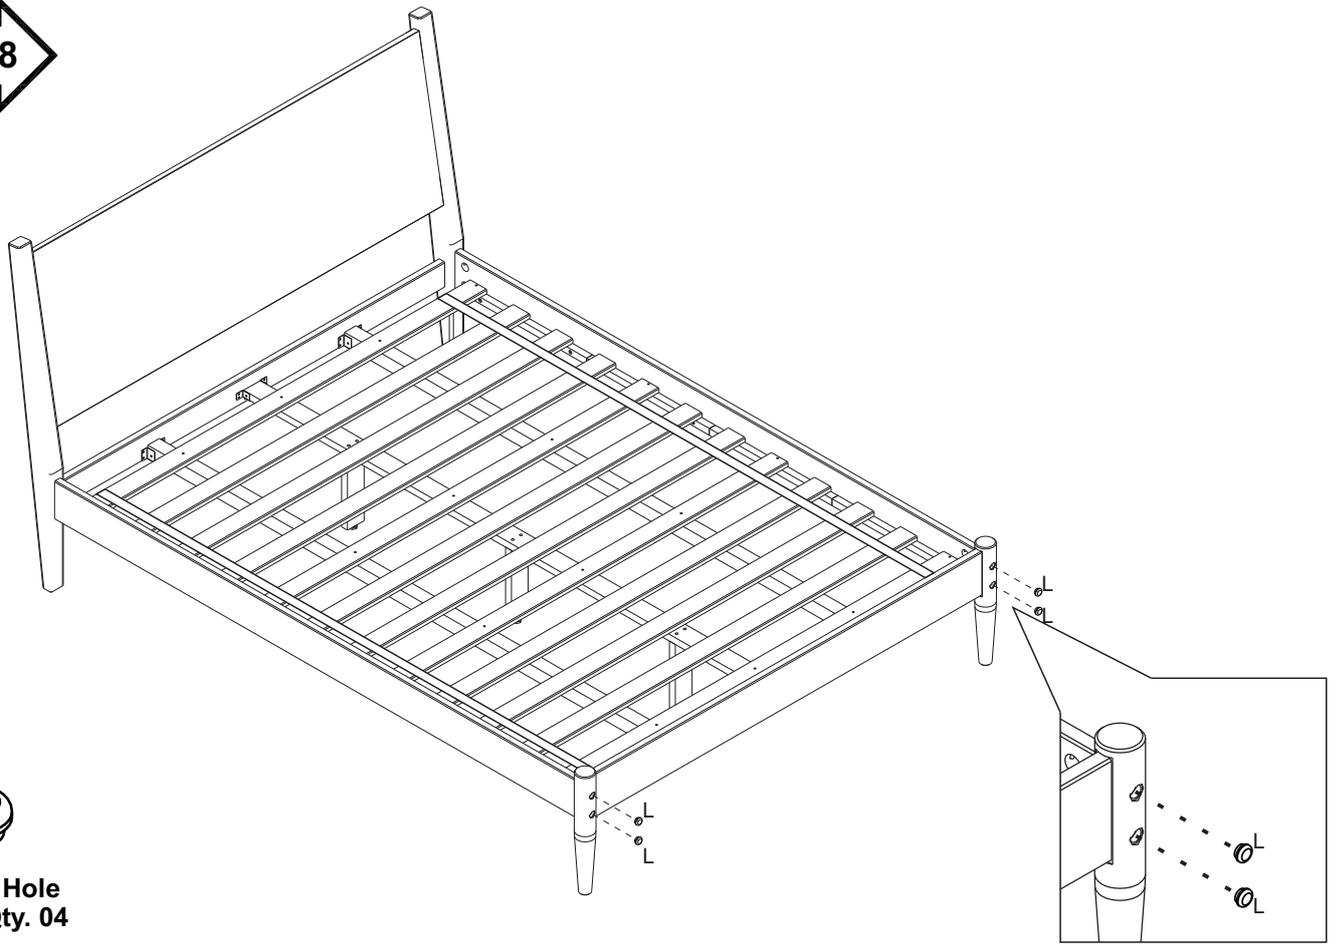

**L - Wood Hole  
Cover - Qty. 04**