

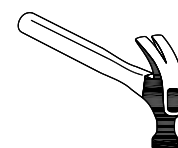


ASSEMBLY INSTRUCTIONS


BAJA - SIX DRAWER CHEST

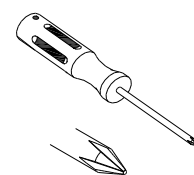

02:00 Hs

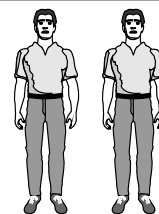

HARDWARE INCLUDED



A - 8,0x30
Qty. 82
SPARE +2



B - 4,0x30
Qty. 101
SPARE +2




C - M4x22
Qty. 12
SPARE +1




D - 4,0x14
Qty. 24
SPARE +2




E - 3,5x16
Qty. 24
SPARE +2

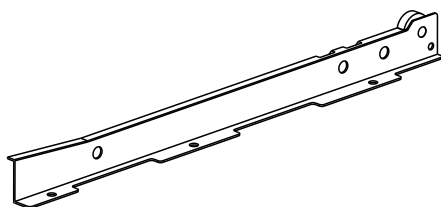


F - Slide Left 330mm
Qty. 06

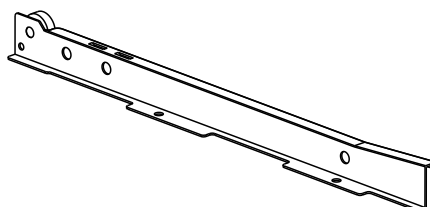

G - Slide Right 330mm
Qty. 06



H - Drawer Knob
Qty. 06



I - 25x25 Sticker Ribbon
Qty. 06


Anti-Tip Kit



4,0x30 Screw
Qty. 02



3,5x14 Screw
Qty. 02



Plastic wall bracket
Qty. 02




Nylon strap 300x4,8mm
Qty. 01




Plastic screw anchor 6mm
Qty. 02

PARTS INCLUDED

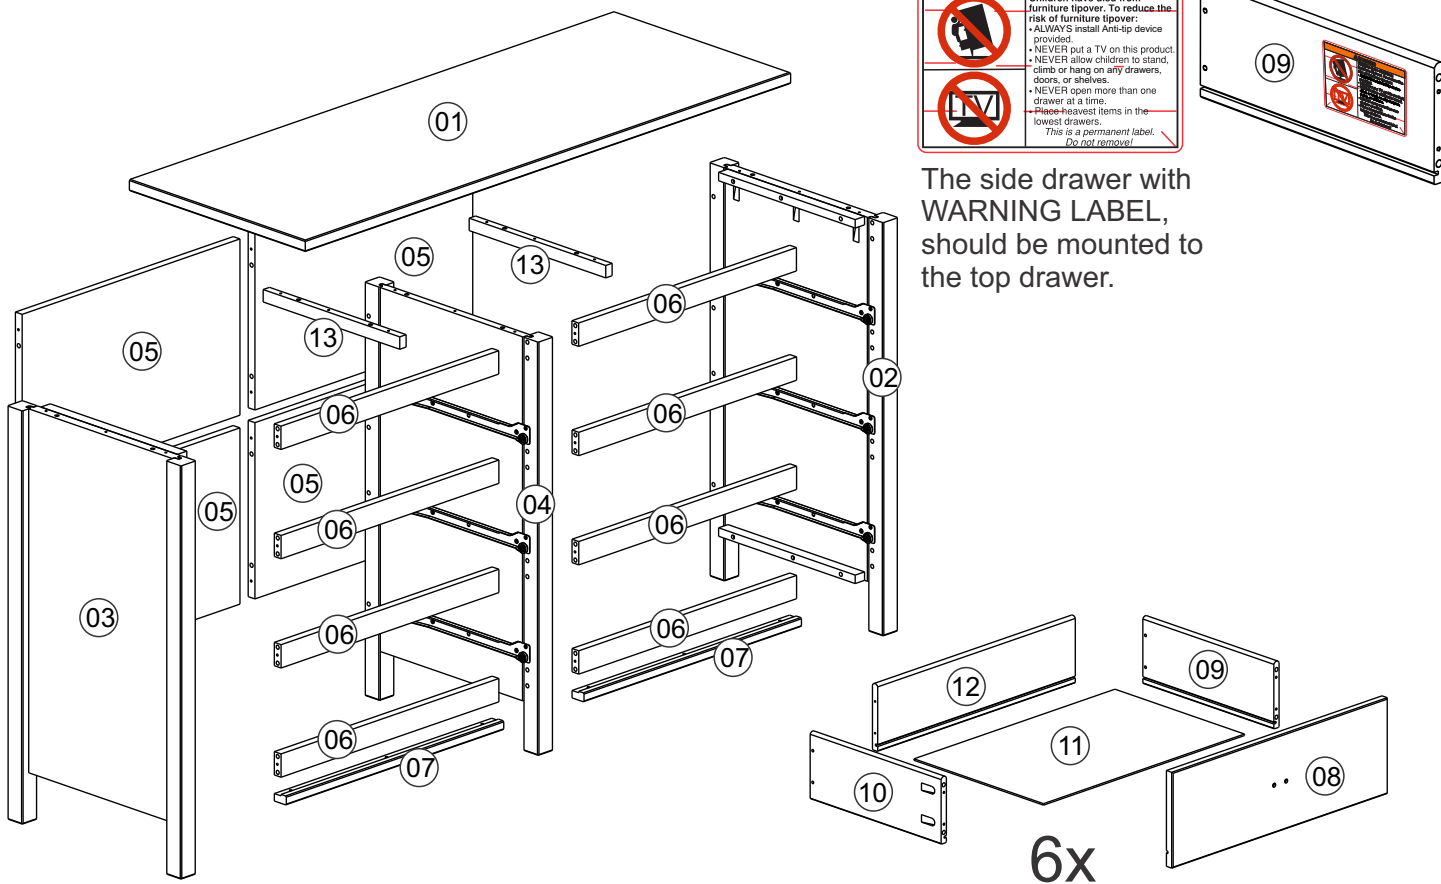


STEP 1

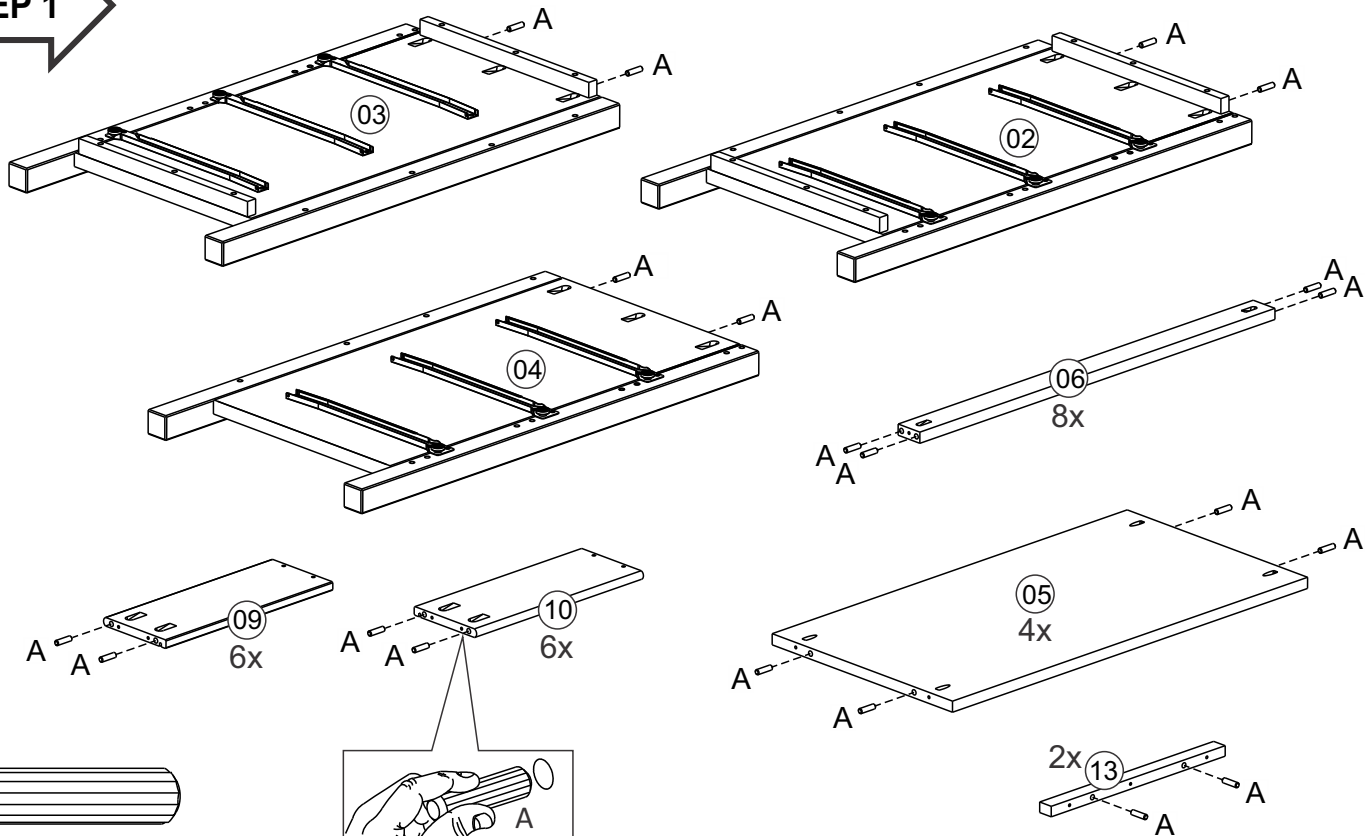


A - 8,0x30 Wood Dowel
Qty. 82

STEP 2

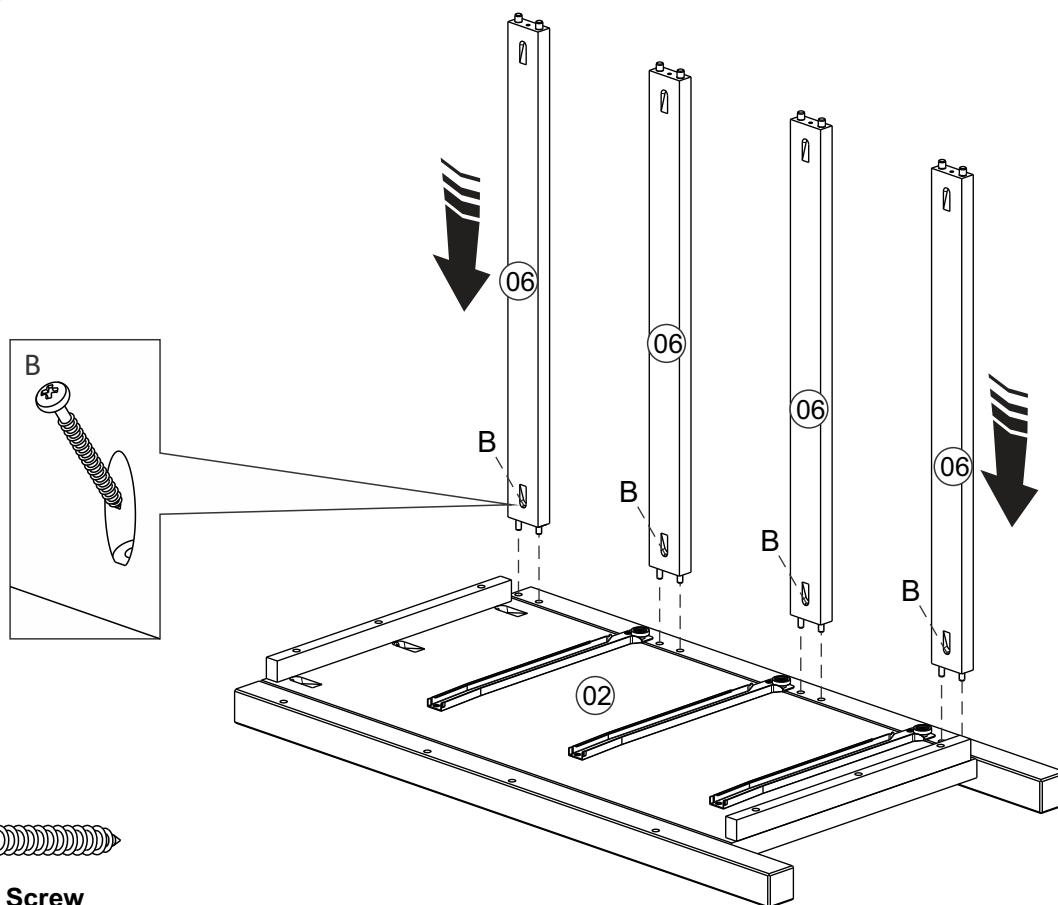



B - 4,0x30 Screw
Qty. 04

STEP 3

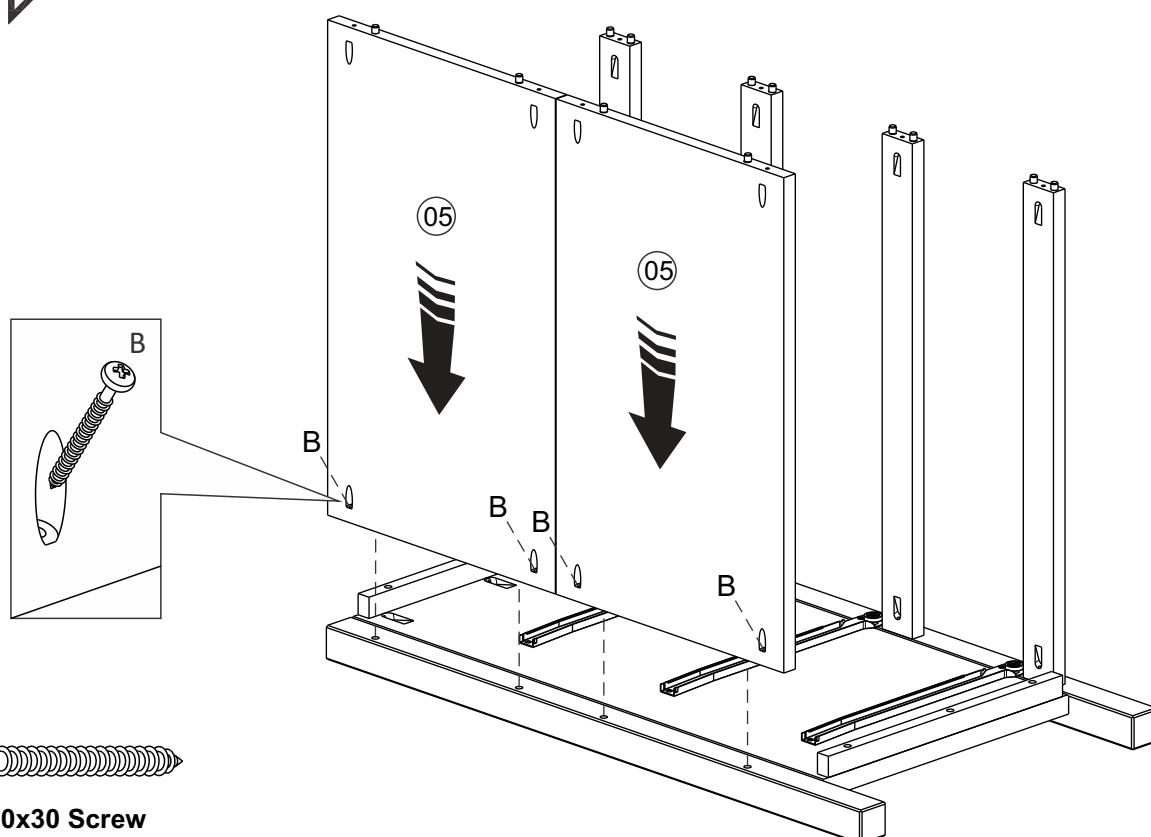



B - 4,0x30 Screw
Qty. 04

STEP 4

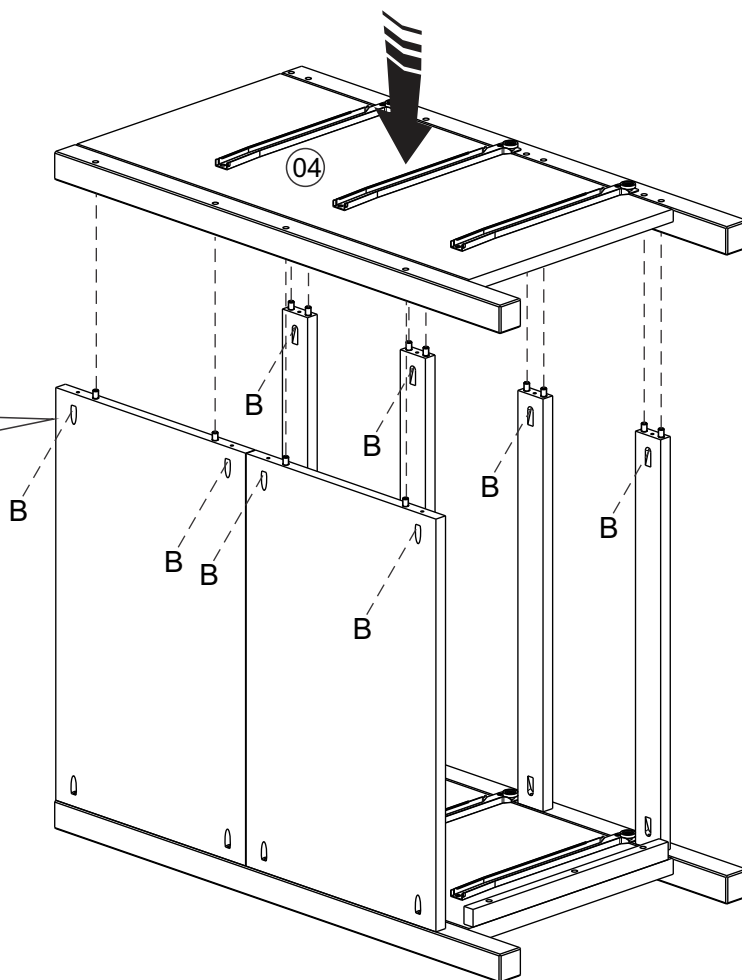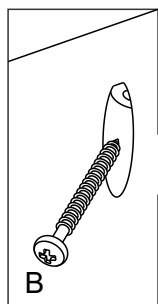


B - 4,0x30 Screw
Qty. 08

STEP 5

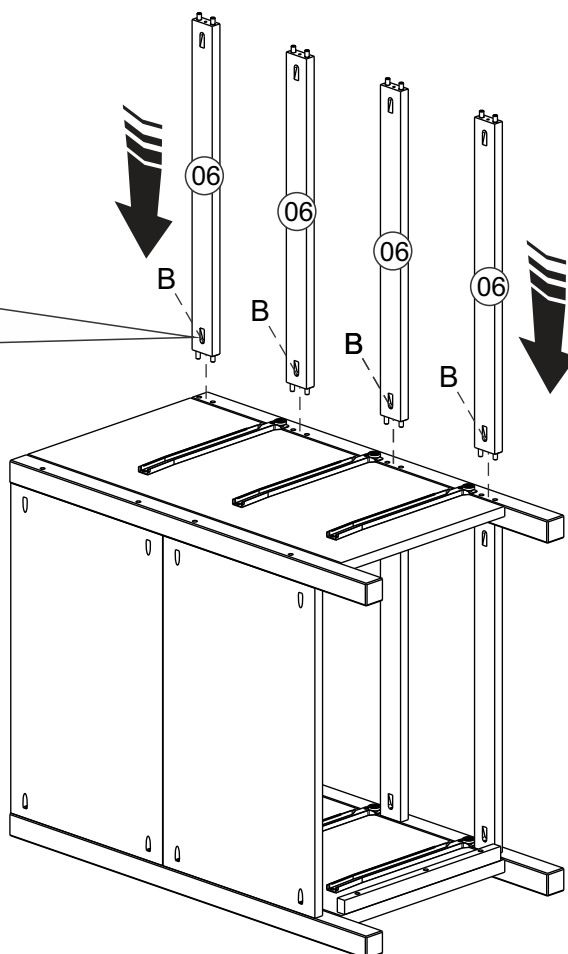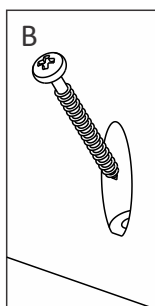


B - 4,0x30 Screw
Qty. 04

STEP 6

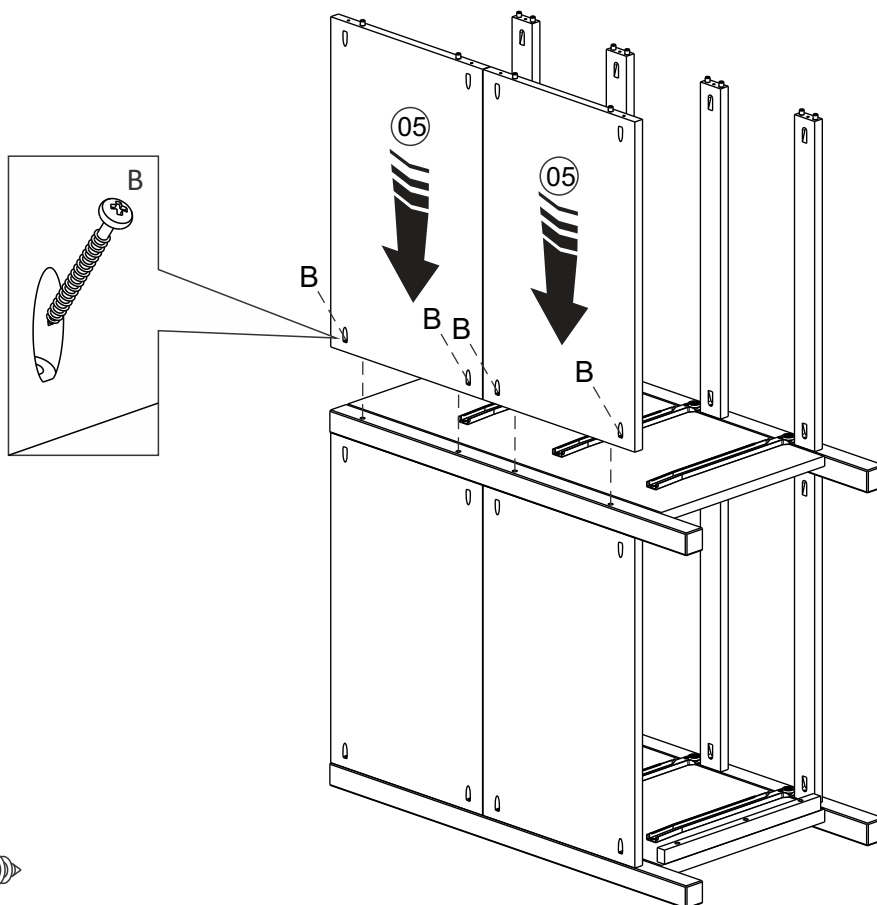


B - 4,0x30 Screw
Qty. 04

STEP 7

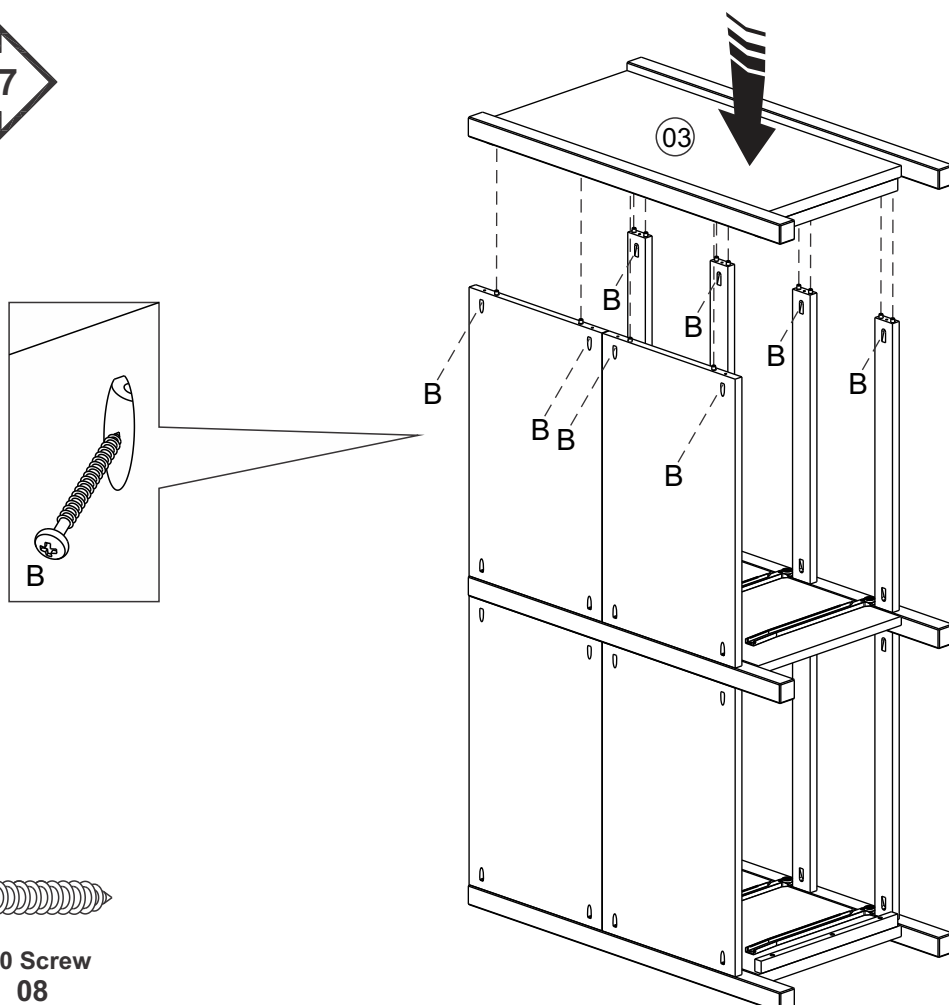


B - 4,0x30 Screw
Qty. 08

STEP 8

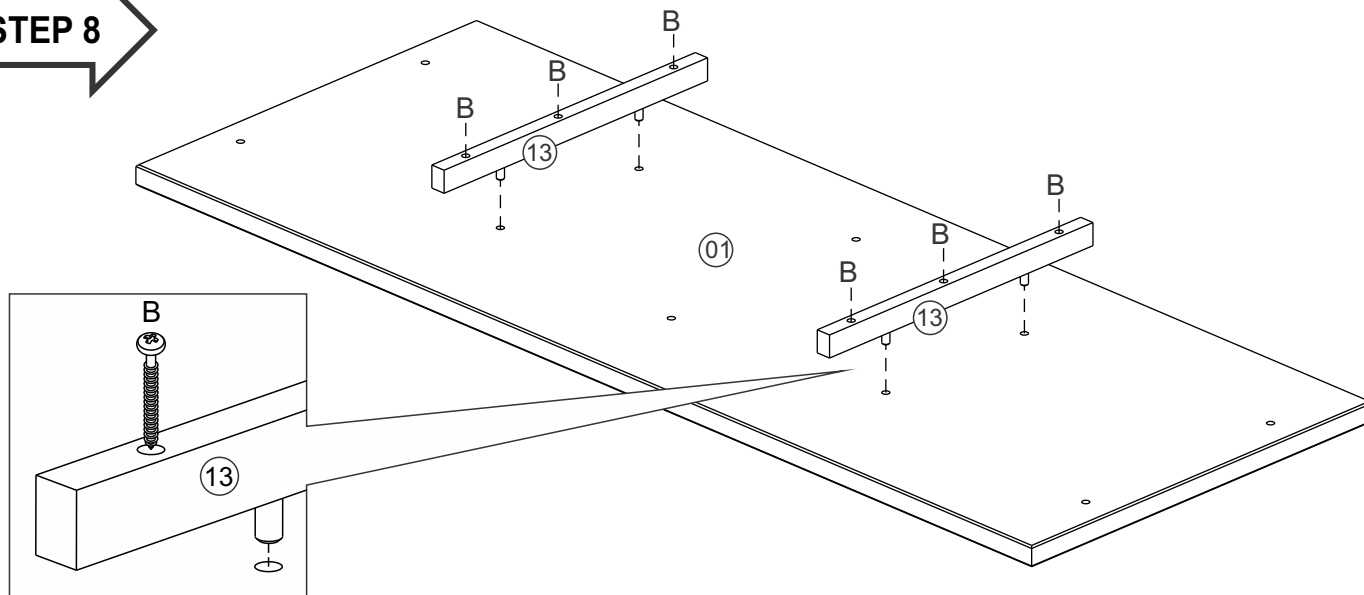




B - 4,0x30 Screw
Qty. 06

STEP 9

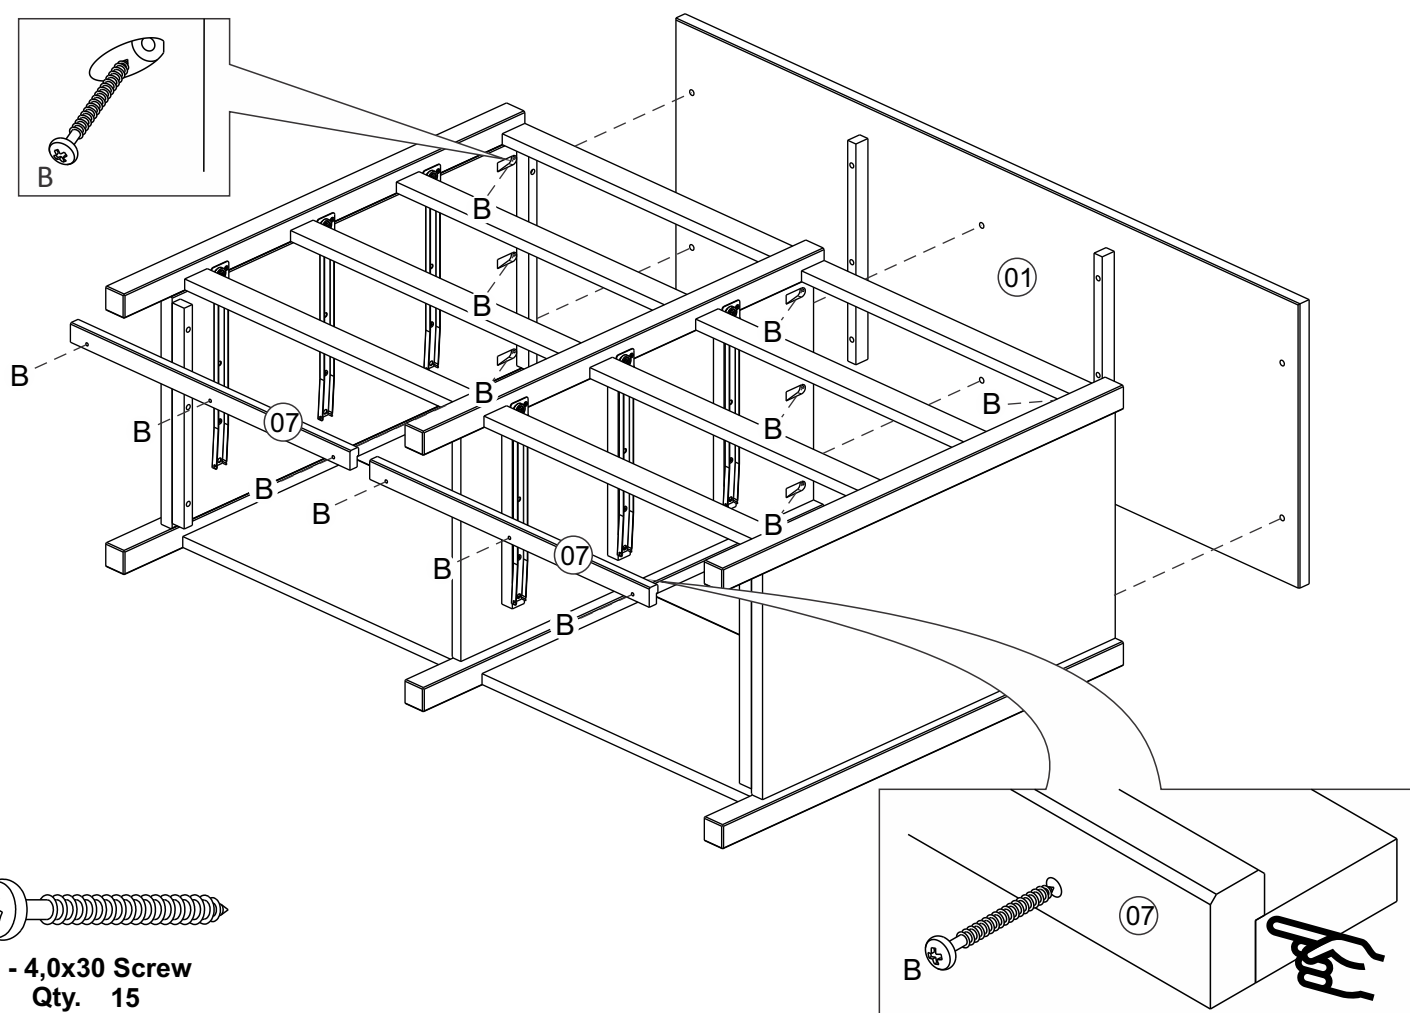


B - 4,0x30 Screw
Qty. 15

STEP 10

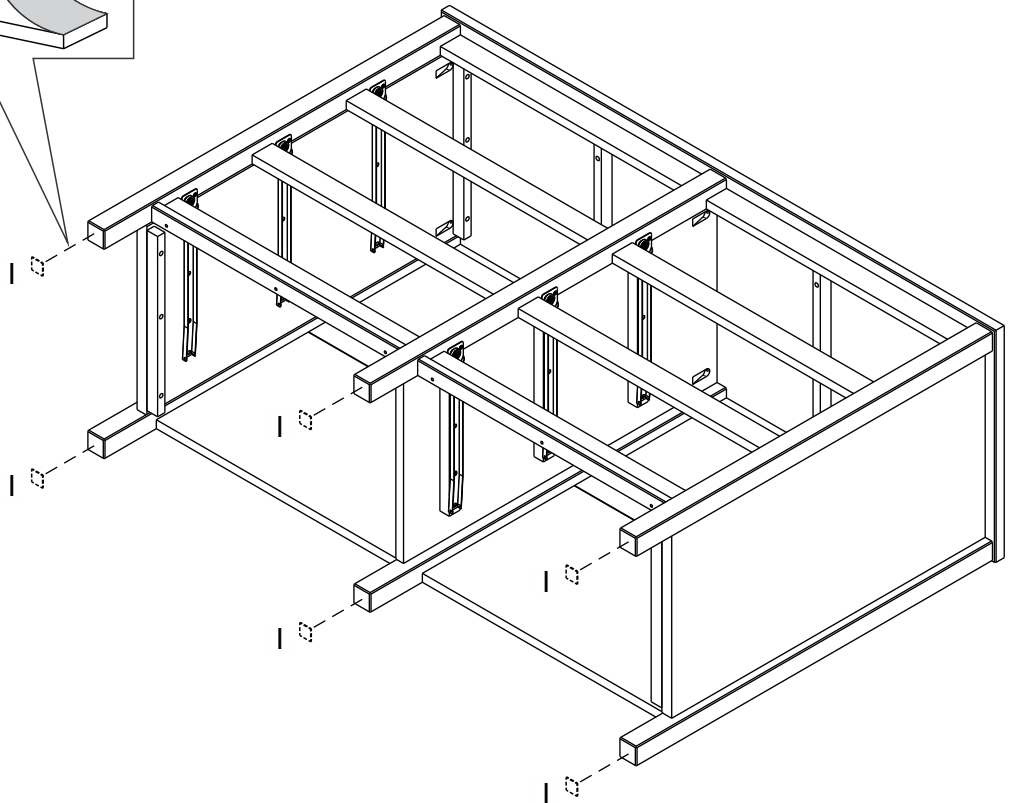
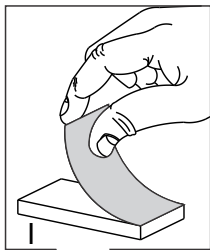


I - 25x25 Sticker Ribbon
Qty. 06

STEP 11

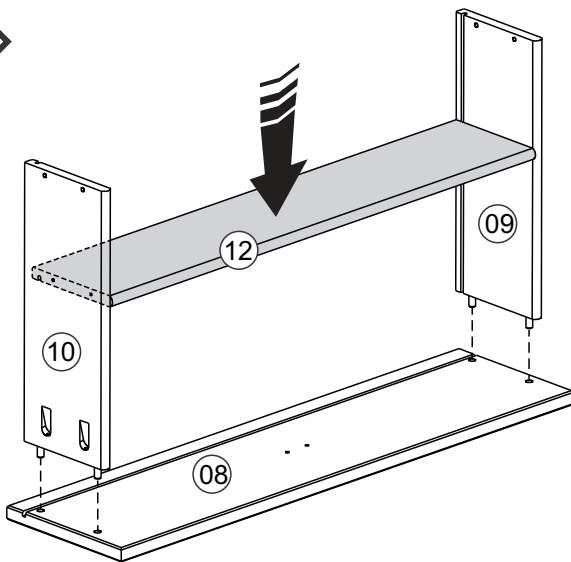


6X

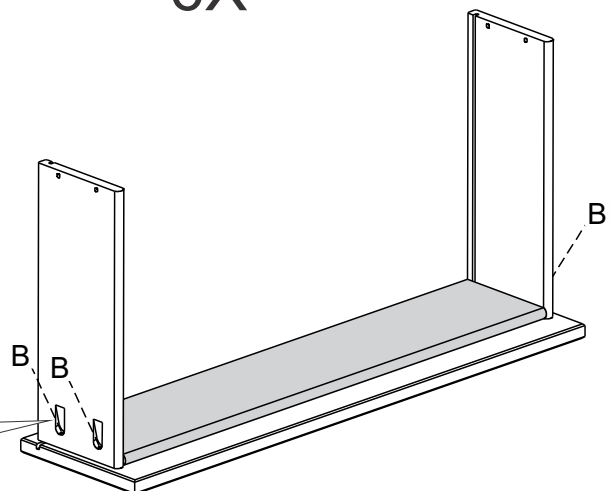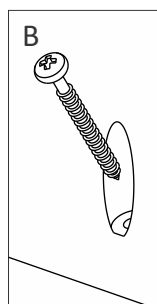


B - 4,0x30 Screw
Qty. 24

STEP 12

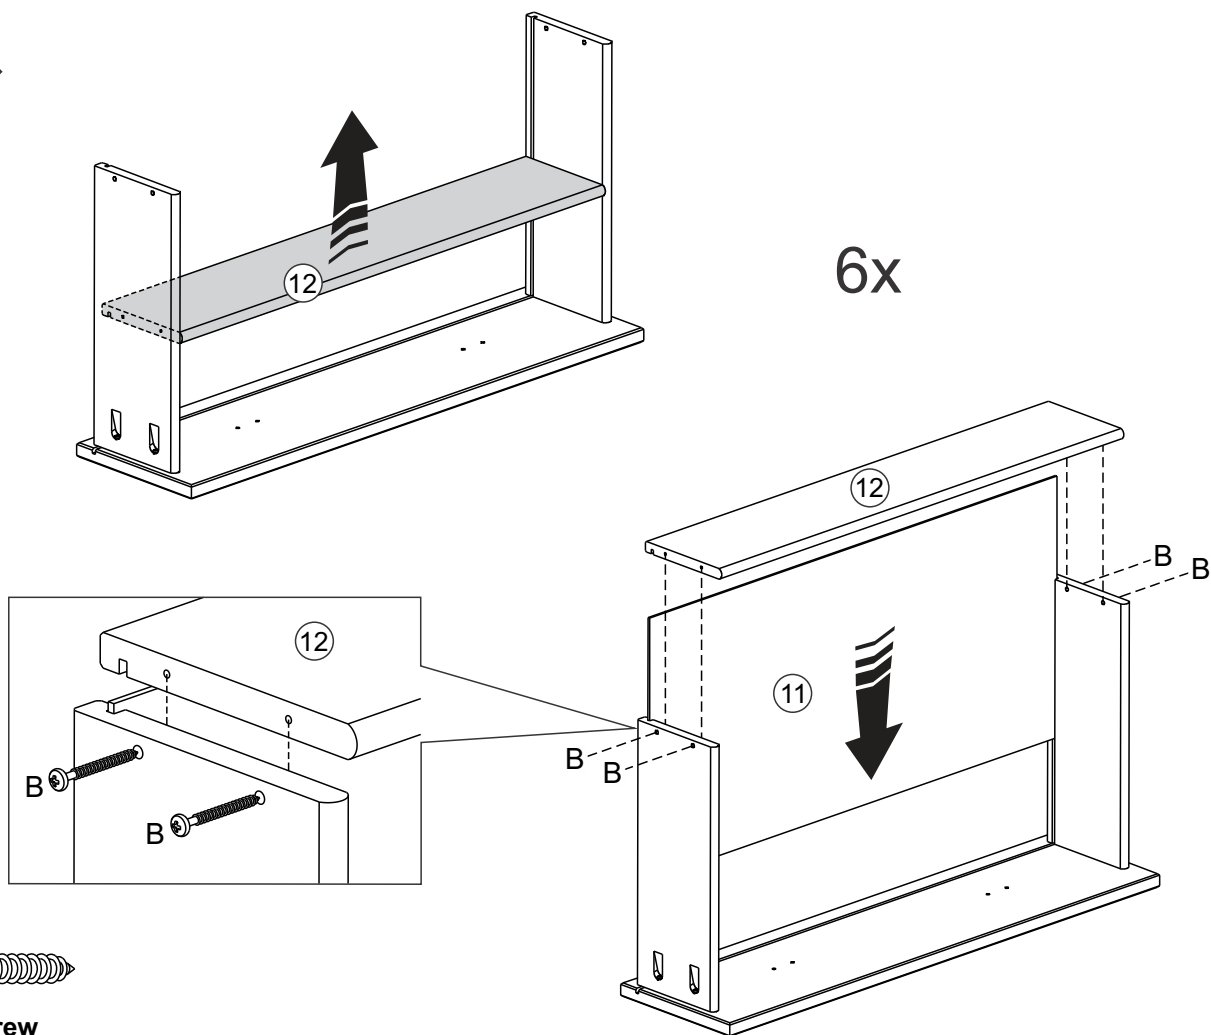

B - 4,0x30 Screw
Qty. 24


STEP 13

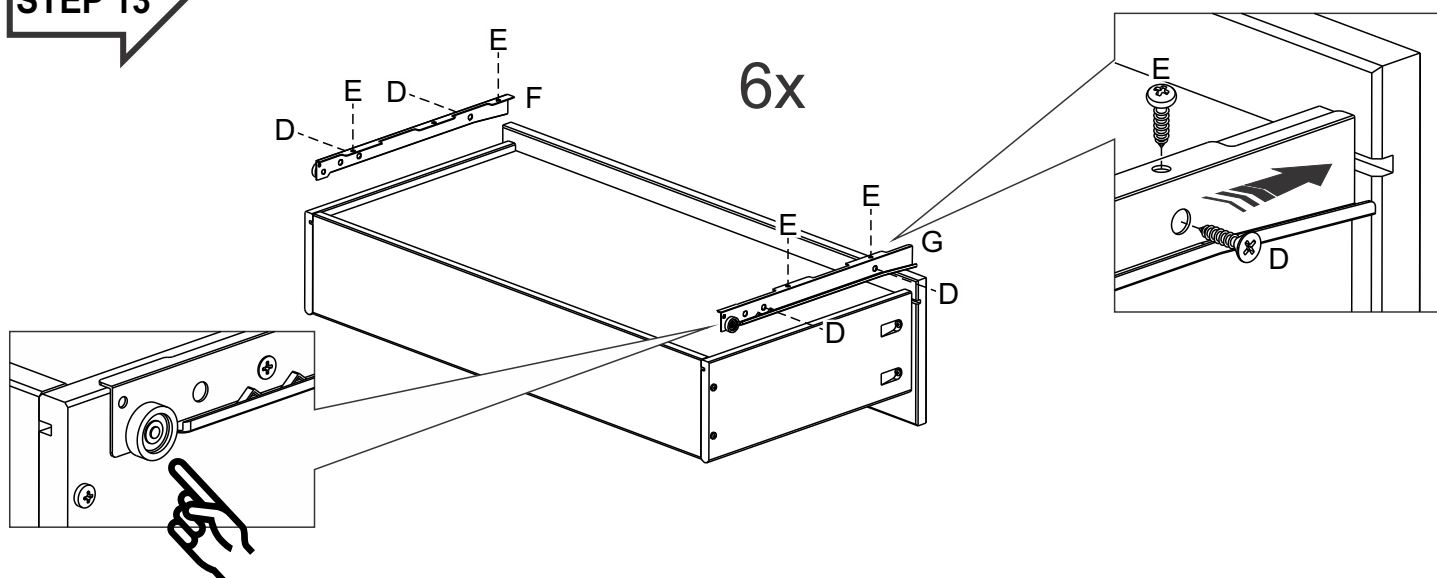


D - 4,0x14 Screw
Qty. 24



E - 3,5x16 Screw
Qty. 24

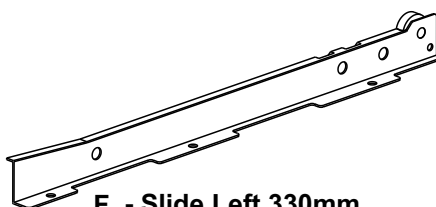


F - Slide Left 330mm
Qty. 06

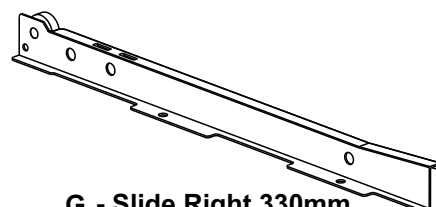

G - Slide Right 330mm
Qty. 06

STEP 14


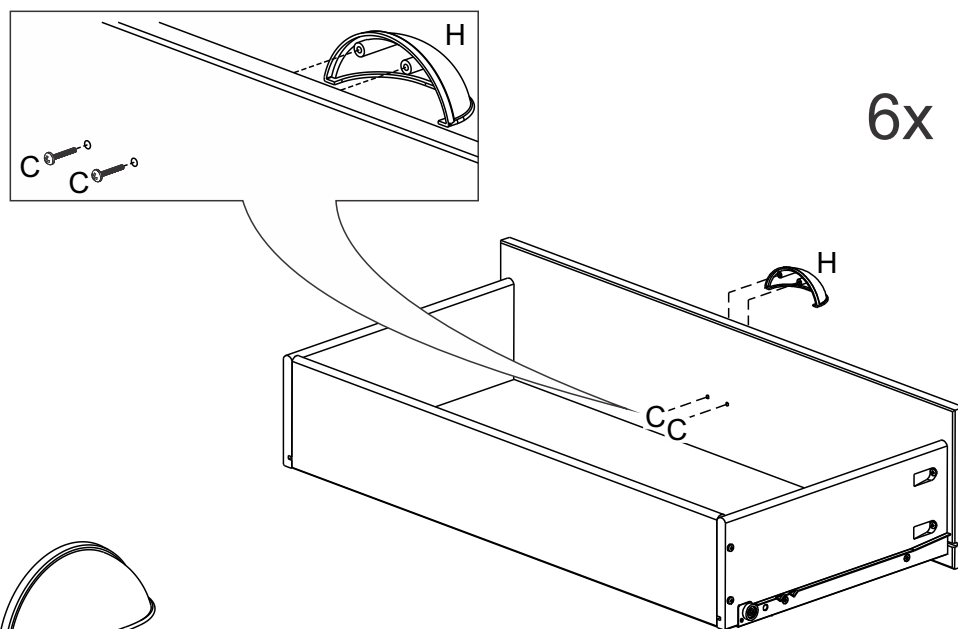



C - M4x22 Screw
Qty. 12



H - Drawer Knob
Qty. 06

STEP 15

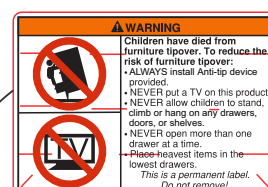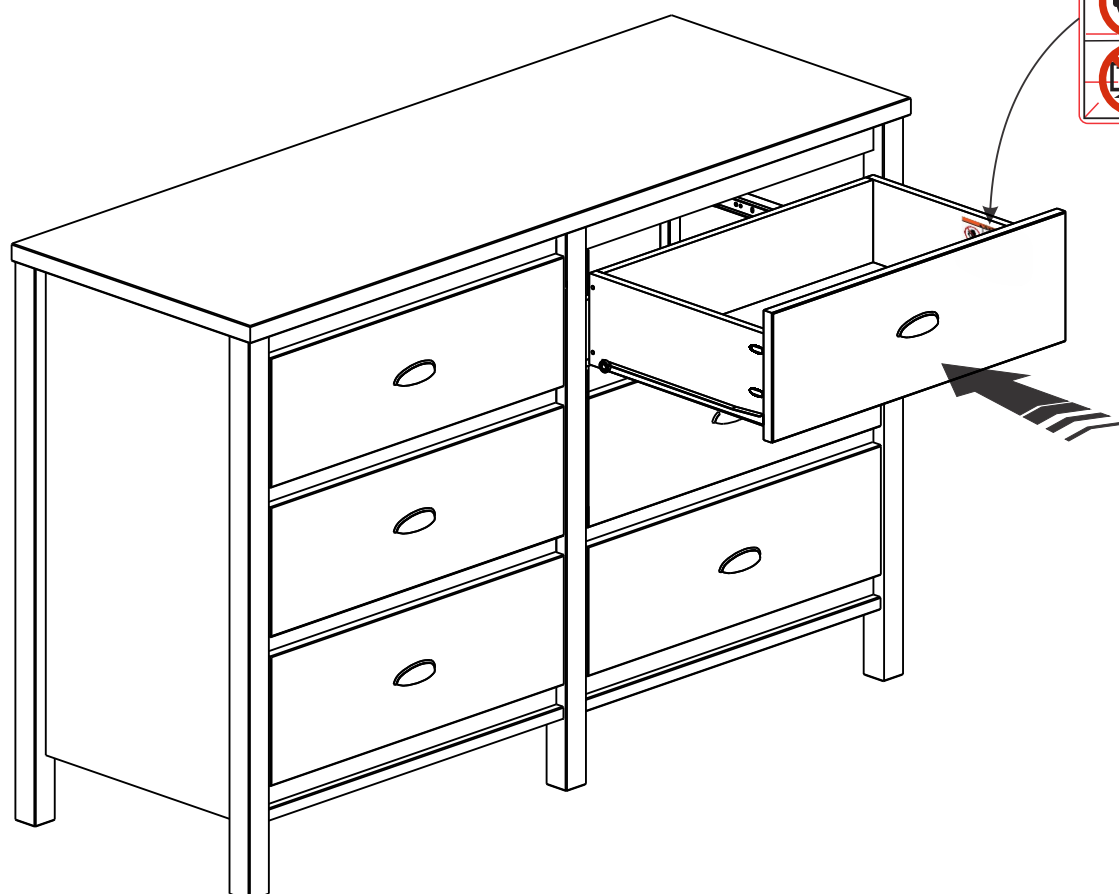

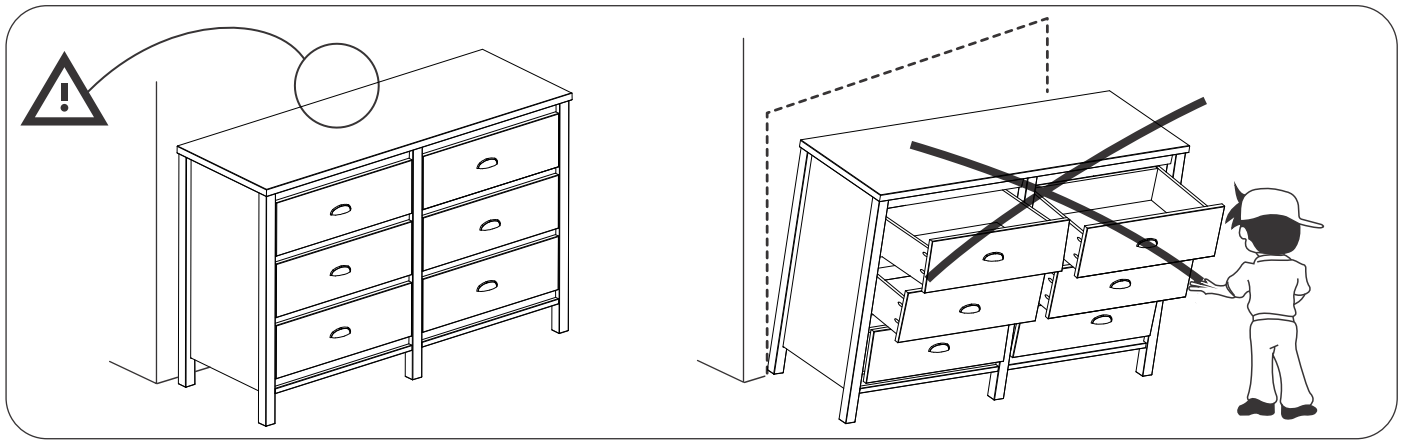

Anti-Tip Kit

