


Monterrey Solid Wood Bed

King Size

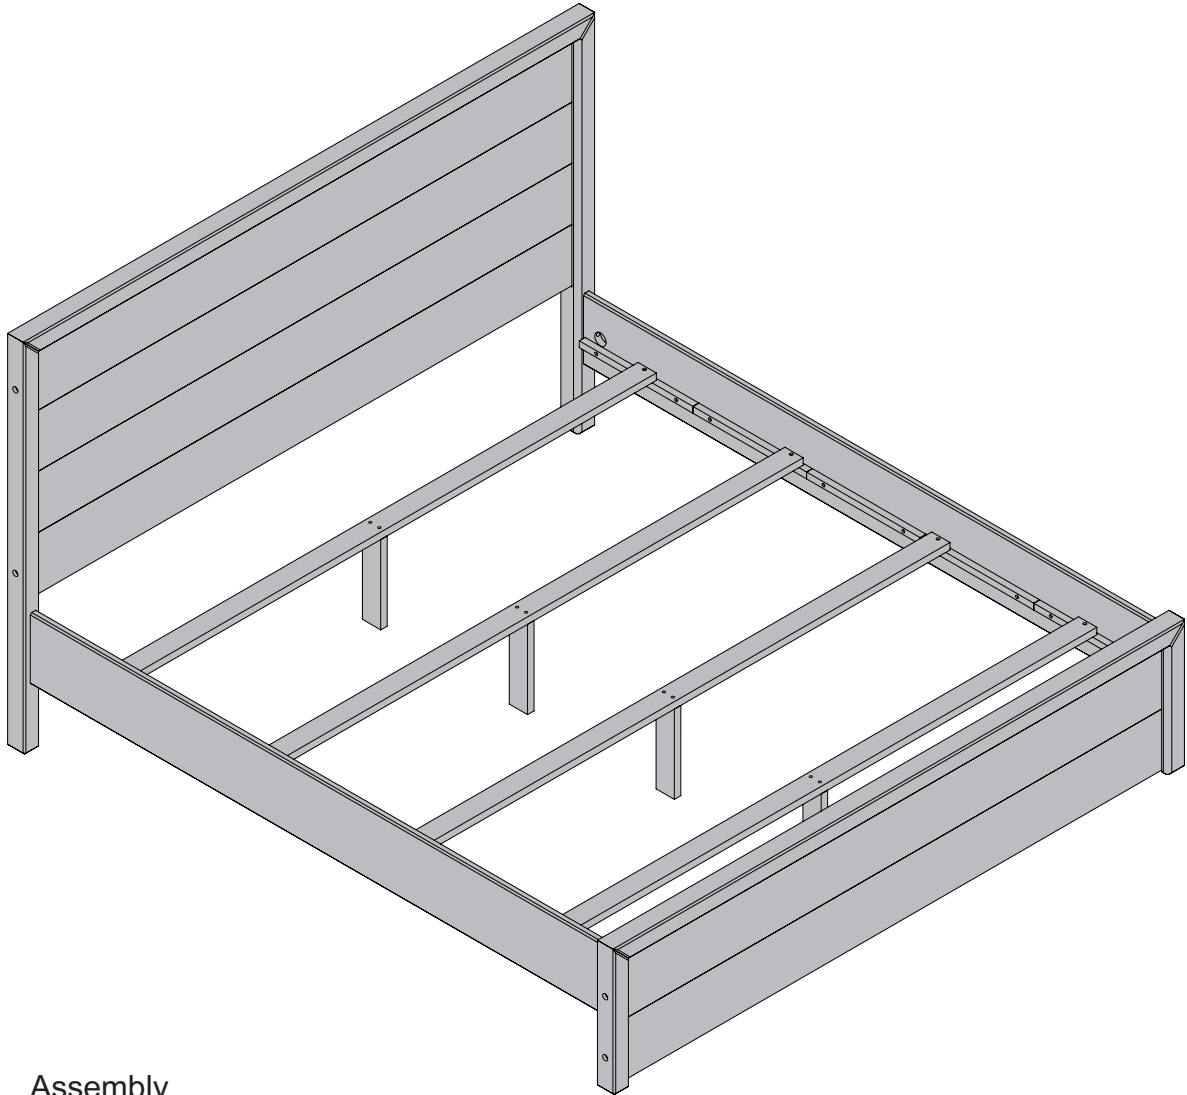

Assembly
02 people



Time
1:00 hours approximately




Tools
philips key, rubber hammer



Volume quantity
01 boxes





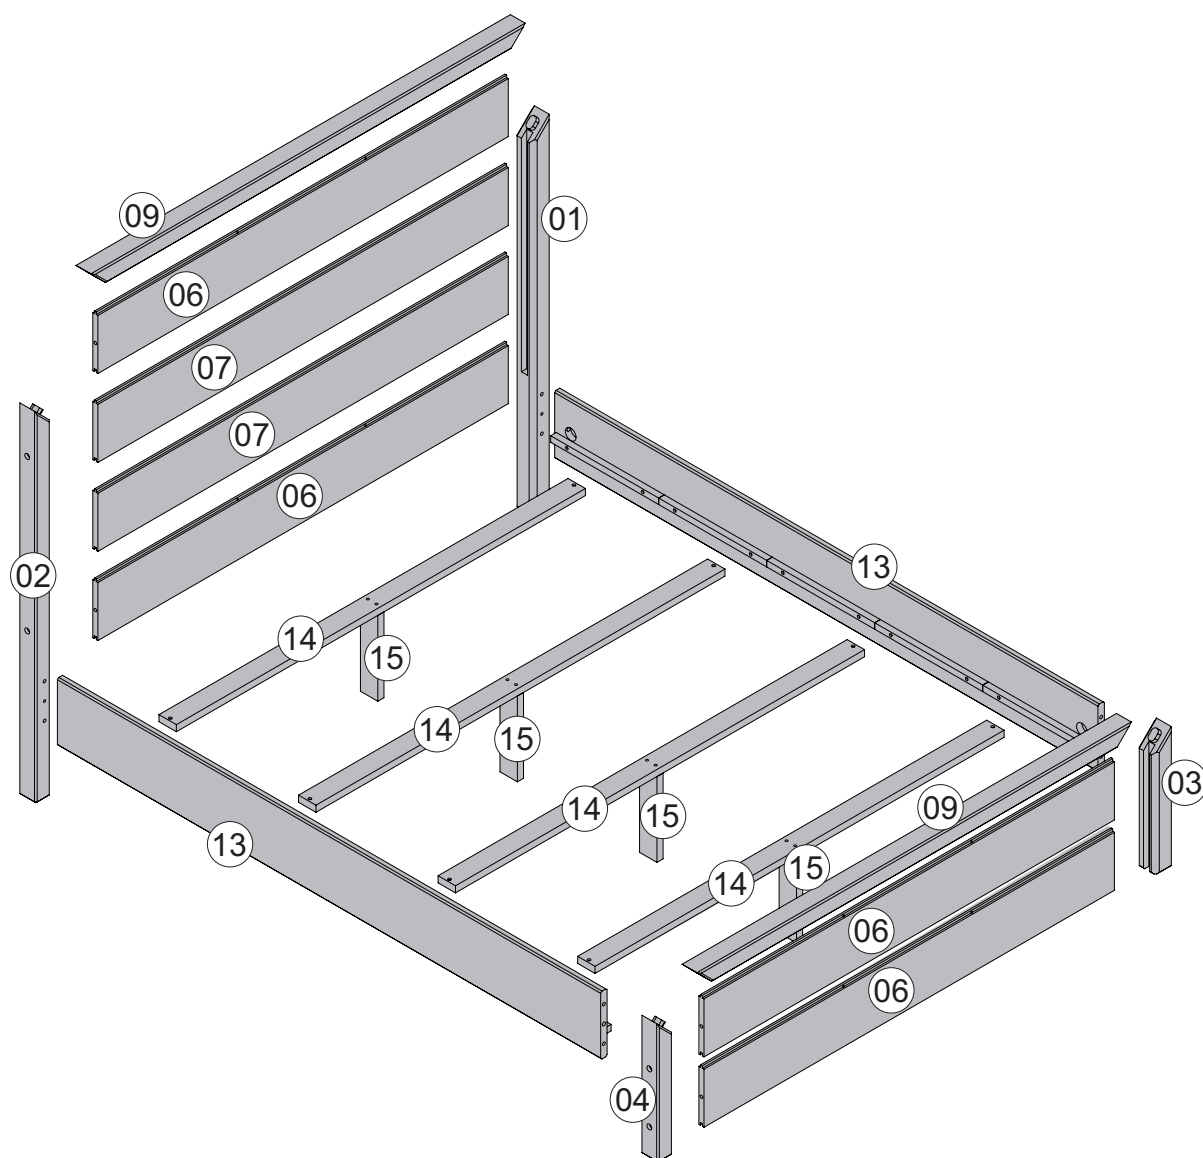








Parts list for assembly. Please confirm all parts available before assembly




ATTENTION


- * Read and observe carefully all the assembly instructions before beginning assembly.
- * The assembly of the product must be done on a clean and flat surface. We suggest to use the packaging to cover the floor to avoid damages.
- * The screws must be tightened periodically.
- * Avoid contact with sharp objects.
- * Avoid banging pieces together.

Hardware list for assembly.
Please confirm all hardware available before assembly


					SPARE
A		ø3/8" x 1' 9/16"	08x	+	02x
B		ø1/4" x 4' 1/4"	08x	+	01x
F			01x	+	01x
AP		ø1/8" x 1' 3/8"	14x	+	02x
AR		ø5/16" x 3' 1/2"	02x		
AS		1/2" x 1' 1/4"	02x		
AT		ø5/16"	02x	+	01x
AU		1/2"	01x		
BC		1/4"	10x	+	02x
BI		ø1/4" x 5"	02x	+	01x
BJ		ø3/4"	08x	+	02x
BL		1/4" x 2"	08x	+	01x
BV		1/4"	04x		

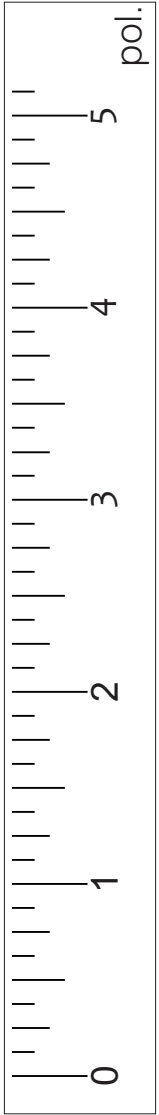


Step - 01

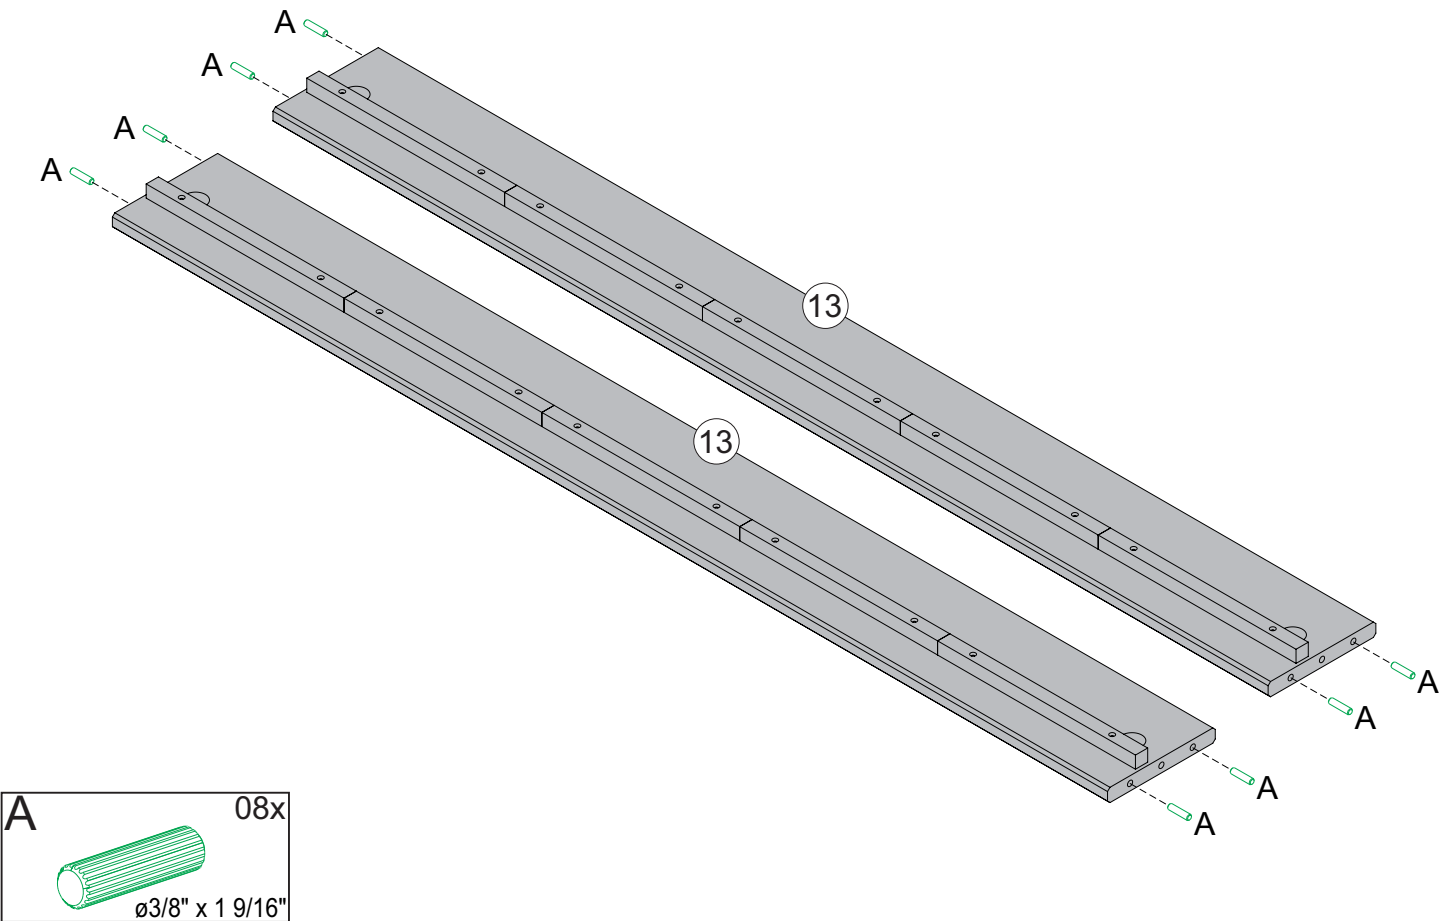

Step - 02

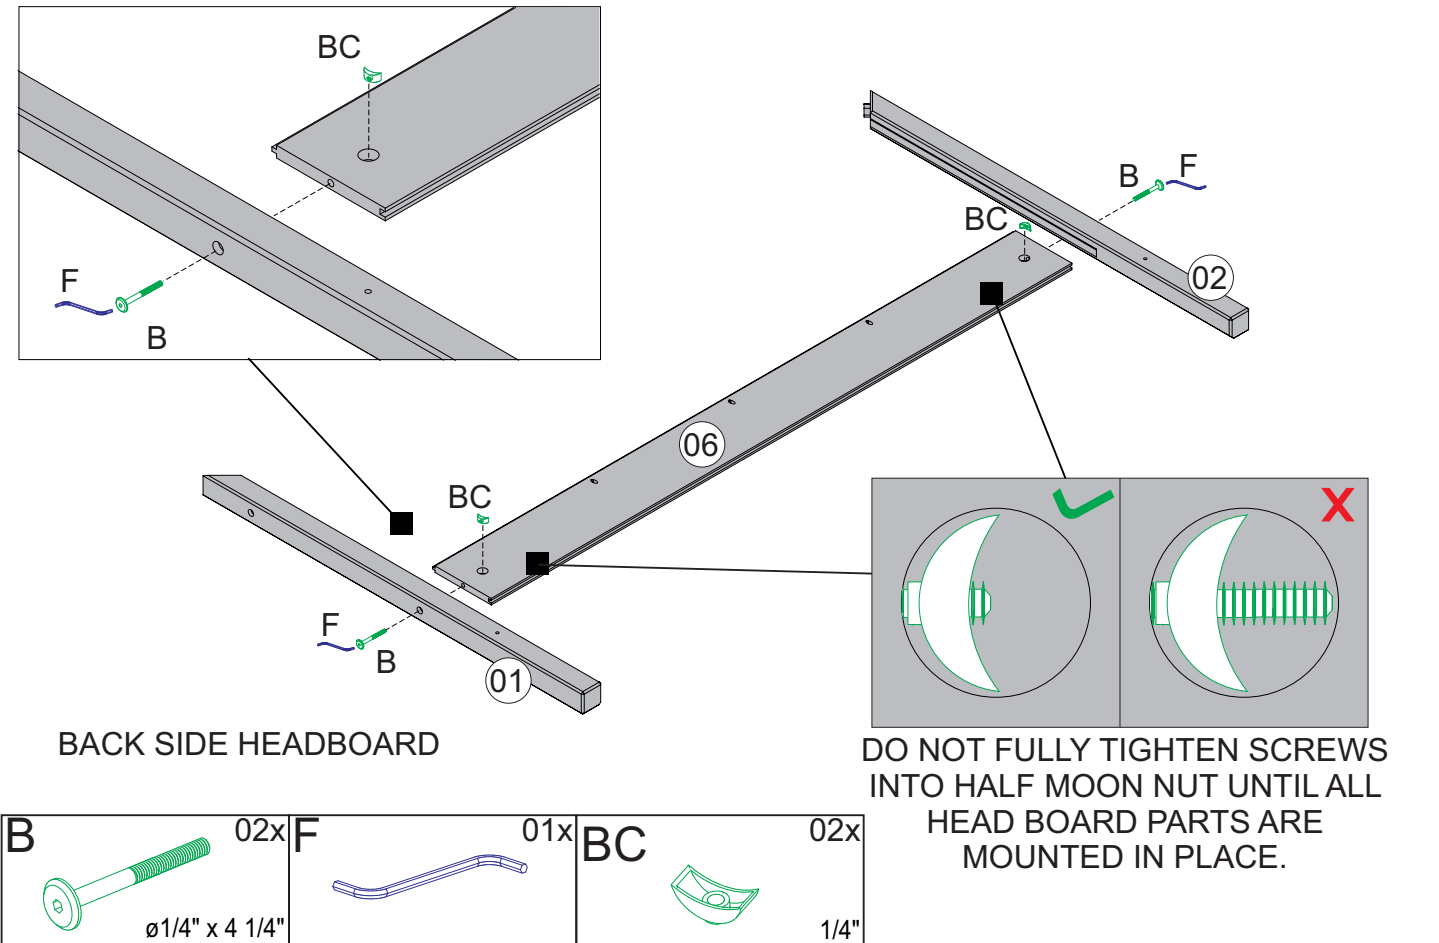


Step - 03

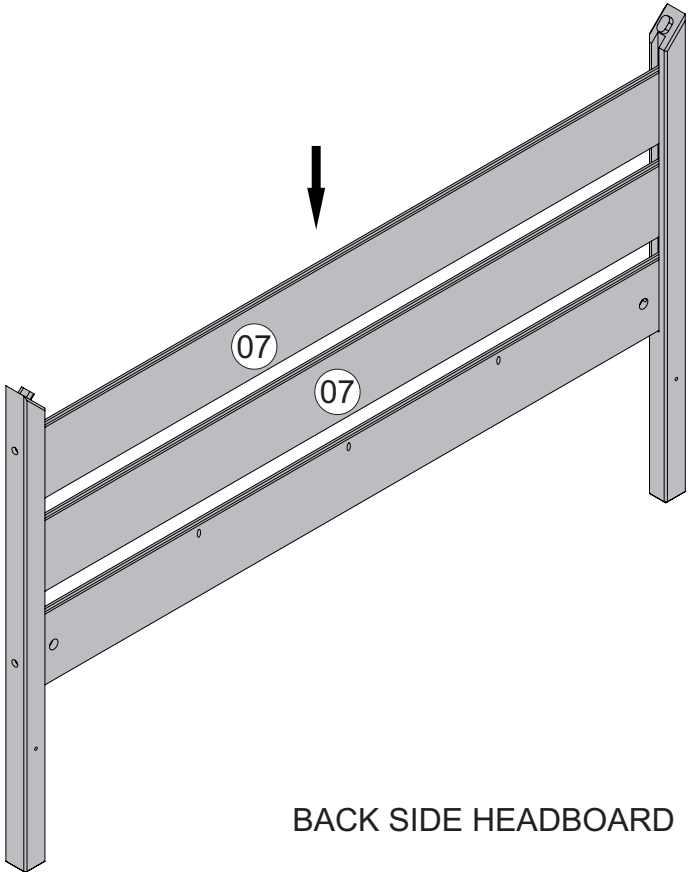





BACK SIDE HEADBOARD

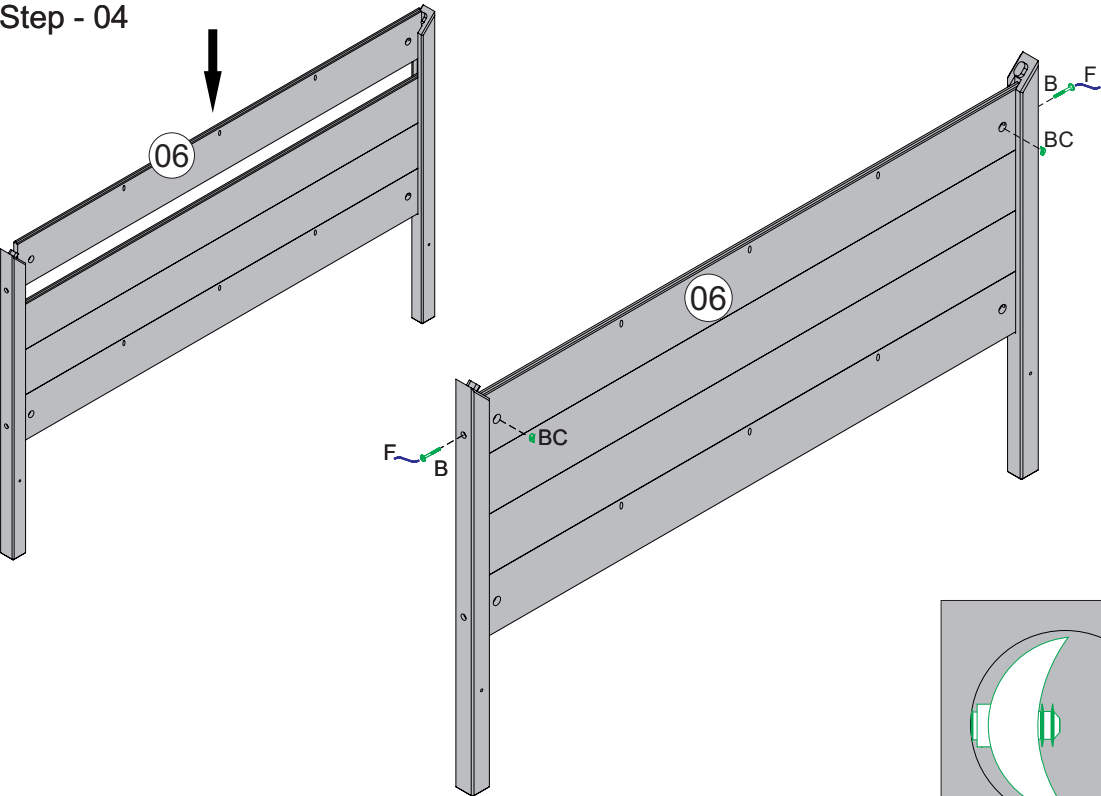Step - 04




BACK SIDE HEADBOARD

B		02x	F		01x	BC		02x
$\phi 1/4" \times 4 \ 1/4"$						$1/4"$		


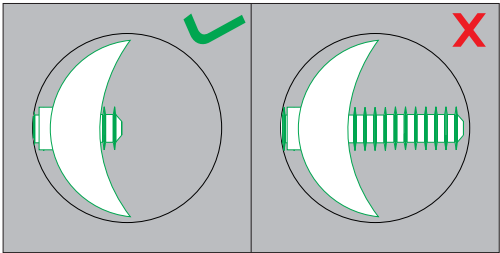


DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.

Step - 05 - Attention: At this Point, Fully Tighten All Screws!

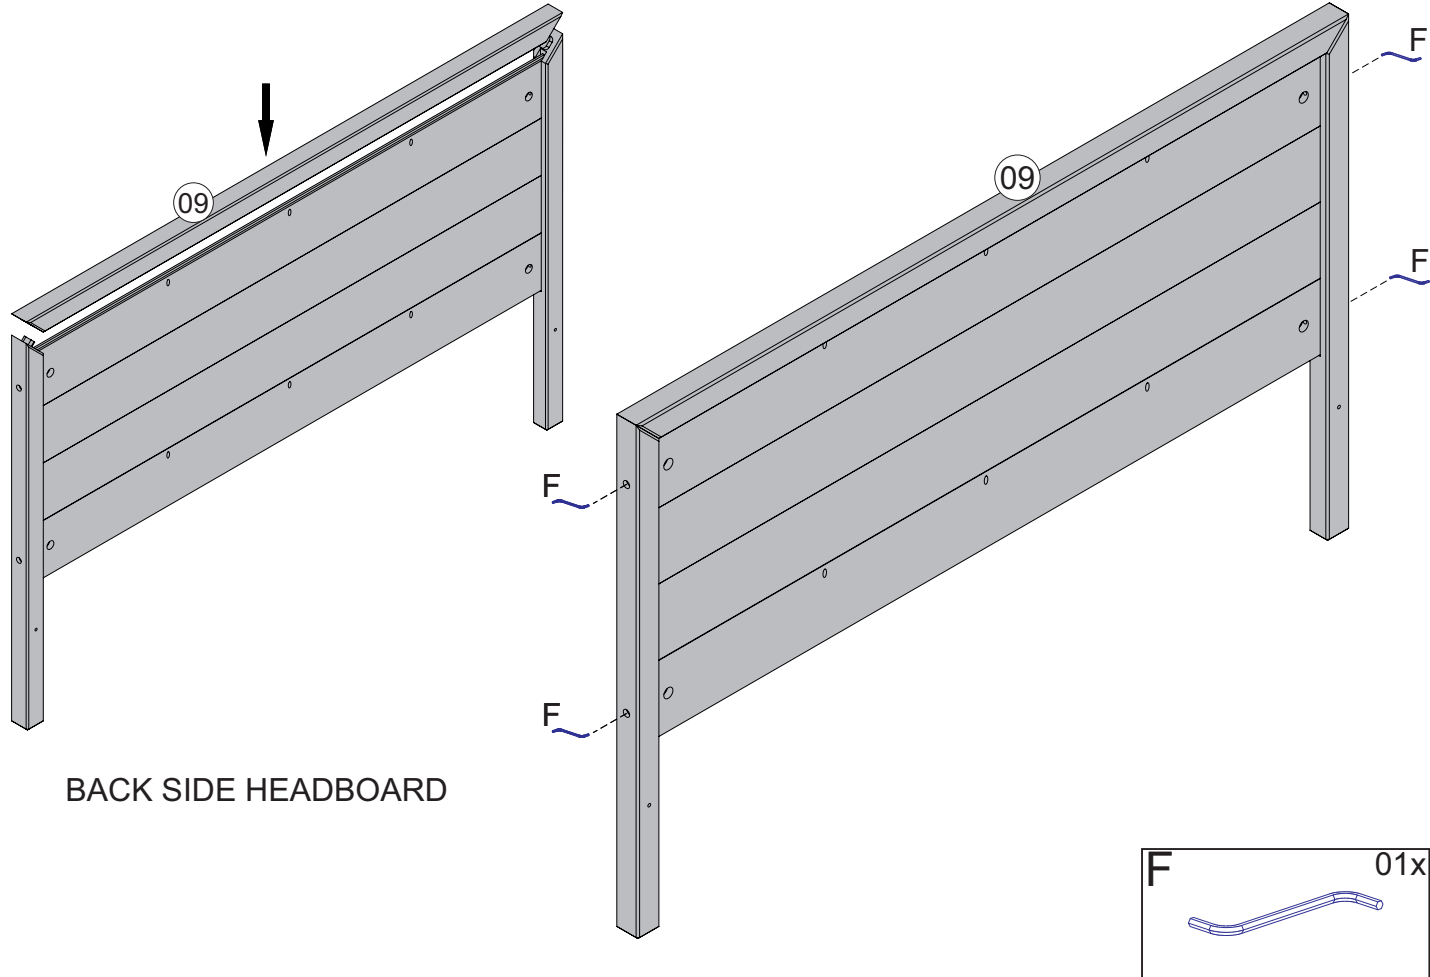


Step - 06

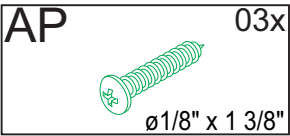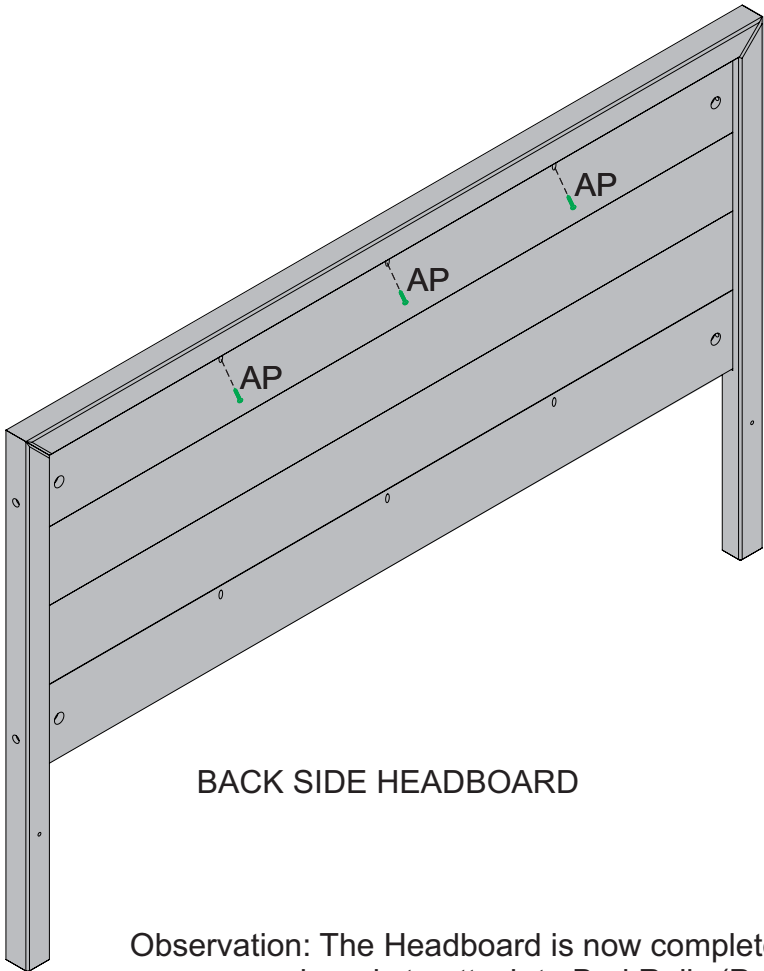


Observation: The Headboard is now completely assembled and ready to attach to Bed Rails (Part 13)

Step - 07

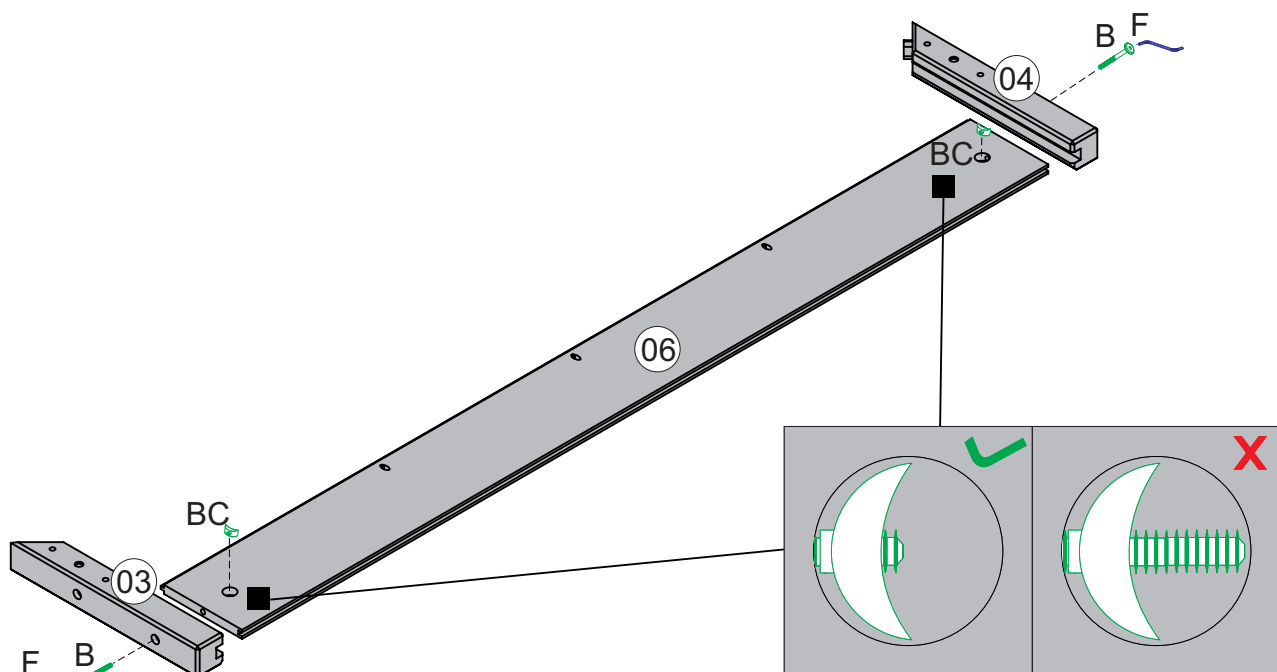


BACK SIDE FOOTBOARD

DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.

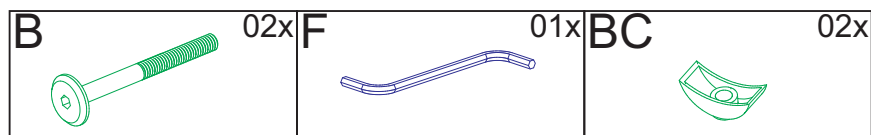


Step - 08

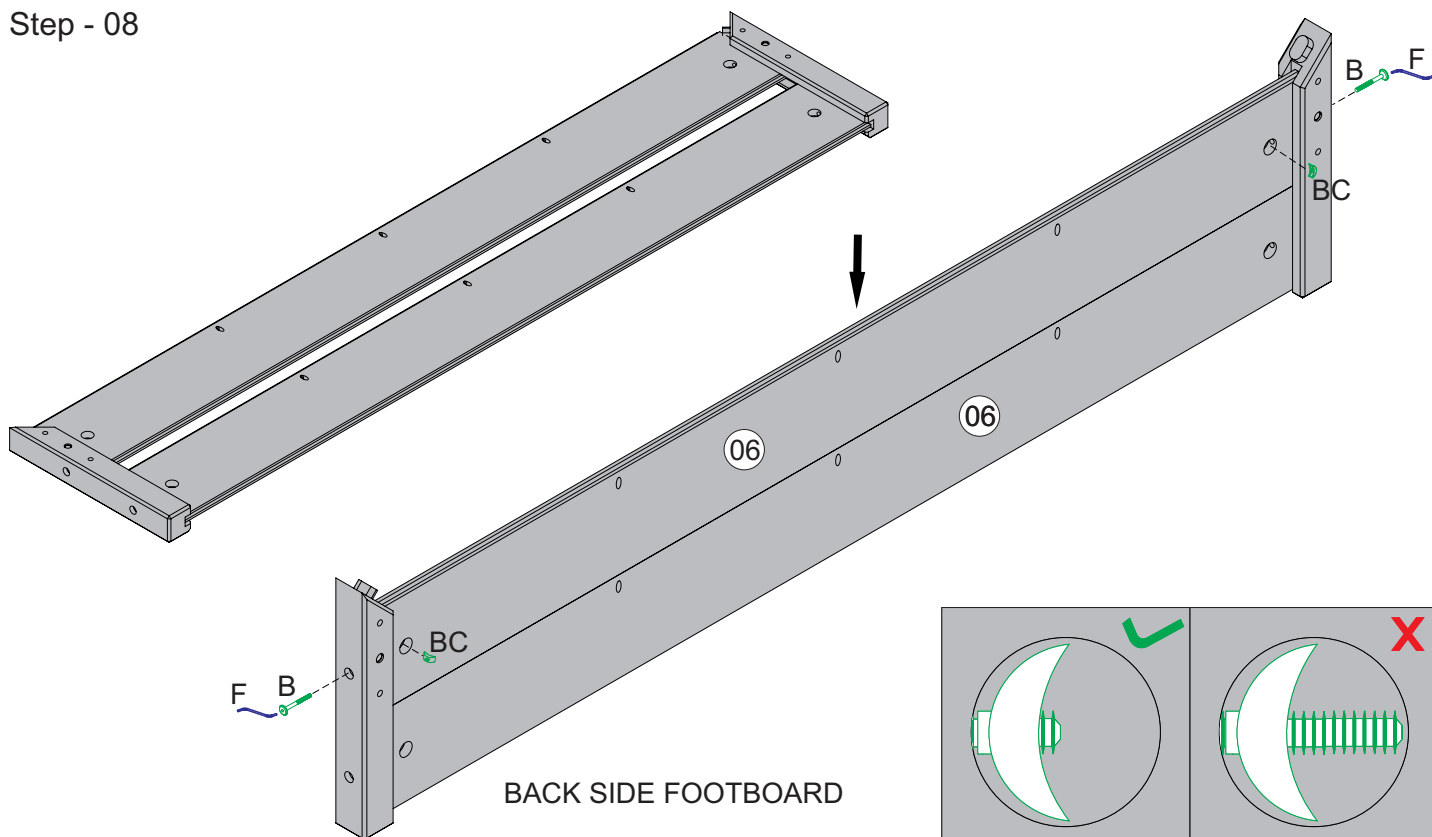


BACK SIDE FOOTBOARD


DO NOT FULLY TIGHTEN SCREWS INTO HALF MOON NUT UNTIL ALL HEAD BOARD PARTS ARE MOUNTED IN PLACE.

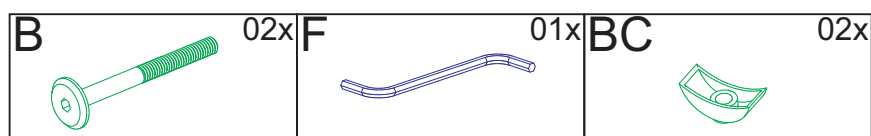



Step - 9 - Attention: At this Point, Fully Tighten All Screws

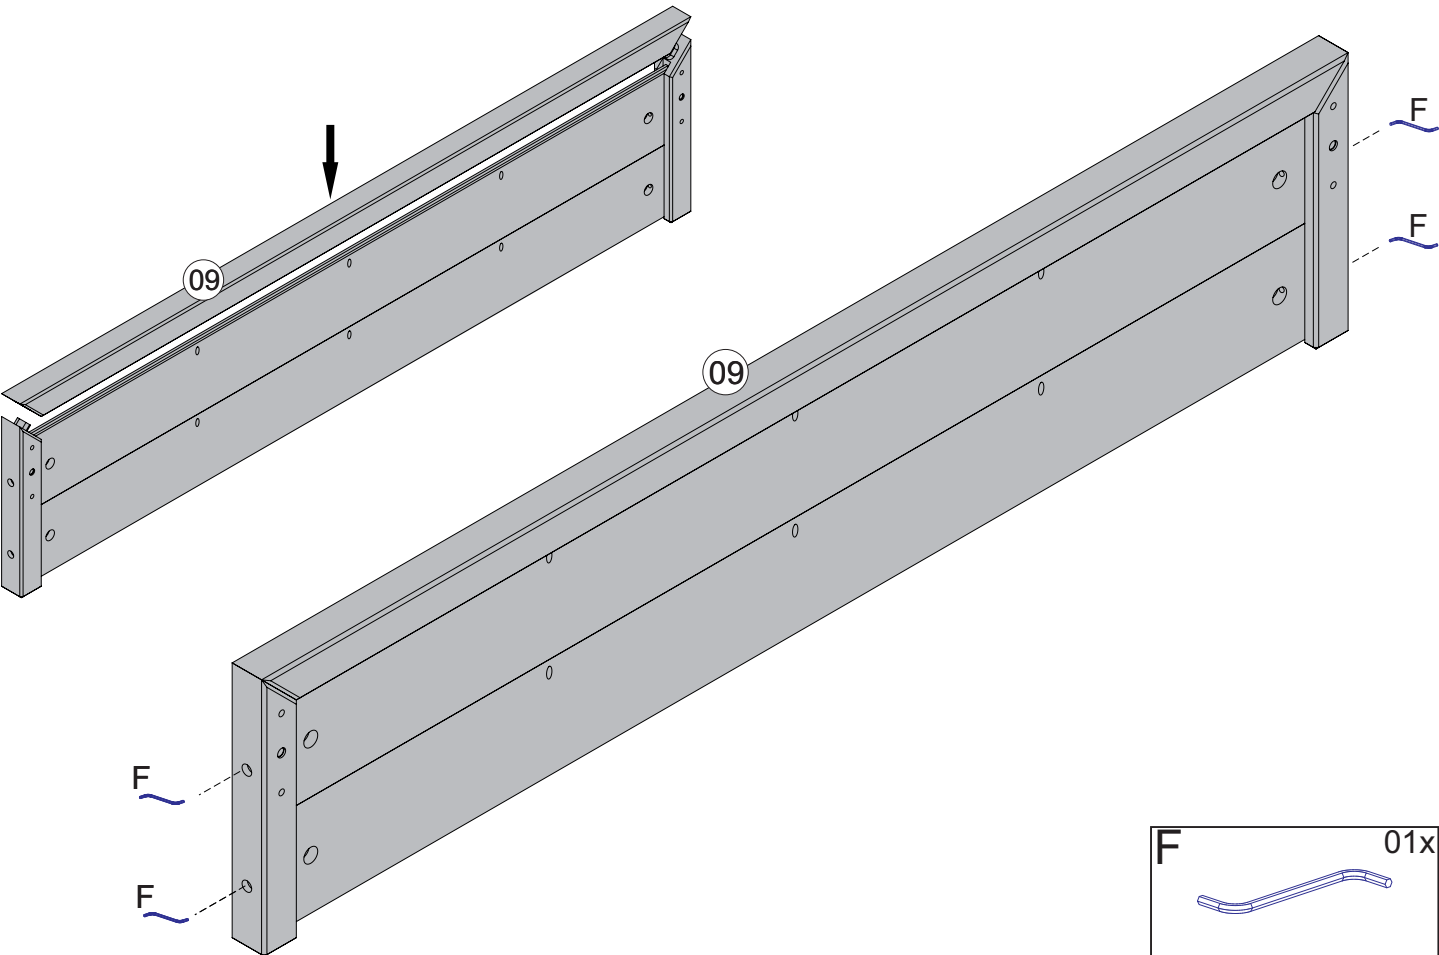







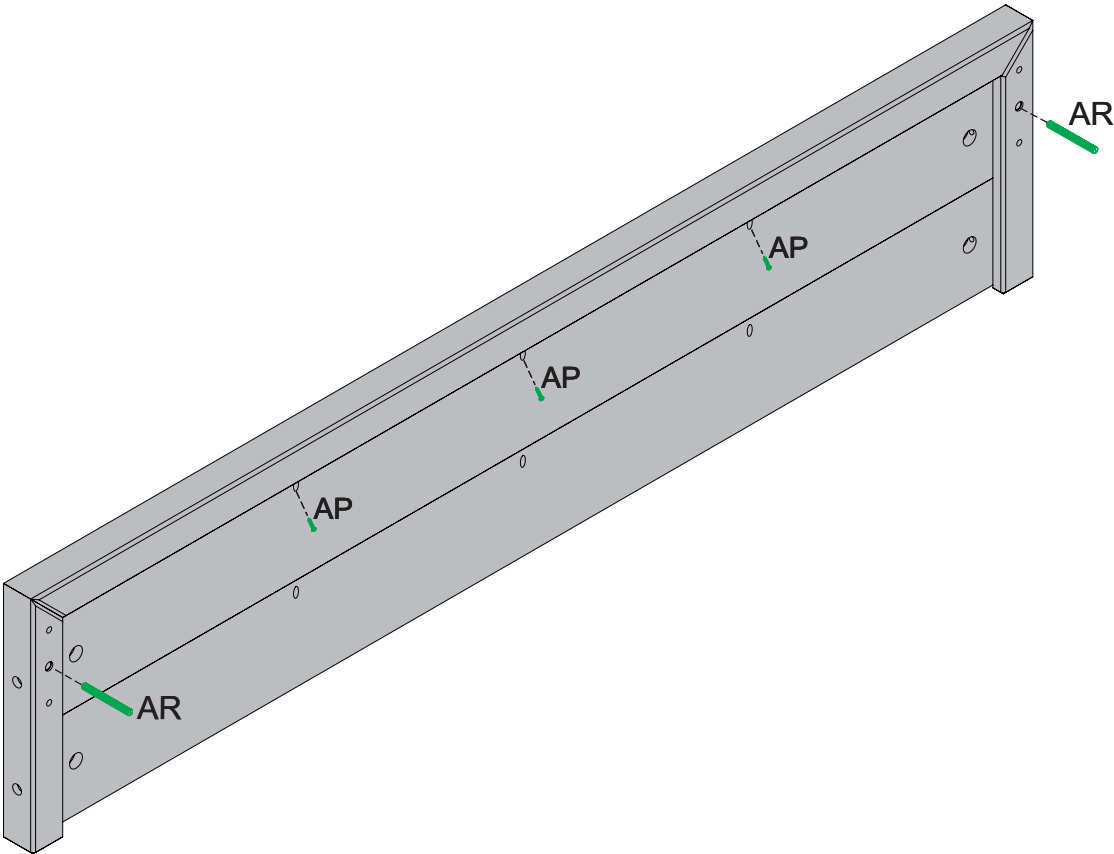Step - 10

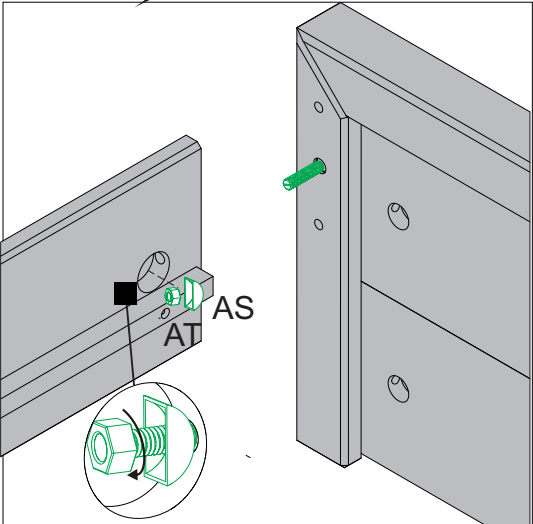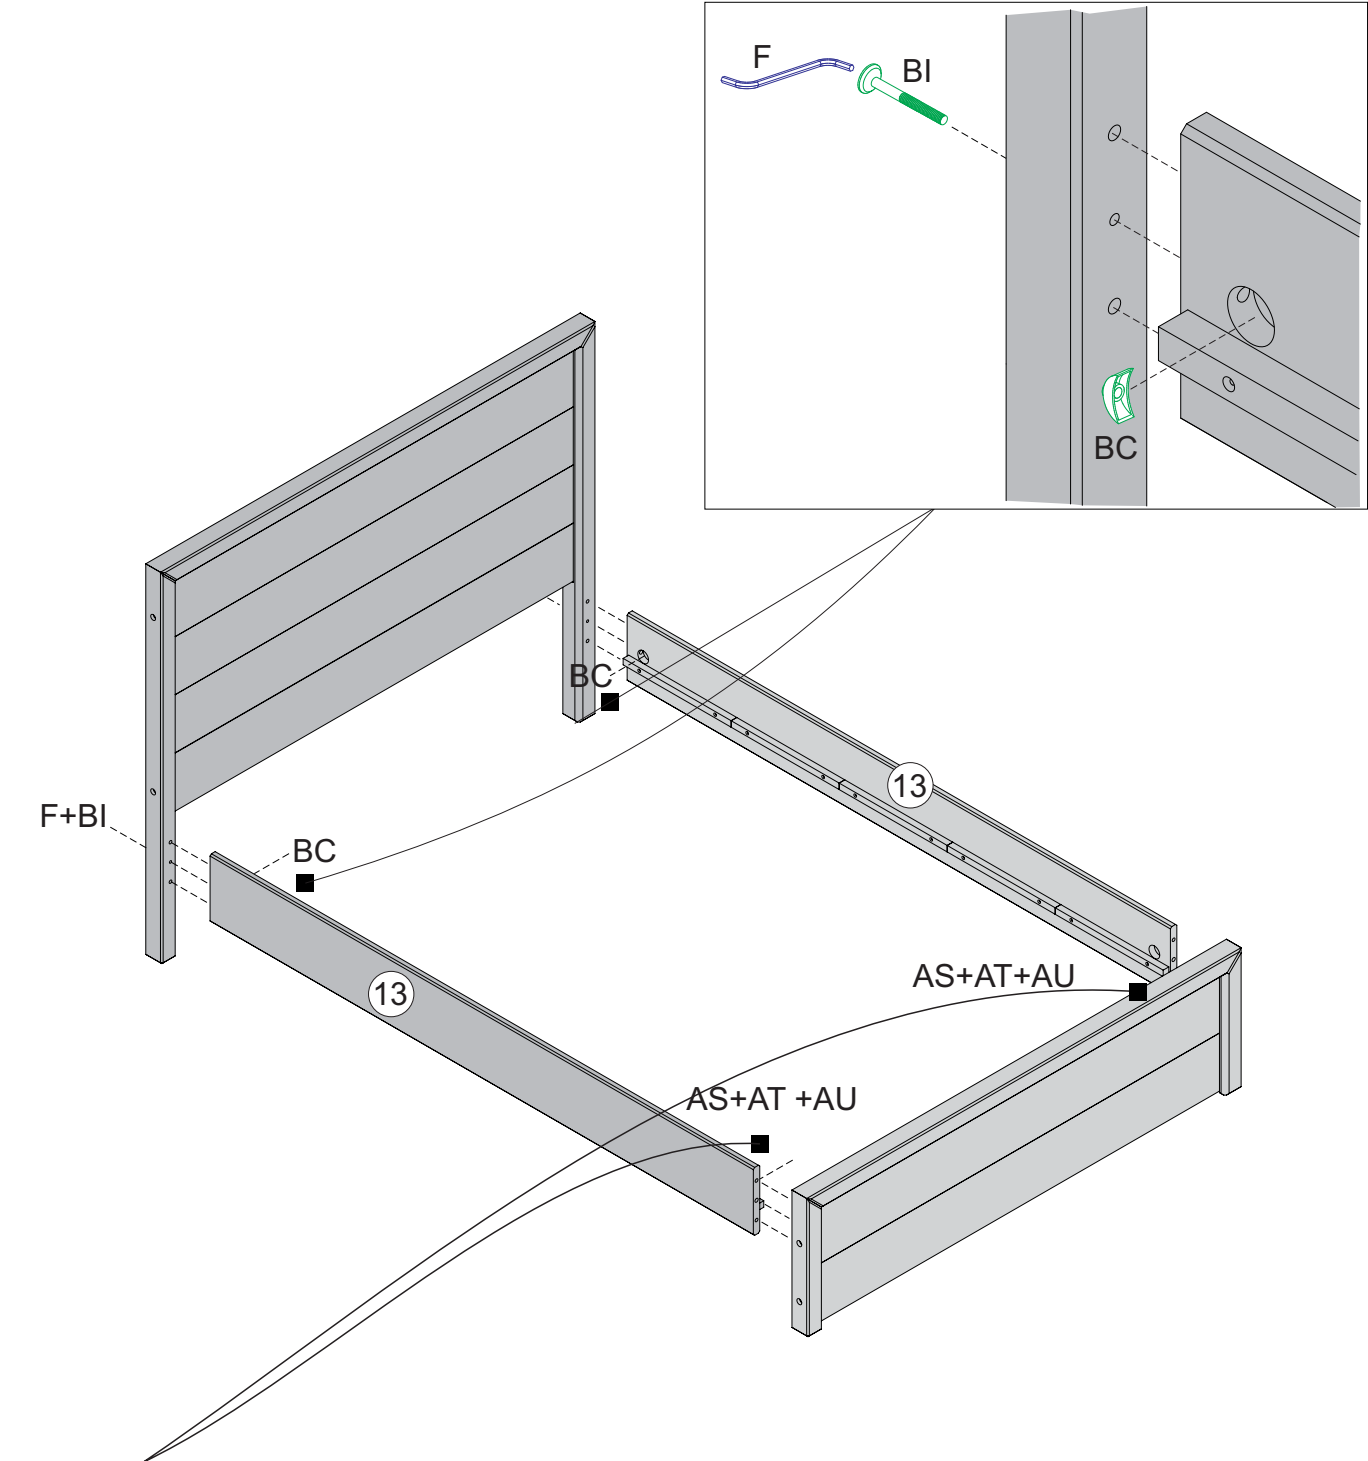


Observation: The Foot board is now completely assembled and ready to attach to Bed Rails (Part 13)




F  01x	AS  02x 1/2" x 1 1/4"
AT  02x ø5/16"	AU  01x 1/2"
BC  02x 1/4"	BI  02x ø1/4" x 5"


Step - 12

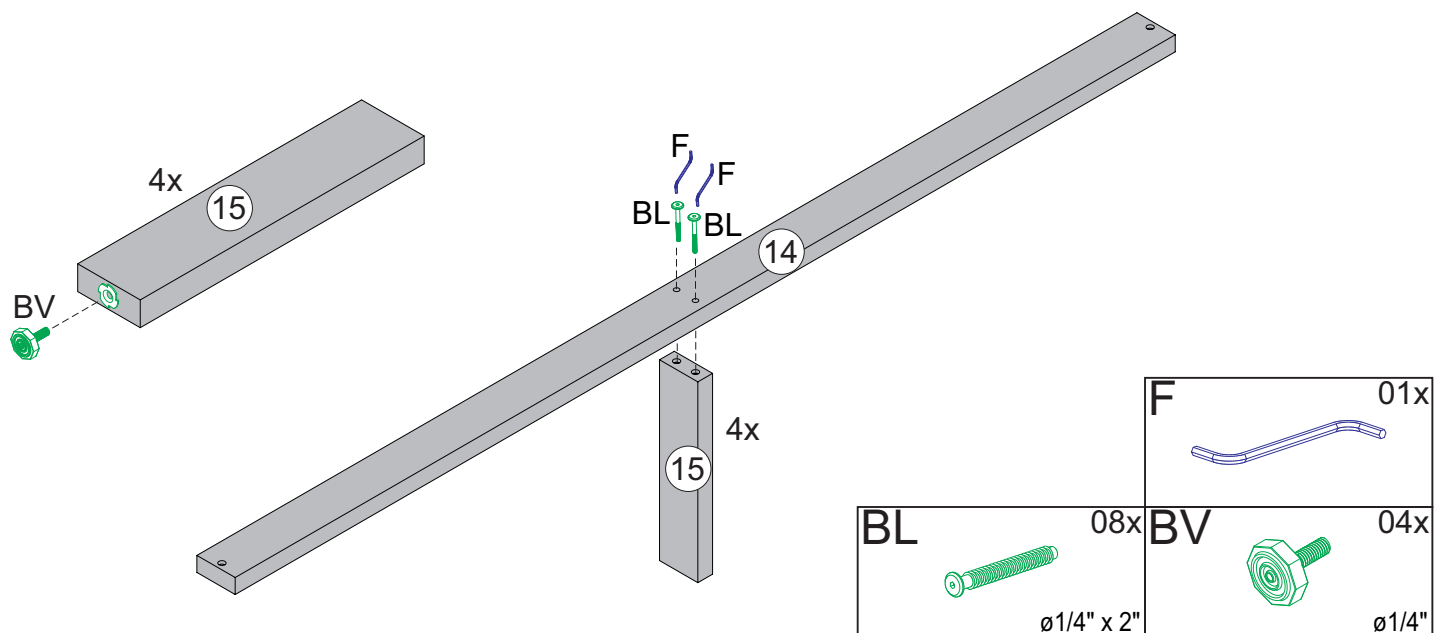

Step - 13

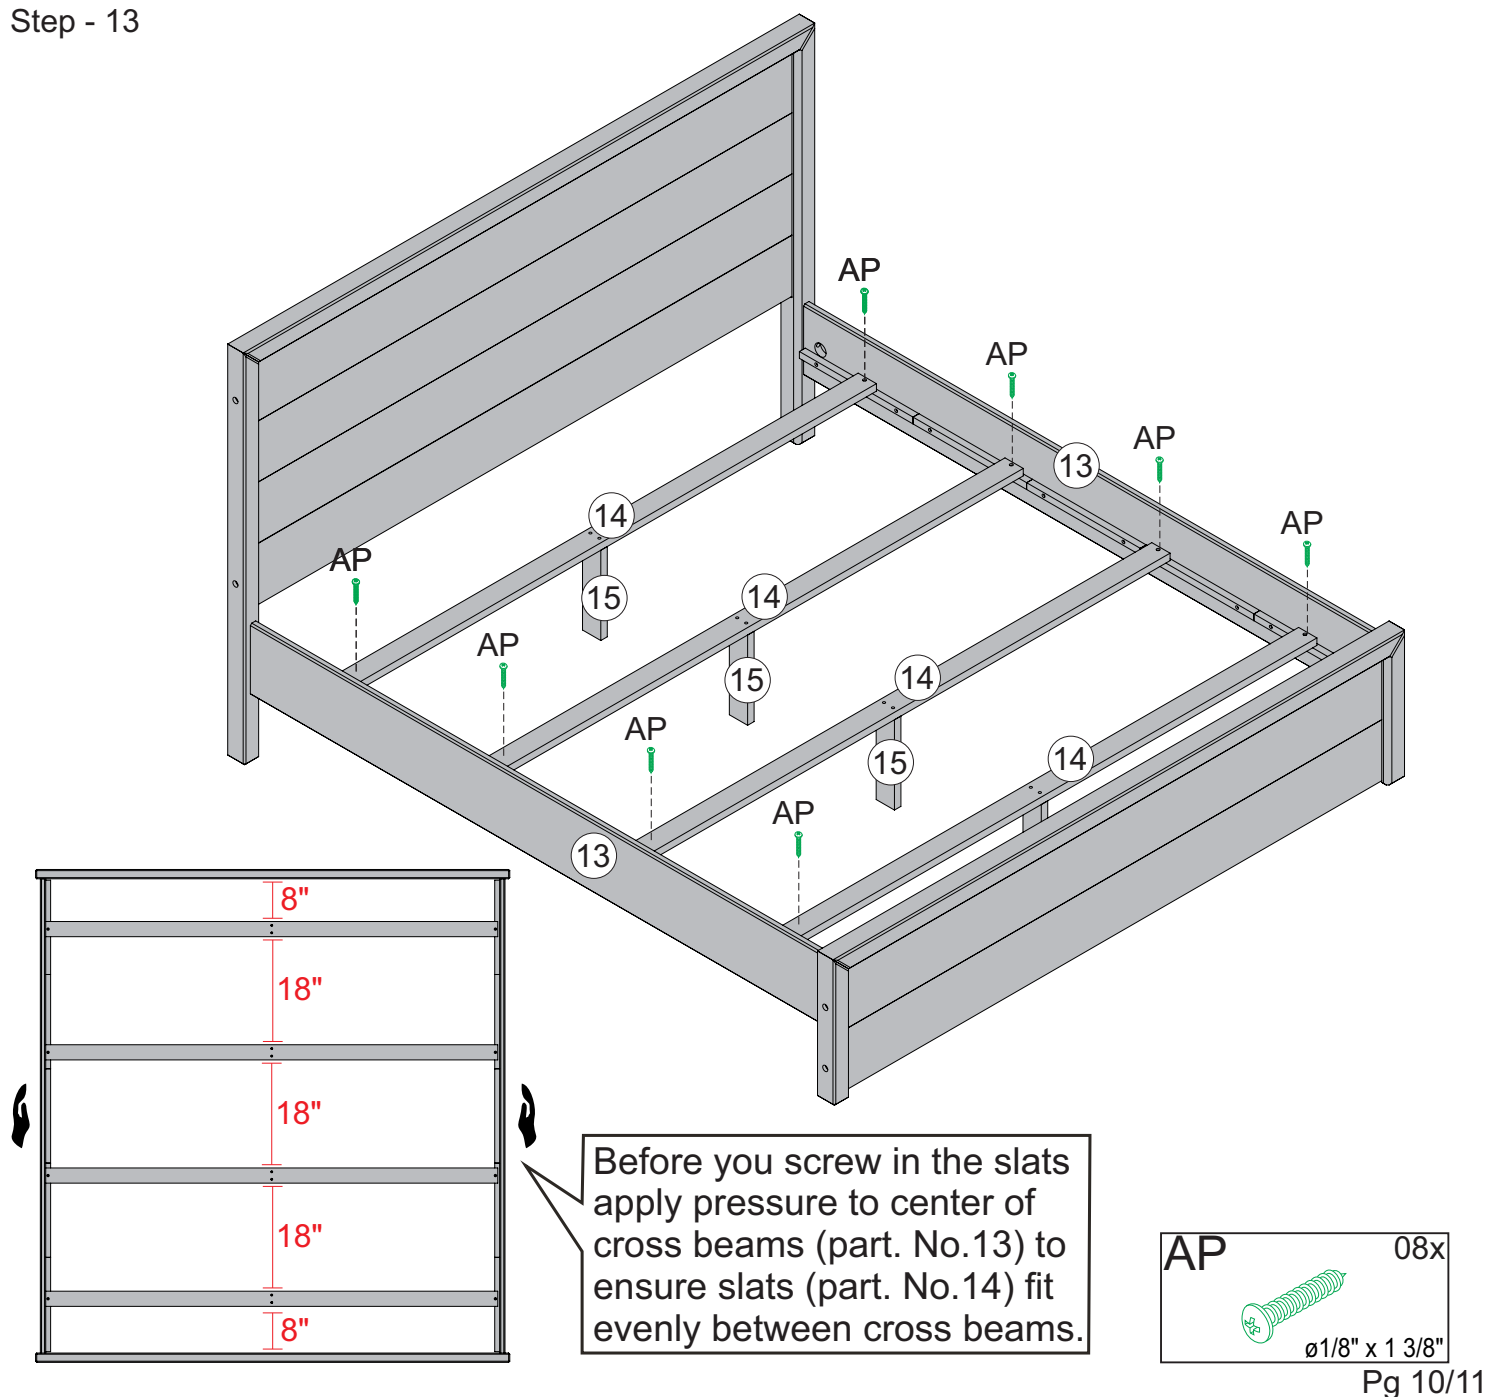

Step - 14

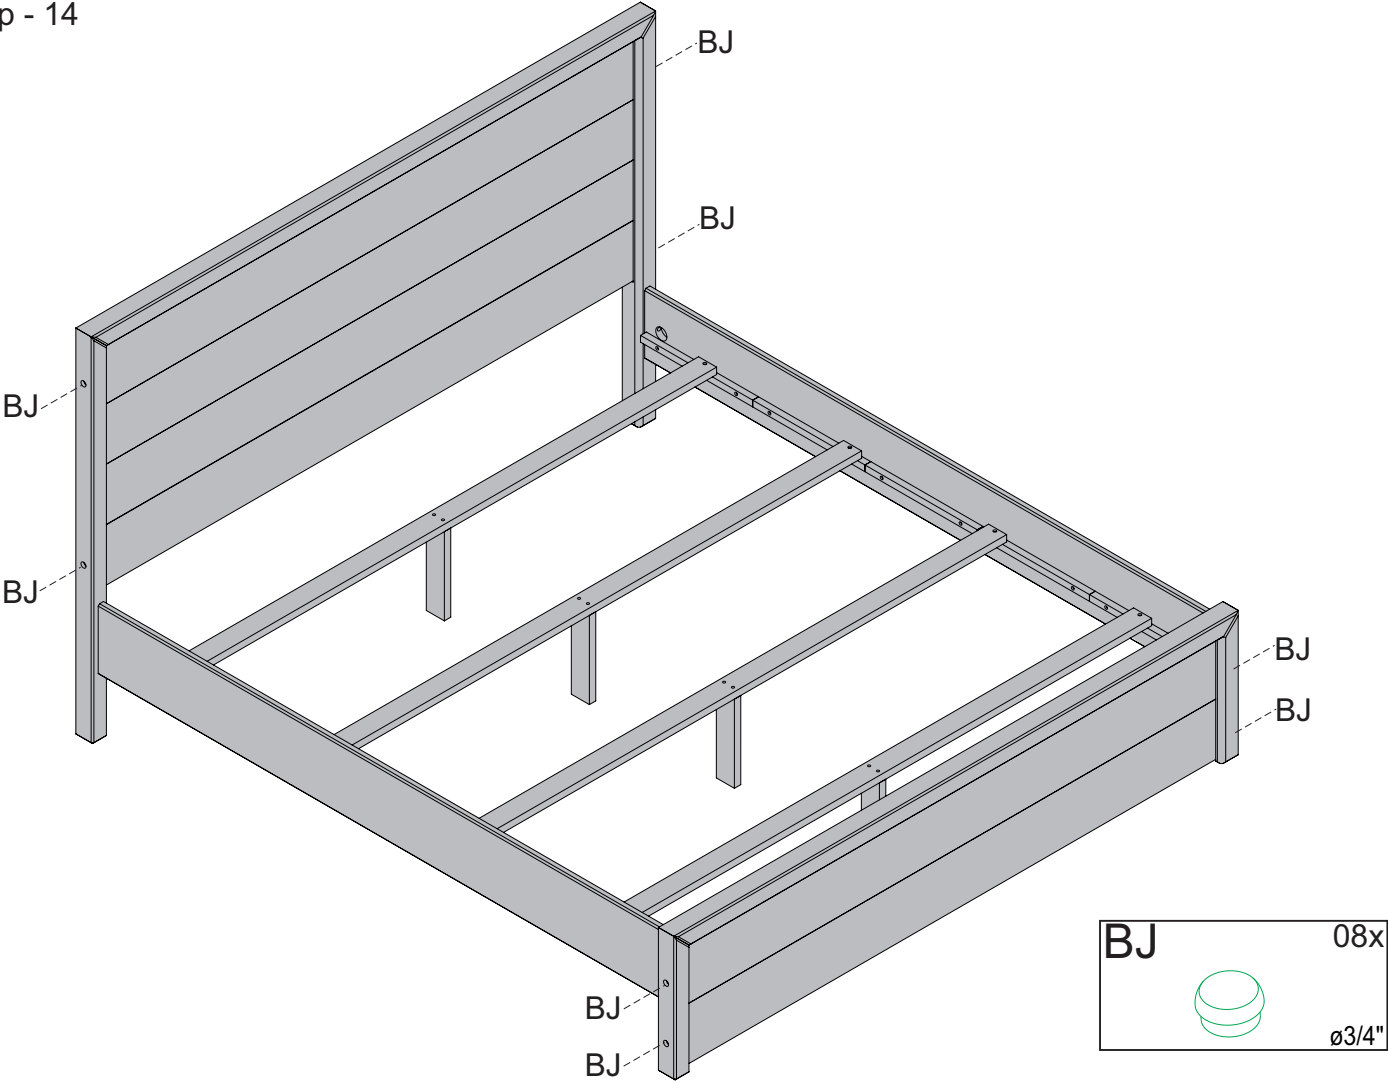

Congratulations, your new bed is now completely assemble and ready to enjoy!