


ASSEMBLY INSTRUCTIONS

FULL CAPTAIN BED

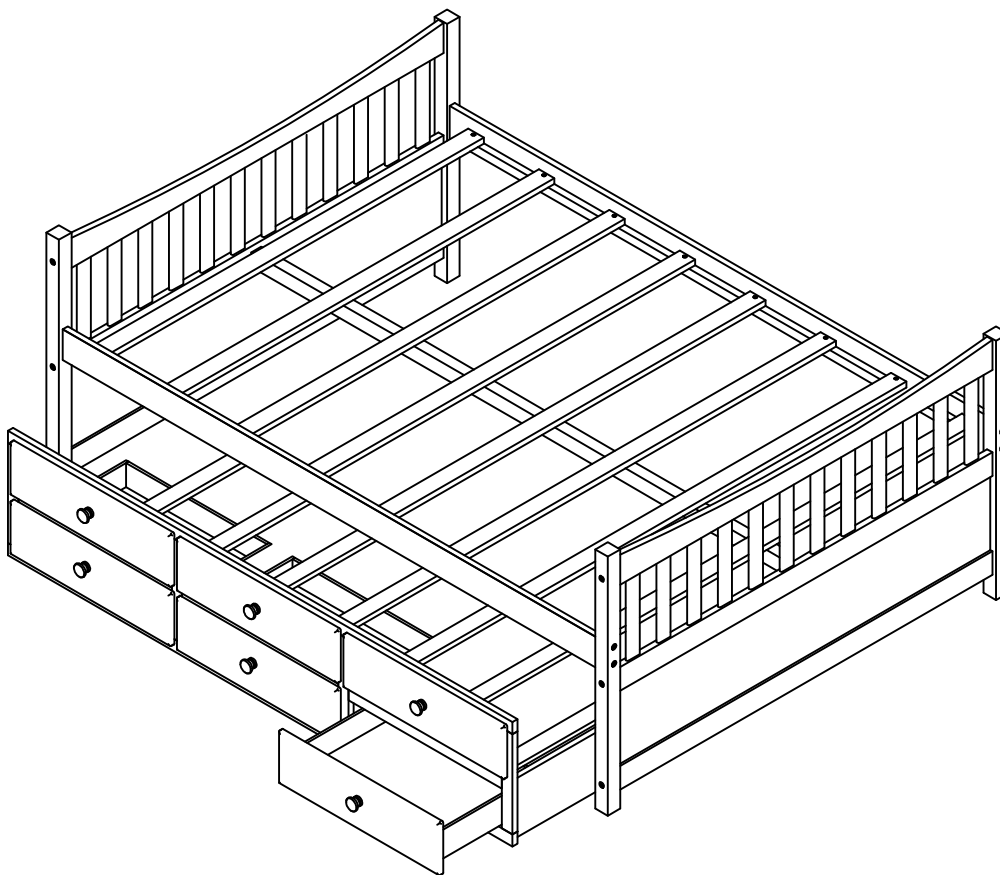


If you have any questions, please feel free to contact us.

Email: service@qualfurn.net











WF290940 / 290941

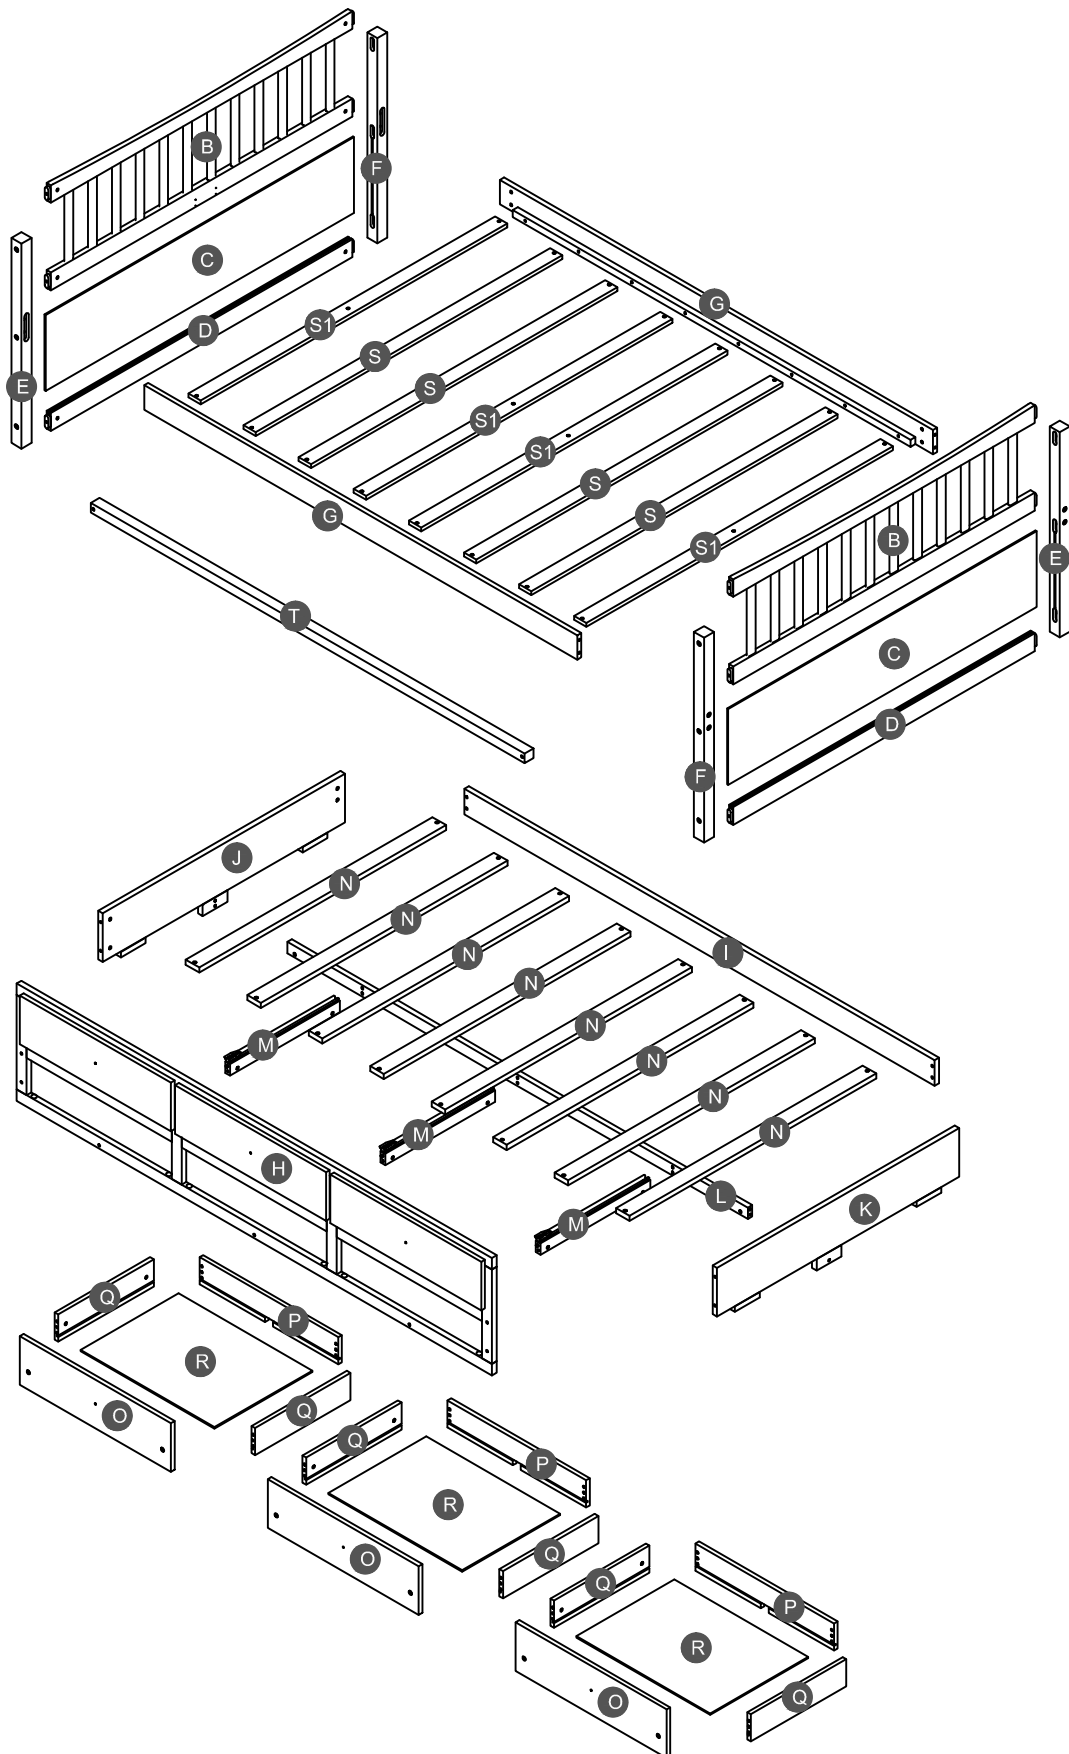Detail View













Part List














WF290940

D  Horizontal bar - 2pcs	G  Side rail - 2pcs	H  Front panel of trundle - 1pc
I  Back panel side rail of trundle -1pc	L  Support rail of trundle -1pc	S  Slats - 4pcs
O  Front drawer panel - 3pcs	P  Back drawer panel - 3pcs	S1  Slats - 4pcs
T  Lower support slat - 1pc		


Hardware List WF290941

B  HB & FB - 2pcs	C  Side panel - 2pcs	E  Leg HB & FB (Left) - 2pcs
F  Leg HB & FB (Right) - 2pcs	J  Left side panel of trundle -1pc	K  Right side panel of trundle -1pc
M  Support drawer -3pcs	Q  Left / right drawer panel - 6pcs	R  Drawer bottom - 3pcs
N  Slats - 8pcs		

Hardware List WF290941


1	 Ø8*30mm Wood dowel (26pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (8pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4	 (Ø12)1/4"*60mm Hex-Head bolts (28pcs)	5	 Ø3.5*12mm Wood screws (9pcs)	6	 Ø3.5*19mm Wood screws (8pcs)
7	 1/4"*15 (9.5mm) Horizontal-Hole bolts(48pcs)	8	 Ø38*31mm Pine Knob (6pcs)	9	 3/16"*25mm Ph zinc(Knob) (6pcs)
10	 45*20*35mm Caster (4pcs)	11	 400*30mm Upper slider drawer (3pcs)	12	 (1/4")4.5*58mm Allen key (1pc)
13	 Ø4*30mm Wood screws (36pcs)	14	 116*40*27mm Metal bracket (2pcs)	15	 Ø3.5*15mm Wood screws (8pcs)
16	 (Ø13)1/4"*14mm Connect bolt (2pcs)	17	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

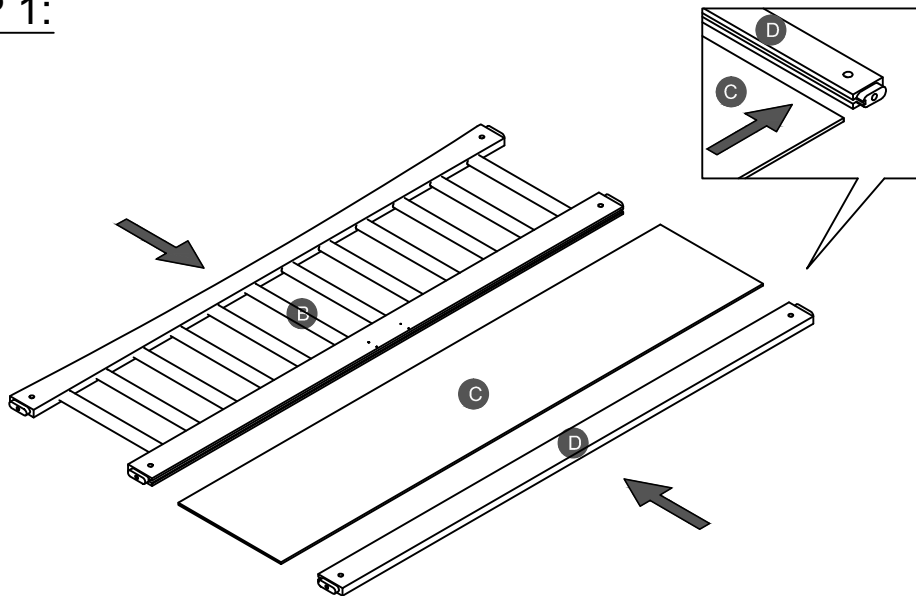

STEP 1:




x 2

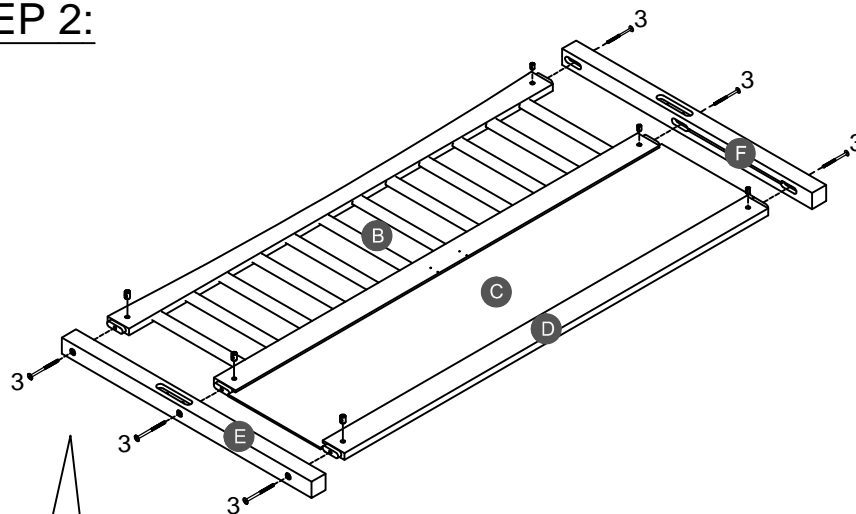STEP 2:




3		7	
12PCS		12PCS	

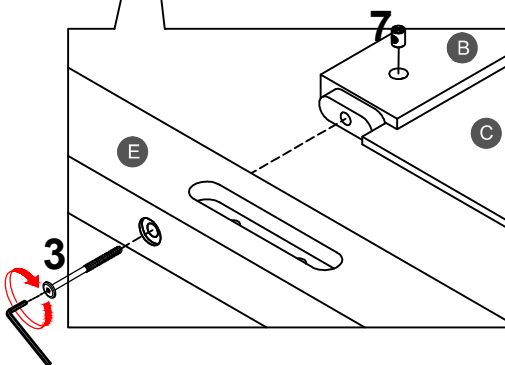




Note: Part 7 will face up with the "x" mark on it, otherwise it cannot be tightened

x 2

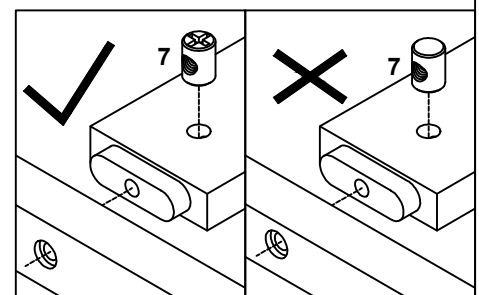


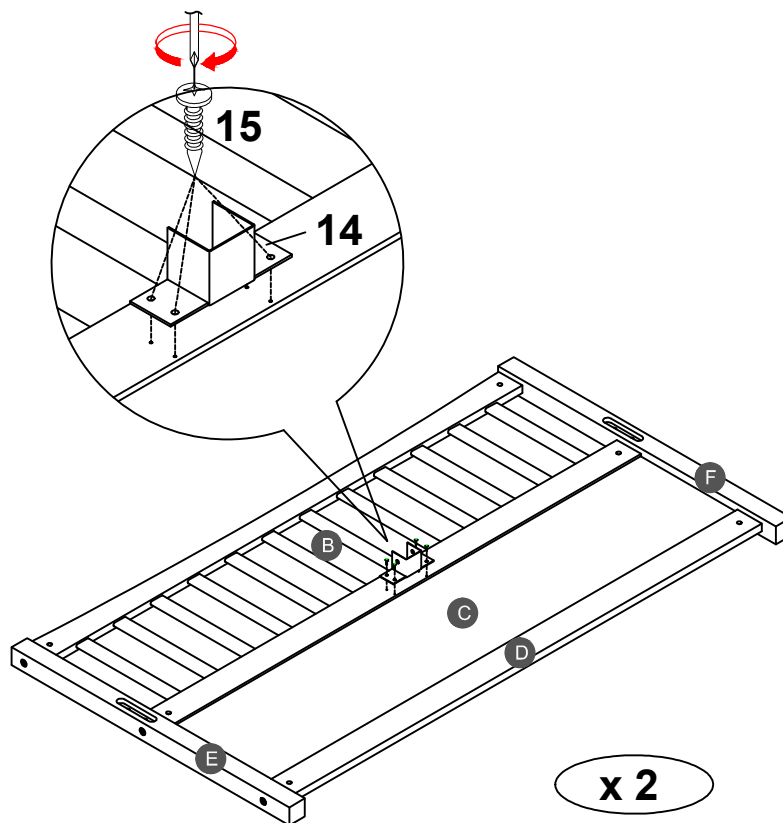

STEP 3:





14		15	
2PCS		8PCS	


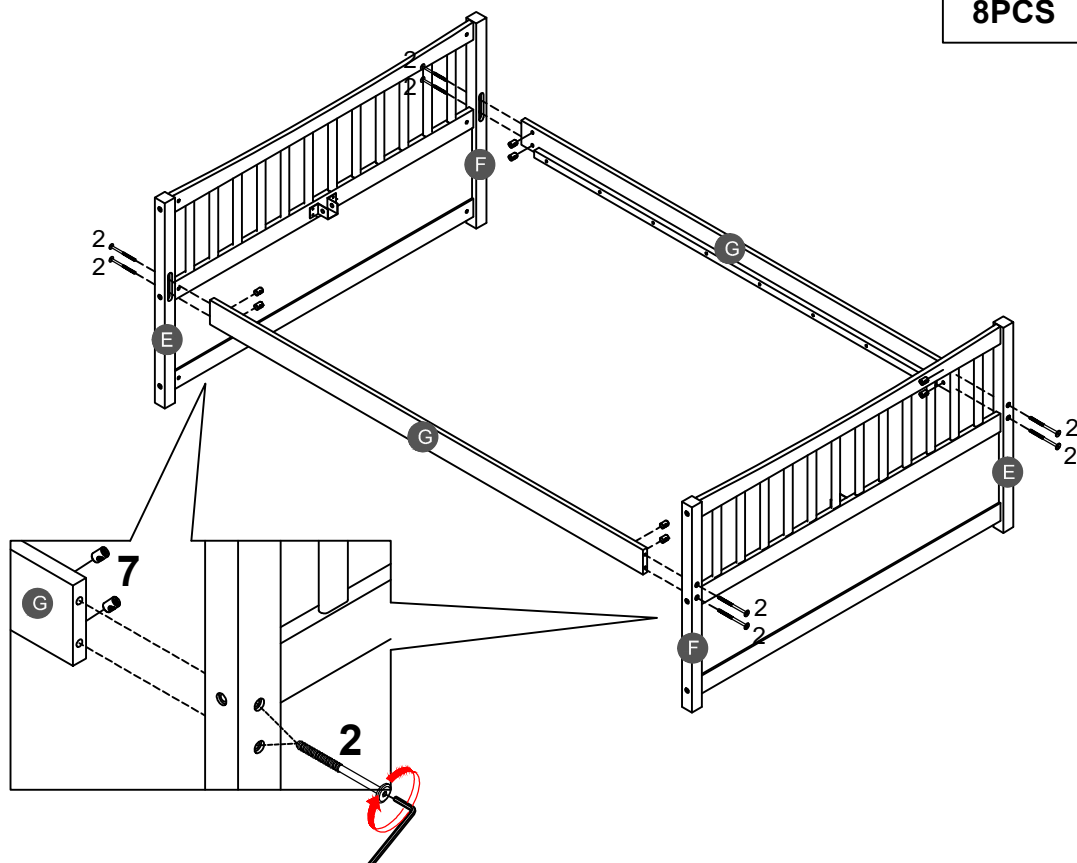
STEP 4:




2		7	
8PCS		8PCS	


STEP 5:

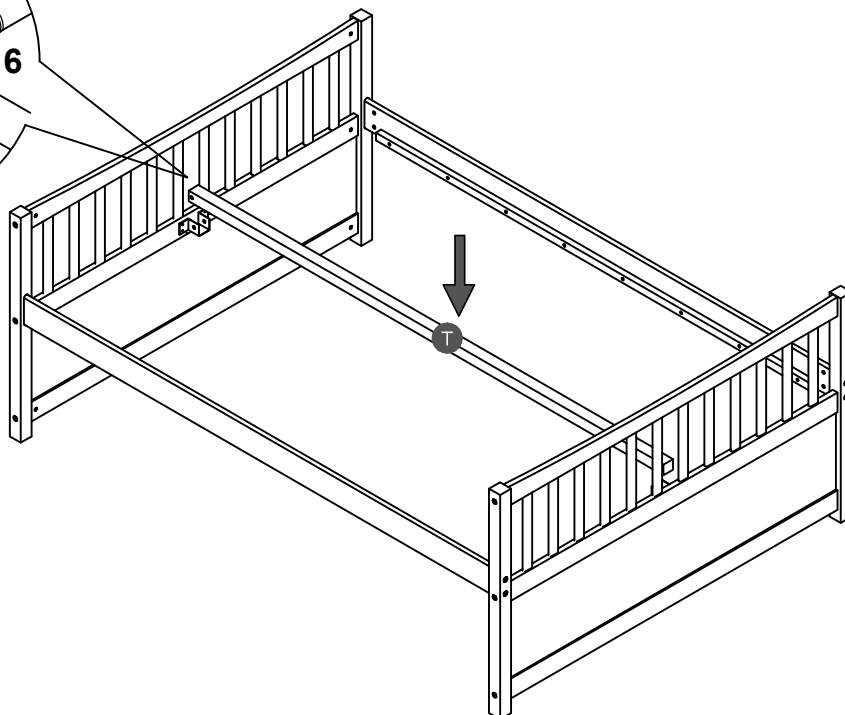
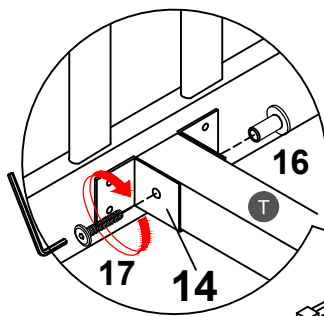


16	17
	
2PCS	2PCS

STEP 6:

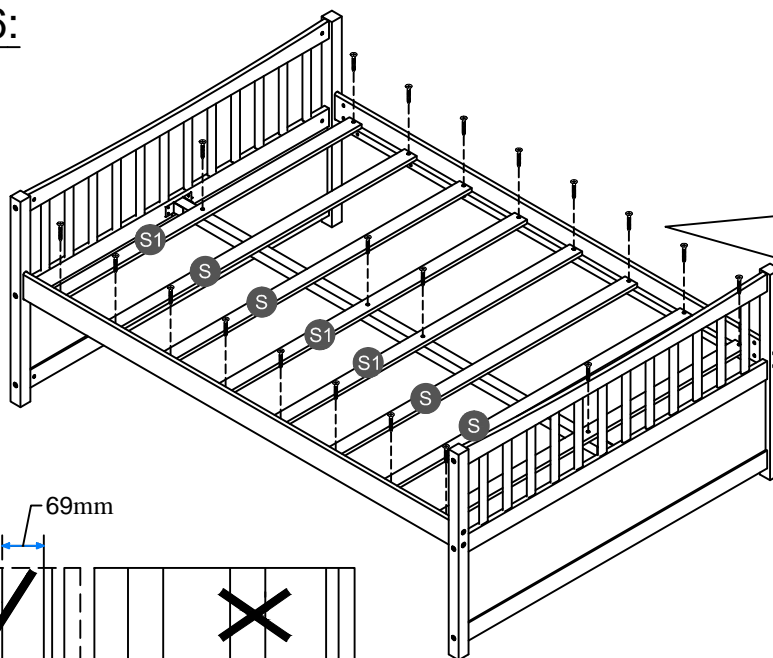


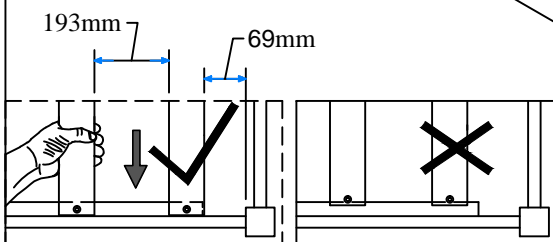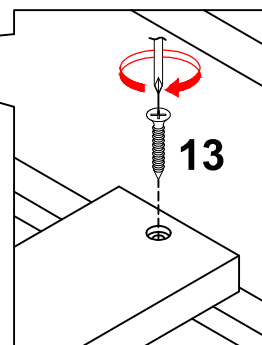

13

20PCS

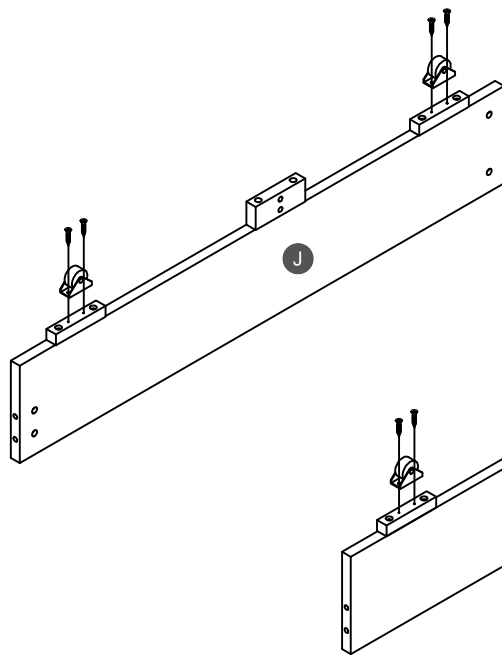


Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.



STEP 7:



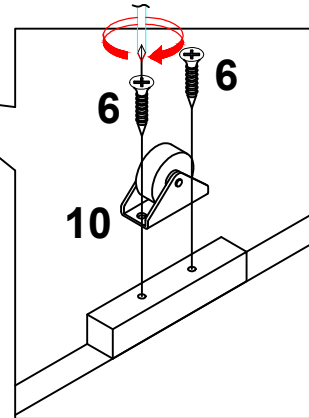


10	6
	
4PCS	8PCS

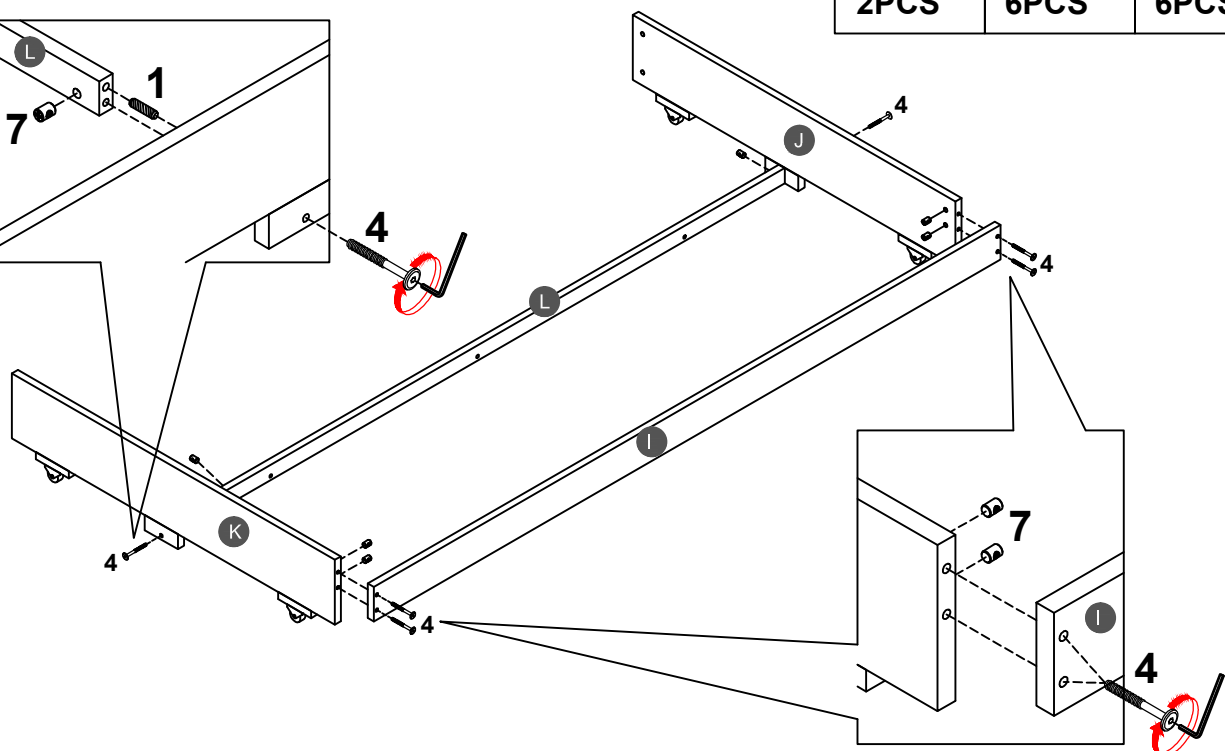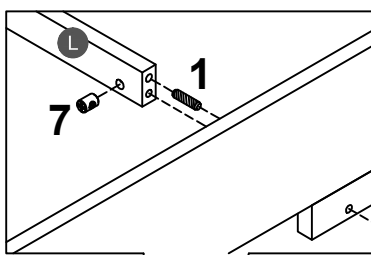


STEP 8:




1	4	7
		
2PCS	6PCS	6PCS

STEP 9:

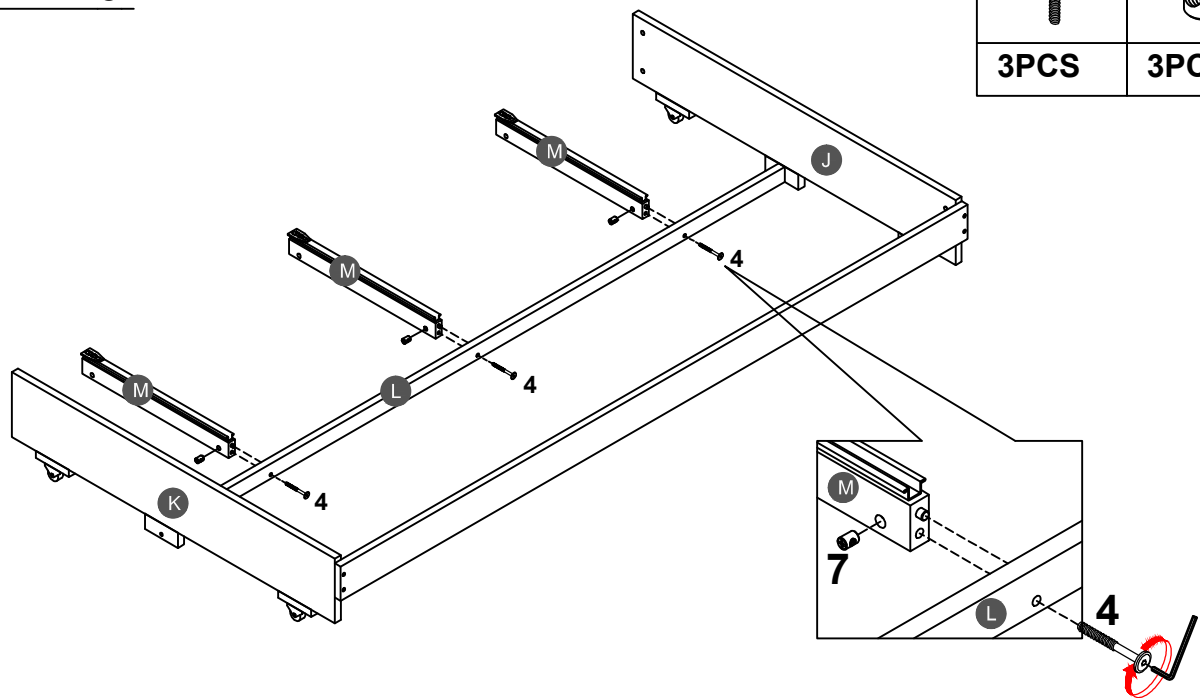

STEP 10:

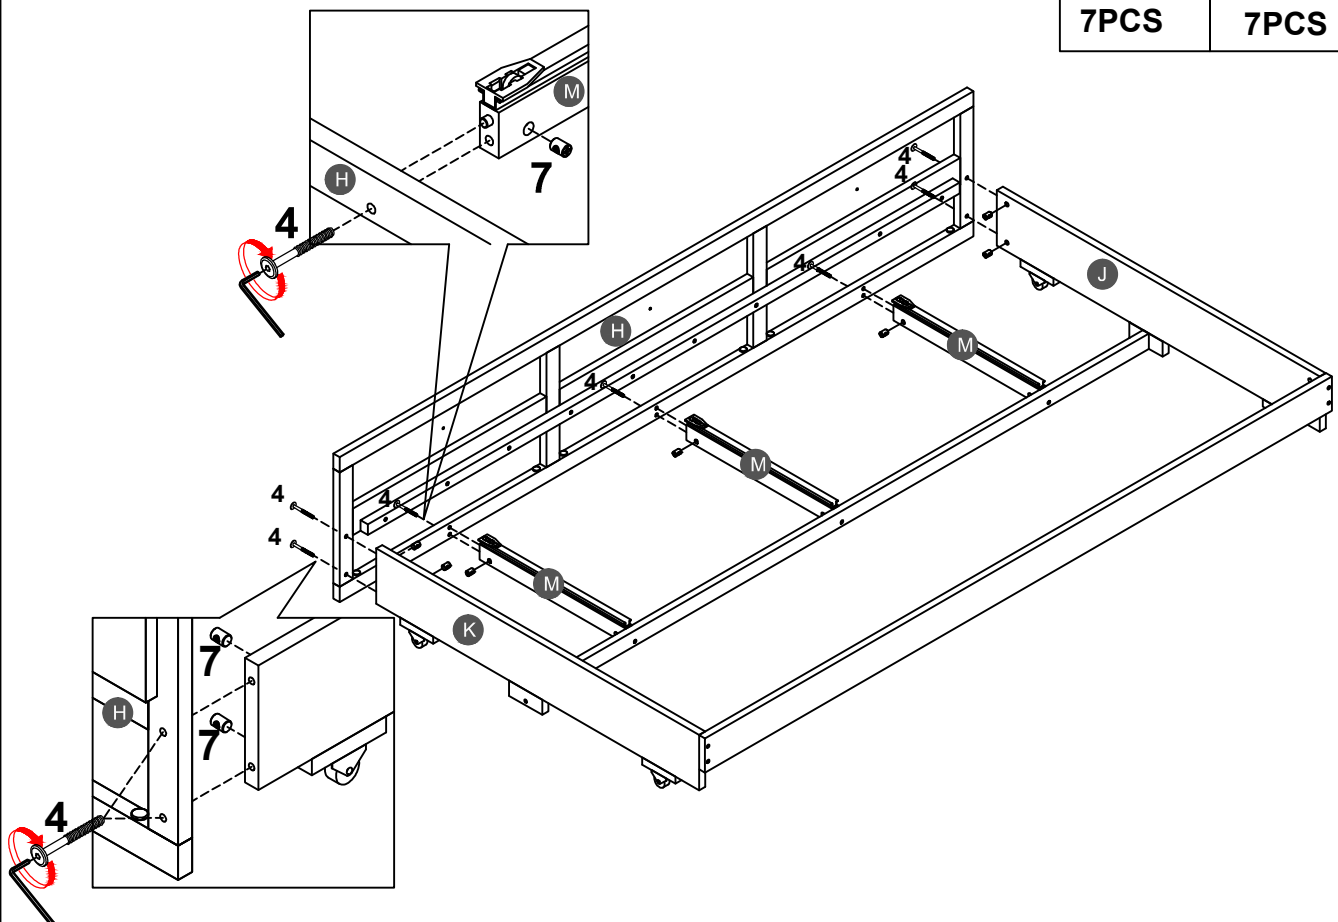


STEP 11:

13



16PCS

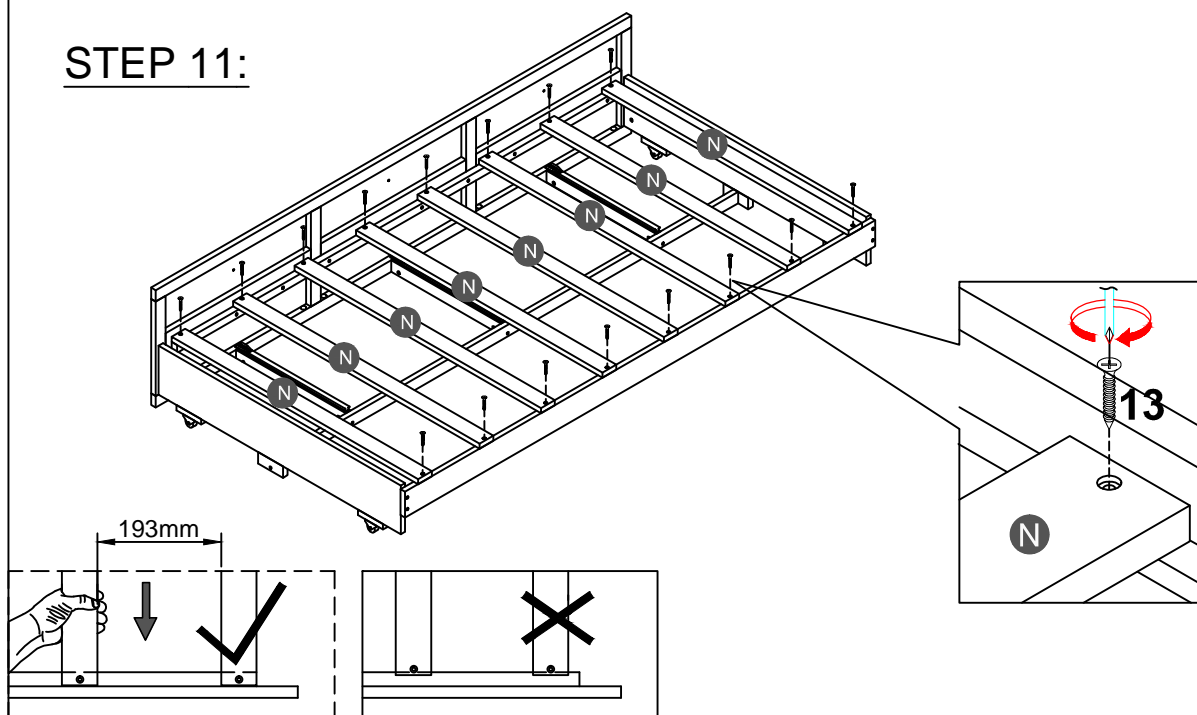

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.

Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

STEP 12:

1



12PCS

4




6PCS

7



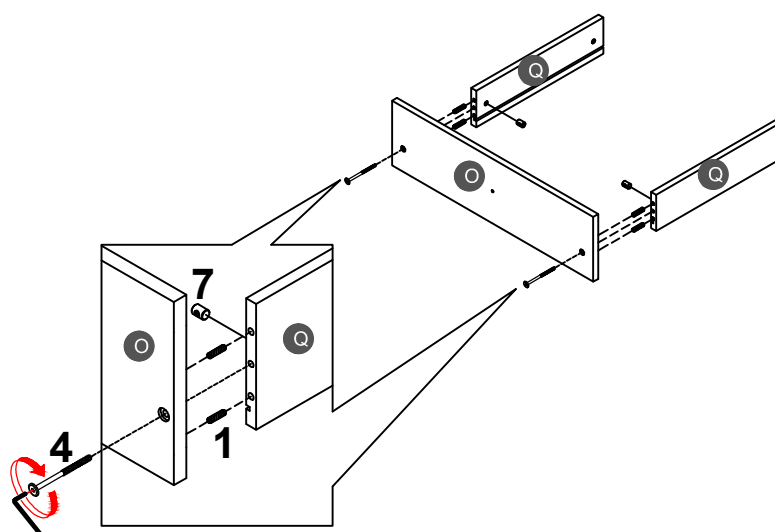


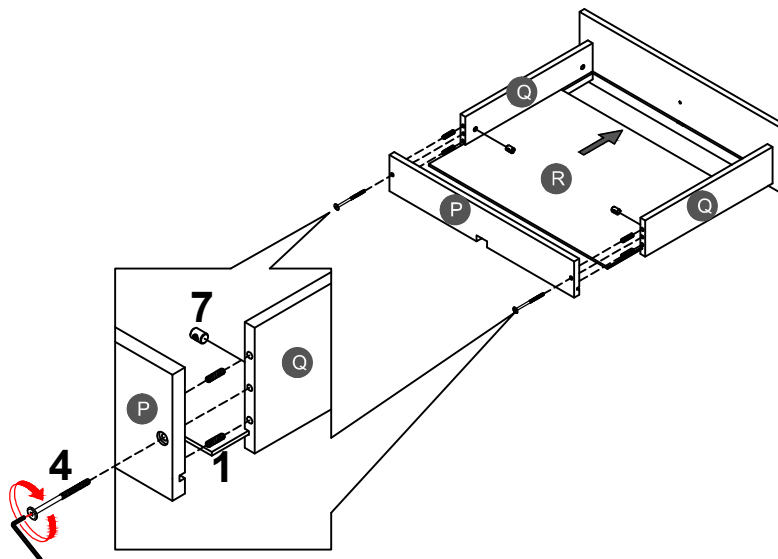
6PCS



x 3



STEP 13:


1		4		7	
12PCS		6PCS		6PCS	



x 3



STEP 14:

11		5	
3PCS		9PCS	

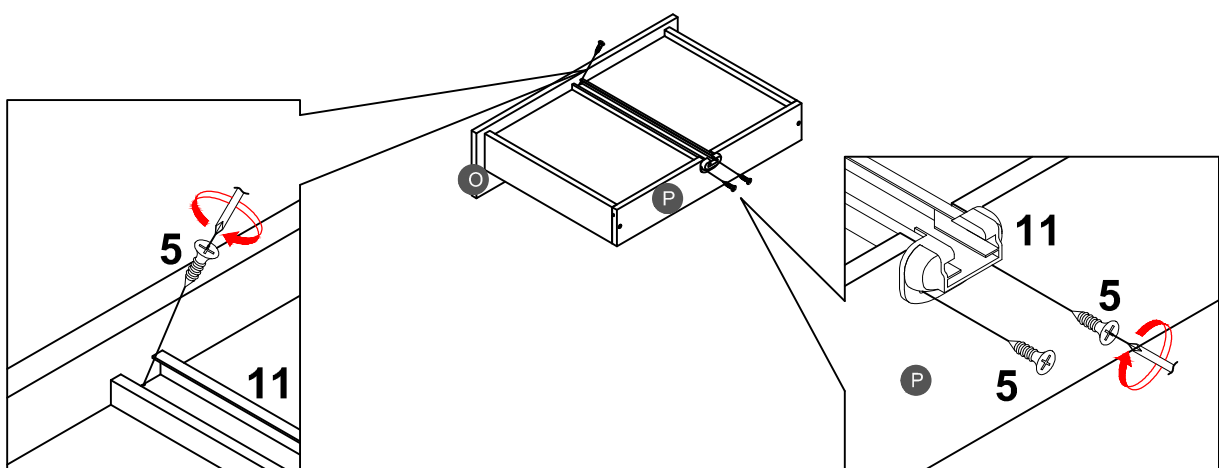



x 3

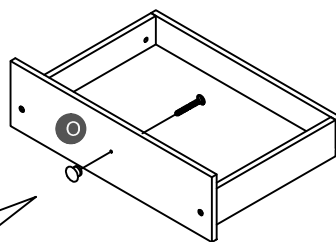
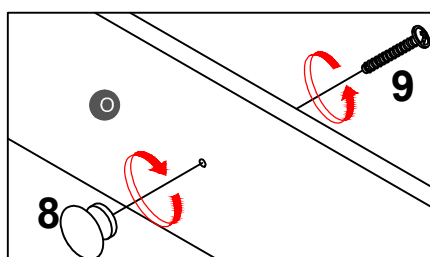
STEP 15:





x 3

8	9
	
3PCS	3PCS

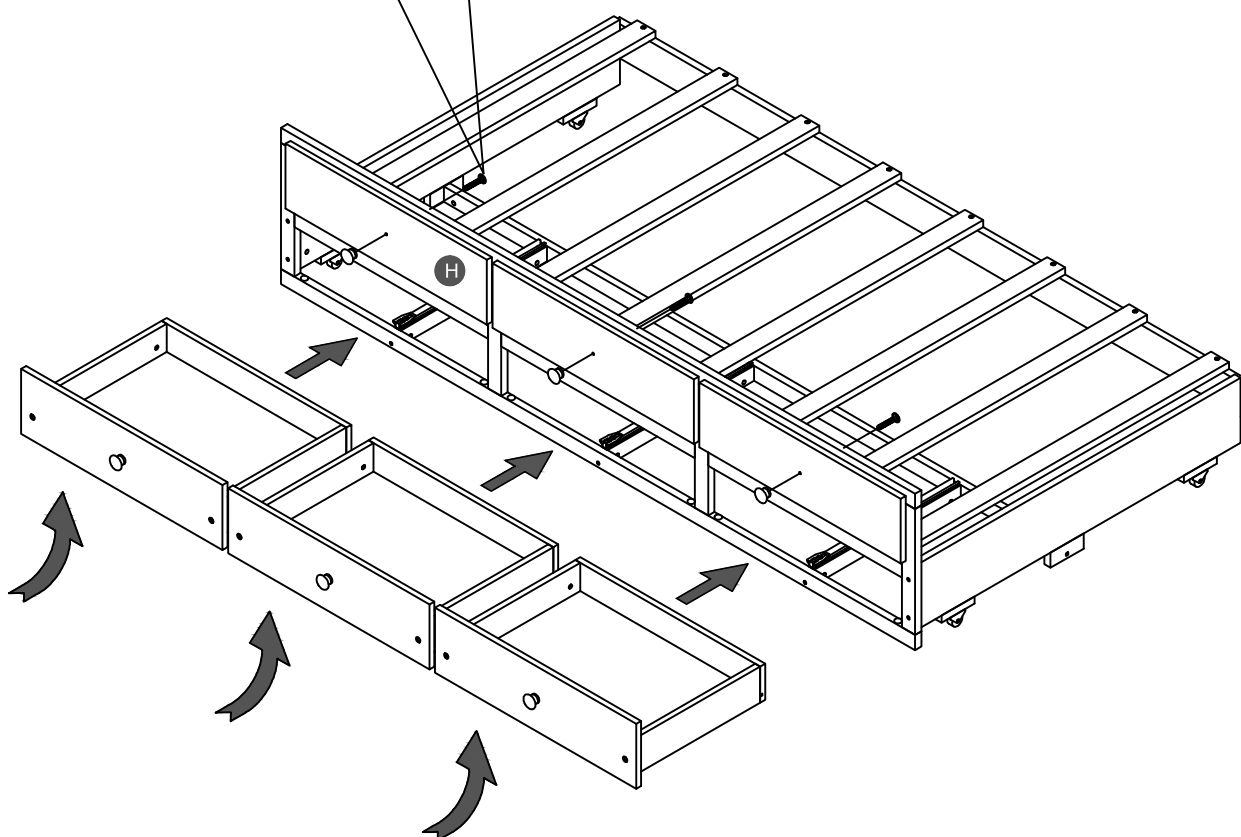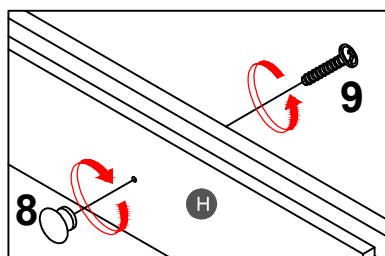
STEP 16:



8	9
	
3PCS	3PCS

Remark: When opening or closing the drawer,
Please lift the drawer slightly before opening or closing it.

STEP 17:

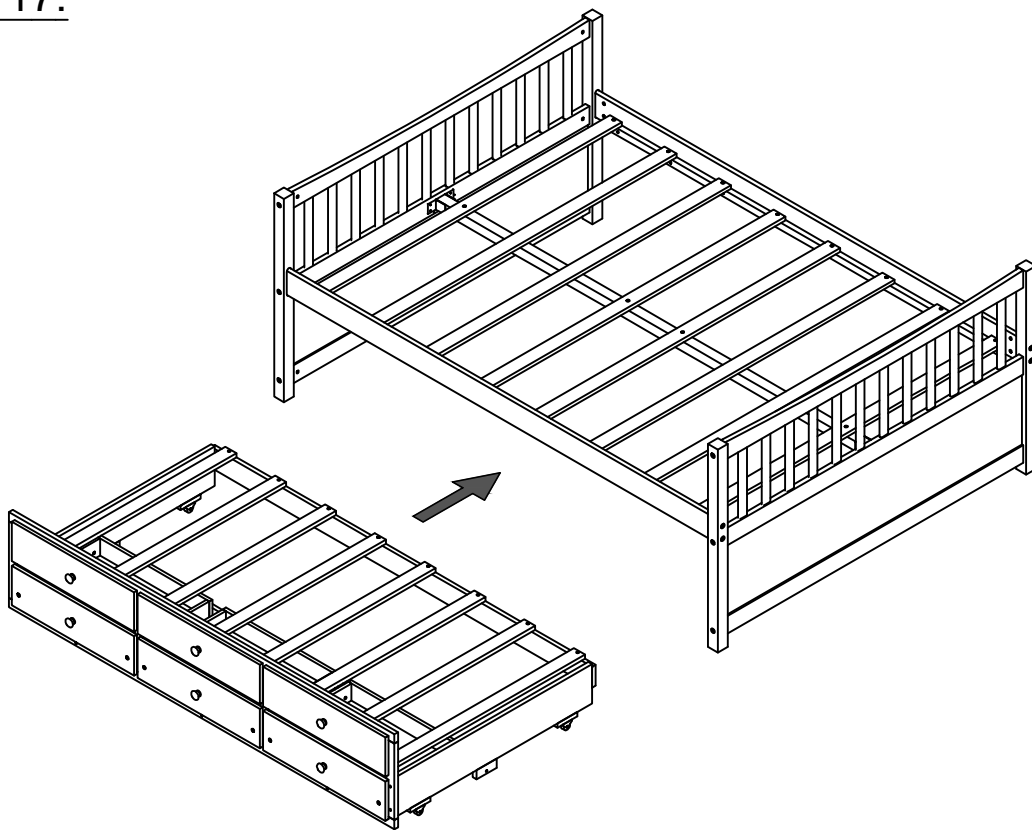

Push Trundle under the bottom of Twin bed.

