



# Delta Shower Door Measurement Guide

Before you customize your dream door, you need to make sure you have the correct measurements:

## Identify Vertical and Horizontal Openings with Threshold Depth

Height (A), Widths (B), and Depth (C). Widths (B) measurements are often not the same so doors can be adjusted up to 3/8"

### A) Vertical Opening

Measure from the top of the shower or bathtub threshold up to the top of the acrylic (or tile) surround wall

### B) Horizontal Opening

Measure width of opening at the top and the bottom of the enclosure.

### C) Threshold/Sill


Measure the depth from front to back (edge to edge) of the shower or bathtub threshold.

### Available Sizes:


#### • 60" Shower

- Fits openings between 52" minimum – 60" maximum
- Finished Door Height: 70-1/4"
- Minimum Required Clearance Height for Installation: 72"
- Threshold/Sill Depth Requirement for Installation: 2-7/8"
- Studs required 1-1/2" from front surface of threshold/sill

Sliding Shower Doors

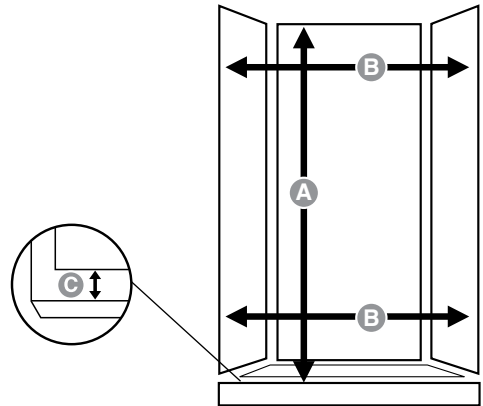

Sliding Tub Doors

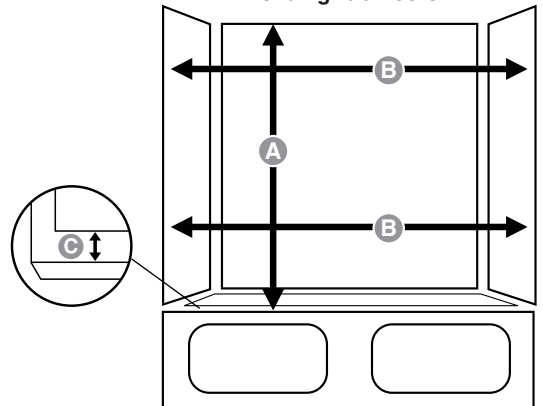

NOTE: the height will be different for shower doors vs. bathtubs.

## RECORD DIMENSIONS BELOW

	Opening
Height (A):	
Width of widest point (B):	
Width at narrowest point (B):	

### \*\*Disclaimers

- For ceramic tile application, use the top of the tile for the maximum door height.
- In older homes the opening at the top is often wider than the bottom due to an out-of-plumb condition.
- NOTE: All Delta Shower Doors are designed to accommodate out-of-plumb conditions totaling 3/8".

### Need Additional Assistance with Delta Shower Doors?

Call us at 1.800.964.4850  
 Visit us at [www.deltashowerdoors.com](http://www.deltashowerdoors.com)  
 Email us at [customersolutions@deltashowerdoors.com](mailto:customersolutions@deltashowerdoors.com)