



ASSEMBLY INSTRUCTIONS

6 PCS PATIO DINING SET

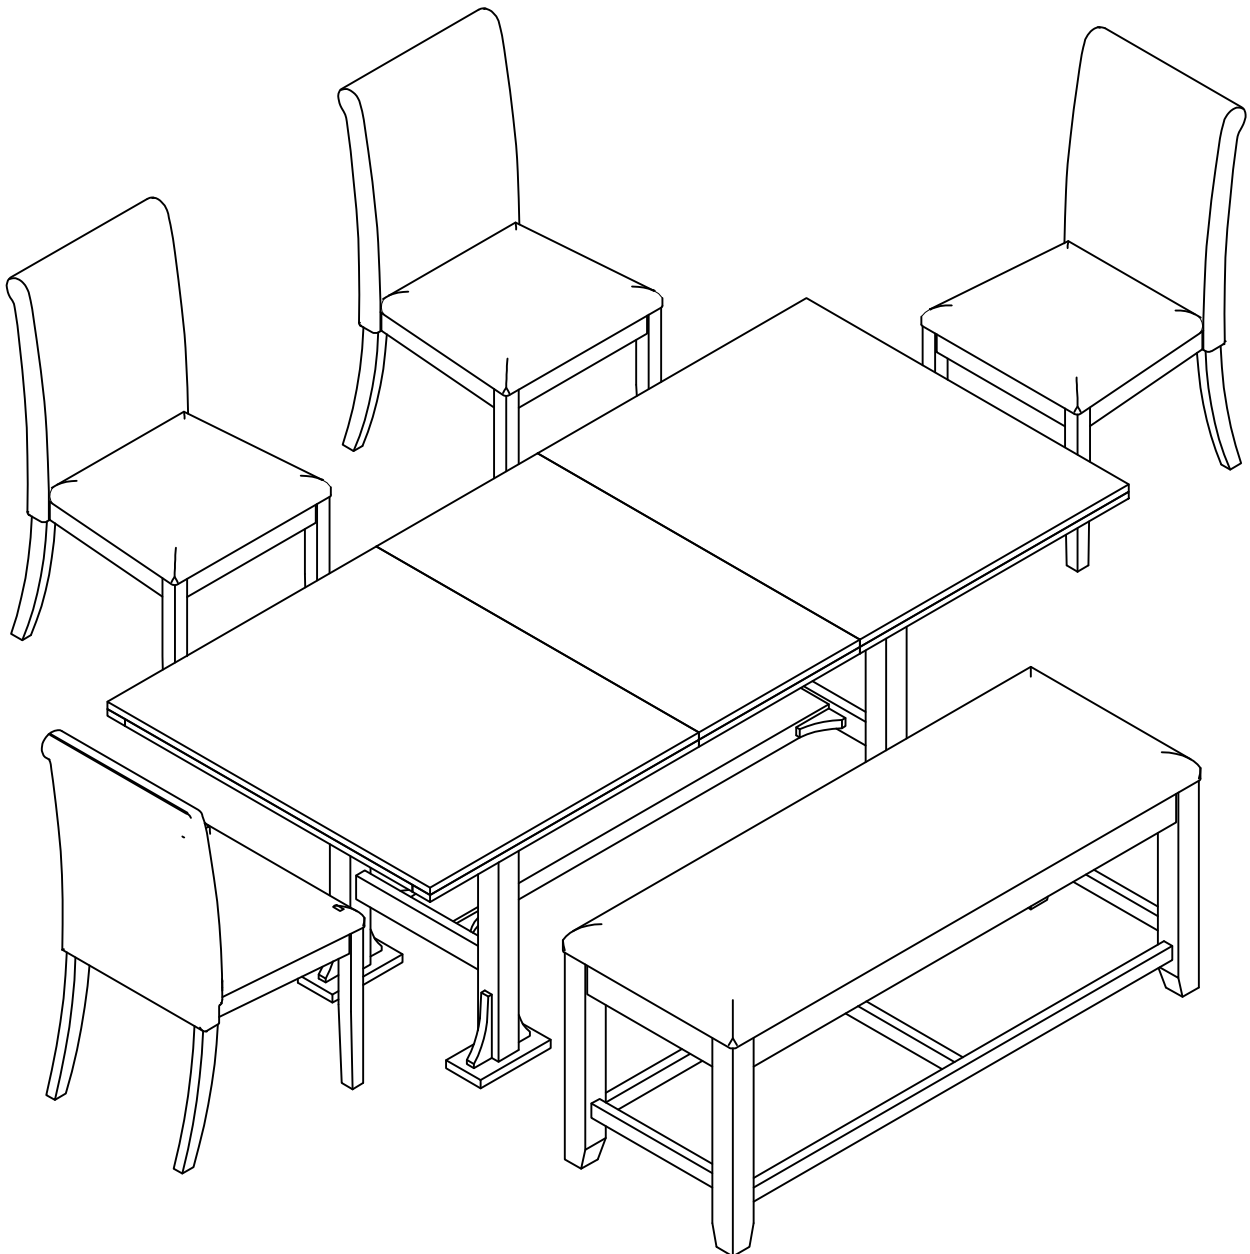

WF323796;WF323797;WF323798

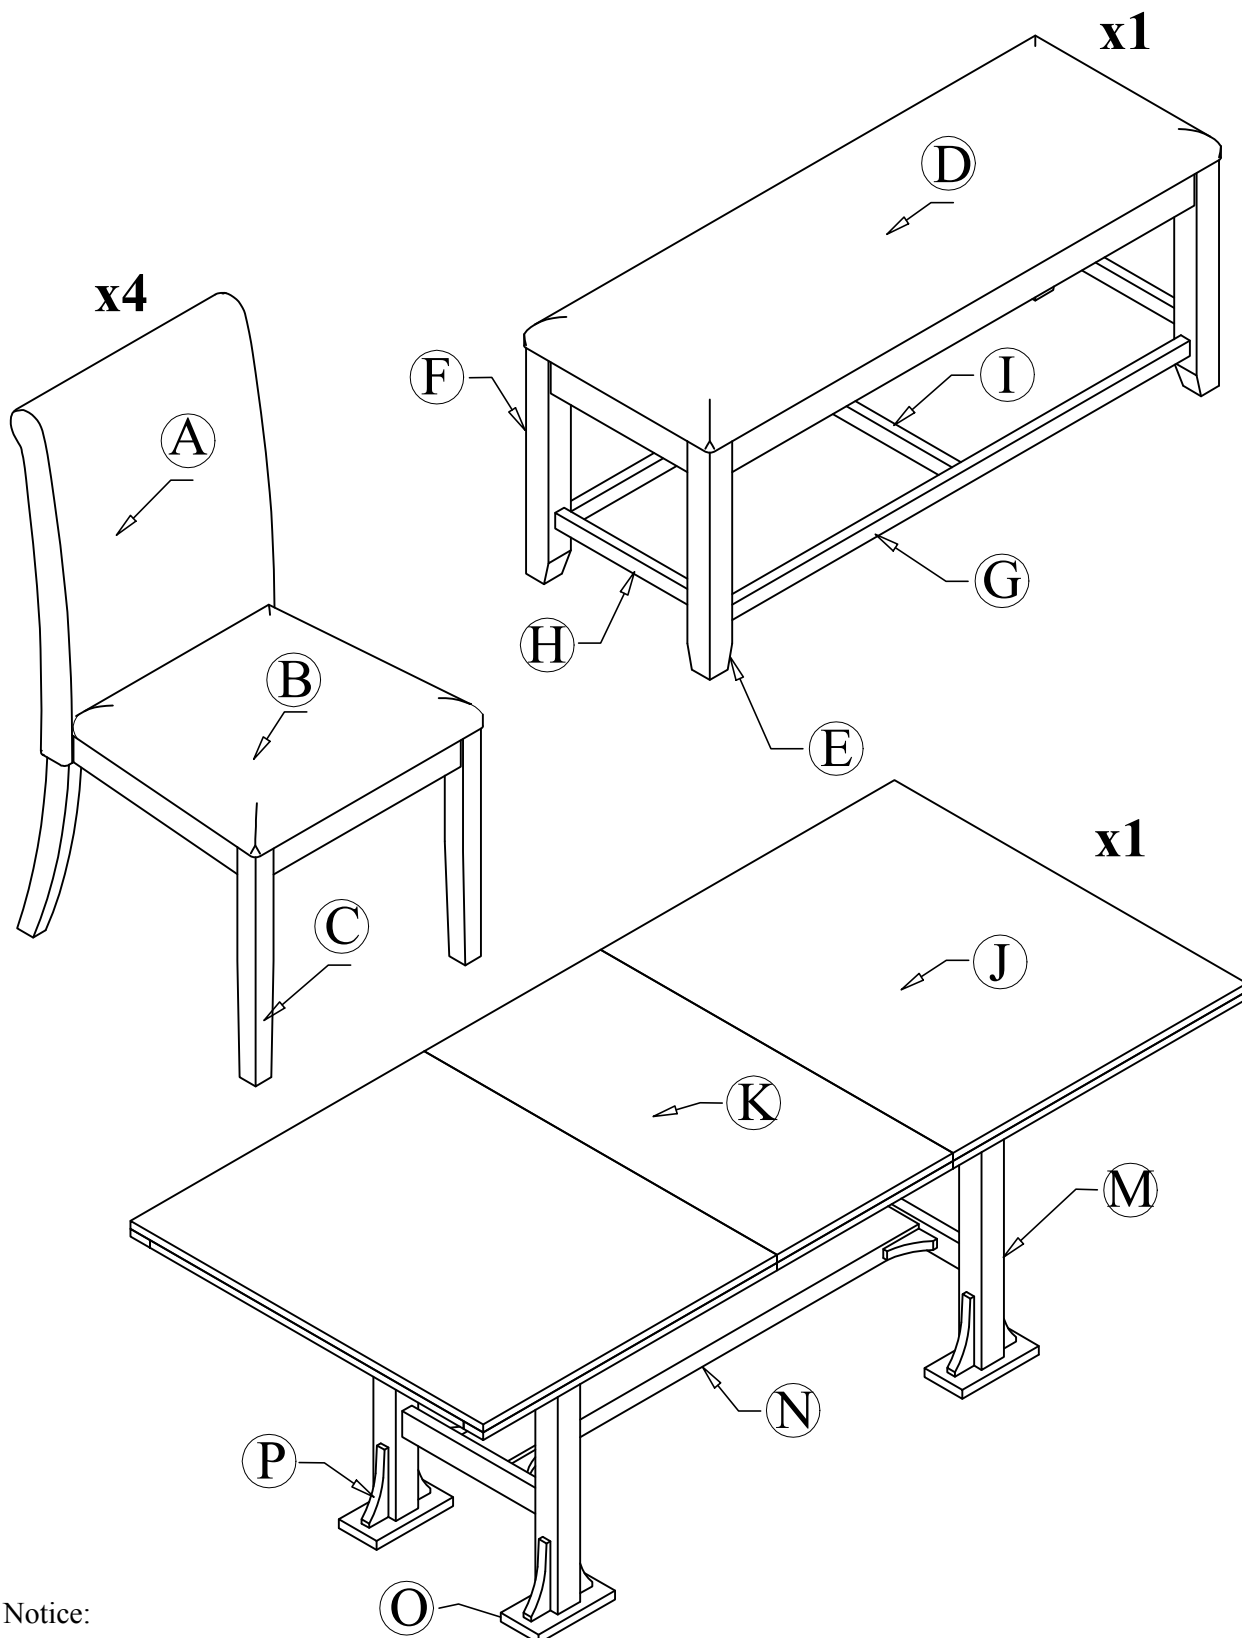


Notice:


1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable , please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note:If one or some screws are fully tightened during assembly , chances are the others will not be aligned with holes . In addition ,all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

CARTON CONTENT:


WF323797:

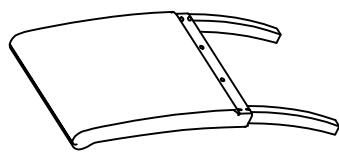


A x4

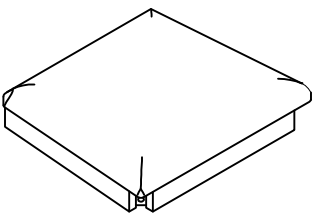


B x4




C x8




WF323798:

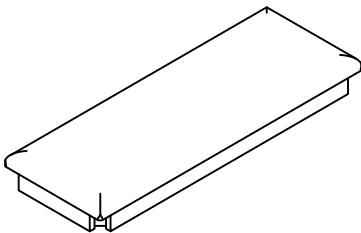


D x1




E x2




F x2




G x2




H x2




I x1




L x2

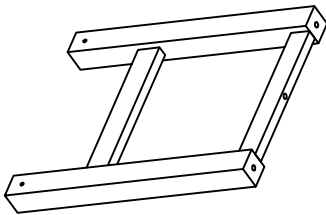


M x2




N x1

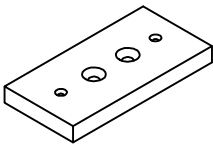


O x4



P x8



WF323796:

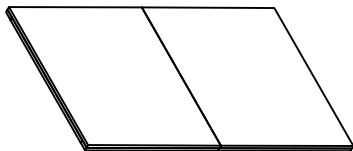

















J x1


















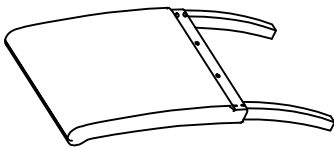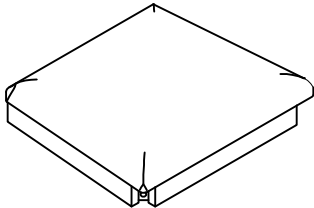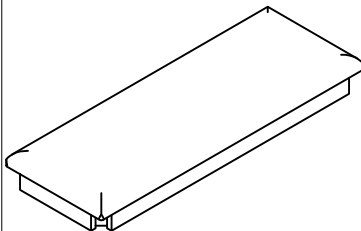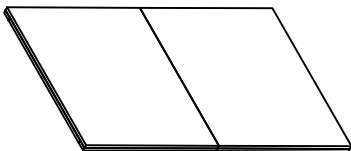



K x1

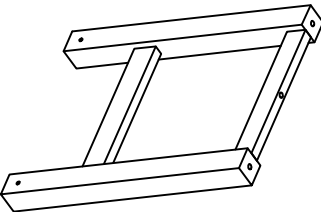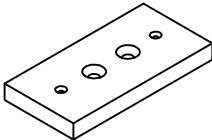

Part List

<div data-bbox="54 165 124 230">A</div> <div data-bbox="76 360 411 506"></div> <div data-bbox="164 611 282 651">(4PCS)</div>	<div data-bbox="426 165 496 230">B</div> <div data-bbox="459 320 774 526"></div> <div data-bbox="534 611 652 651">(4PCS)</div>	<div data-bbox="796 165 866 230">C</div> <div data-bbox="834 439 1128 488"></div> <div data-bbox="904 611 1023 651">(8PCS)</div>	<div data-bbox="1166 165 1236 230">D</div> <div data-bbox="1166 297 1528 526"></div> <div data-bbox="1273 611 1375 651">(1PC)</div>
<div data-bbox="54 660 124 725">E</div> <div data-bbox="113 936 411 996"></div> <div data-bbox="164 1099 282 1140">(2PCS)</div>	<div data-bbox="426 660 496 725">F</div> <div data-bbox="459 913 759 974"></div> <div data-bbox="534 1099 652 1140">(2PCS)</div>	<div data-bbox="796 660 866 725">G</div> <div data-bbox="807 931 1144 958"></div> <div data-bbox="904 1099 1023 1140">(2PCS)</div>	<div data-bbox="1166 660 1236 725">H</div> <div data-bbox="1177 909 1489 958"></div> <div data-bbox="1273 1099 1391 1140">(2PCS)</div>
<div data-bbox="54 1155 124 1220">I</div> <div data-bbox="68 1424 389 1462"></div> <div data-bbox="164 1597 261 1637">(1PC)</div>	<div data-bbox="426 1155 496 1220">J</div> <div data-bbox="434 1370 786 1520"></div> <div data-bbox="534 1597 632 1637">(1PC)</div>	<div data-bbox="796 1155 866 1220">K</div> <div data-bbox="831 1375 1142 1498"></div> <div data-bbox="904 1597 1002 1637">(1PC)</div>	<div data-bbox="1166 1155 1236 1220">L</div> <div data-bbox="1182 1384 1525 1462"></div> <div data-bbox="1273 1597 1391 1637">(2PCS)</div>
<div data-bbox="54 1650 124 1715">M</div> <div data-bbox="81 1792 403 2002"></div> <div data-bbox="164 2076 282 2116">(2PCS)</div>	<div data-bbox="426 1650 496 1715">N</div> <div data-bbox="467 1865 790 1933"></div> <div data-bbox="534 2076 632 2116">(1PC)</div>	<div data-bbox="796 1650 866 1715">O</div> <div data-bbox="852 1848 1064 1986"></div> <div data-bbox="904 2076 1023 2116">(4PCS)</div>	<div data-bbox="1166 1650 1236 1715">P</div> <div data-bbox="1182 1832 1493 1946"></div> <div data-bbox="1273 2076 1391 2116">(8PCS)</div>

CHAIR Hardware			
① x 16 PCS  BOLT Ø1/4"x 50mm	② x 8 PCS  BOLT Ø1/4"x 38mm	③ x 16 PCS  BOLT Ø1/4"x 75mm	④ x 40PCS  FLAT WASHER Ø1/4"x 13mm
⑤ x 40PCS  LOCK WASHER Ø1/4"x 19mm	⑥ x 1 PC  ALLEN KEY 4mm		
BENCH Hardware			
① x 8PCS  BOLT Ø1/4"x 50mm	② x 8PCS  FLAT WASHER Ø1/4"x 13mm	③ x 8PCS  LOCK WASHER Ø1/4"x 19mm	④ x 10PCS  SCREW M4x38mm
⑤ x 1 PC  ALLEN KEY 4mm	 ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)		
TABLE Hardware			
① x 26PCS  BOLT Ø5/16"x 38mm	② x 26PCS  FLAT WASHER Ø5/16"x 13mm	③ x 26PCS  LOCK WASHER Ø5/16"x 19mm	④ x 1PC  ALLEN KEY 4mm
⑤ x 8 PCS  wood dowel Ø8*30mm	⑥ x 8 PCS  SCREW #4x38mm	 ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)	
			5/9

STEP 1:


Ⓑ X 1

Ⓒ X 2

⑤ X 4

④ X 4

① X 4

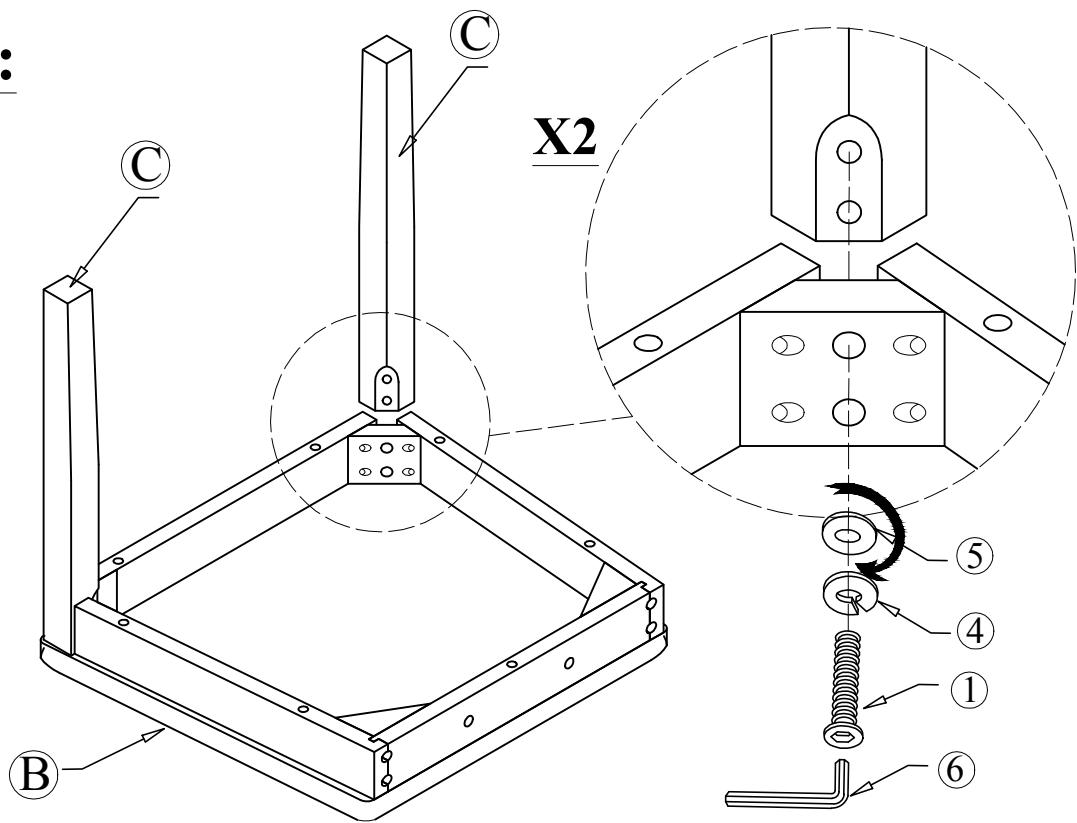

Connect the Front Leg (C) and Cushion Seat (B), tighten Bolt (1), Flat Washer (4), Lock Washer (5) with Allen Key (6)

STEP 2:


Ⓐ X 1

⑤ X 6

④ X 6

③ X 4

② X 2

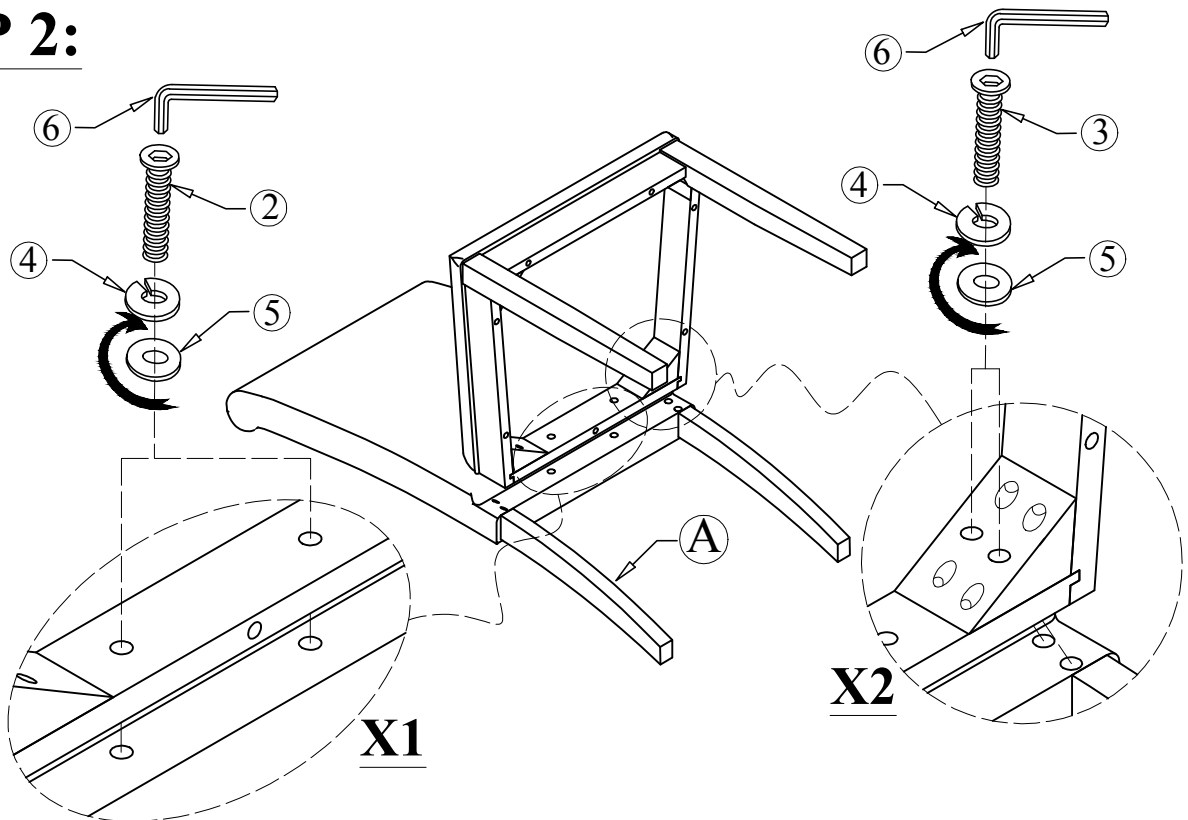

Connect The Part from Step 1 and Chair Back (A), tighten Bolt (2), Bolt (3), Flat Washer (4), Lock Washer (5) with Allen Key (6)

STEP 1:

Ⓓ x 1

Ⓔ x 2


Ⓕ x 2

Ⓗ x 2

③ x 8

② x 8

① x 8

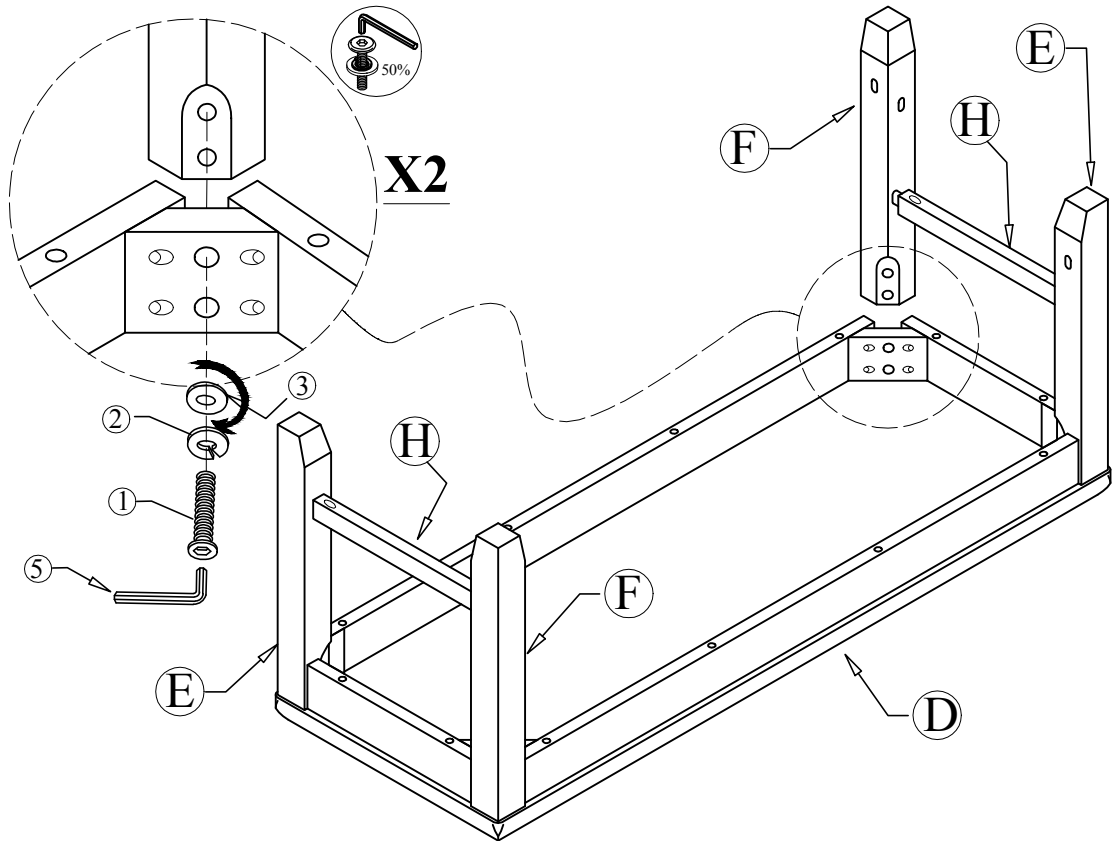


Connect the Front Left Leg (E) and Front Right Leg (F) and Cushion Seat (D) and Side Stretcher (H), tighten Bolt (1), Flat Washer (2), Lock Washer (3) with Allen Key (5)

STEP 2:

Ⓖ x 2

Ⓘ x 1

④ x 10

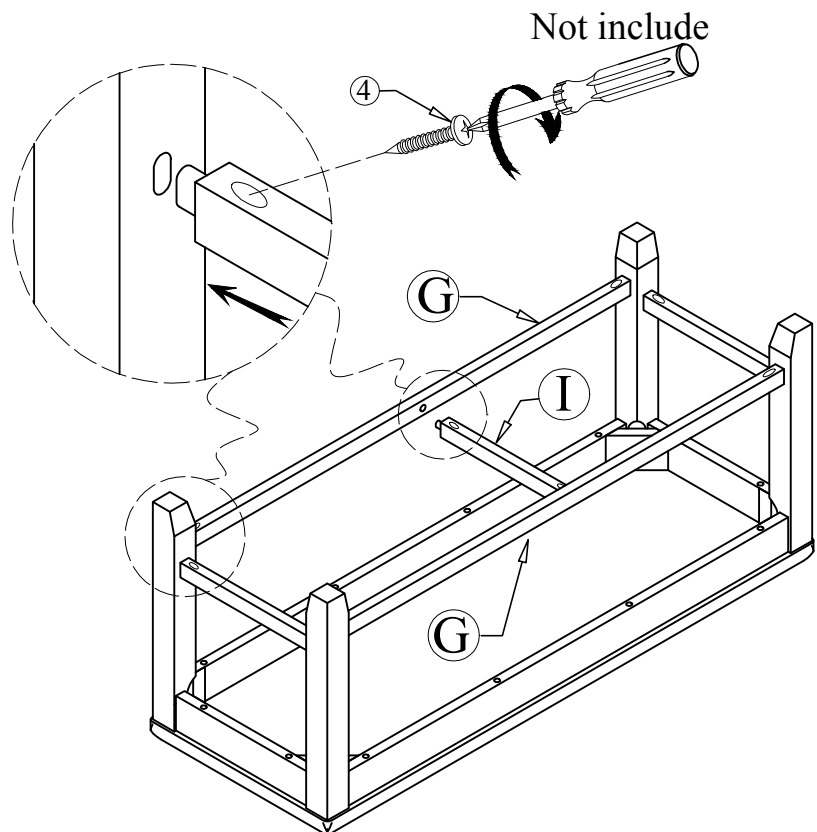

Connect The Part from Step 1 and the Front Stretcher (G) , connect Medium Stretcher (I) to Front Stretcher (G), tighten Screw (4) with assembly tool (not included).

STEP 1:

Ⓛ x 2



Ⓜ x 2

Ⓞ x 4

③ x 14

② x 14

① x 14

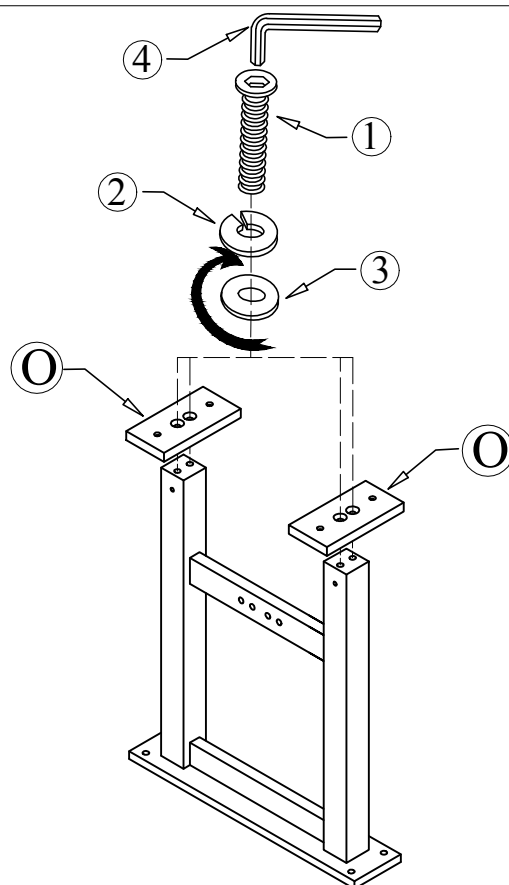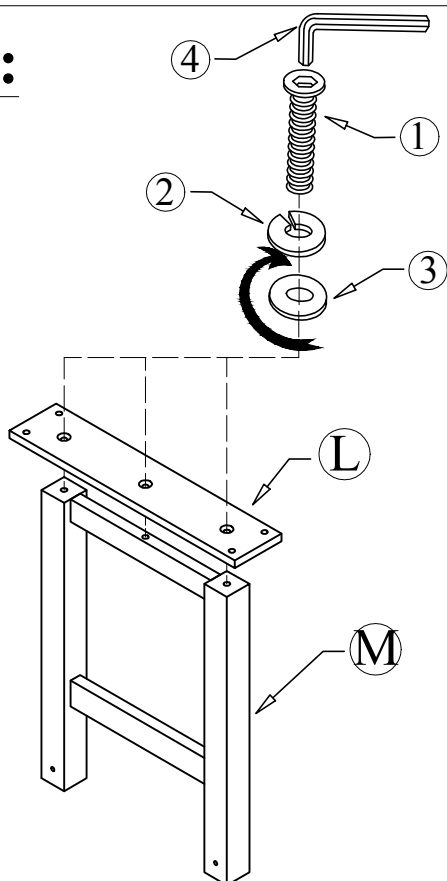

Connect the Panel (L) and Leg (M) and the Support (O), tighten Bolt (1), Flat Washer (2), Lock Washer (3) with Allen Key (4).

STEP 2:

Ⓝ x 1

Ⓟ x 8


③ x 4

② x 4

① x 4

⑥ x 8

⑤ x 8

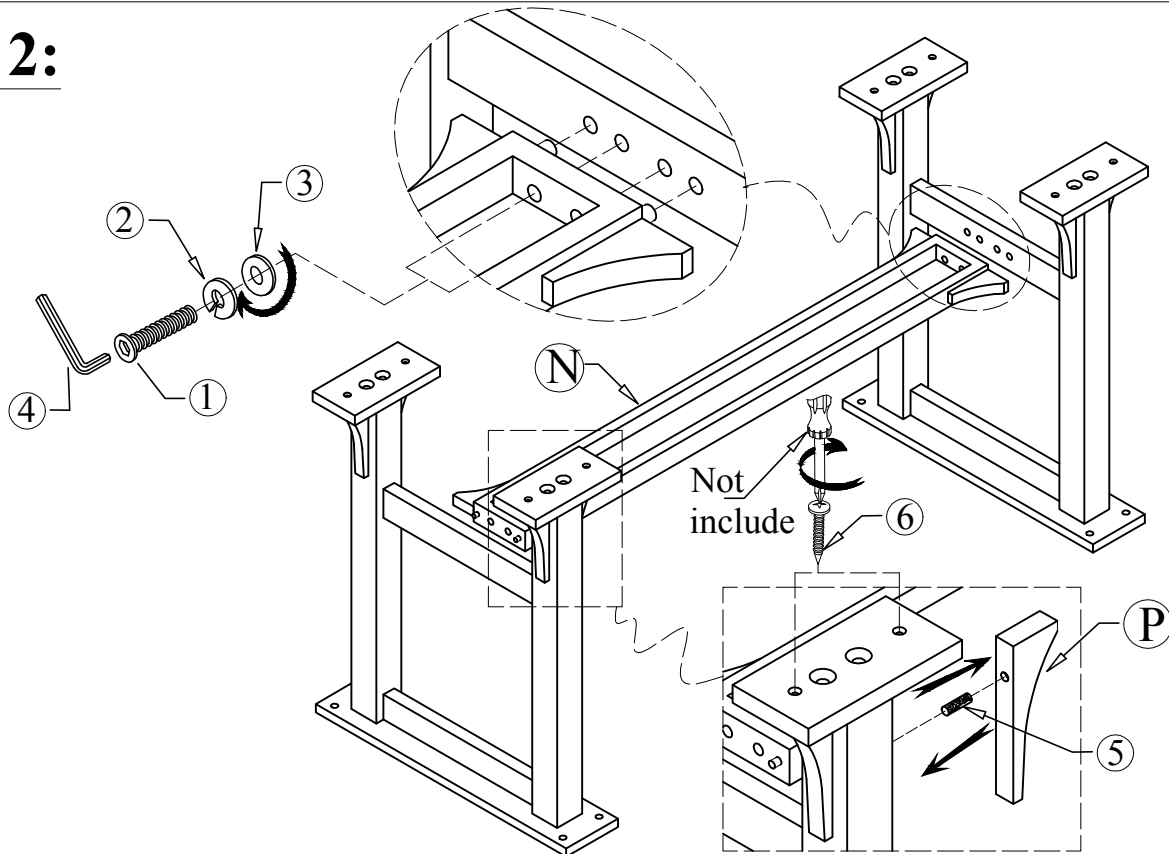

Connect The Part from Step 1 and the Middle Rail (N), tighten Bolt (1), Flat Washer (2), Lock Washer (3) with Allen Key (4). Then connect the Support (P), tighten Wood Dowel (5), Screw (6) with assembly tool (not included).


STEP 3:

ⓐ X 1

ⓑ X 8

ⓒ X 8


ⓓ X 8

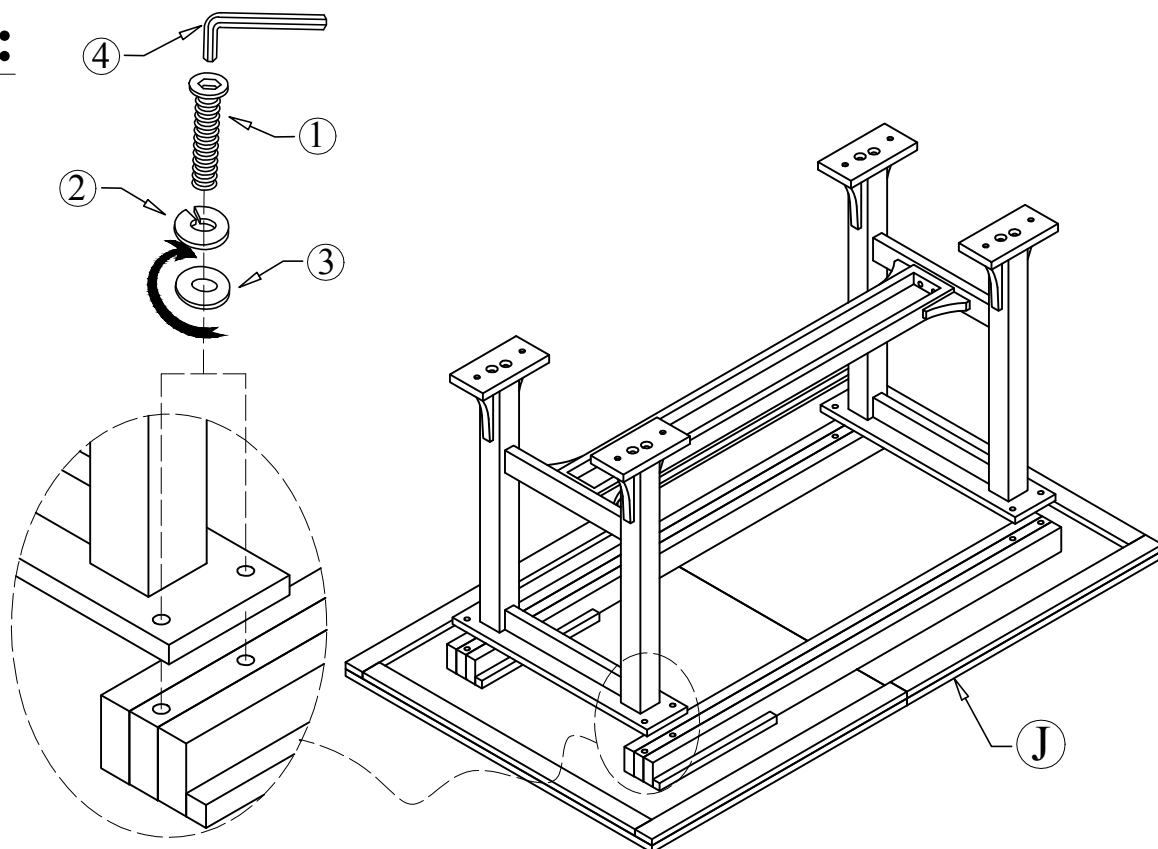

Connect The Part from Step 2 and the Top Panel (J), tighten Bolt (1), Flat Washer (2), Lock Washer (3) with Allen Key (4).

STEP 4:

Ⓚ X 1

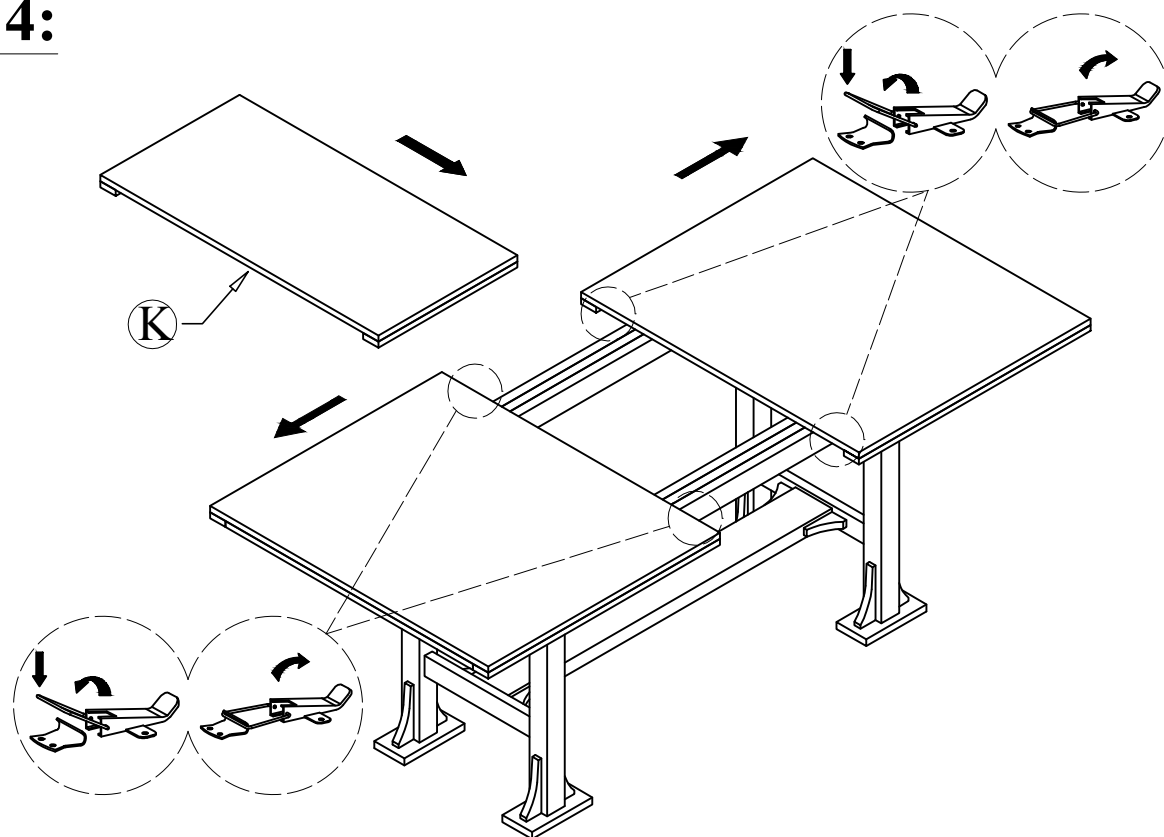

Open the 4 lockers under the Top Panel (J), drag them to side, put the Medium Panel (K) into the middle, fit the position then close the lockers.