

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key, (Not included): Phillips Screwdriver

CARE AND MAINTENANCE


- * Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.

SAFAVIEH

COUTURE

Item ID: SFV4103

Product Dimensions: 22.8"W x 34.3"D x 30"H

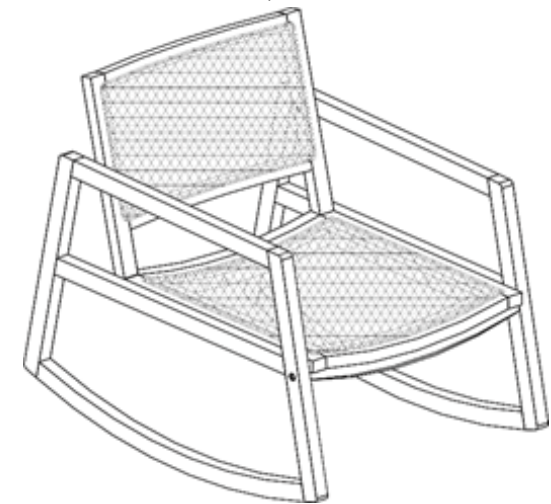


WARNING

Weight capacity: 275LBS

Warning: DO NOT STAND ON CHAIR


Warning: DO NOT OVER TORQUE BOLTS

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	BACK FRAME		1X	Hw1	FLAT WASHER 1x6x16mm		8X
B	SIDE FRAME (L&R)		2X	Hw2	MEDIUM CROSS BOLT M6x50mm		4X
C	SEAT FRAME		1X	Hw3	BIG CROSS BOLT M6x80mm		8X
D	STRETCHER		1X	Hw4	Allen key		1X

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included): Allen Key, (Not included): Phillips Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

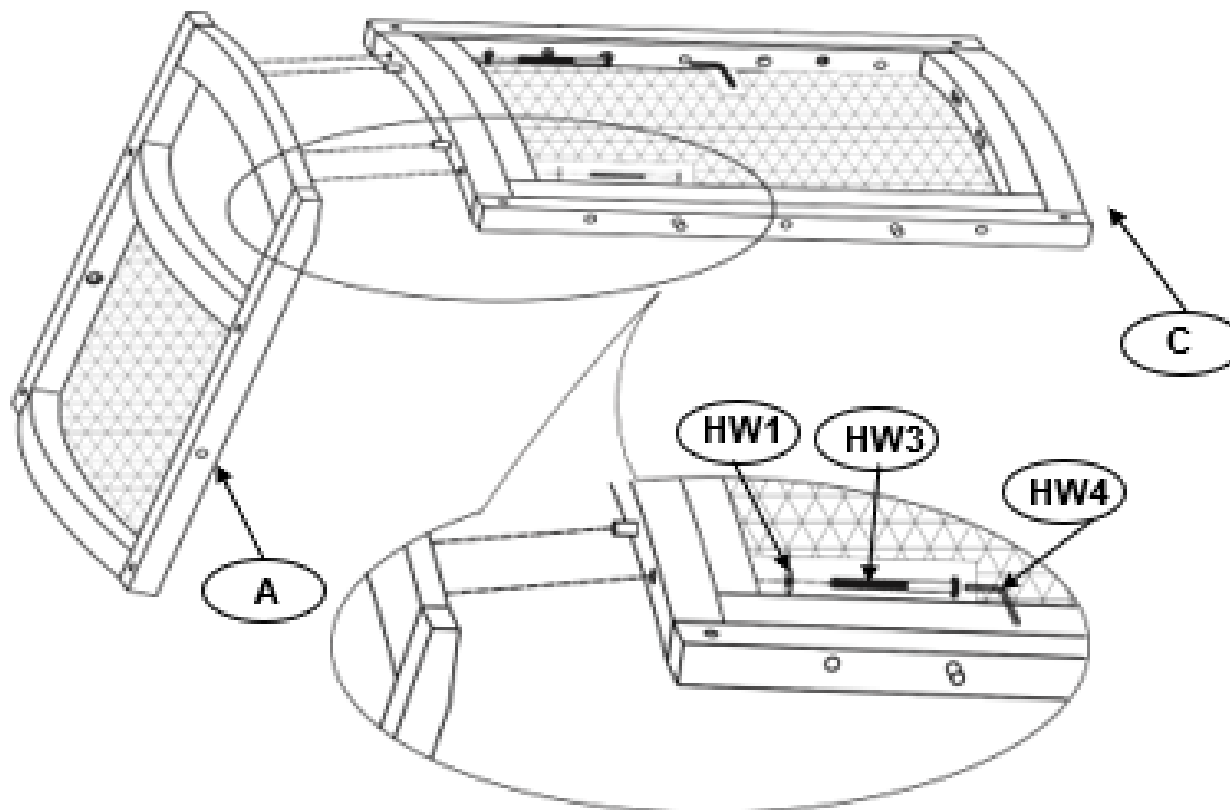

STEP 1: Attach Back Frame (A) and Seat Frame (C) by Flat Washer (HW1) and Big Cross Bolt as shown. Fully tighten by Allen key.

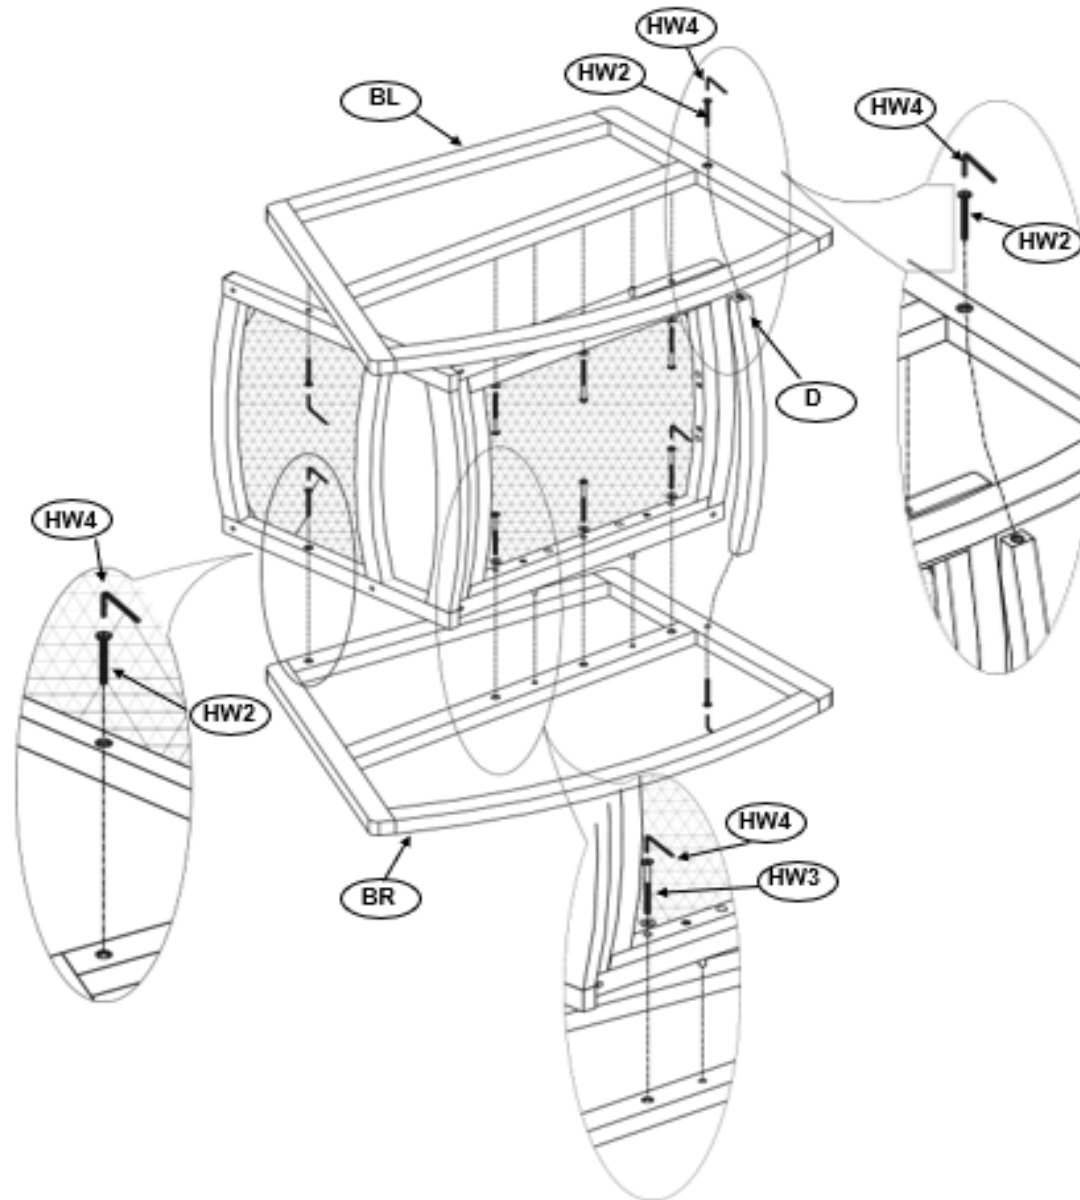

STEP 2: Assemble Side Frame (B- Left and Right) into Back Frame and Seat Frame by Medium Cross Bolt and Big Cross Bolt as shown. At the same time, place Stretcher (D) in Side Frame (BL&BR) by using Medium Cross Bolt (Hw2). Fully tighten by Allen key.