








ASSEMBLY INSTRUCTIONS

MODEL : WM1907A-DC

IMPORTANT NOTE :

- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- * DO NOT TIGHTEN ALL SCREWS UNTIL THE CHAIR IS FULLY SET-UP.

HARDWARE LIST		
A	JCBC M6 x 25mm + S/W M6 + F/W M6 x 13mm 	4PCS
B	JCBC M6 x 45mm + S/W M6 + F/W M6 x 13mm 	4PCS
C	ALLEN KEY M4 (Ball Shape) 	1PC
D	L BRACKET 	4PCS
E	PH CB SCREW M4 x 12mm 	8PCS
F	WOOD DOWEL M8 x 25mm 	2PCS
G	PROTECTIVE DISC 22MM 	4PCS

PART LIST		
1	RIGHT SIDE FRAME	1PC
2	LEFT SIDE FRAME	1PC
3	FRONT STRETCHER	1PC
4	BACK STRETCHER	1PC
5	TOP REST	1PC
6	CUSHION SEAT	1PC


CAUTIONS :

(1) **DO NOT FULLY-TIGHTEN THE NUT OR NUT BOLTS INITIALLY UNTIL ALL NUTS OR BOLT IS READY ASSEMBLED.**

(TO AVOID CAUSING DAMAGES TO THE THREAD, DO NOT OVER-TIGHTEN THE NUTS OR BOLTS.)



(2) **KEEP ALL HARDWARE PART OUT OF REACH OF CHILDREN.**

STEP 1

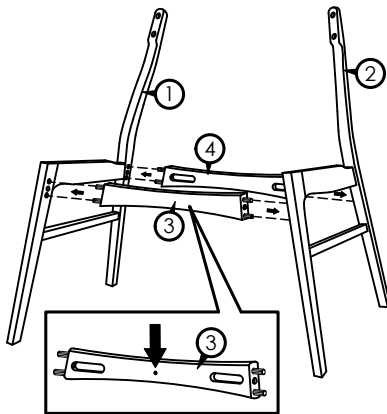



3 Front Stretcher has a small hole for identification.

STEP 2

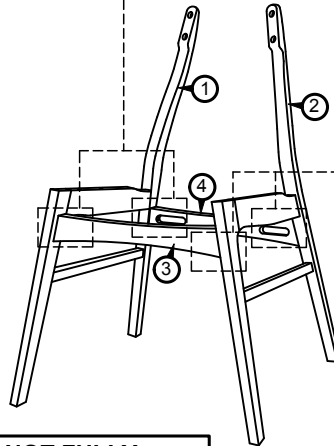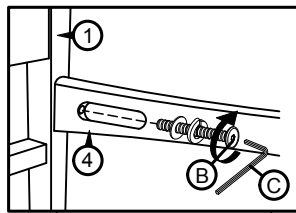



DO NOT FULLY TIGHTEN THE BOLT

STEP 3

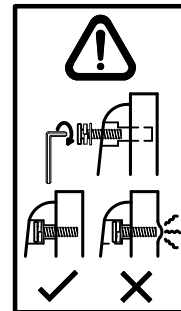
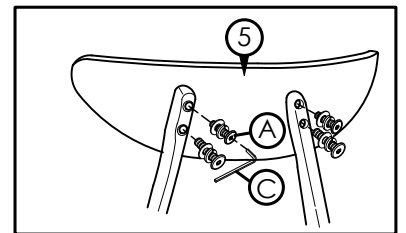


DO NOT FULLY TIGHTEN THE BOLT

STEP 4

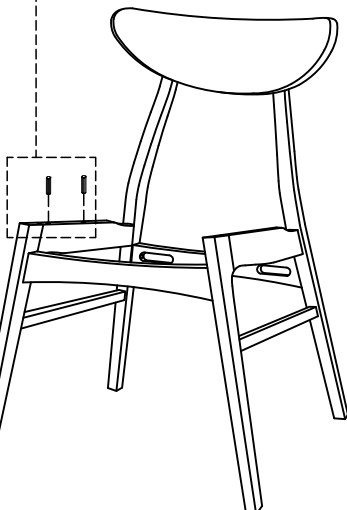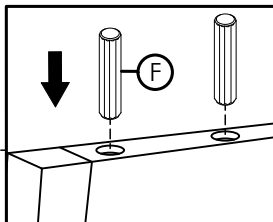


STEP 5

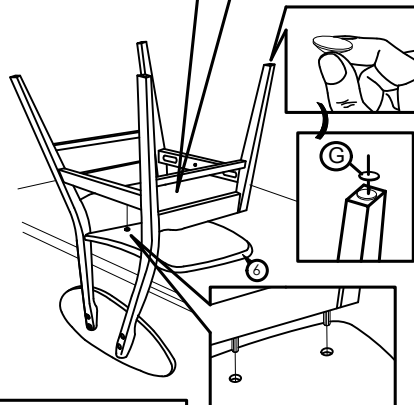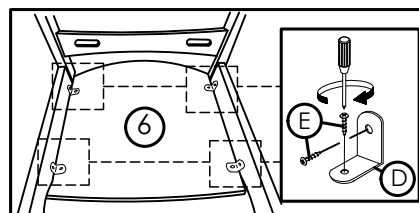

FULLY TIGHTEN ALL BOLTS AND SCREWS

STEP 6

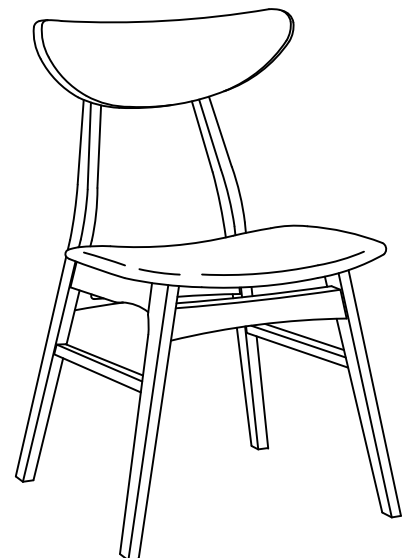

COMPLETED CHAIR ASSEMBLY.

ASSEMBLY INSTRUCTIONS

MODEL : WM2008B-DT

IMPORTANT NOTE :


- * PLACE ALL WOODEN PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- * BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.

HARDWARE LIST

A	JCBB M8 x 60mm + S/W 5/16" + F/W 5/16" x 22mm	10PCS
B	JCBC M6 x 40mm + S/W M6 + F/W M6 x 13mm	10PCS
C	ALLEN KEY M5	1PC
D	ALLEN KEY M4 (Ball Shape)	1PC

PART LIST


1	TABLE TOP	1PC
2	LEG	10PCS
3	BASE FRAME	1PC
4	WEIGHTED PANEL	1PC

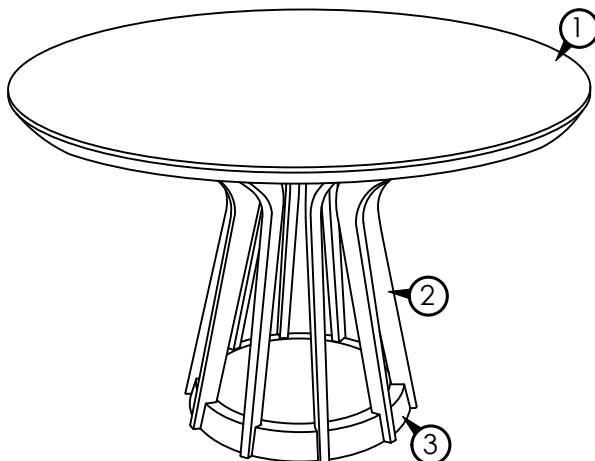


COMPLETED TABLE ASSEMBLY.

STEP 1 BEFORE ASSEMBLY PLEASE LOOSEN THE JCBC M6 x 40MM WITH SPRING AND FLAT WASHER (3PCS) TO TAKE OUT THE WEIGHTED PANEL (4).


*PLEASE KEEP JCBC BOLT TO FIX WEIGHTED PANEL (4) INTO THE BASE FRAME (3) AT STEP 5

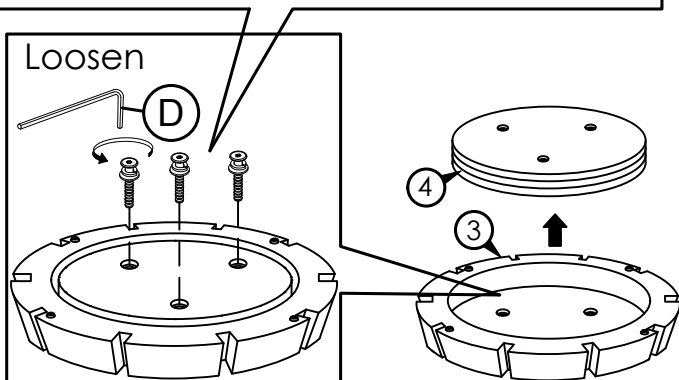


STEP 2

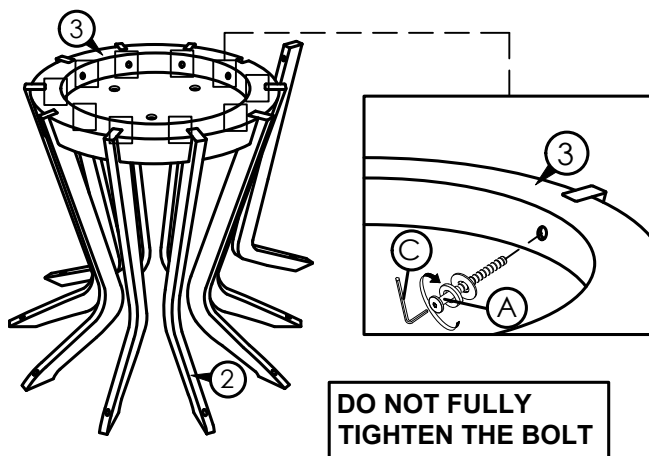

STEP 3

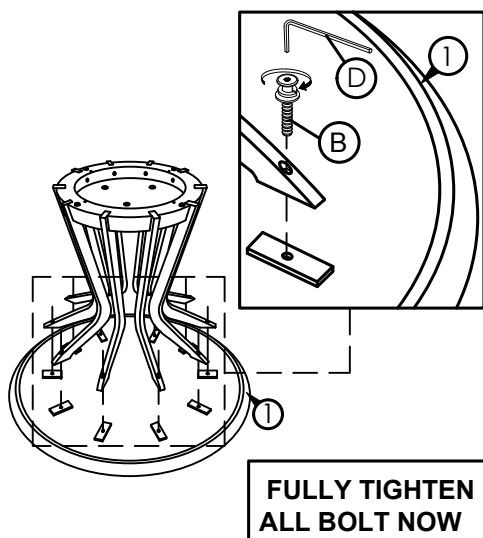

STEP 4

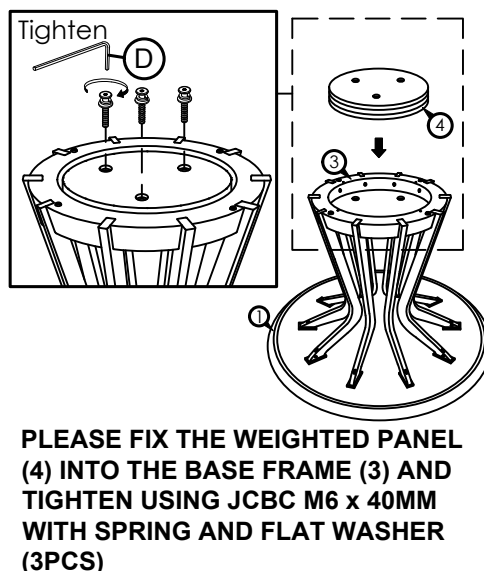

STEP 5

