

ASSEMBLY INSTRUCTIONS

ITEM #: 11046-62-01/02/03

11046-76-01/02/03


CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED



11046-76-01/02/03

CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED

CONRAD UPH BED PARTS & HARDWARE LIST

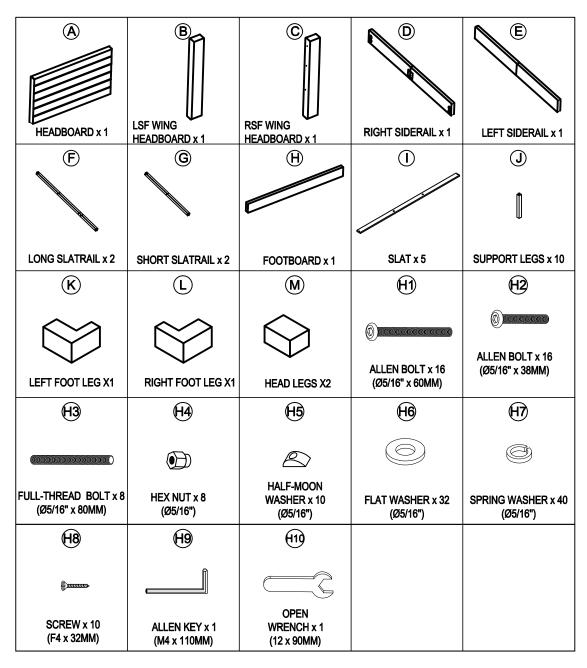

Customer Service Contact Information:

Toll Free Phone Number: 1-844-771-2727 Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com


- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.



11046-76-01/02/03

CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED

CONRAD UPH BED PARTS & HARDWARE LIST

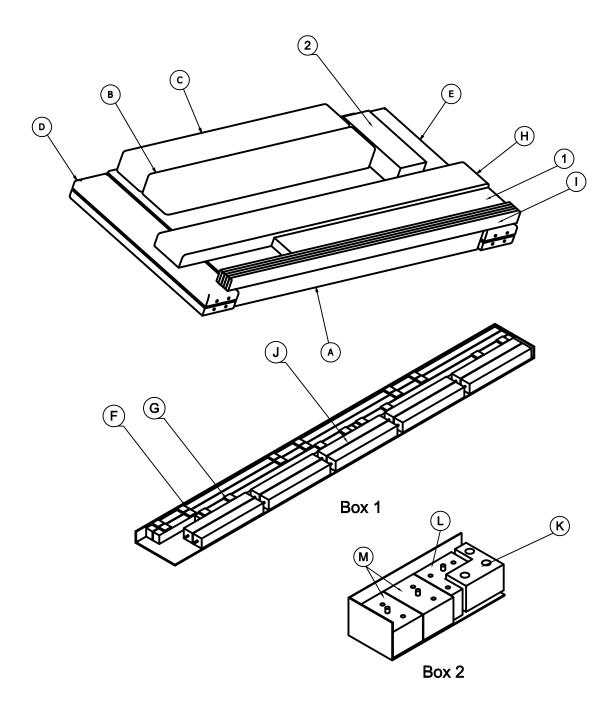

Customer Service Contact Information:

Toll Free Phone Number: 1-844-771-2727 Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- $2.\ REMOVE\ ALL\ COMPONENTS\ FROM\ THE\ PACK\ AND\ PLACE\ ON\ A\ CLEAN,\ SOFT\ SURFACE\ TO\ ASSEMBLE.$
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.






11046-76-01/02/03


CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED

Important: Please place the product on a clean, soft surface for assembly

Step 1

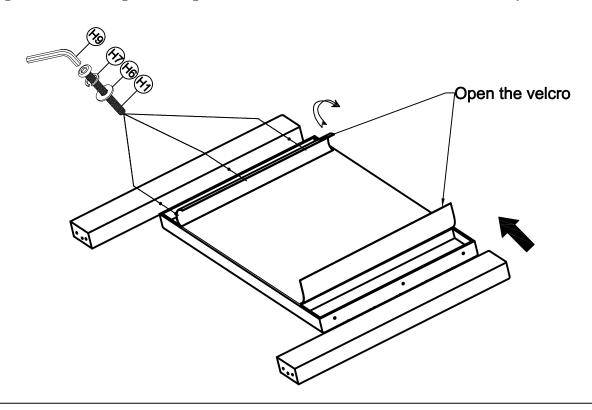

Step 2

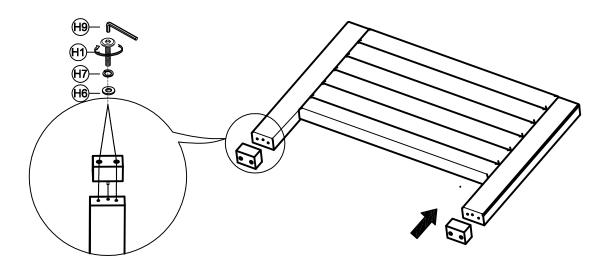

Customer Service Contact Information:

Toll Free Phone Number: 1-844-771-2727 Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- $2.\ REMOVE\ ALL\ COMPONENTS\ FROM\ THE\ PACK\ AND\ PLACE\ ON\ A\ CLEAN,\ SOFT\ SURFACE\ TO\ ASSEMBLE.$
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.







11046-76-01/02/03

CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED



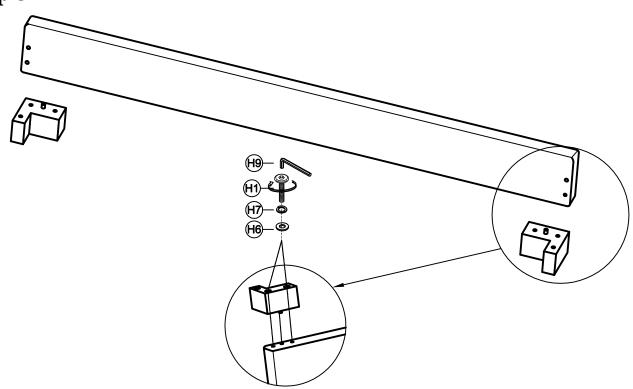

Step 4

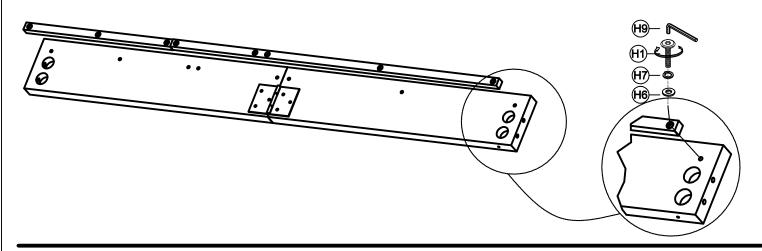

Customer Service Contact Information:

Toll Free Phone Number: 1-844-771-2727 Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.






11046-76-01/02/03

CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED

Step 5

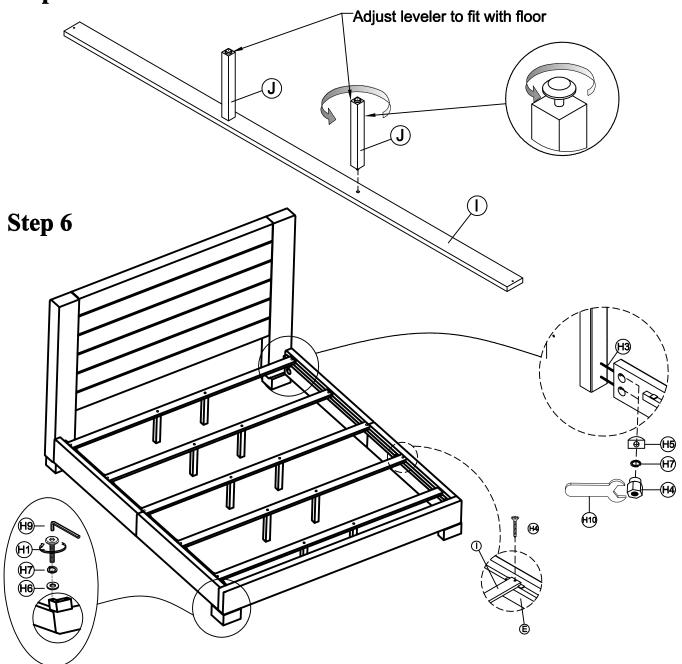

Customer Service Contact Information:

Toll Free Phone Number: 1-844-771-2727 Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com


- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.





11046-76-01/02/03

CONRAD 5/0 UPH QUEEN BED CONRAD 6/6 UPH KING BED

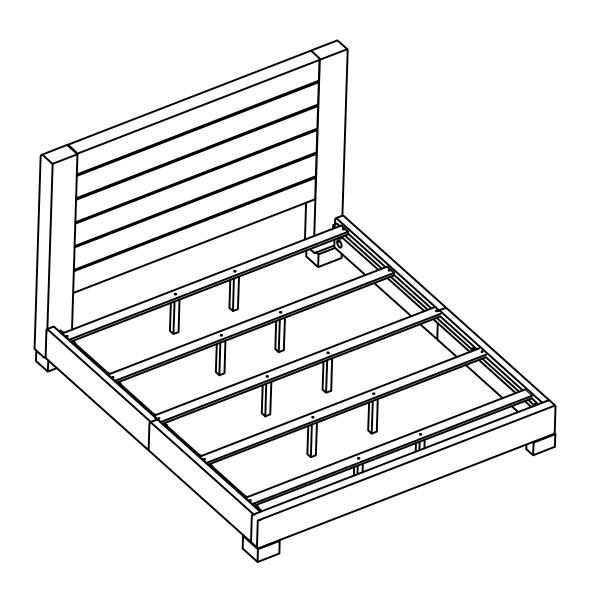

ASSEMBLY COMPLETED

Customer Service Contact Information:
Toll Free Phone Number: 1-844-771-2727
Email: consumercare@lanefurniture.com

Website: www.lanefurniture.com

- 1. CHECK CAREFULLY FOR SMALL PARTS WHICH MAY COME LOOSE DURING SHIPMENT.
- 2. REMOVE ALL COMPONENTS FROM THE PACK AND PLACE ON A CLEAN, SOFT SURFACE TO ASSEMBLE.
- 3. UNITS SHOULD BE ASSEMBLED BY TWO OR MORE PEOPLE.
- 4. DO NOT OVER TIGHTEN SCREW/ BOLTS UNTIL ASSEMBLY IS COMPLETED.
- 5. WITH USE, SCREW/ BOLT MAY BE COME LOOSE & MUST BE TIGHTENED PERIODICALLY.

