


HOW TO INSTALL YOUR STAIR PARTS


SQUARE BALUSTER WITHOUT DOWEL

IMPORTANT - PLEASE READ ALL INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION.


- These instructions are for square wood baluster without dowel installation.
- Refer to your local building code for current regulations.

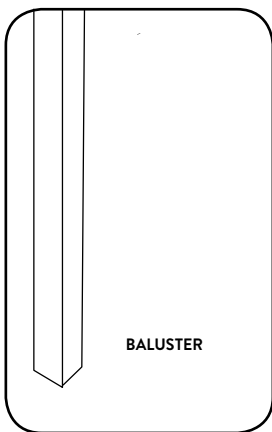

Part included

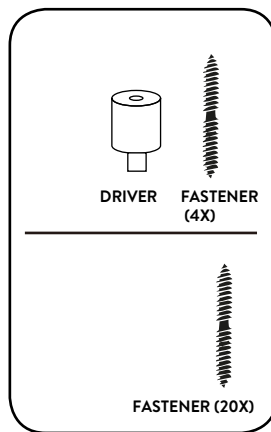


Baluster Fastener Kit
sold separately

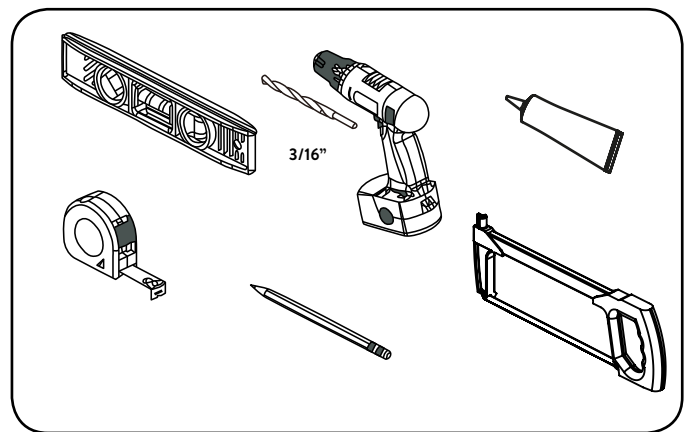


Recommended tools


1. Baluster installation

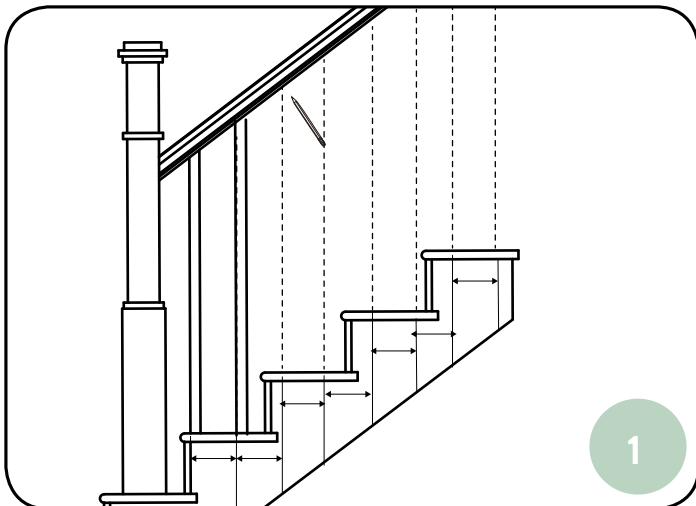


Mark the location of each baluster at an equal distance from one another in accordance with your local building code.

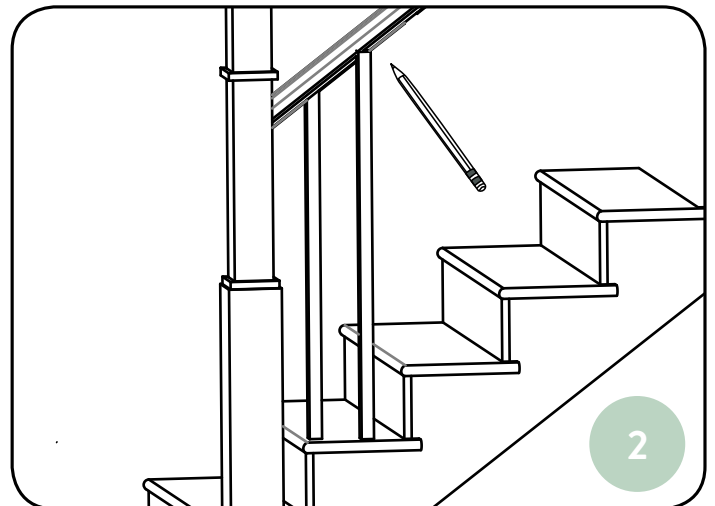


Align a baluster against the handle, for each baluster location, then trace the angle of the handrail on the baluster.

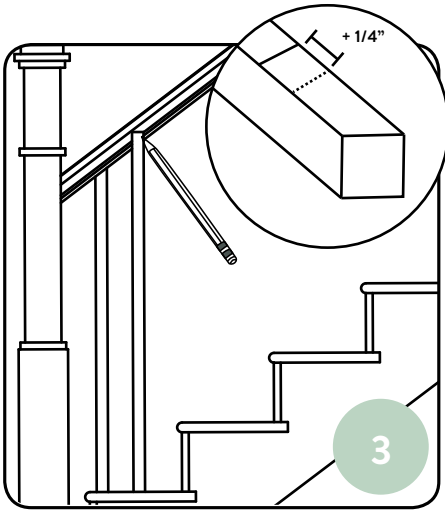


Add a $\frac{1}{4}$ " to your mark to take in consideration the depth of the handrail plow.

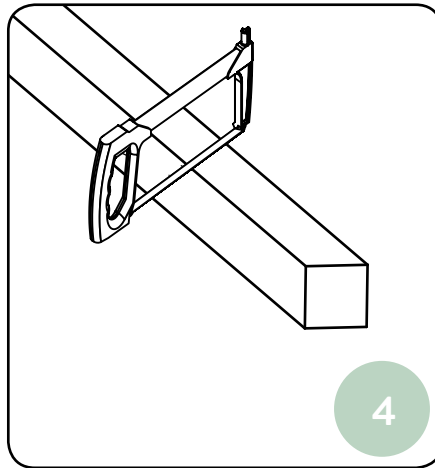


Cut your baluster

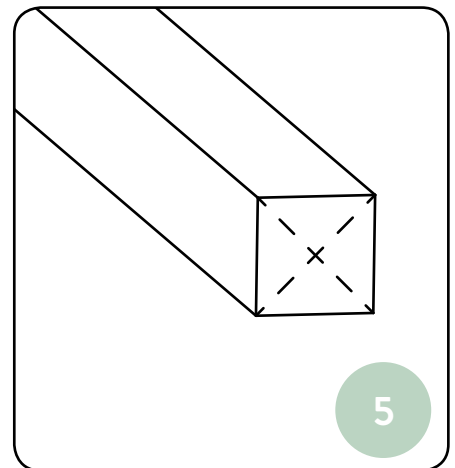


Mark the center of the bottom of the baluster.

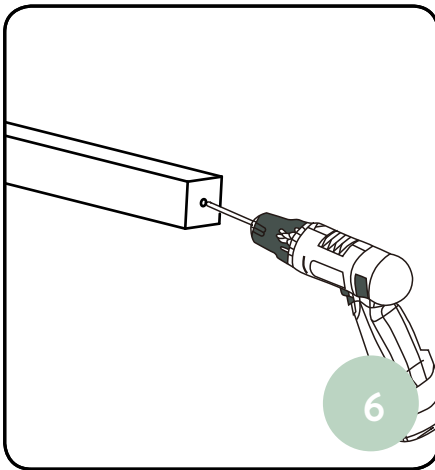


Drill 3/16" pilot hole

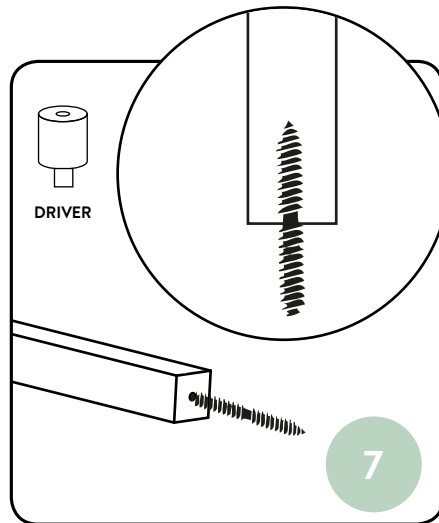


Drive the fastener halfway in the baluster.

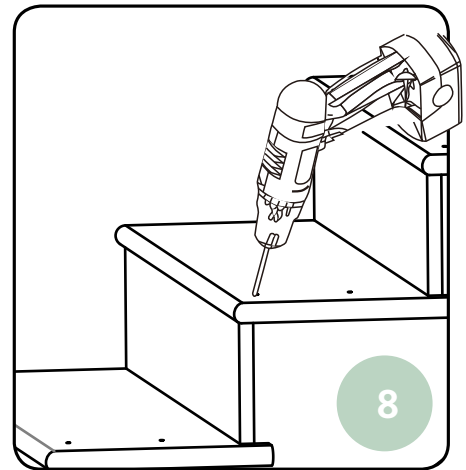


Drill 3/16" pilot holes at each mark, 1" deep.

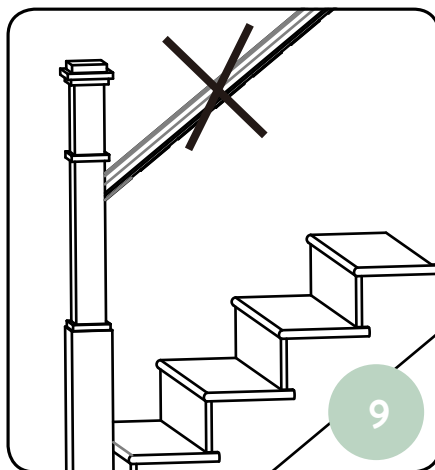


Remove your handrail

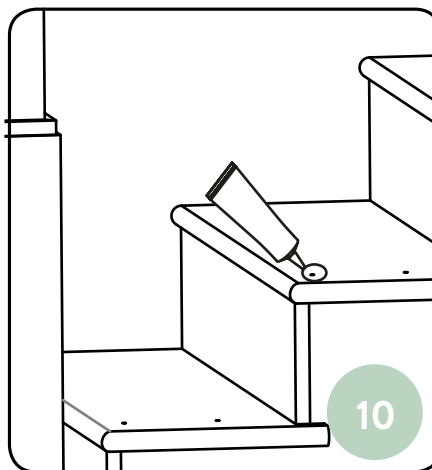


Add glue around each pilot hole.

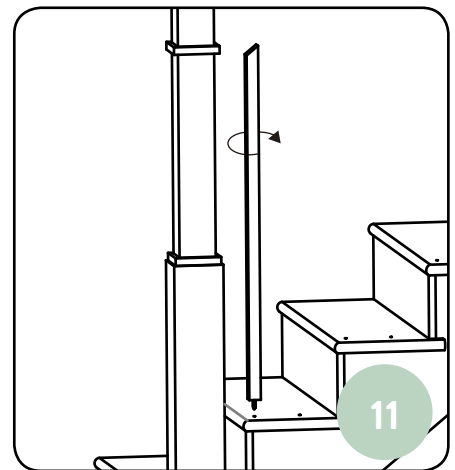


Drive baluster in place.

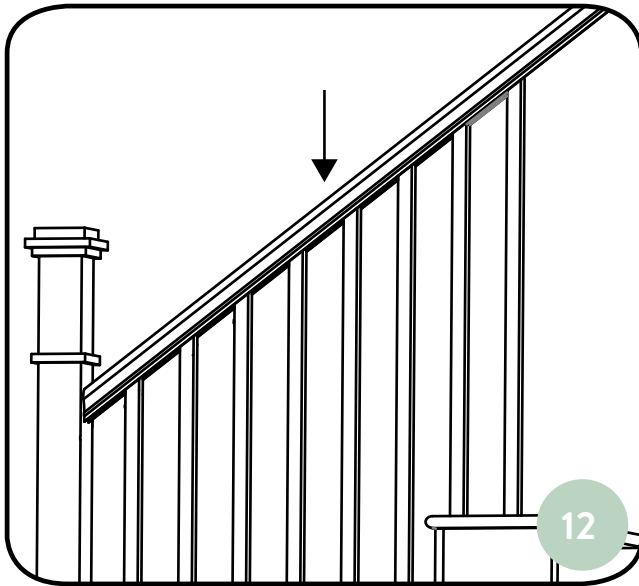


Position the handrail back and permanently attached to the newel post.

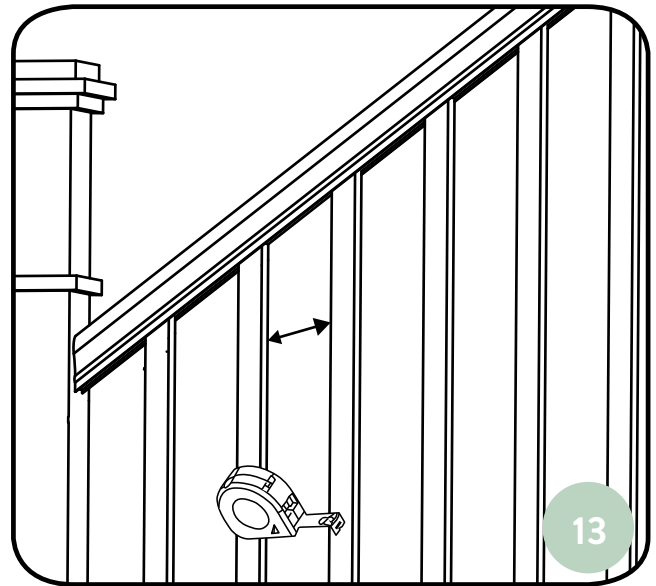

Measure the distance between each baluster at the base.

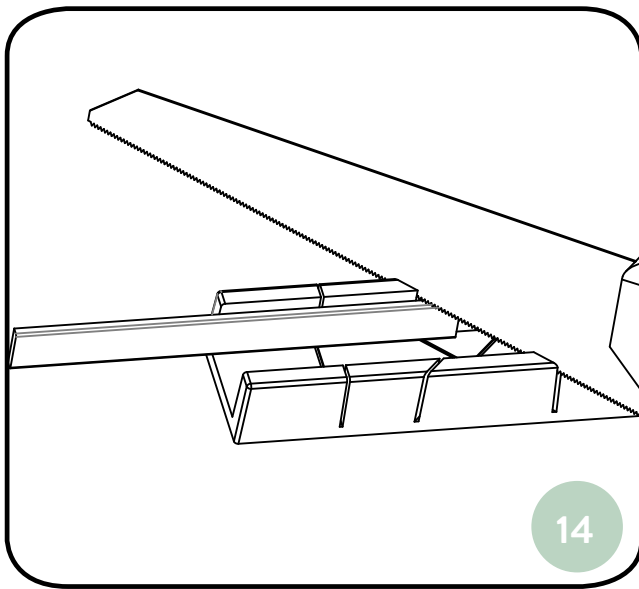

Mark and cut the fillet.

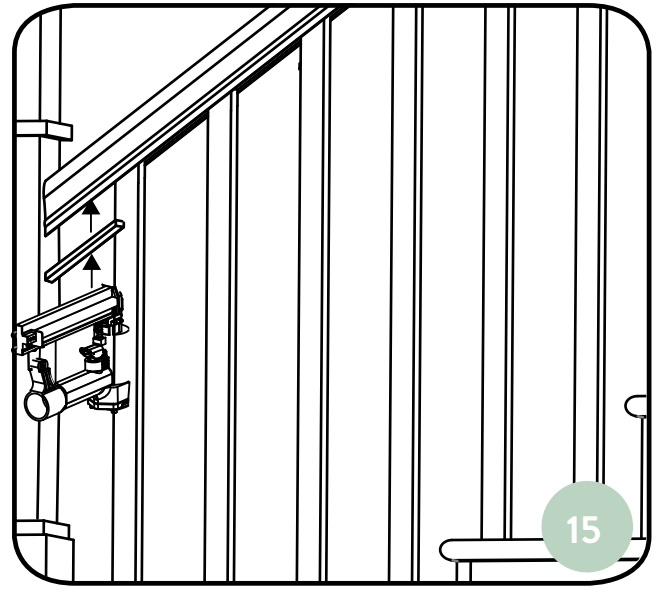

Apply wood glue and secure the fillet in place using finish nails.

DO NOT RETURN TO RETAILER

If you have any questions, please contact our customer service at:

info@colonialelegance.com

or call toll free at: 1-800-361-2030