

Hall Tree

Assembly Instructions - Please keep for future reference


SKU: N721P415880/N721P415881



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

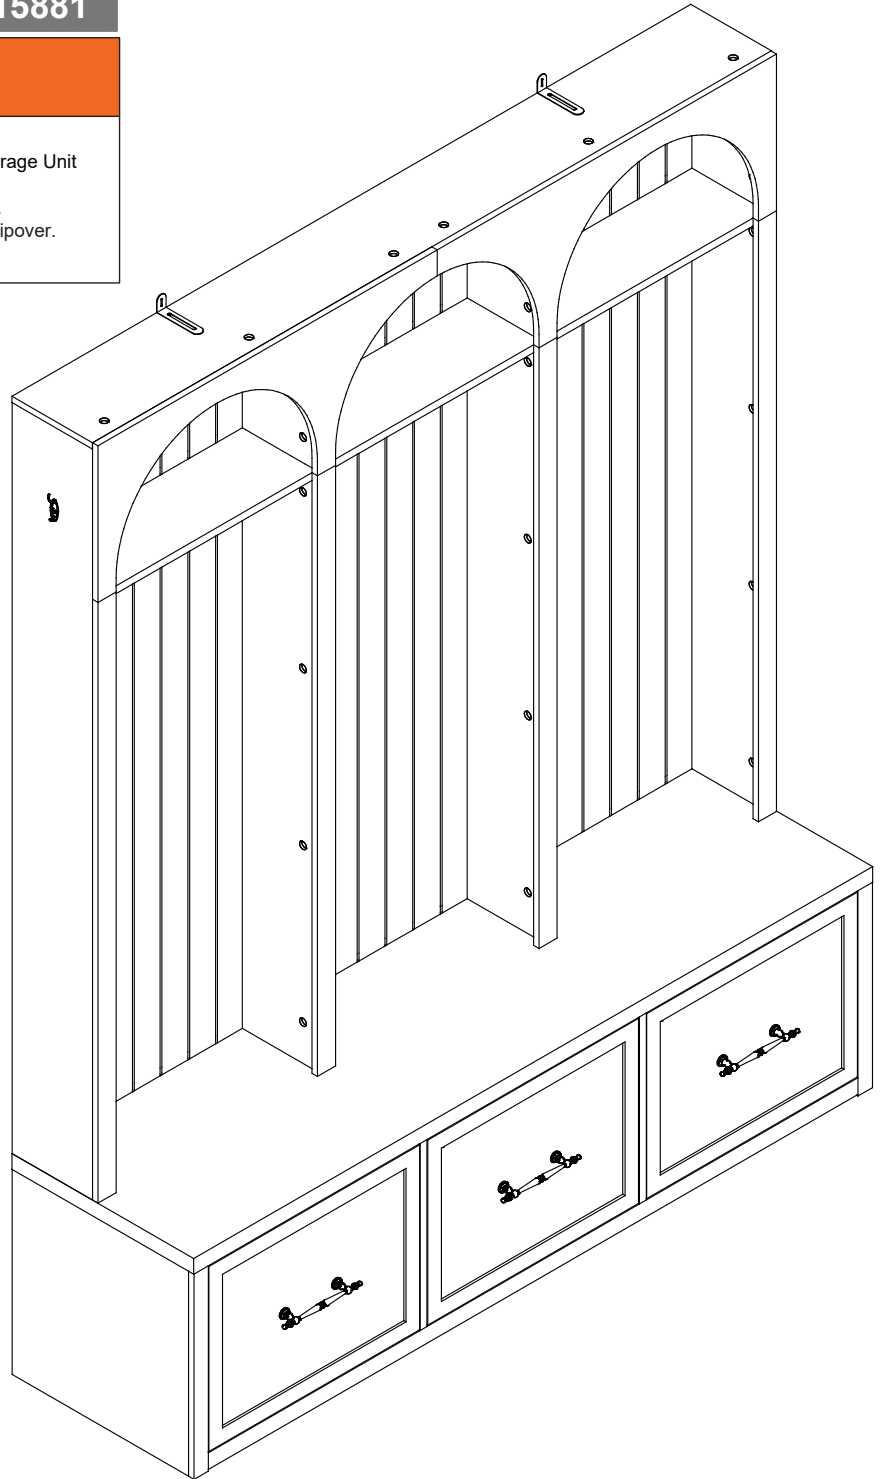

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-74.8inch

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions









To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

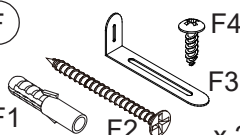A  Cam Bolt x 110+2	B  6*40mm Dowel x 60+2	C  Cam lock x 110+2	D  Slide x6
E  3*12mm Screw x 24+2	F  F1 F2 F3 F4 x 2set	G  4*40mm Screw x 12+1	H  4*30mm Screw x 12+1
I  3*12mm Hook x 8set	J  3.5*16mmx 36set	K  4*16mm Handle x 3set	L  Light wood color x 28
M  Allen key x 1	N  4*25mm Screw x 4	O  Perfect fit x 28	

Tools required Not Included



Phillips screwdriver
(medium & large)

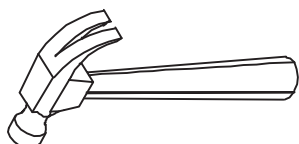


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

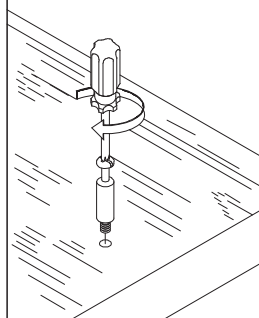

Step 2

Push the male camlock into the entry hole.

2

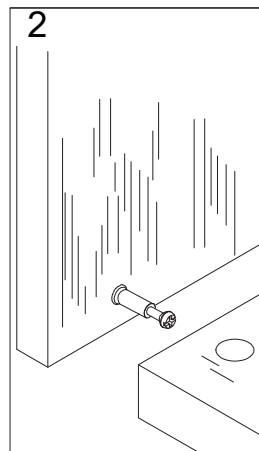


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

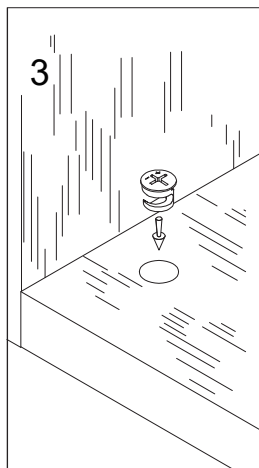


Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.

4




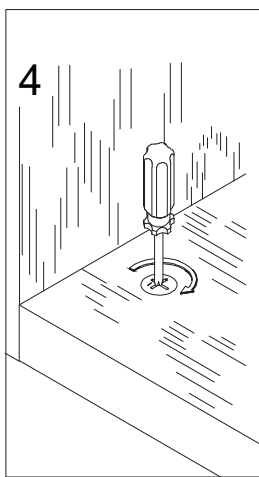







Assembly Instructions



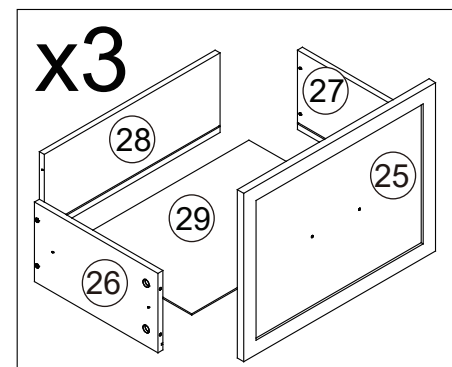
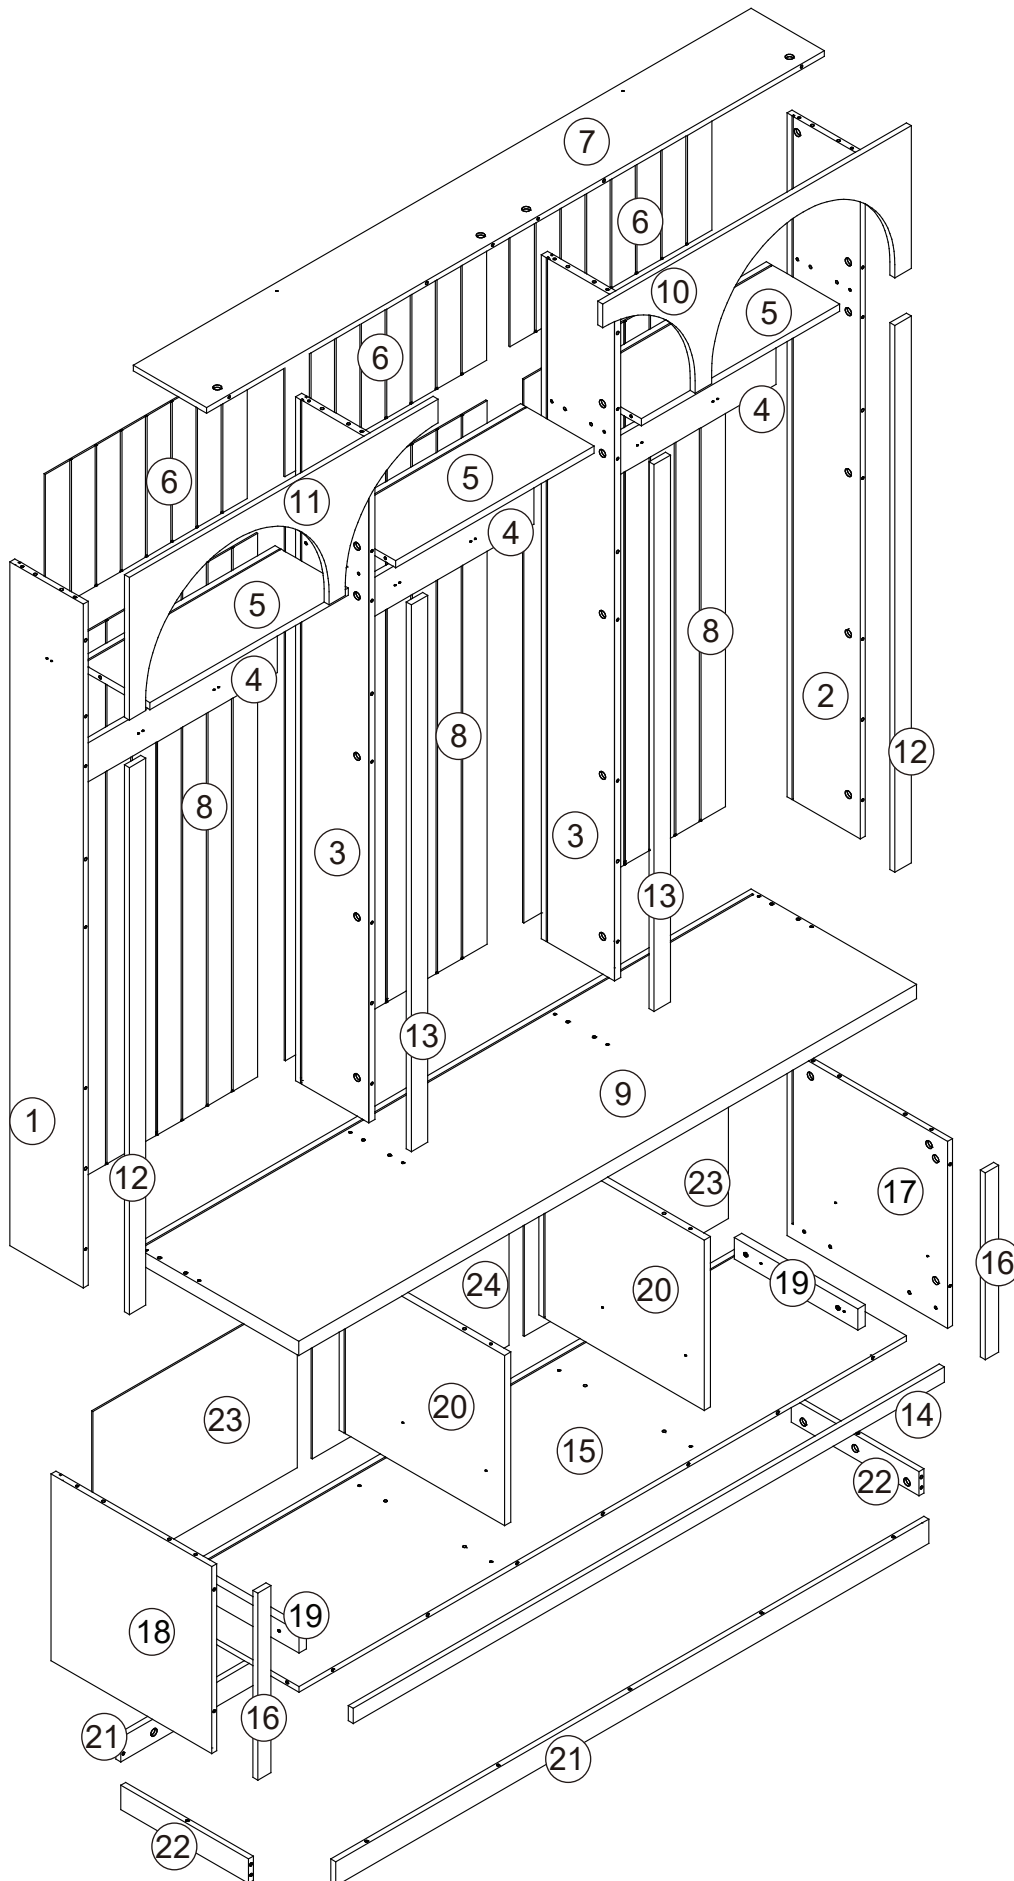





PART LIST

N721P415880

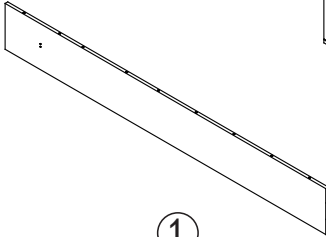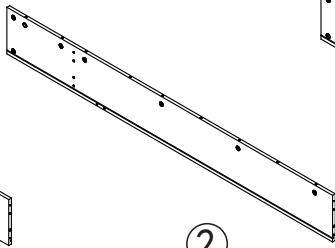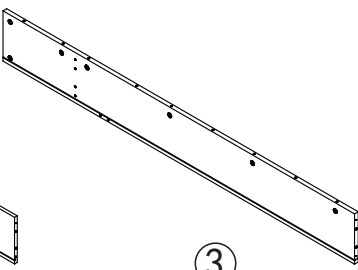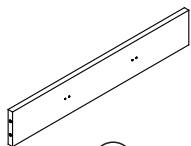			
① x1 1440x188x12mm	② x1 1440x188x12mm	③ x2 1440x188x15mm	④ x3 482x82x12mm









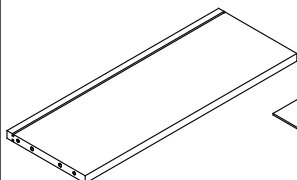
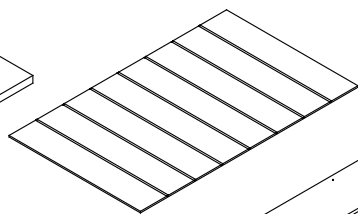
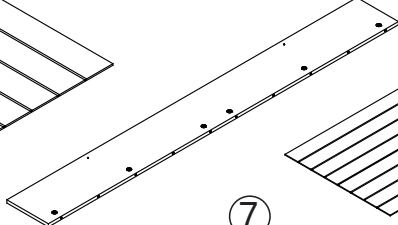
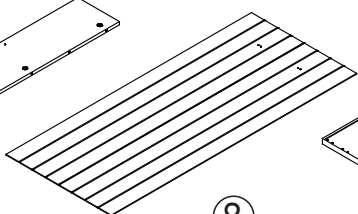
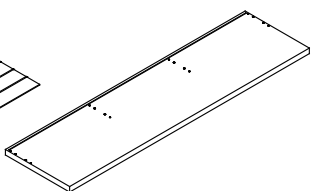
				
⑤ x3 482x188x15mm	⑥ x3 490x296x3mm	⑦ x1 1501x188x12mm	⑧ x3 1144x490x3mm	⑨ x1 1501x400x30mm

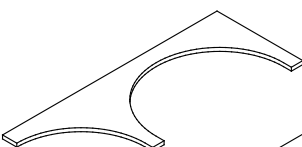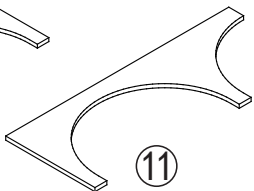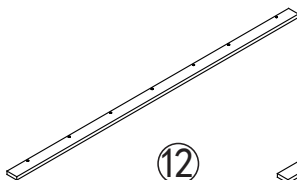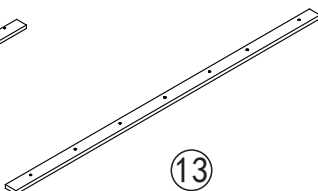			
⑩ x1 750x300x12mm	⑪ x1 750x300x12mm	⑫ x2 1151x40x12mm	⑬ x2 1151x40x12mm

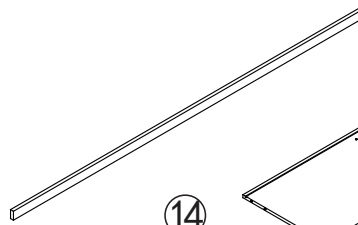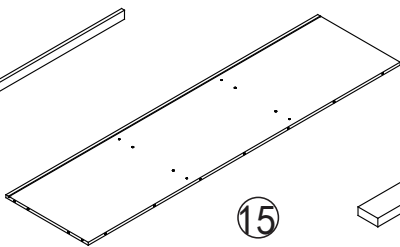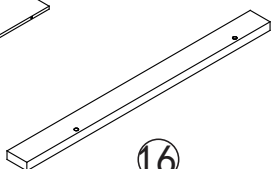		
⑭ x1 1438x32x12mm	⑮ x1 1477x388x12mm	⑯ x1 391x32x12mm


PART LIST

N721P415881

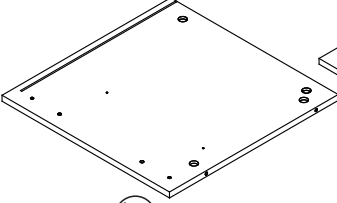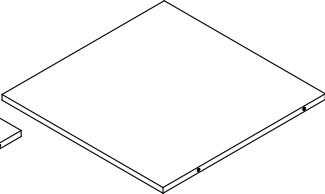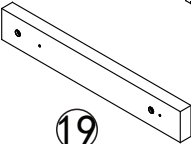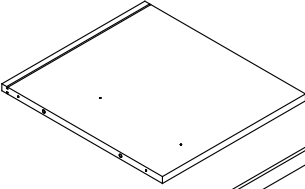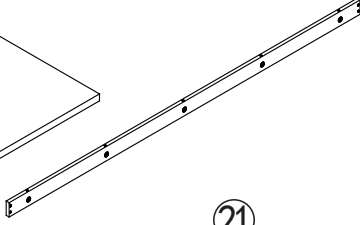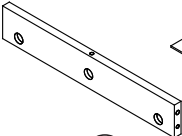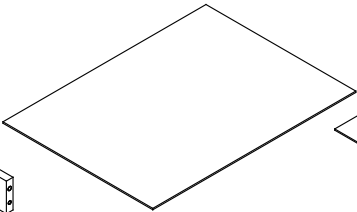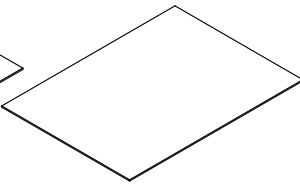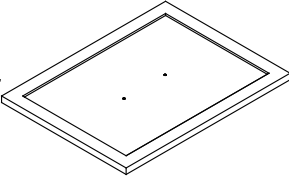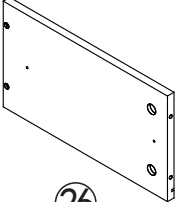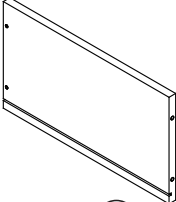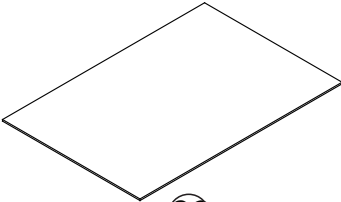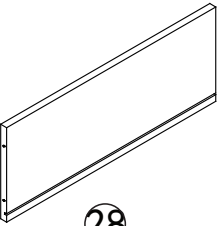
				
①⑦ x1 391x388x12mm	①⑧ x1 391x388x12mm	①⑨ x2 300x45x18mm	②⑩ x2 400x358x15mm	②① x2 1441x51x12mm
				
②② x2 310x51x12mm	②③ x2 496x366x3mm	②④ x1 478x366x3mm	②⑤ x3 466x354x17mm	②⑥ x3 300x167x12mm
				
②⑦ x3 300x167x12mm	②⑨ x3 435x296x3mm	②⑧ x3 427x167x12mm		

Assembly Instructions

Step 1

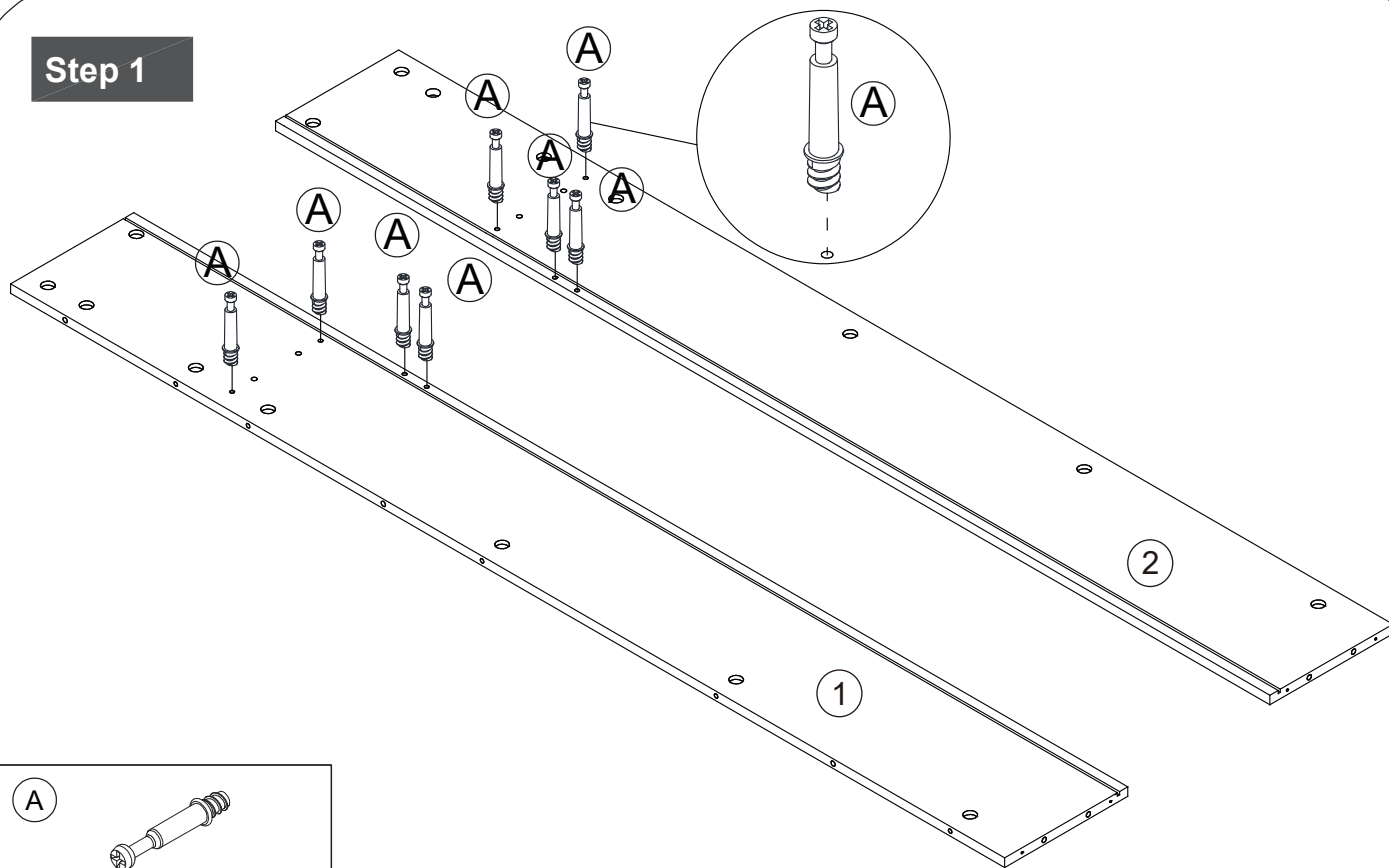


A




Cam Bolt x 8

Step 2

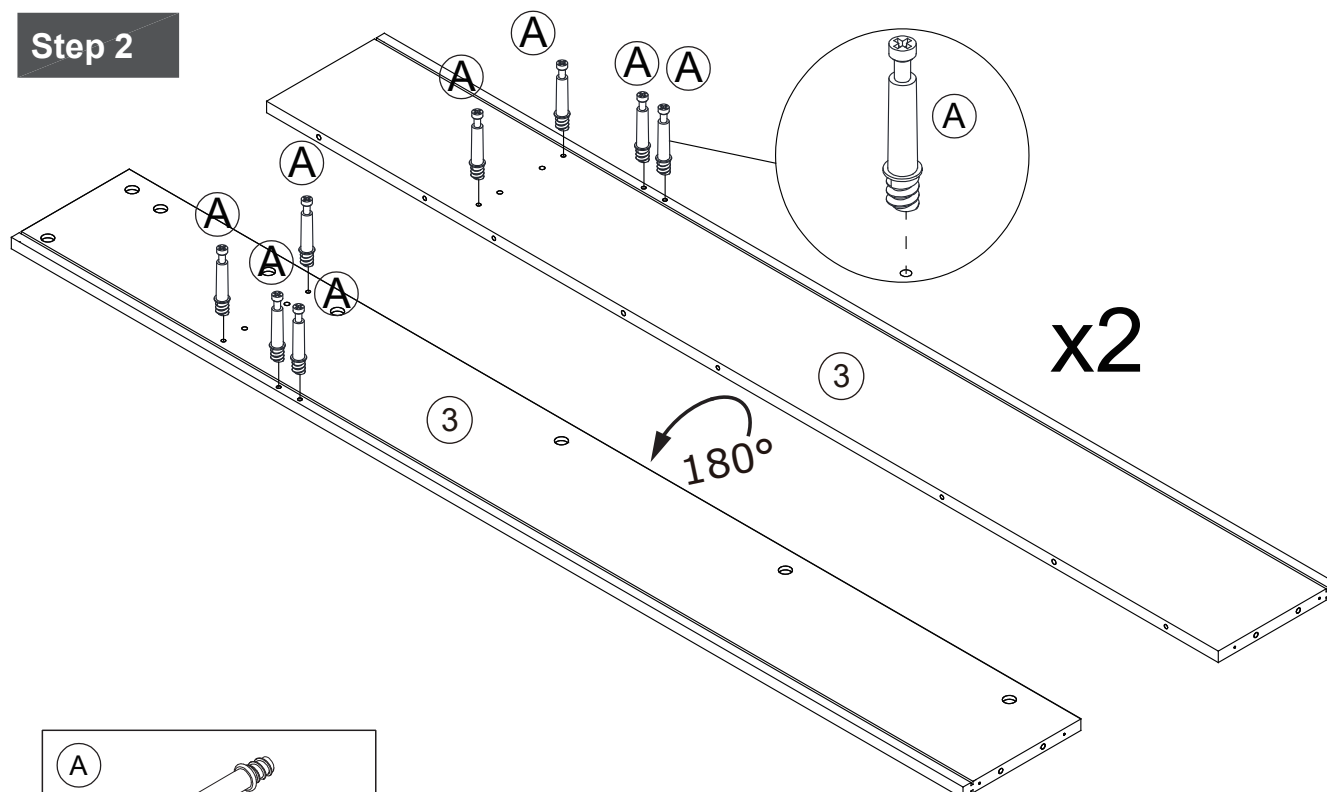


A




Cam Bolt x 16

Assembly Instructions

Step 3

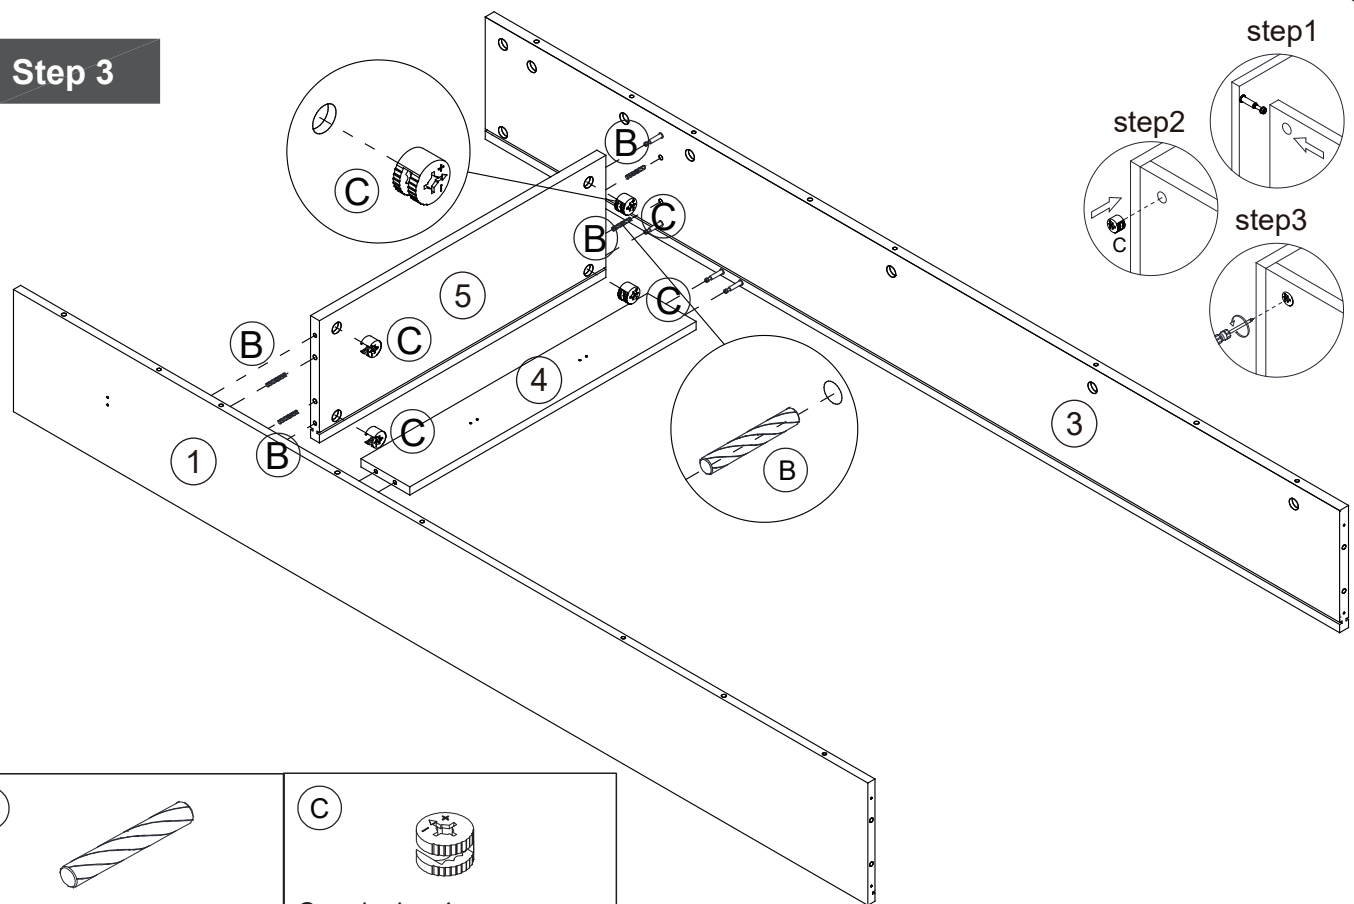

(B)




6*40mm Dowel x 4

(C)



Cam lock x 4

Step 4

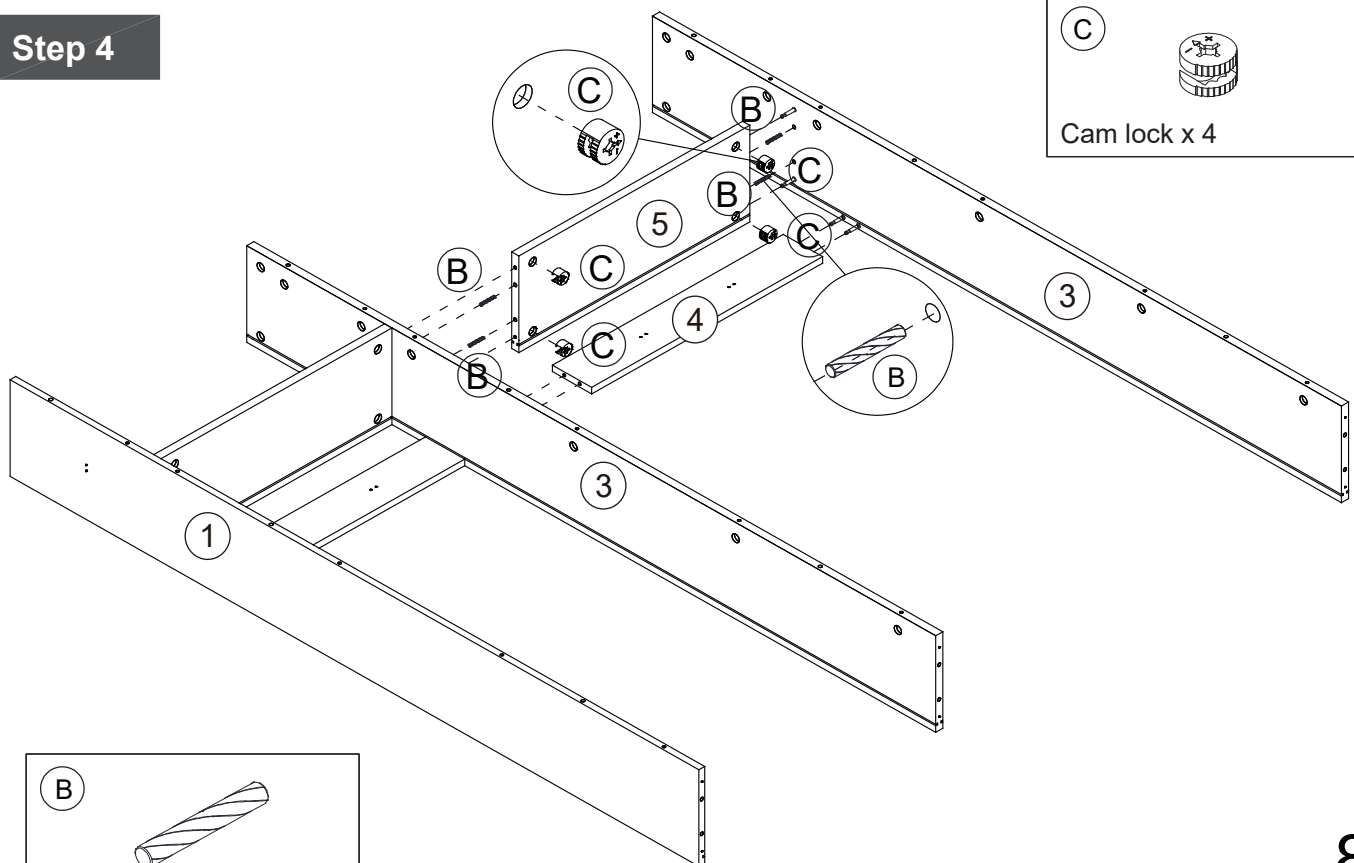


(C)



Cam lock x 4


(B)




6*40mm Dowel x 4

Assembly Instructions

Step 5


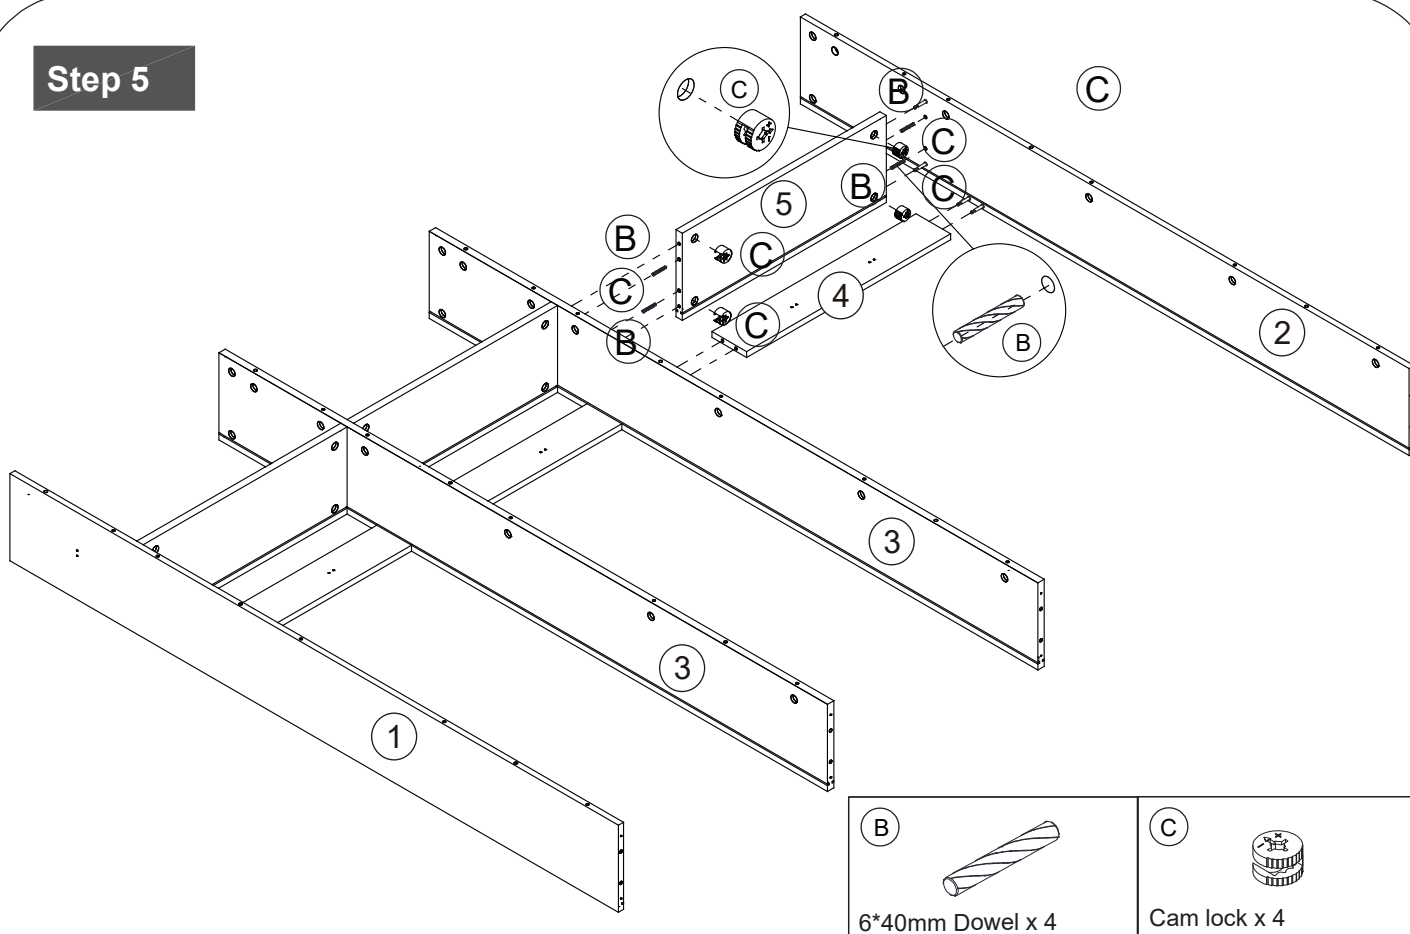


Step 6



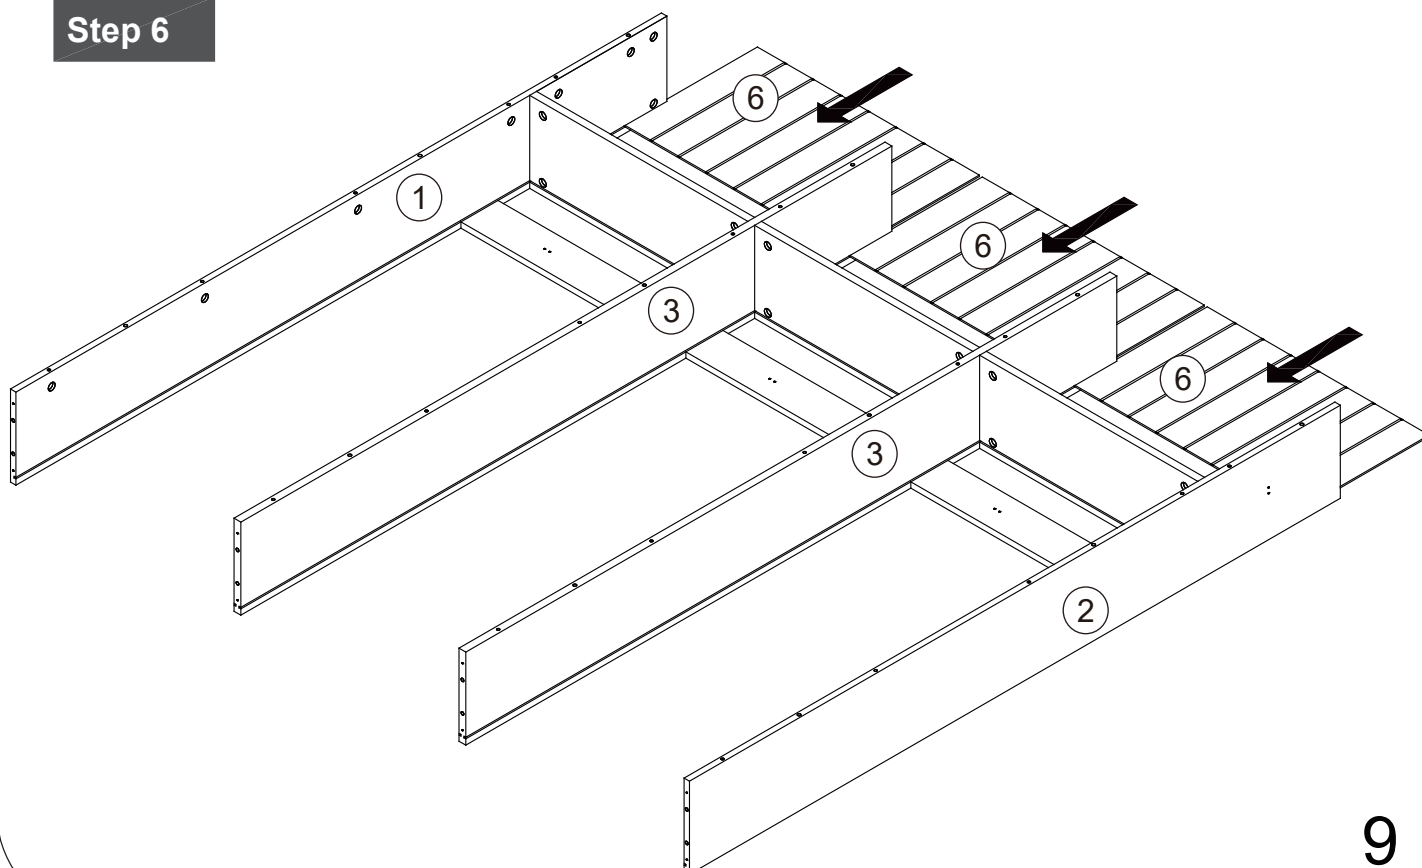


Assembly Instructions

Step 7

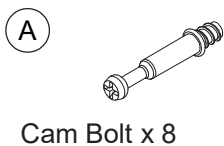
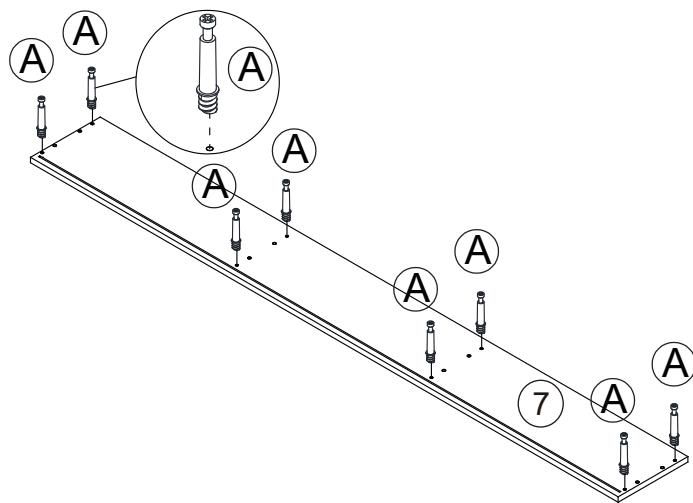


Step 8

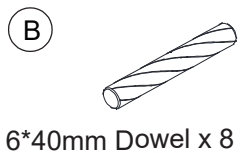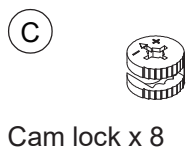
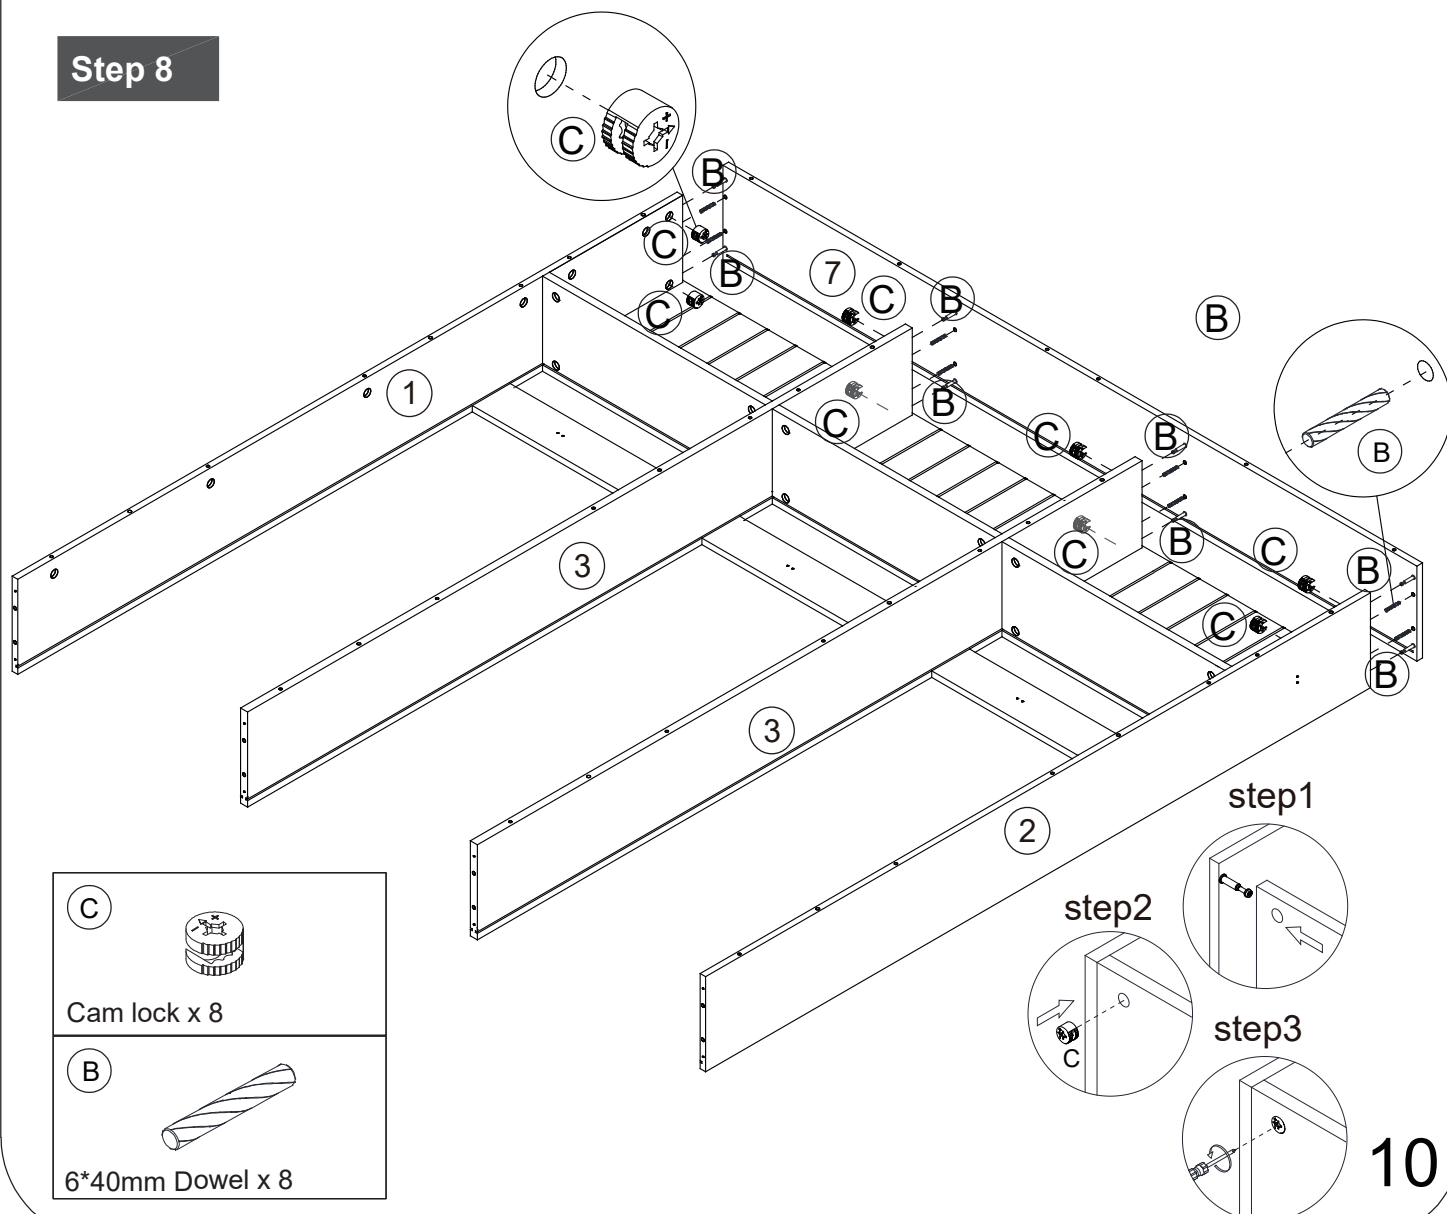


Assembly Instructions

Step 9

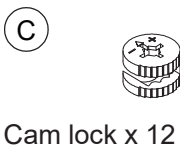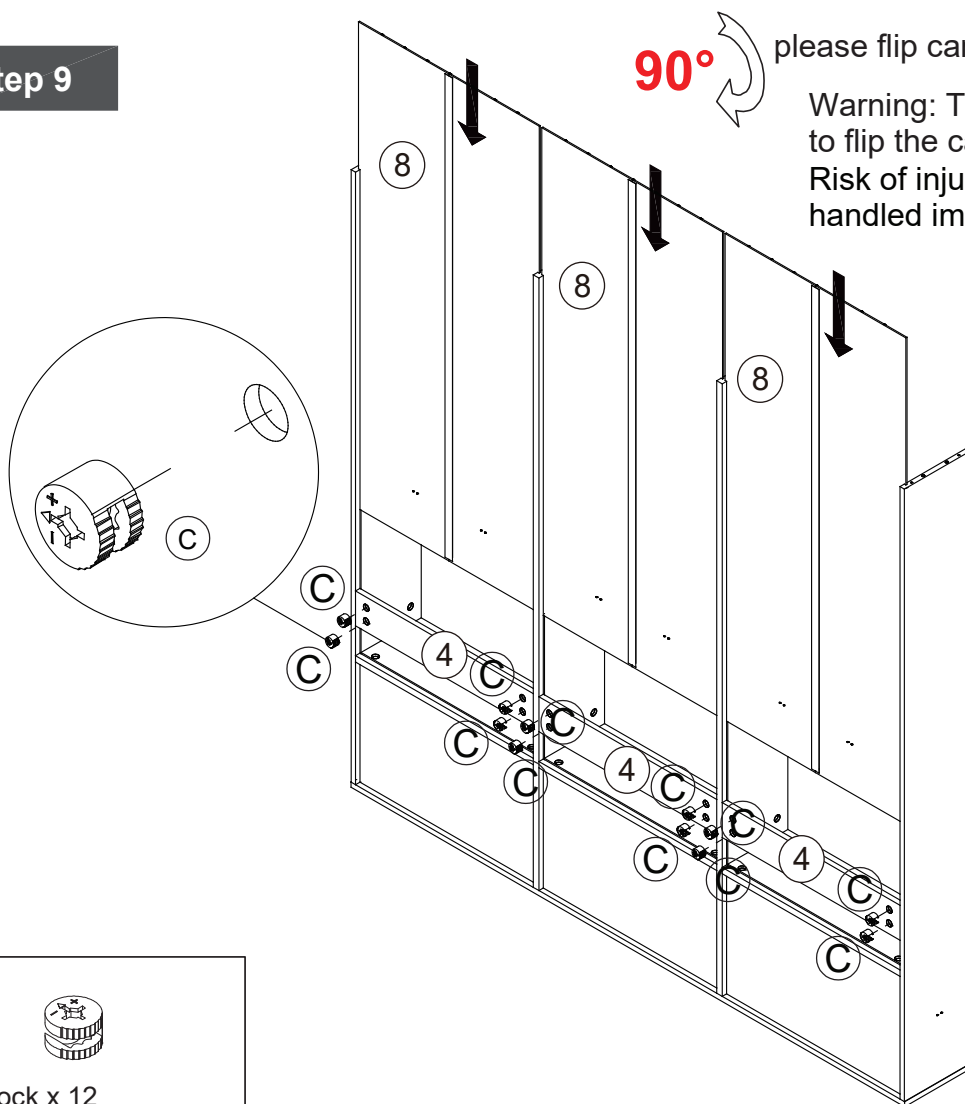



Step 10

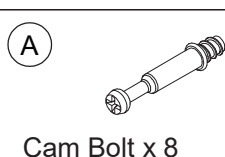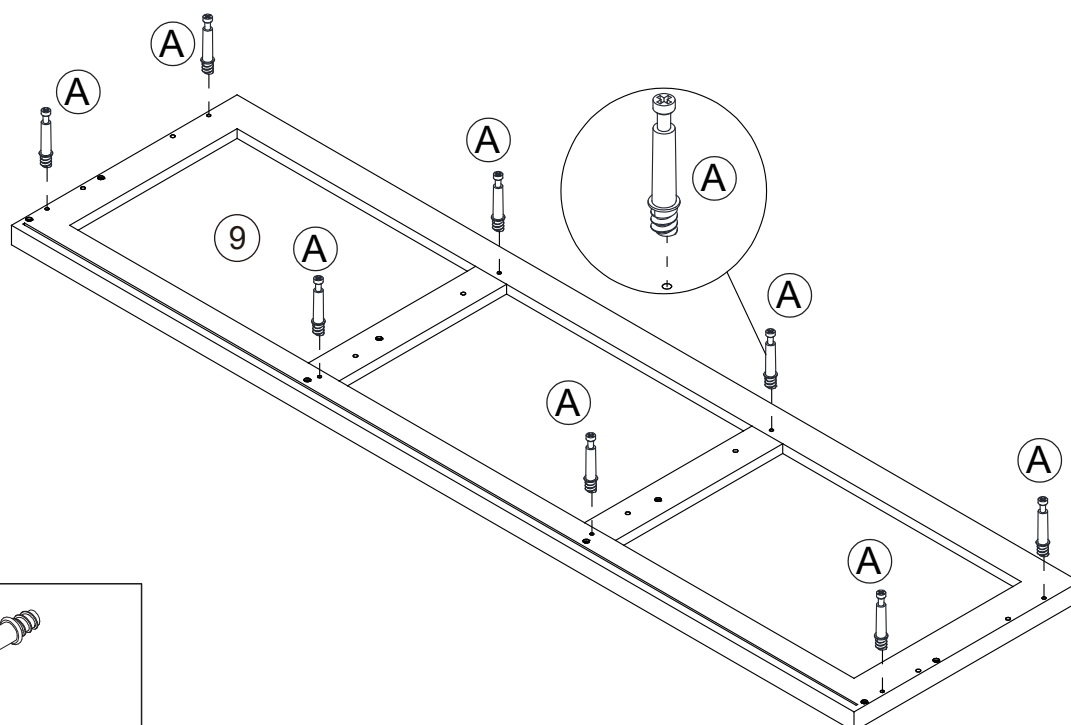

Assembly Instructions

Step 11

Please note that when installing panel No. 9, one person should hold the panel to prevent it from falling and injuring people.


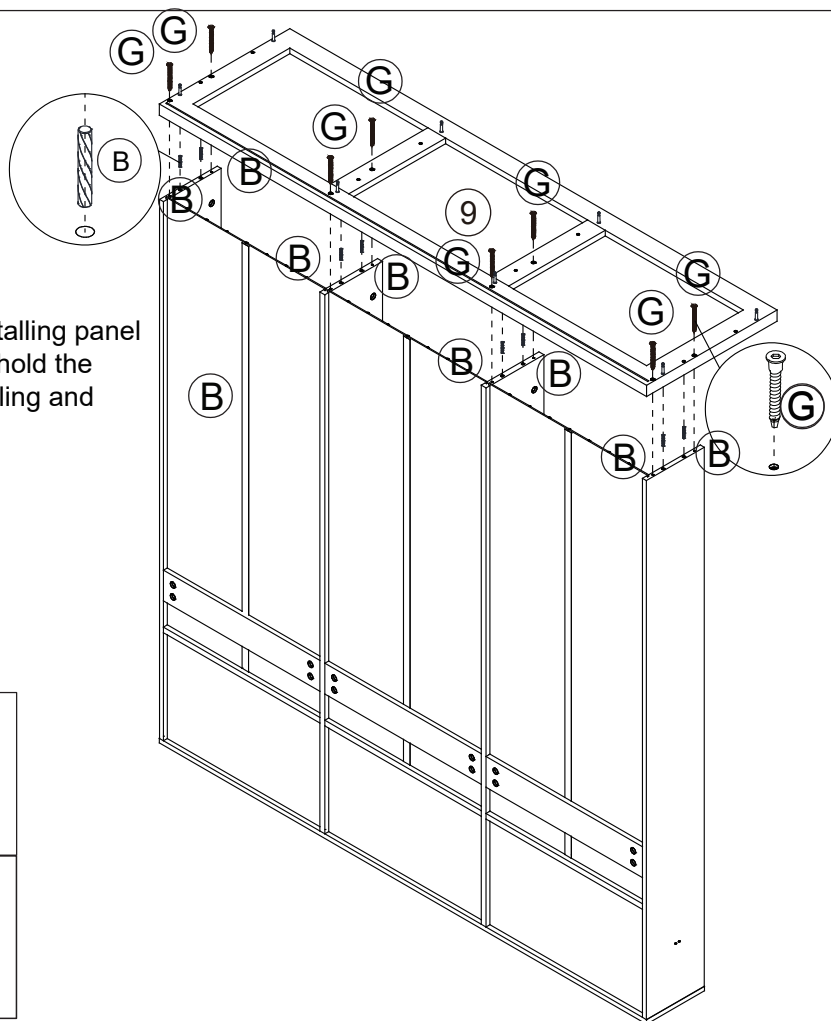


7*40mm Screw x 8



6*40mm Dowel x 8



Step 12

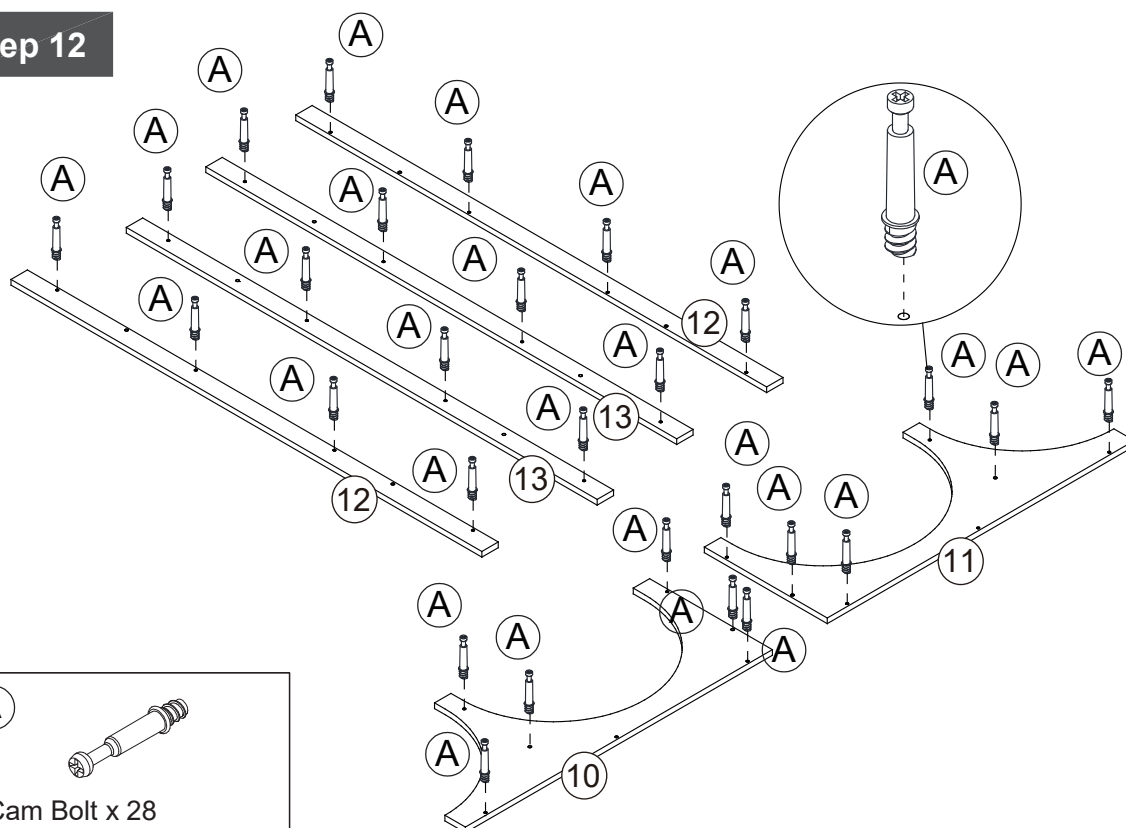

Cam Bolt x 28

Assembly Instructions



Step 13

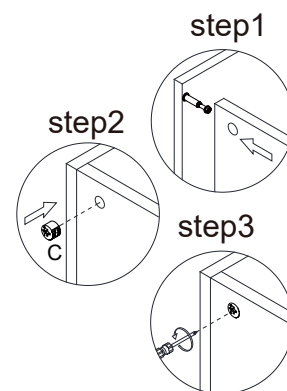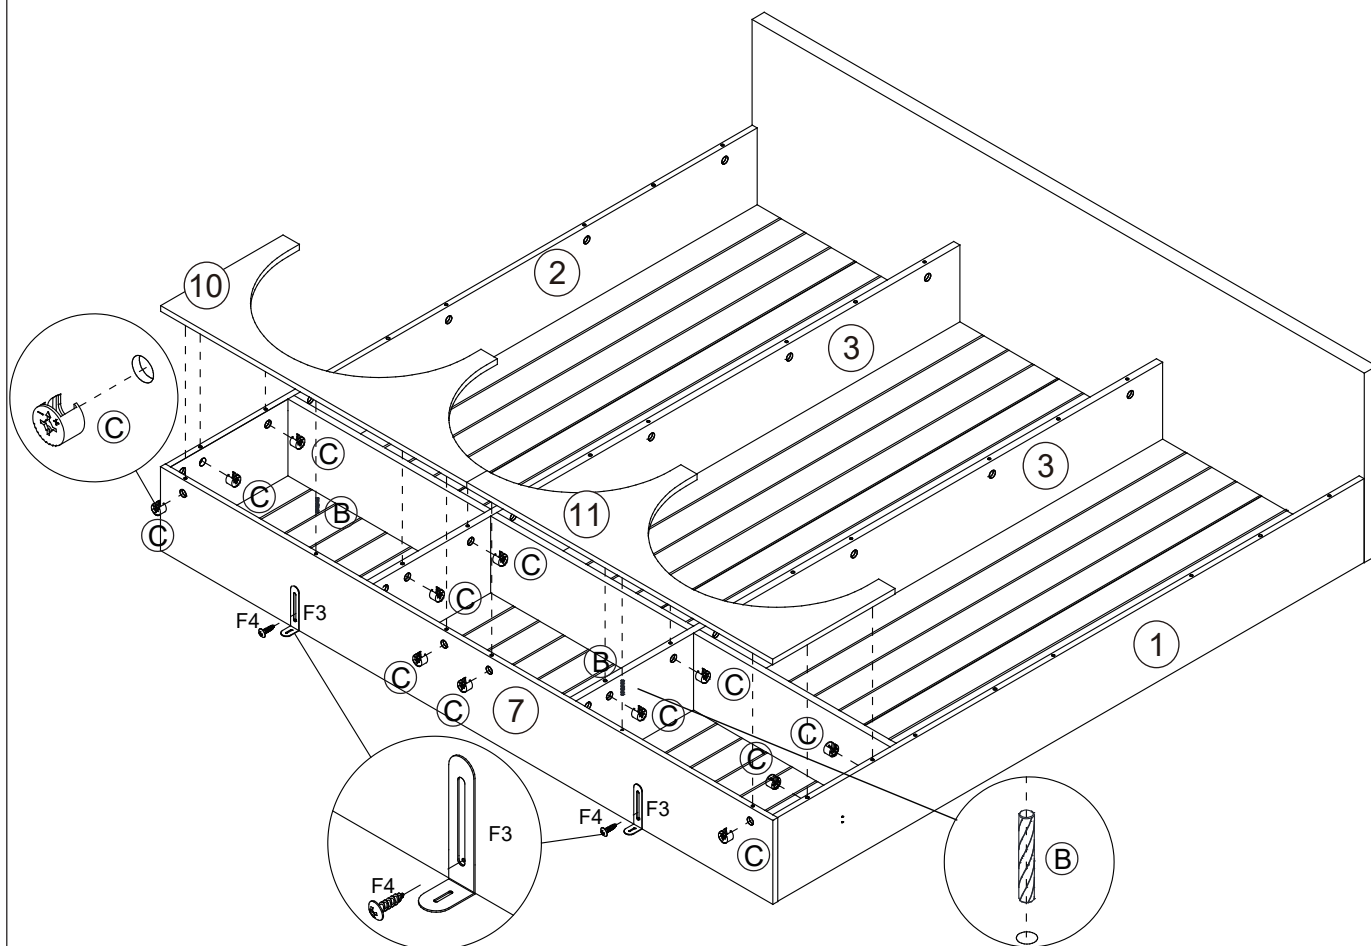

C  Cam lock x 12	F-F3  x 2set
B  6*40mm Dowel x 2	F-F4  x 2set



Assembly Instructions

Step 14

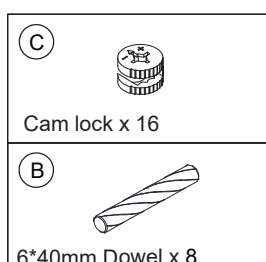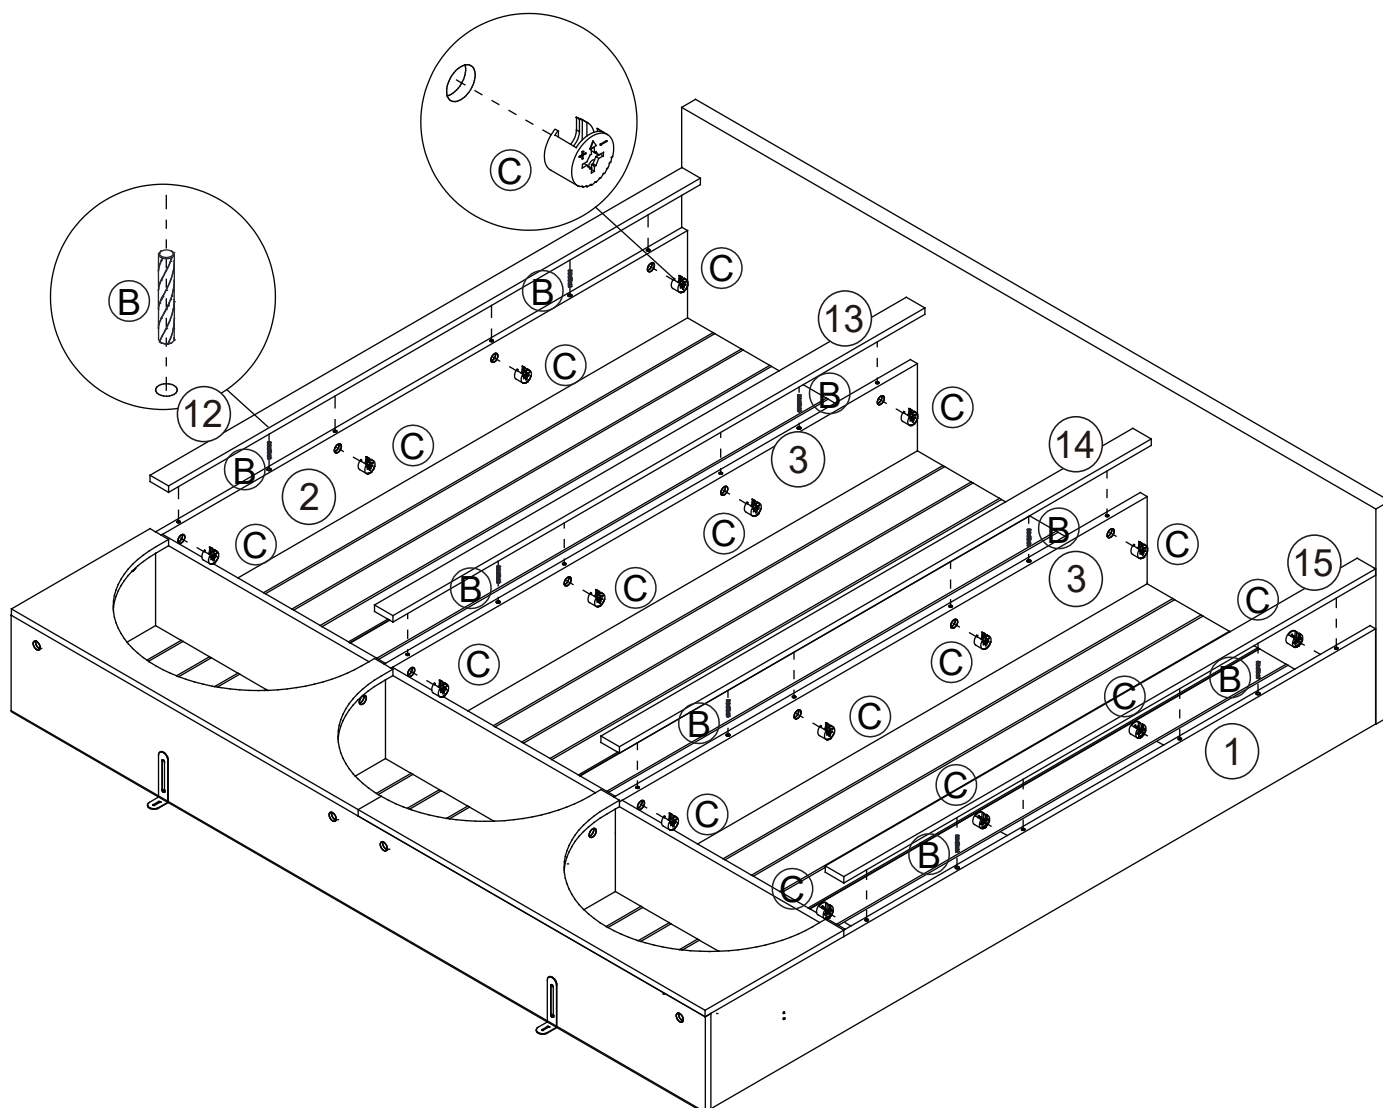


Assembly Instructions

Step 15

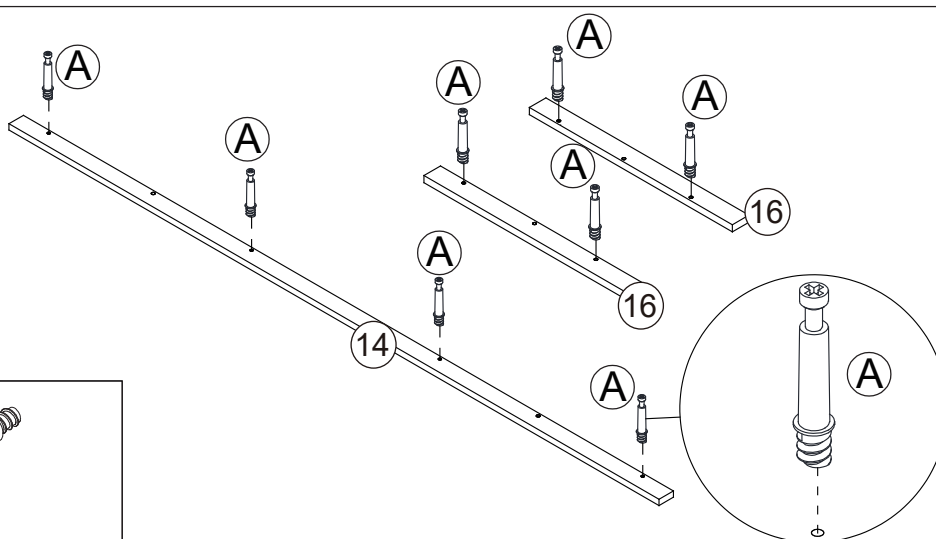

Cam Bolt x 8

Step 16

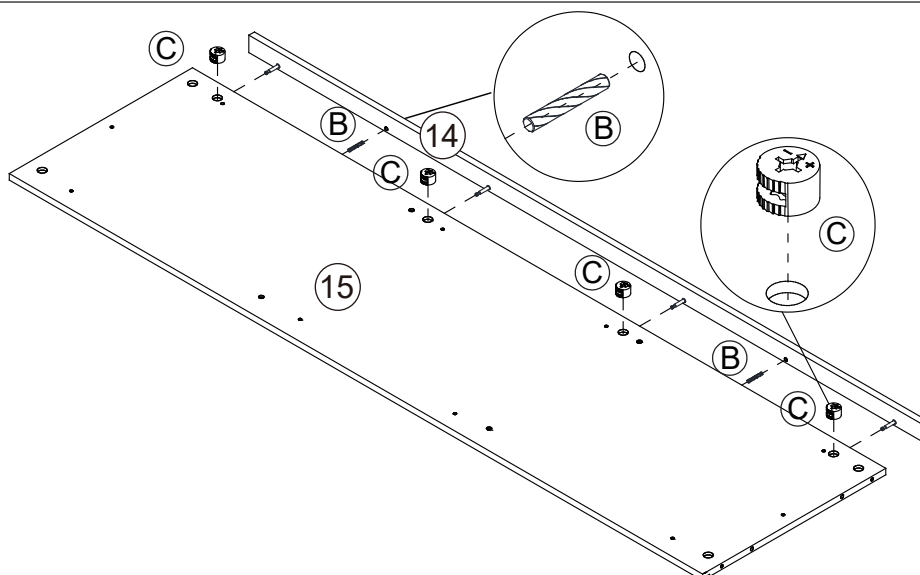


Cam lock x 4



6*40mm Dowel x 2

Step 17

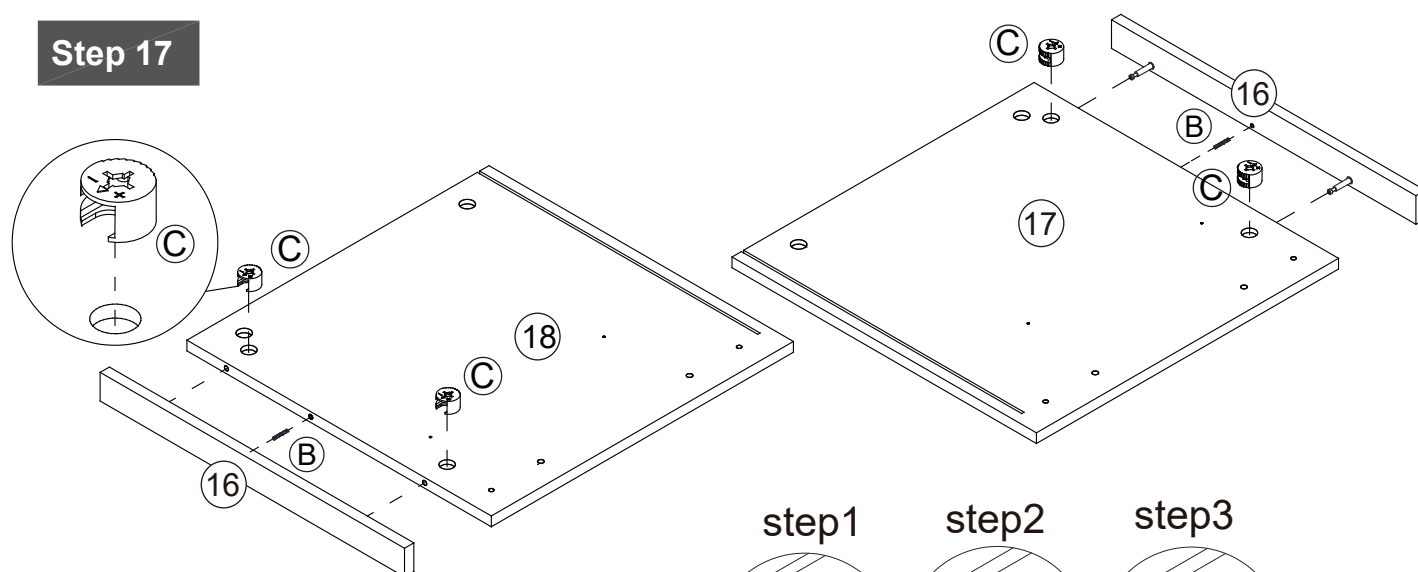


Cam lock x 4




6*40mm Dowel x 2


step1

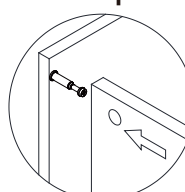

step2

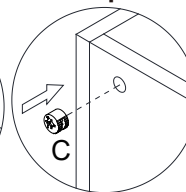


step3

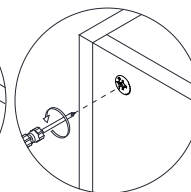


Assembly Instructions





Step 18

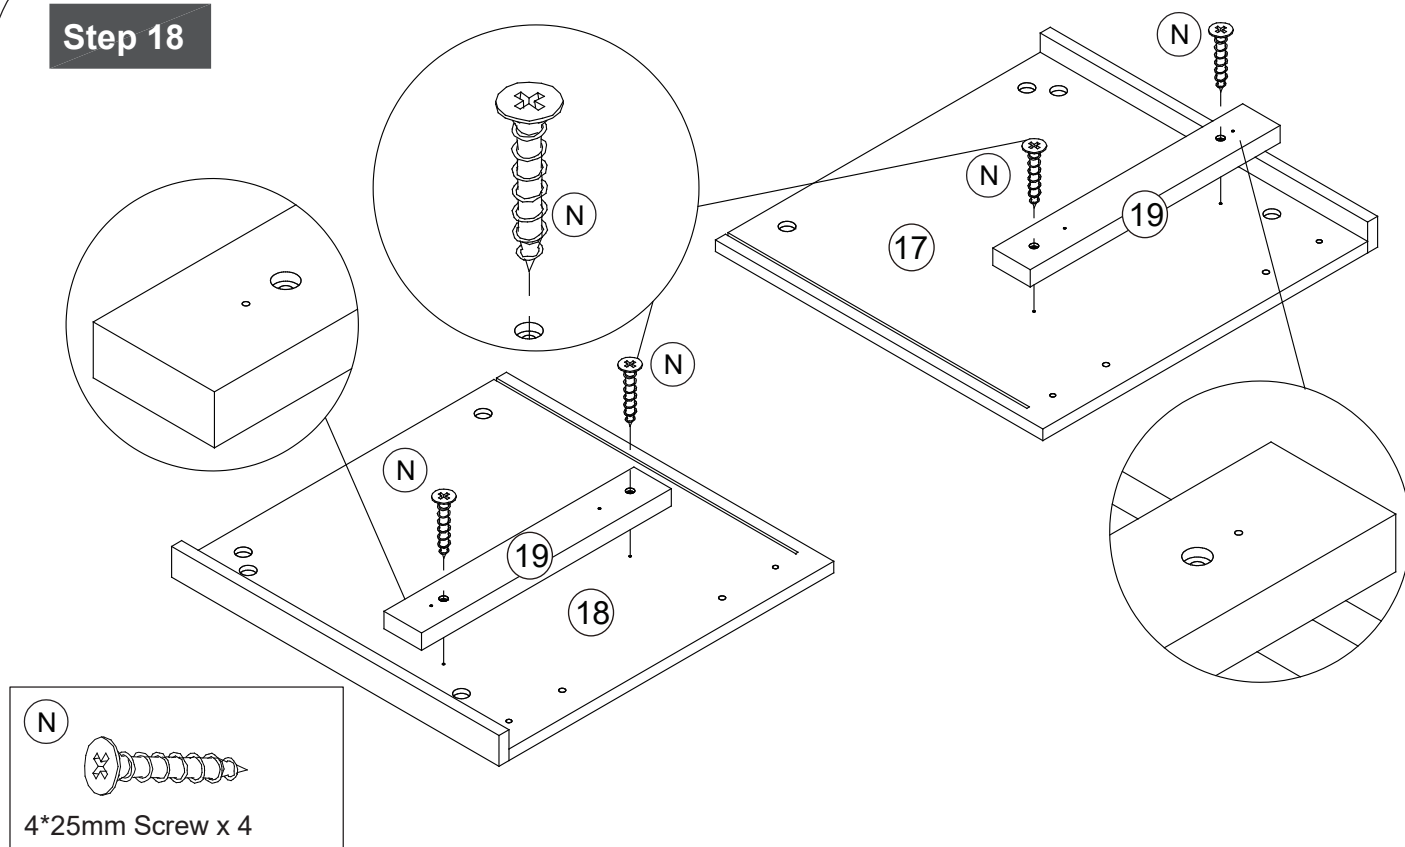

Step 19




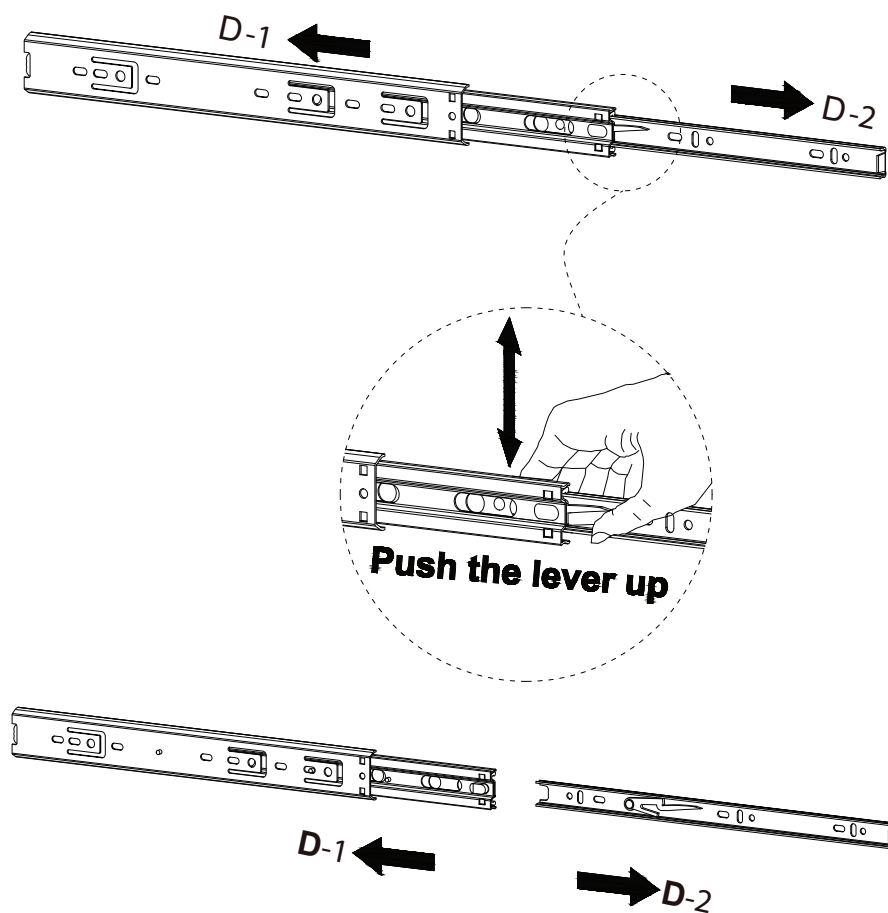


Step 20

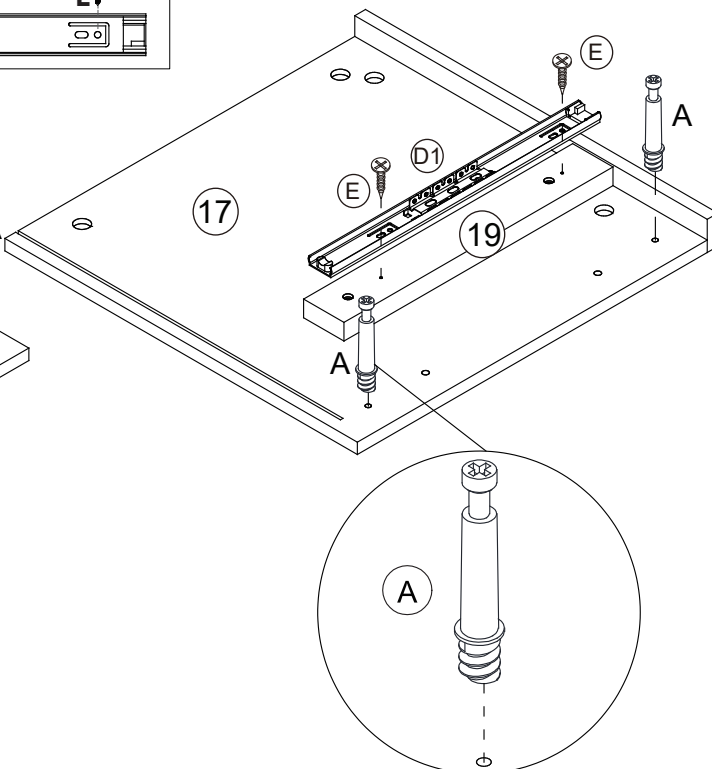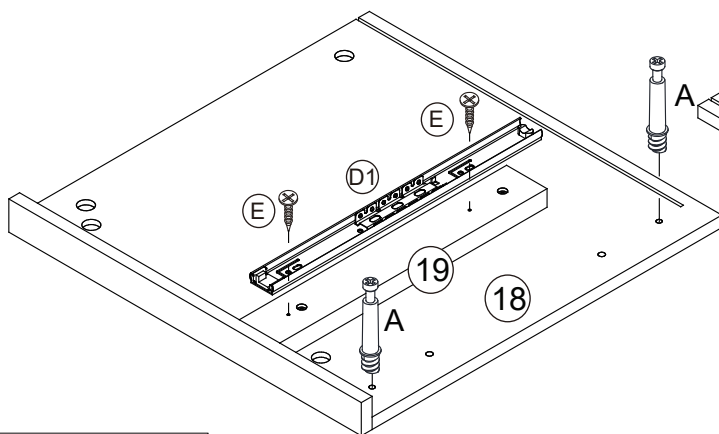

Step 21



x2

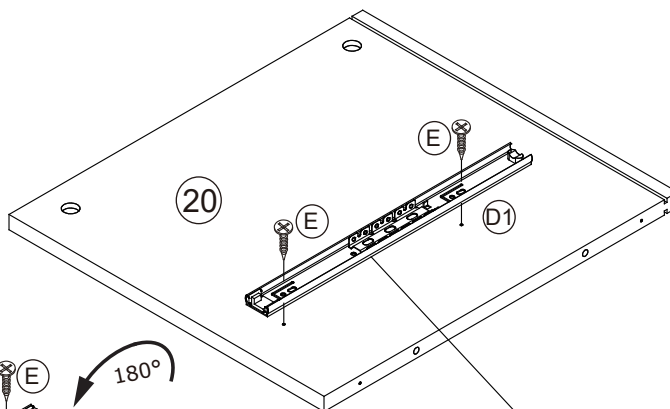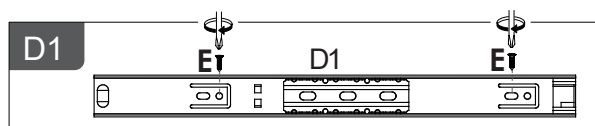

The holes to install screws for the rails on the two sides of the board 23 are different. Please refer to the markings in the figure.

Assembly Instructions

Step 22




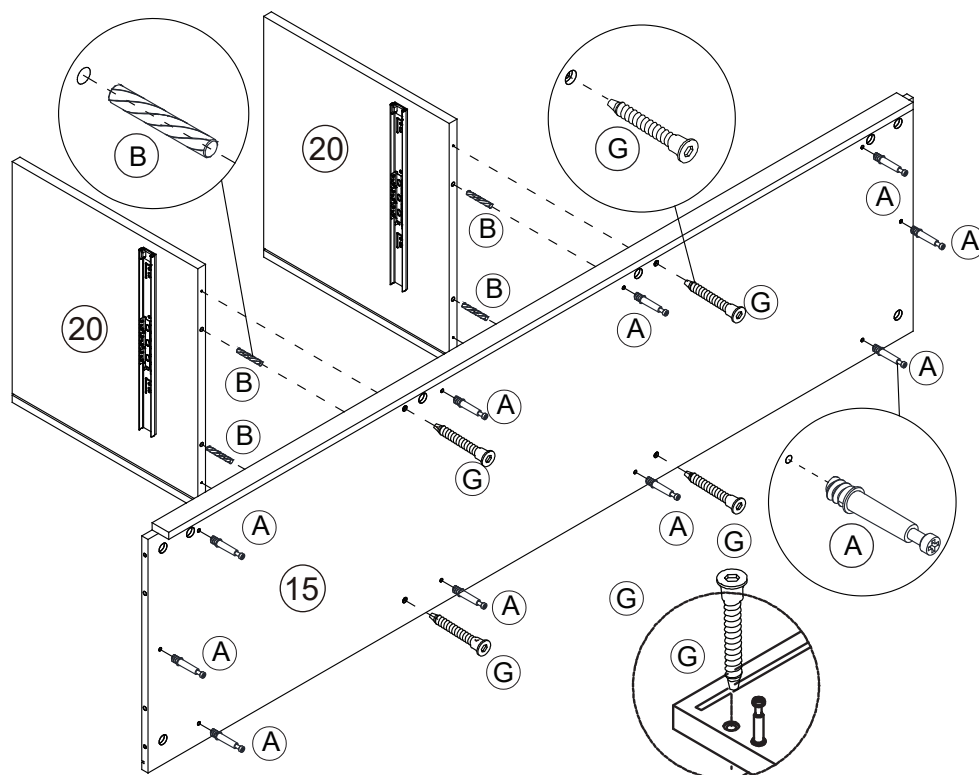
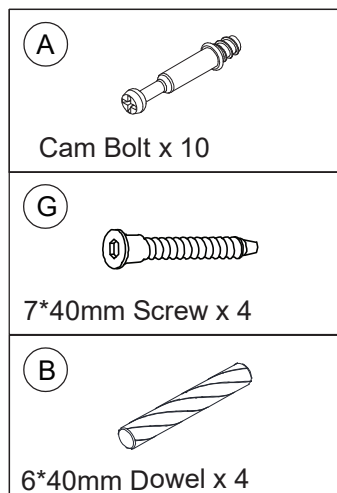


Step 23

step1


step2

step3

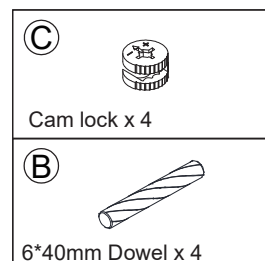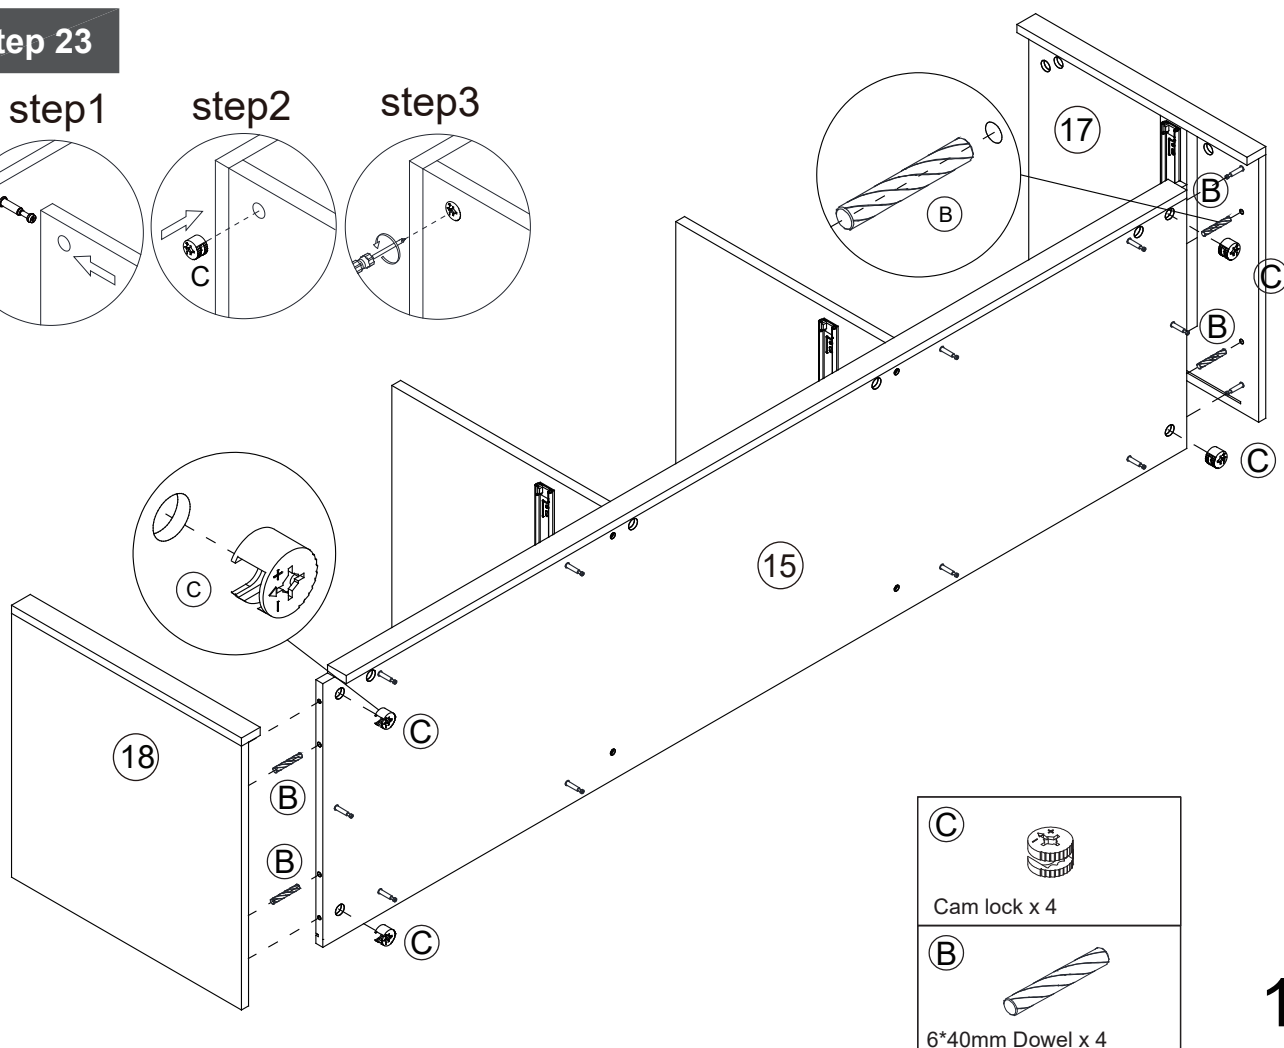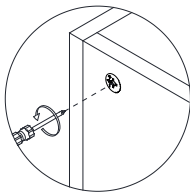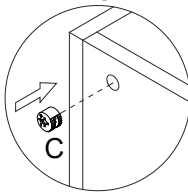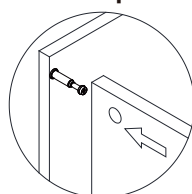


Assembly Instructions

Step 24



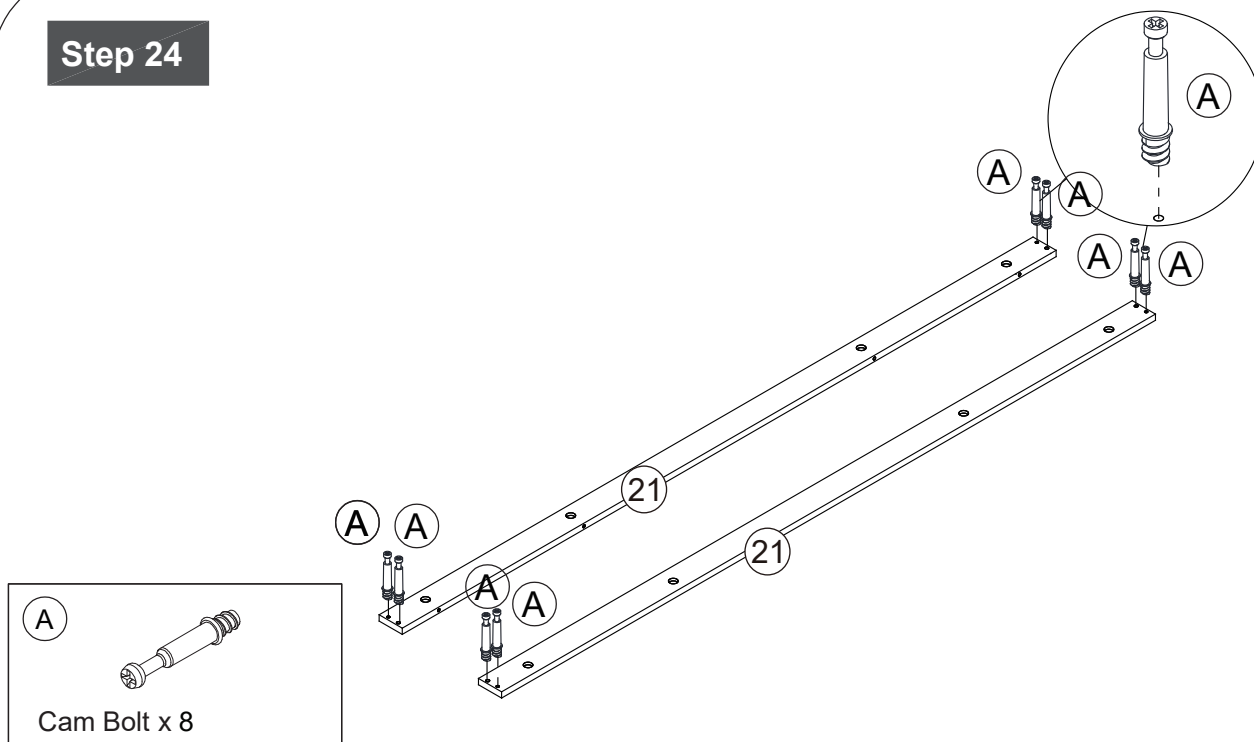


Step 25

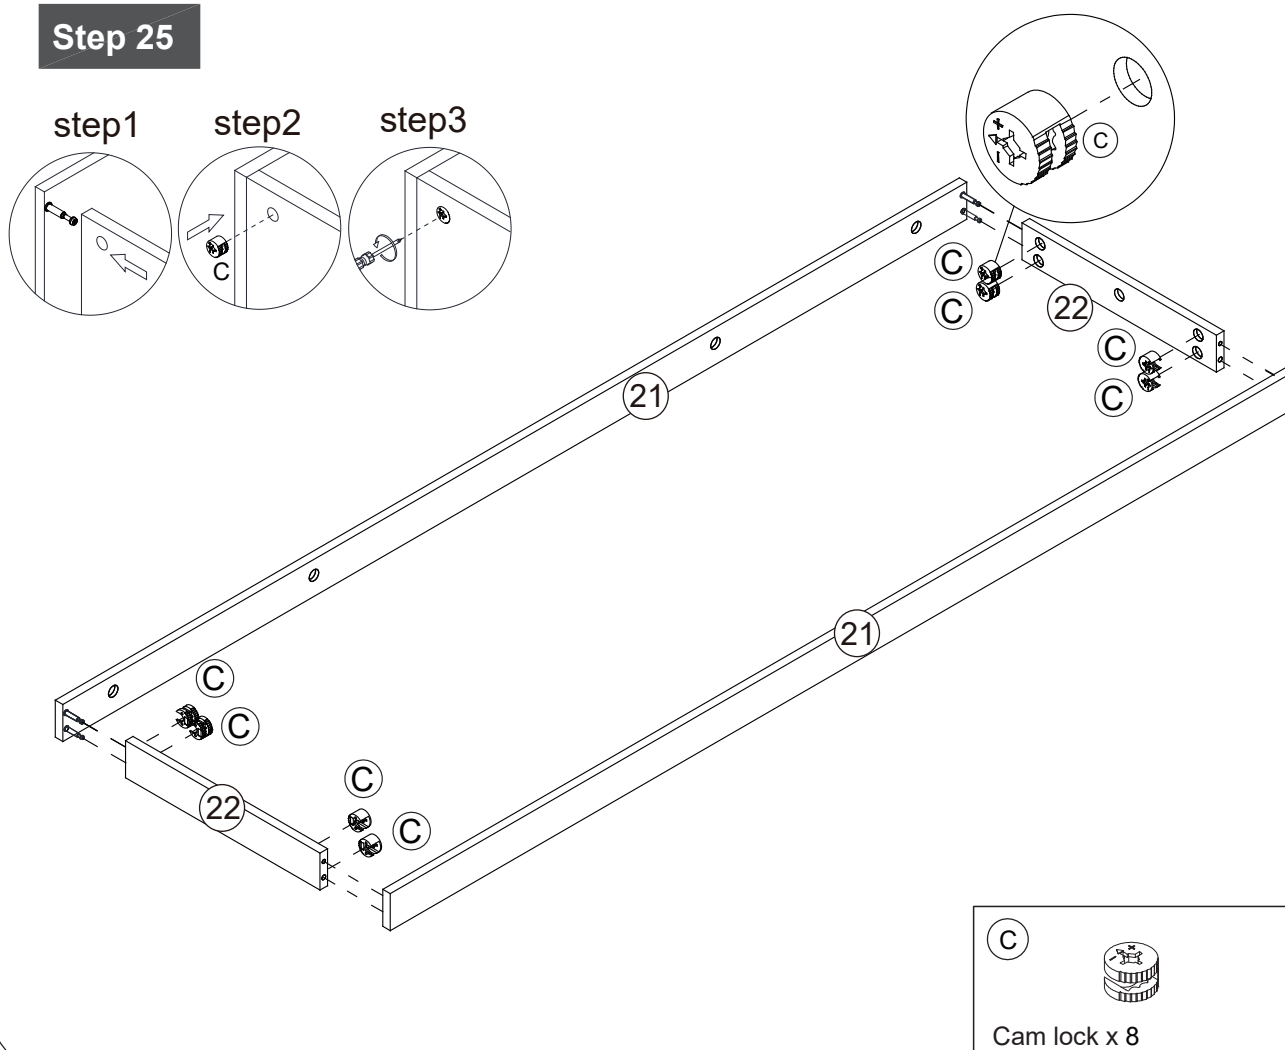

Assembly Instructions


Step 26

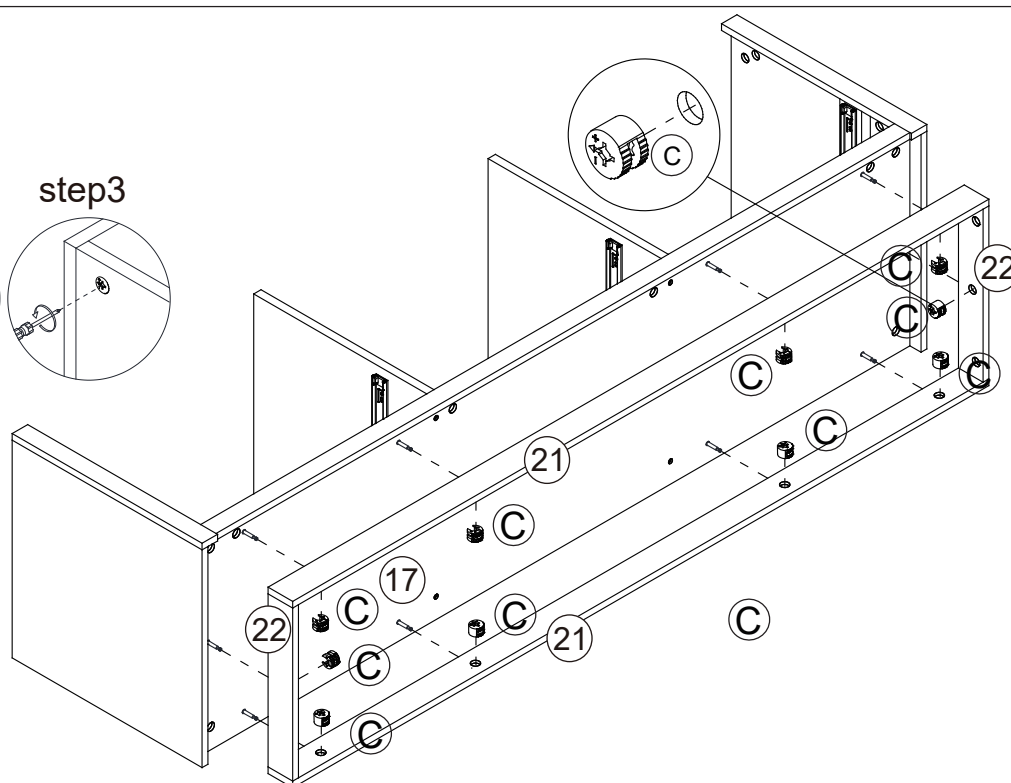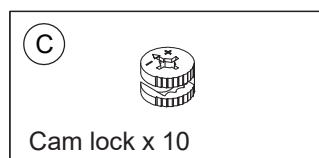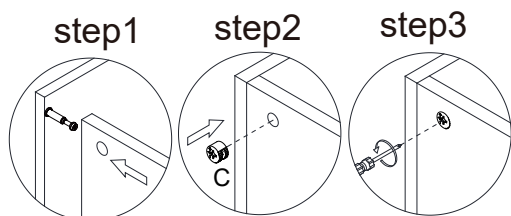

Step 27

please flip carefully!


Warning: Two people are required
to flip the cabinet
Risk of injury or damage if
handled improperly.

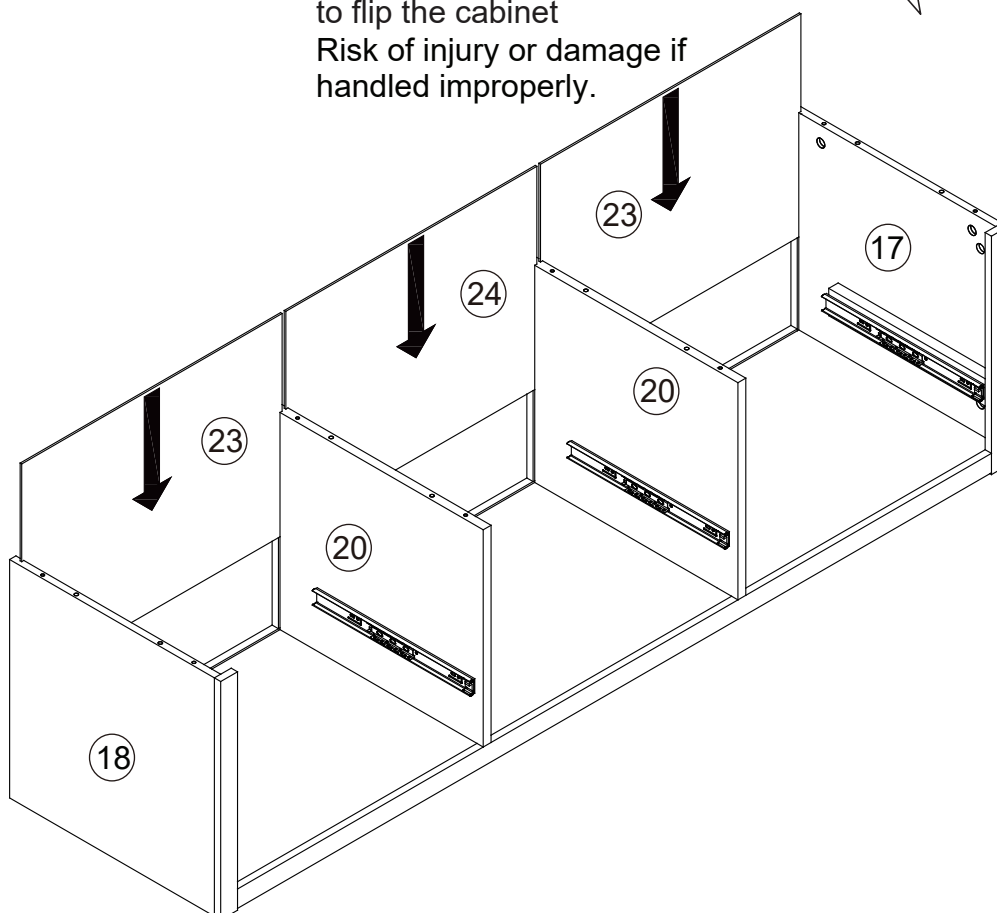


Assembly Instructions

Step 28


step1

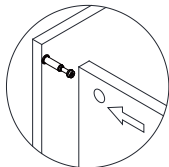



step2

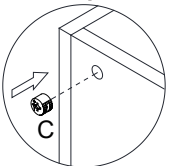

step3

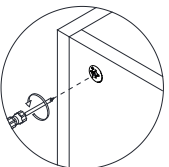


Warning: Two people are required to flip the cabinet
Risk of injury or damage if handled improperly.

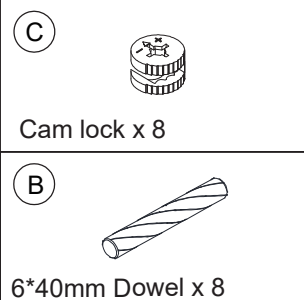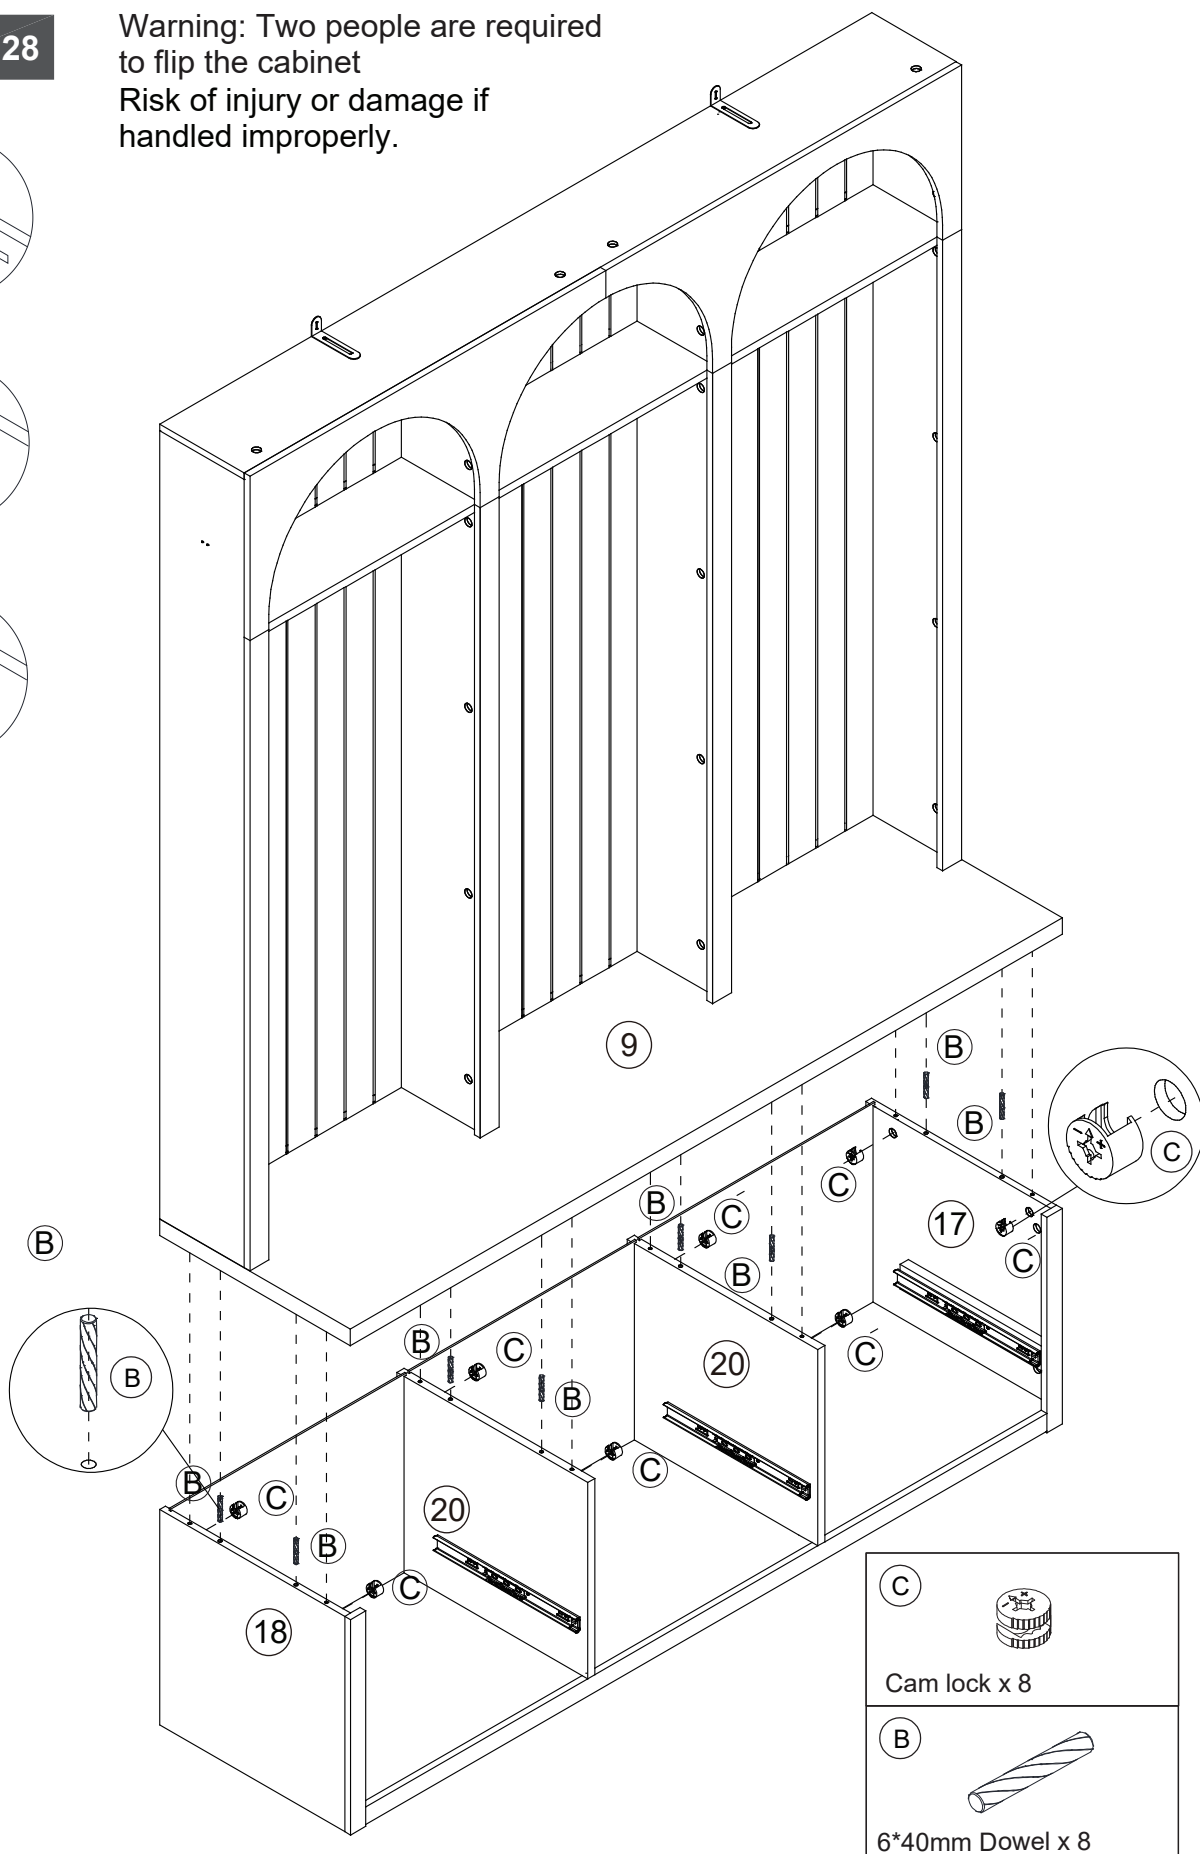




Assembly Instructions

Step 29

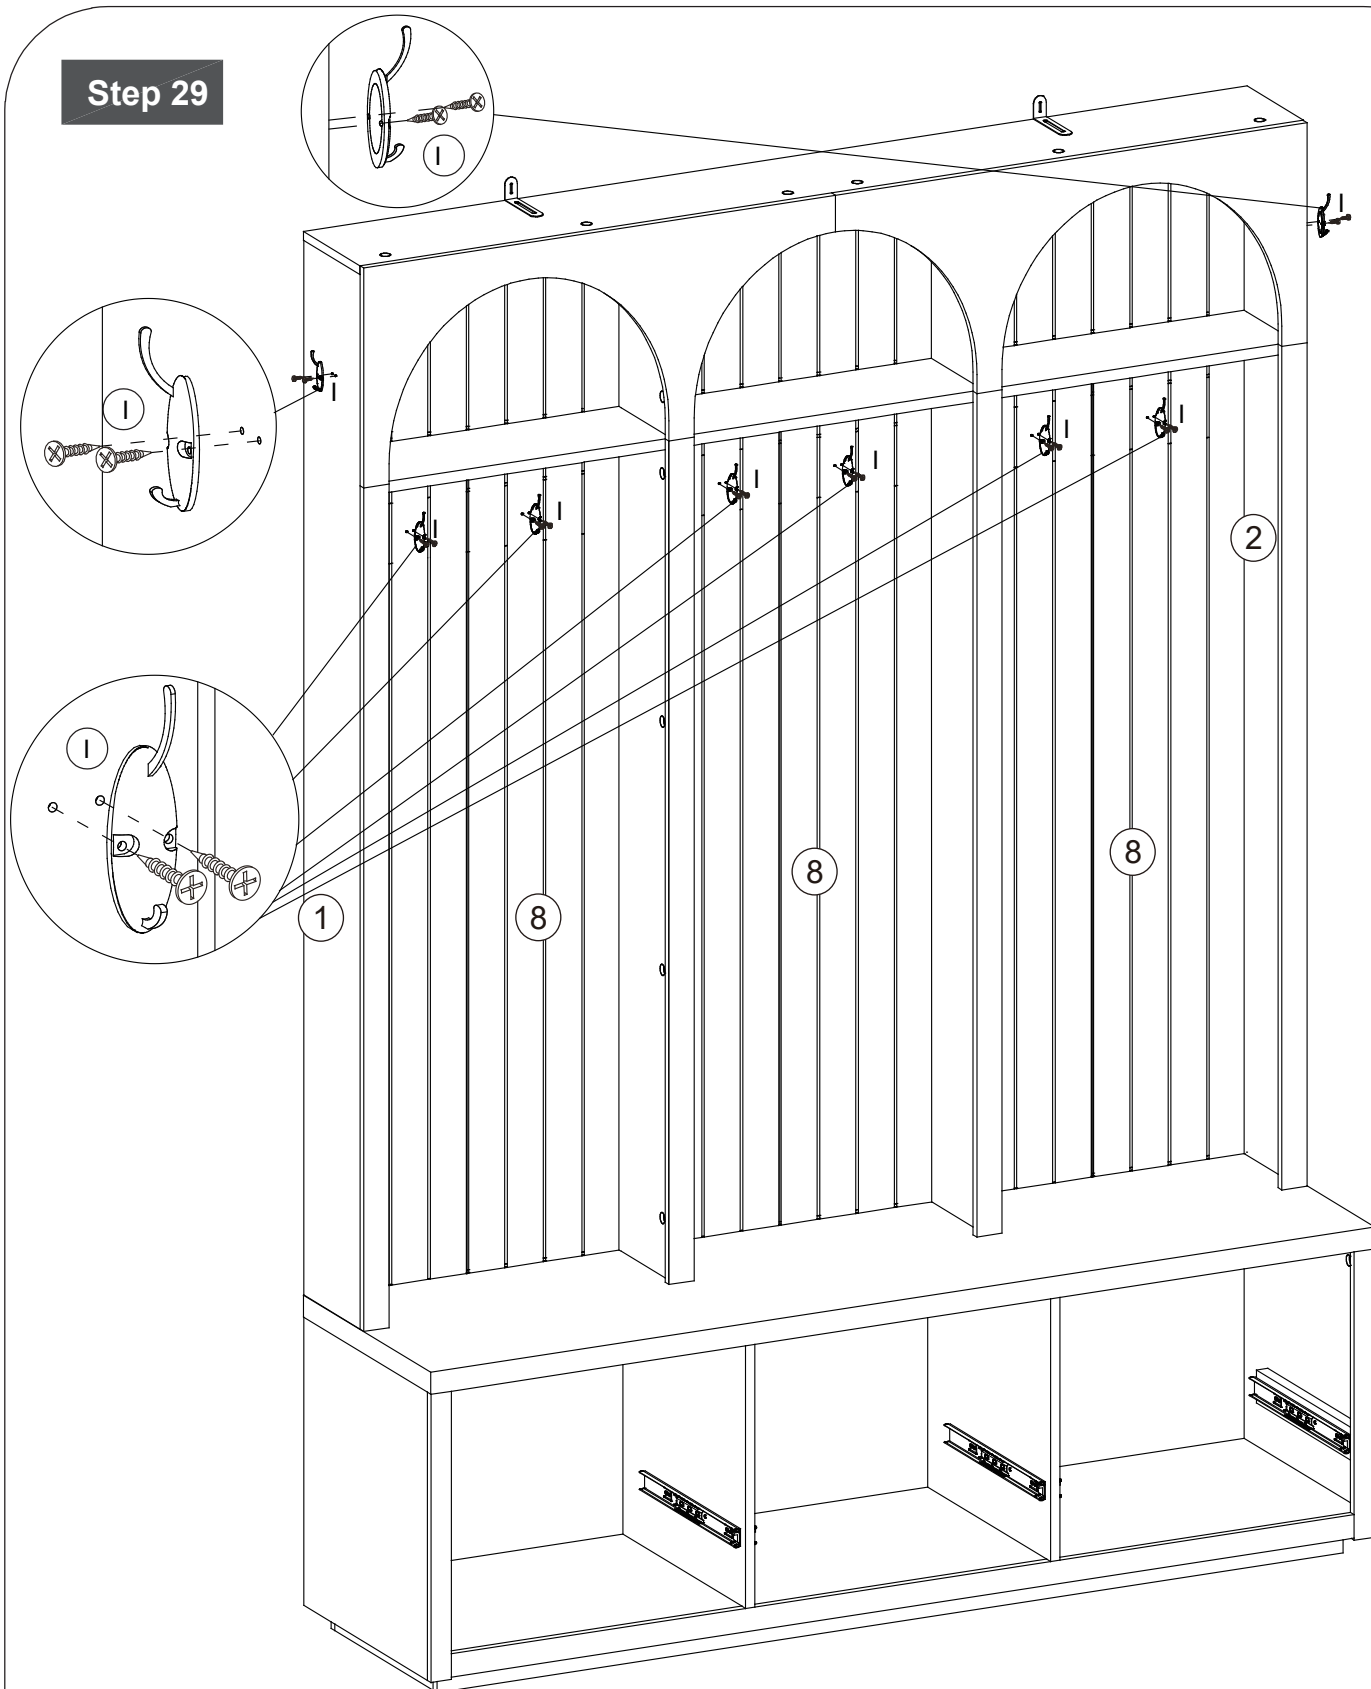

Assembly Instructions


Step 30

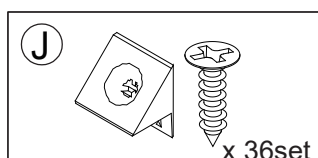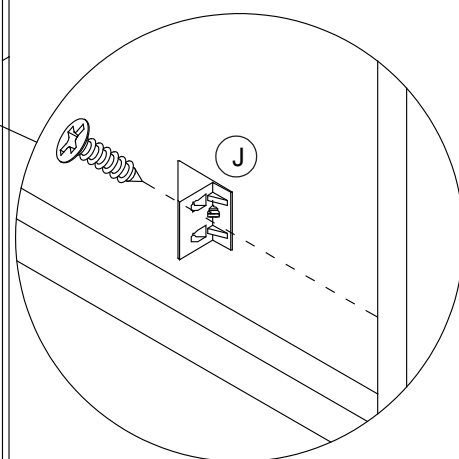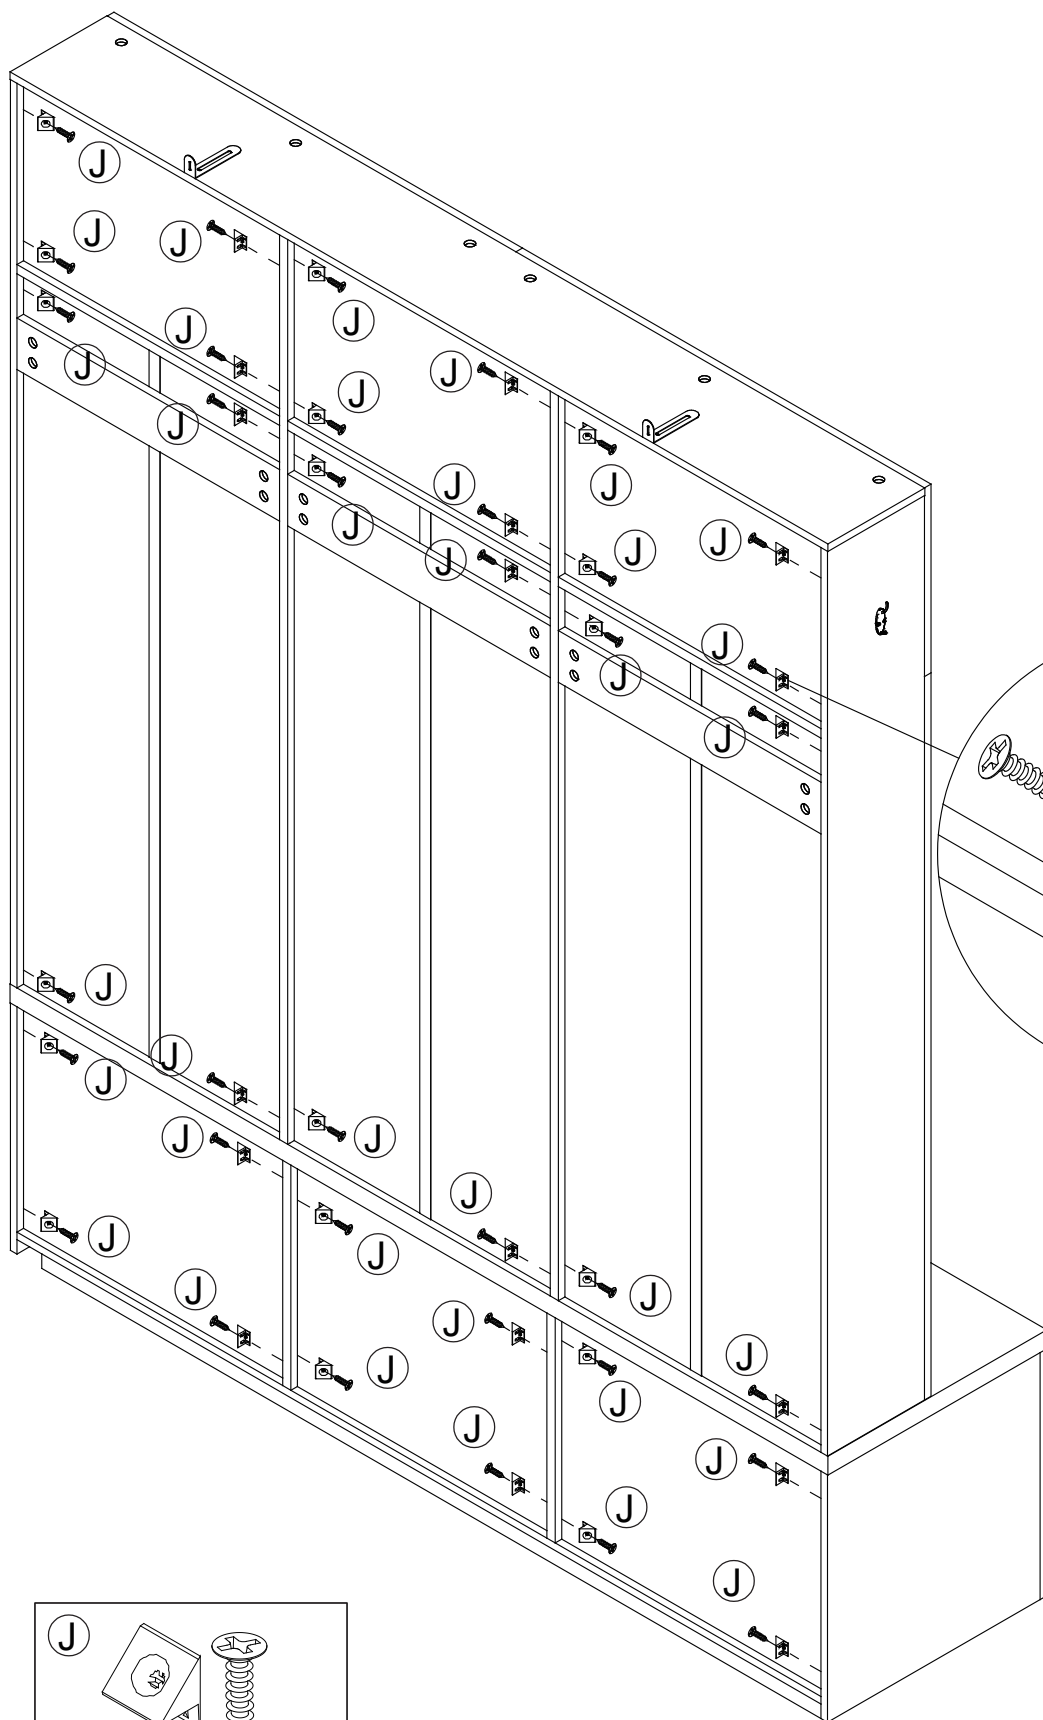


Assembly Instructions

Step 31

x3

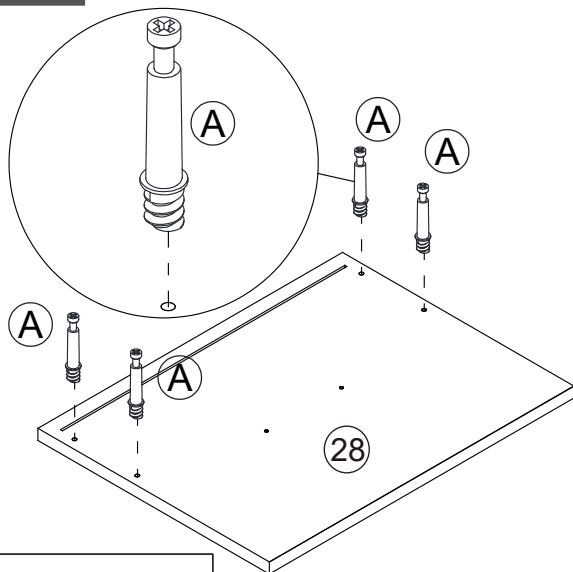


A




Cam Bolt x12

x3

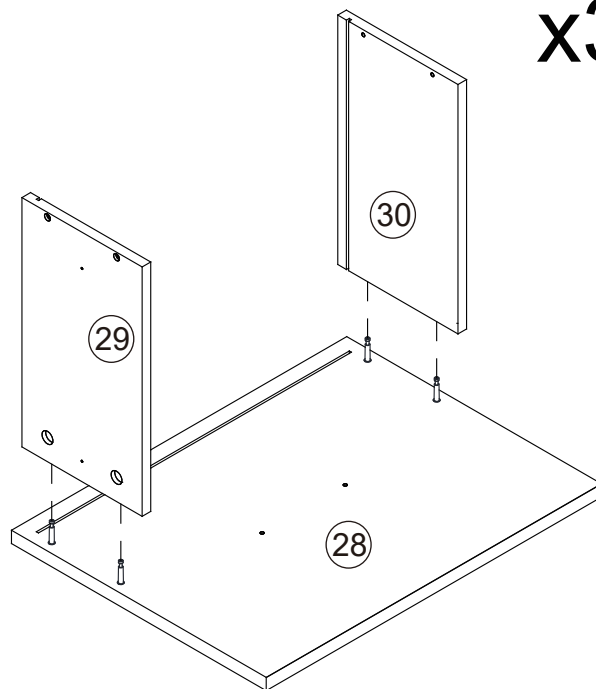


Step 32

x3

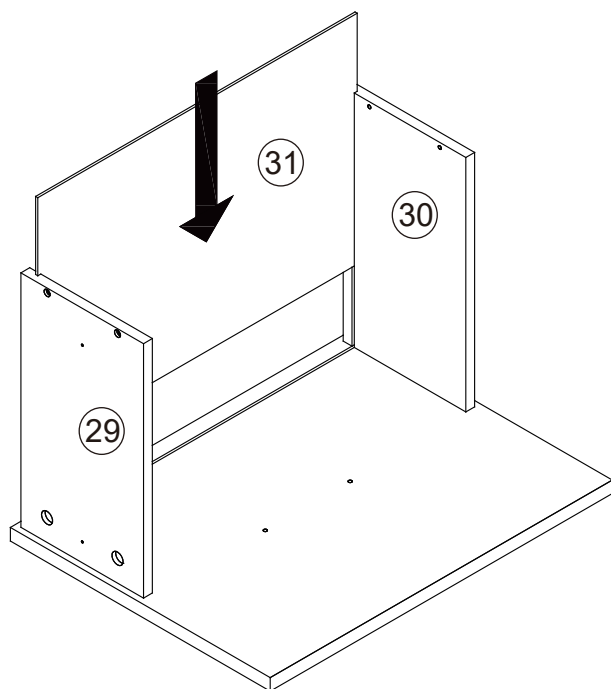

x3

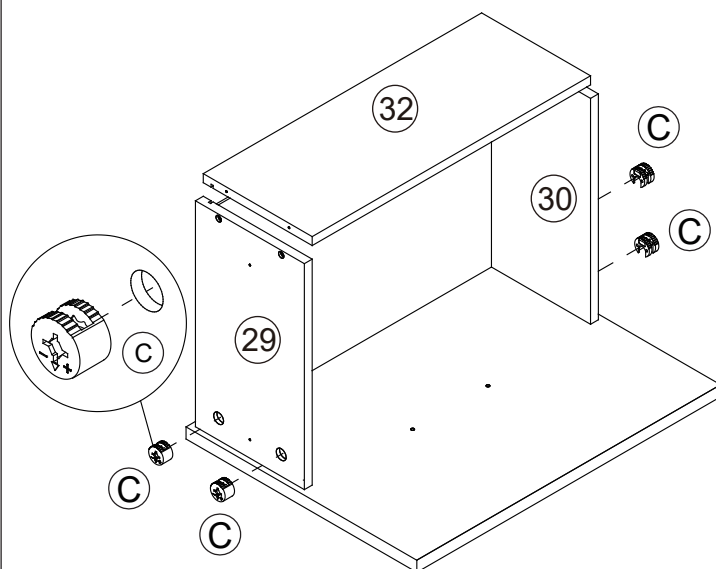

C





Cam lock x 12

24

Assembly Instructions






Step 33

x3

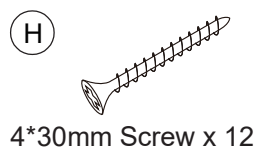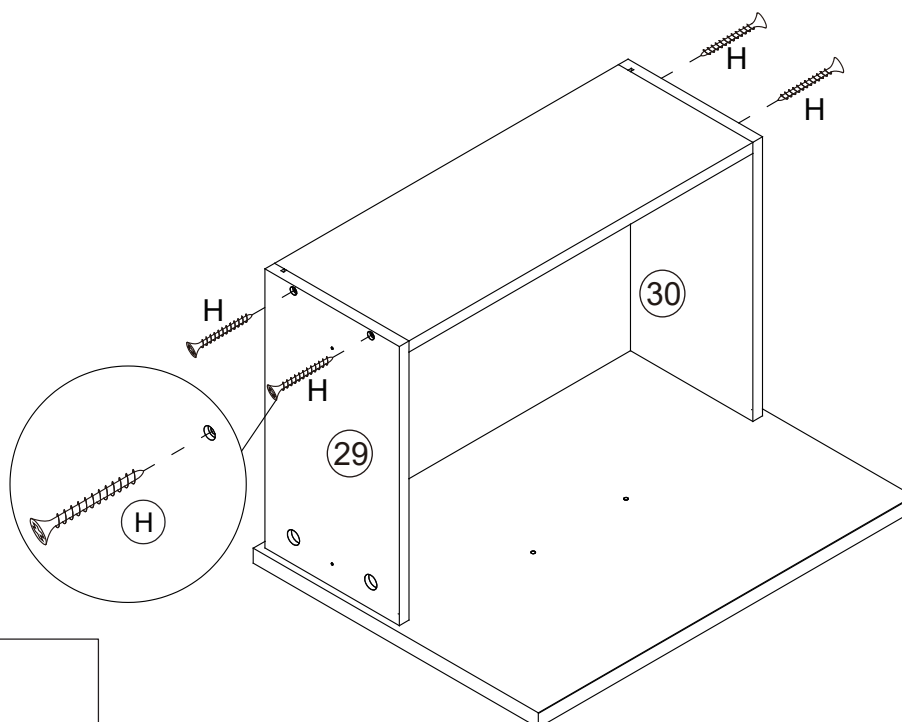

Step 34

x3

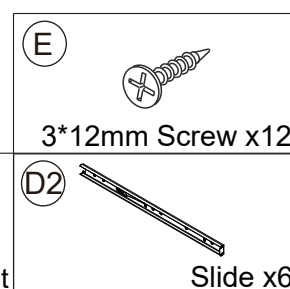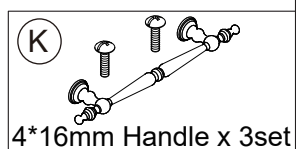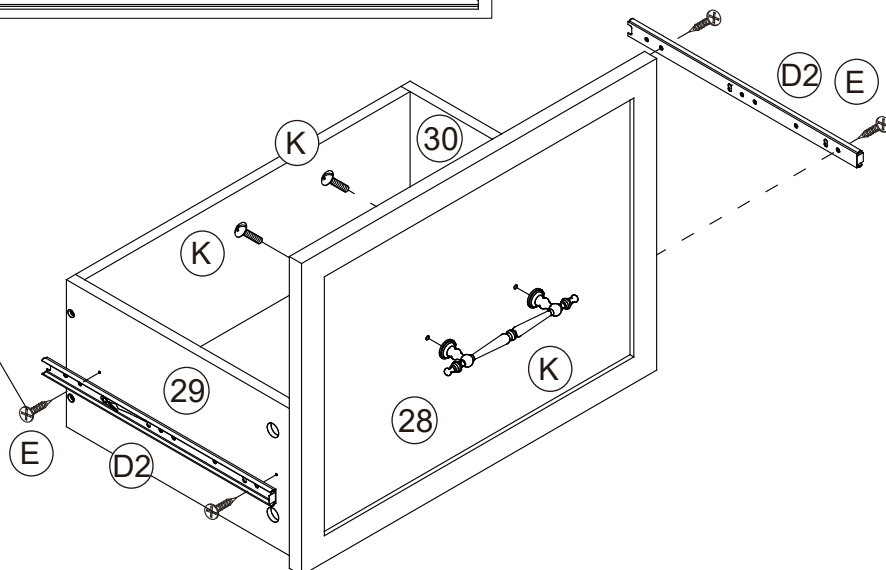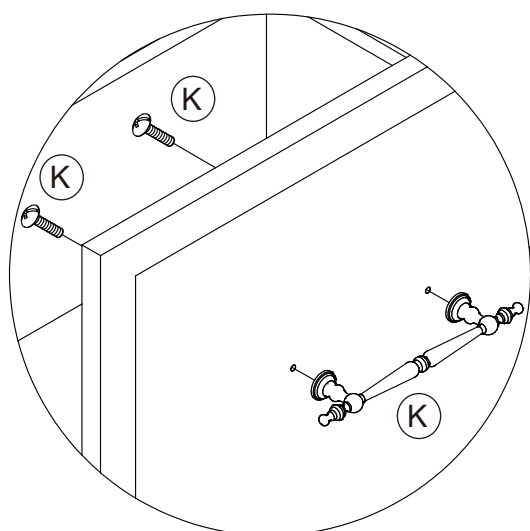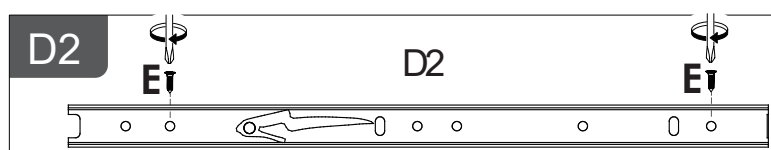










25

Assembly Instructions

Step 35

WALL

Please note that there are two colors of hole stickers. When pasting them, please select and paste the corresponding hole stickers according to the color of the board to avoid pasting them incorrectly.

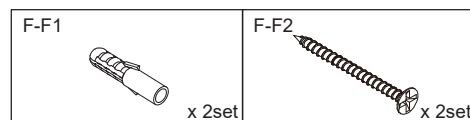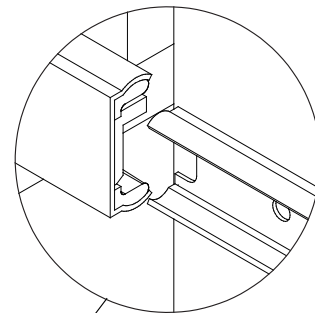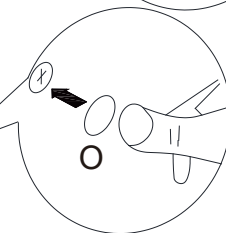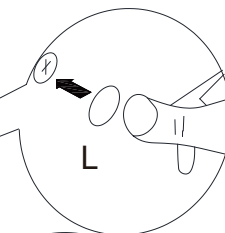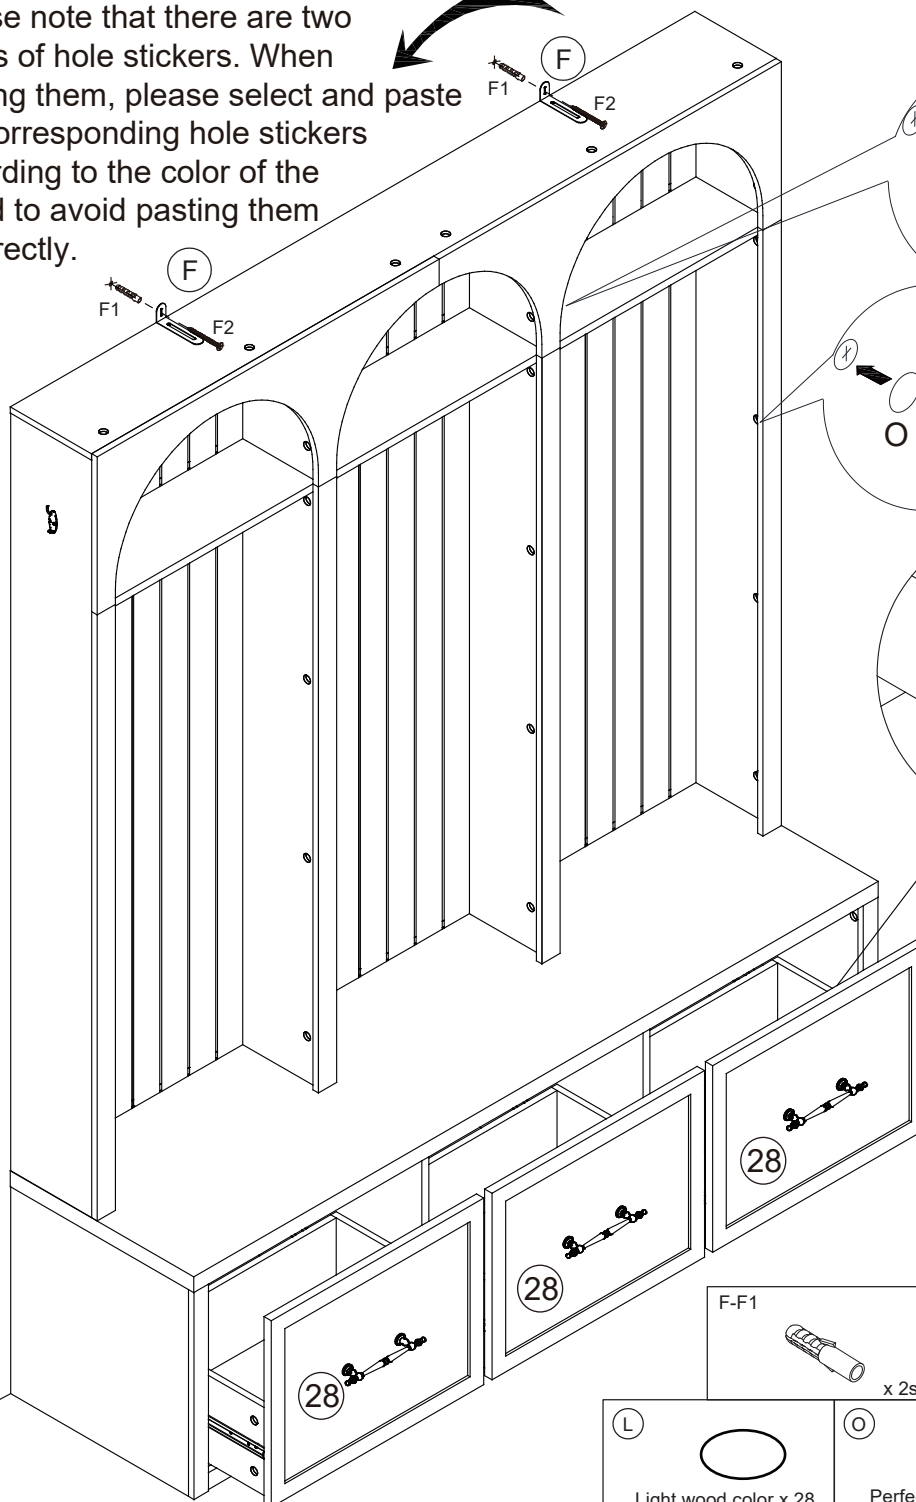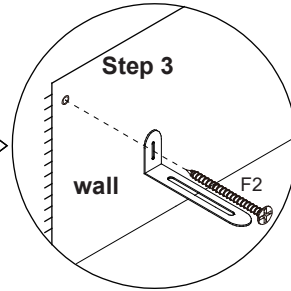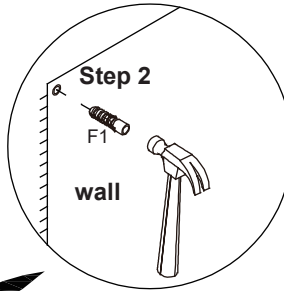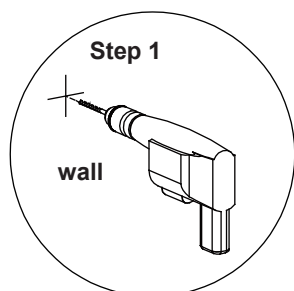

Assembly Instructions

Finish

