

DR001






STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

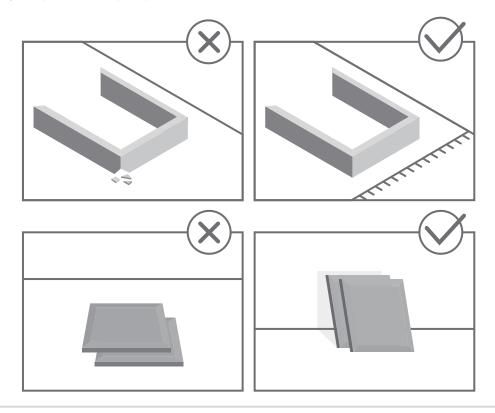



View our assembly video online: WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.


tel: 908-888-0818

e-mail: help@manhattancomfort.com

Support Site



Included in this package:

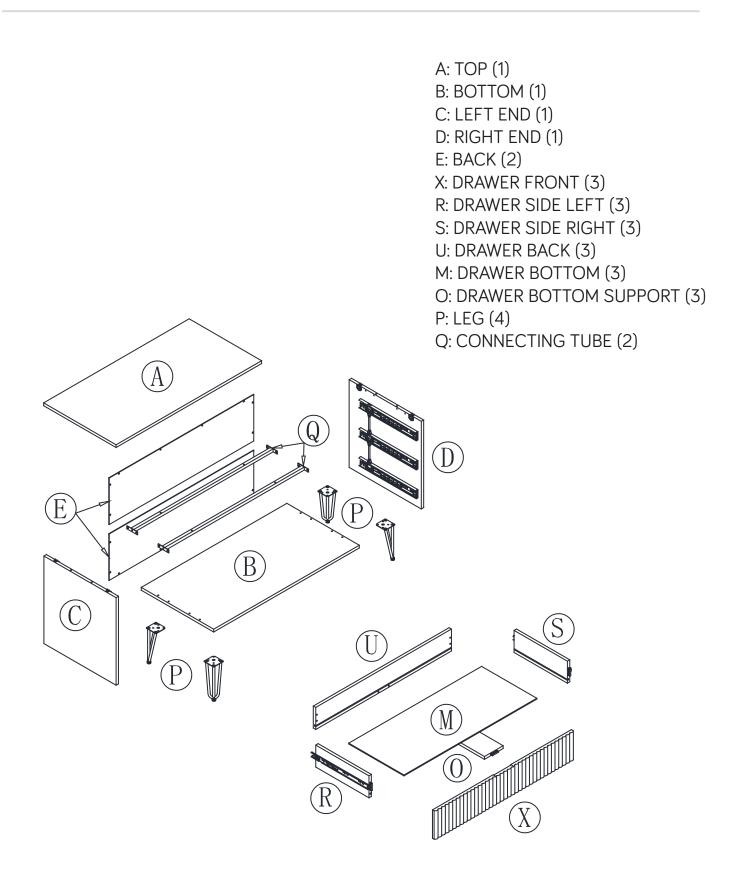

DROO1 Page 3

Hardware Identification

- 1 BOLT 22pcs M4*30mm
- BOLT 46pcs
 M4*12mm









- 4 PULL 3pcs
 - 9
- (5) WOOD DOWEL 8pcs \$\phi 6*30mm\$




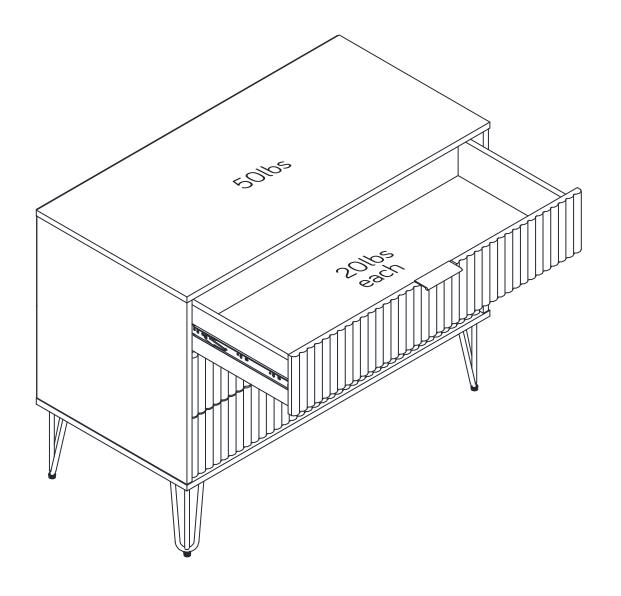

DRO01 Page 5


- ♦ Insert four WOOD DOWELS (5) to the BOTTOM (B).
- ♦ Attach the BOTTOM (B) to the ENDS (C and D), fasten the BOTTOM (B) by using four BOLTS (1).

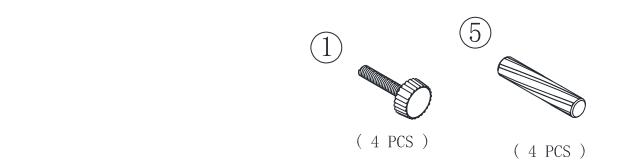

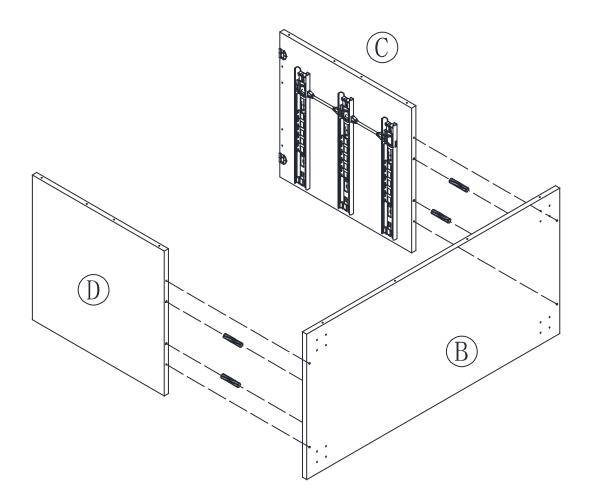


Page 6 DR001

◆ Attach the two CONNECTING TUBE (Q) to ENDS (C and D) by using eight BOLTS (2).

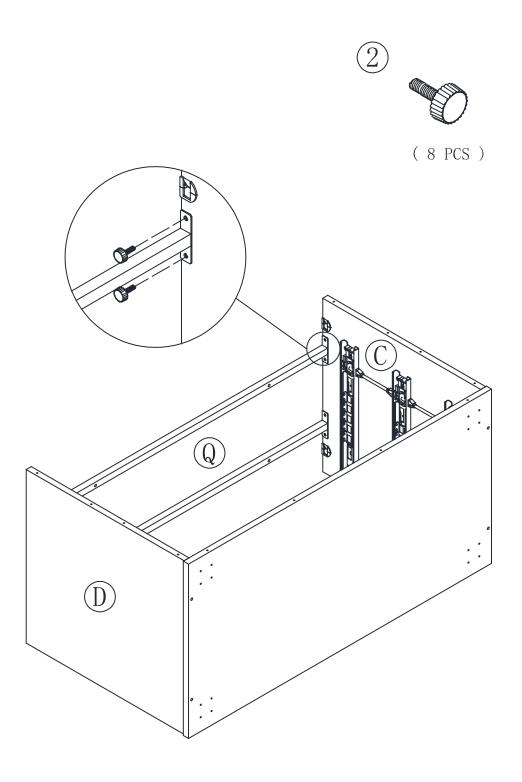


- ♦ Insert four WOOD DOWELS (5) to the TOP (A).
- ◆ Attach the TOP (A) to the ENDS (C and D), tighten four PLASTIC CAM LOCKS.

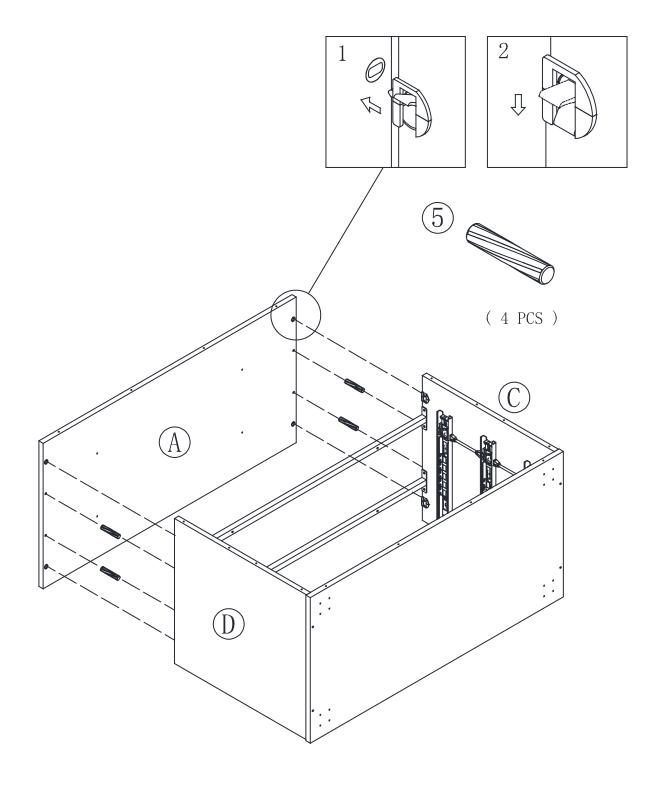


Page 8 DR001

◆ Fasten the two CONNECTING TUBE (Q) to the TOP (A) by using four BOLTS (3).



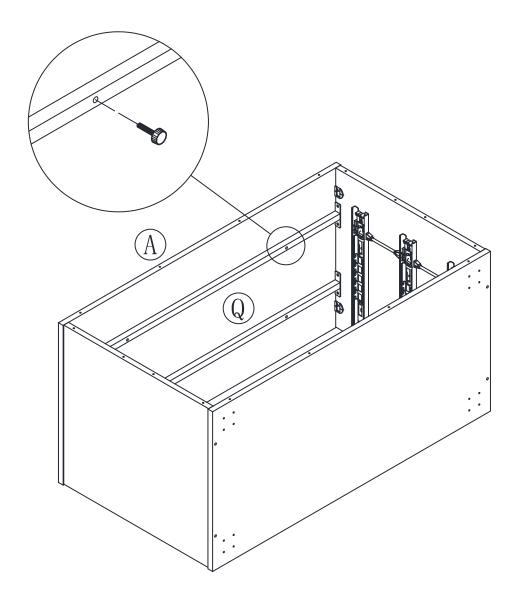



- Fasten the BACKS (E) to the TOP (A), ENDS (C and D) and the BOTTOM (B) by using sixteen BOLTS (2).
- ◆ You should start each BOLT a few turns before completely tightening any of them.

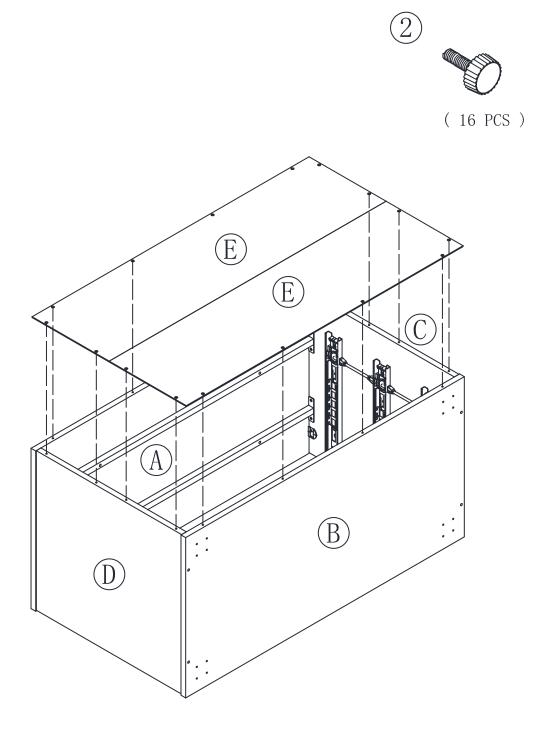


Page 10 DR001


◆ Fasten the LEGS (P) to the BOTTOM (B) by using sixteen BOLTS (2).

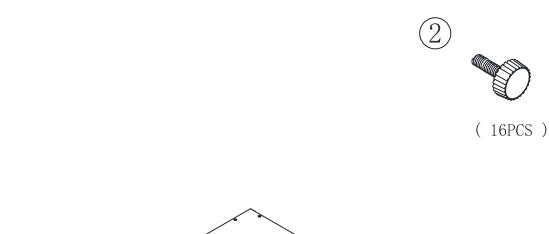

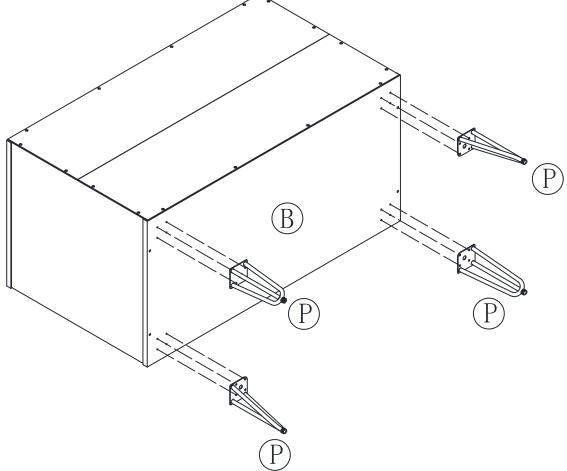


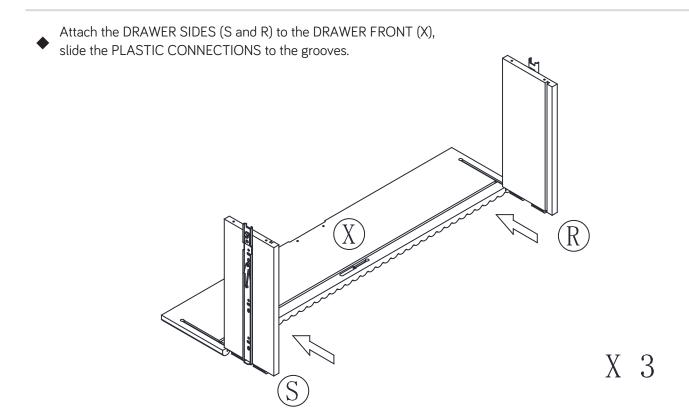

◆ Slot the DRAWER BOTTOM SUPPORT (O) to the DRAWER FRONT (X).

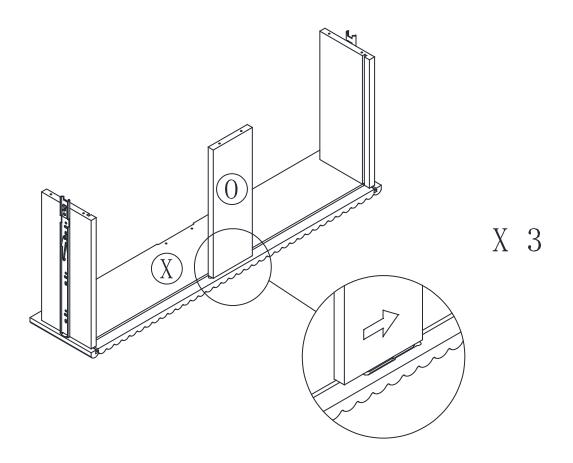


Slide the DRAWER BOTTOM (M) into the grooves, in the DRWAER SIDES (S and R), and the DRAWER FRONT (X).

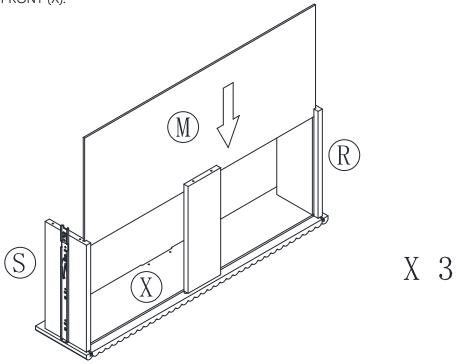


Fasten the DRAWER BACK (U) to the DRAWER SIDES (S and R) by using six BOLTS (1).

Repeat the Step 7 and Step 8 on the other drawers.

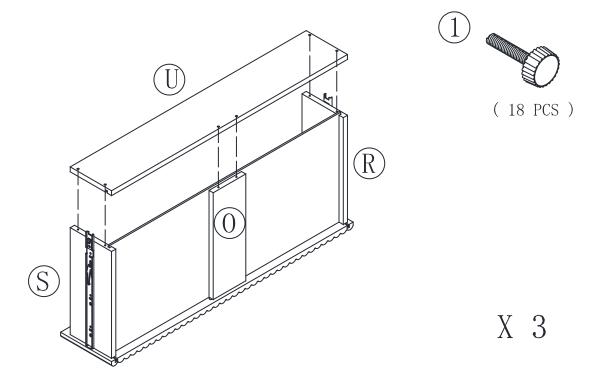

DRO01 Page 13

Use two BOLTS (2) to fasten the PULL (4) to DRAWER FRONT (X).
Repeat the same on the other drawer.

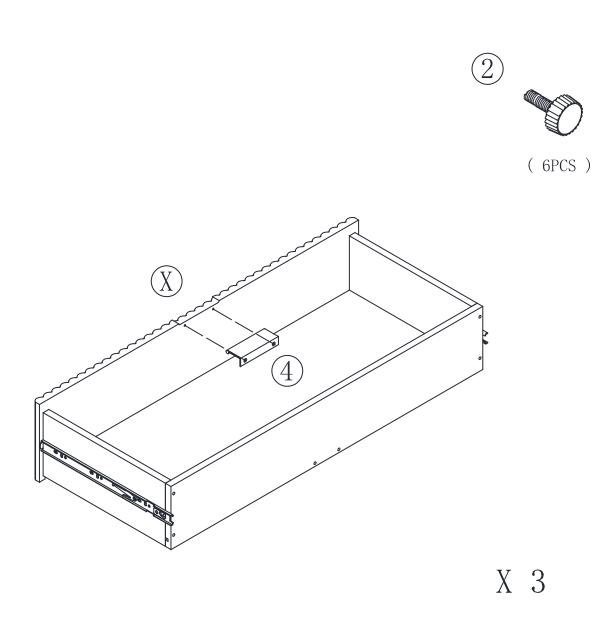



Page 14 DR001


To insert the DRAWER into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION RAILS on the unit and push the drawer into the unit.

Before the drawer is fully inserted, please make sure the interlock pins on the EXTENSION SLIDES on the drawer is pushed forward as shown on the diagram. The drawer should push in hard until it is all the way in , then it will slide in and out easier.


Attention: This unit used Drawer Interlocking System, when one drawer is open, the other drawers cannot be opened.








On the Left EXTENSION SLIDES, please make sure the small pin is upward.

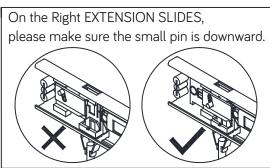

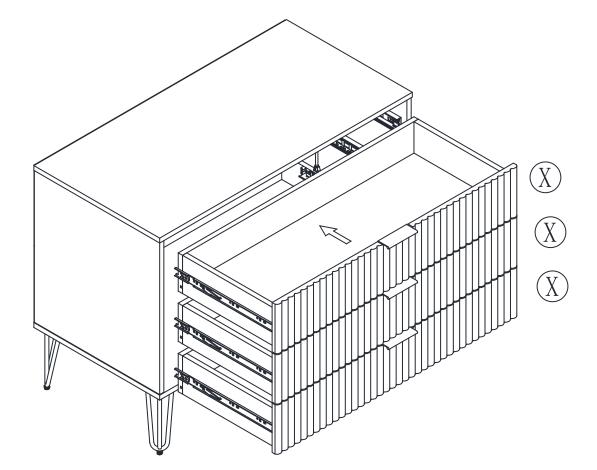



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.

